

INSTRUCTION MANUAL


MANUEL D'INSTRUCTIONS

Rev04



PERLESMITH

PSSS2

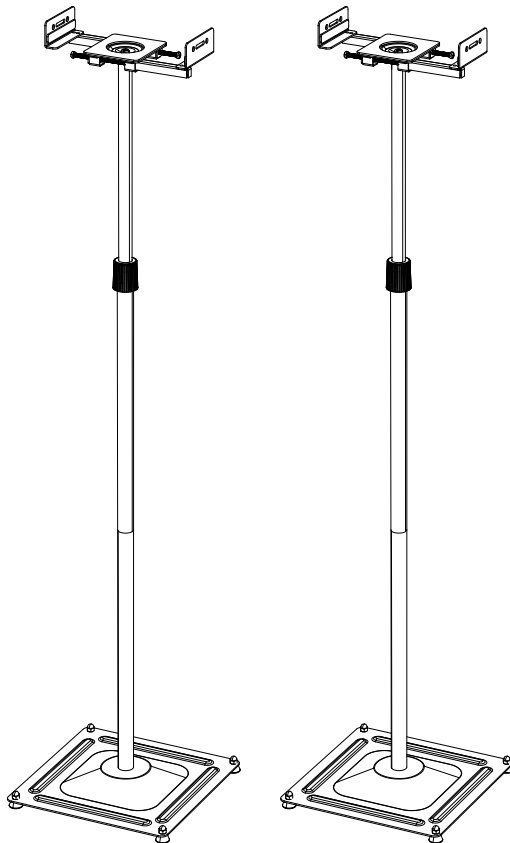

EN	Speaker Stand	02-06
FR	Support pour Haut-parleur	07-11



1-800-556-6806 (US/CA)
44-808-196-3891 (UK)



supportus@perlesmith.com



www.perlesmith.com

IMPORTANT SAFETY INFORMATION

- Check package contents against supplied parts and hardware list to ensure that all parts were received and undamaged. DO NOT use damaged or defective parts. If you require replacement parts, please call technical support line or email customer service.
- Carefully read all instructions before attempting installation. If you DO NOT understand the instructions or if you have any questions or concerns, please call technical support line or email customer service.
- DO NOT use this product for any purpose that is not explicitly specified in this manual. DO NOT exceed weight capacity. We are not liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.
- WARNING: For use on flat, level surfaces only. Do not use on surfaces that are uneven or sloping.


Weight Restriction

Weight Capacity

Do not exceed weight capacity.




Tools Needed (Not Included)

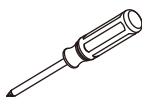


Phillips Screwdriver

Supplied Parts and Hardware

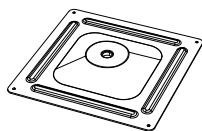


Base
[01] x 2

 

Lower Support Post
[02a] x 2



Upper Support Post
[02b] x 2

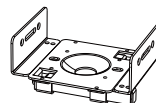

Speaker Bracket
[03] x 2



Foot with Nut
[A / B] x 8



PVC Washer
[C] x 2



Plastic Washer
[D] x 2



Bolt
[E] x 2




EVA Pad
[F] x 4





Cushion
[G] x 2



Step 1 Secure the Feet [A] and Support Posts [02a], [02b] to the Base [01]

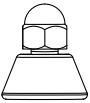


A / B

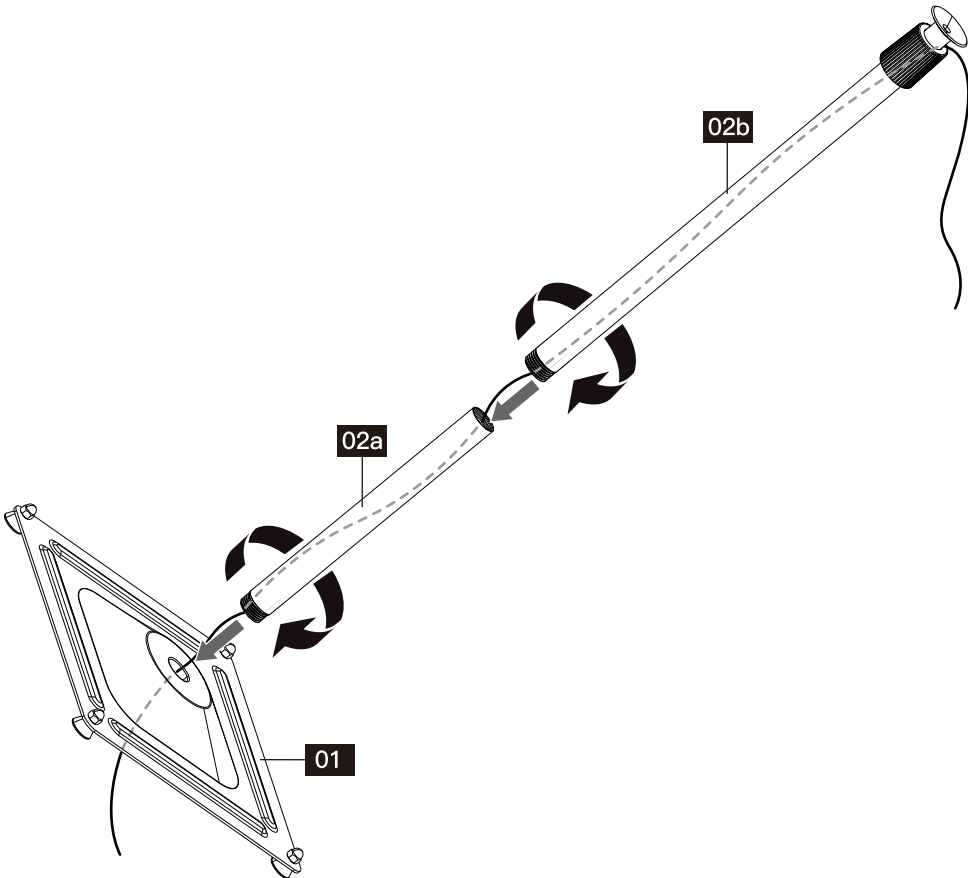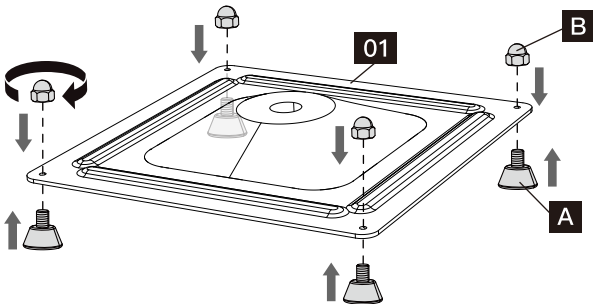


Step 2 Secure the Speaker Bracket [03] to the Upper Support Post [02b]

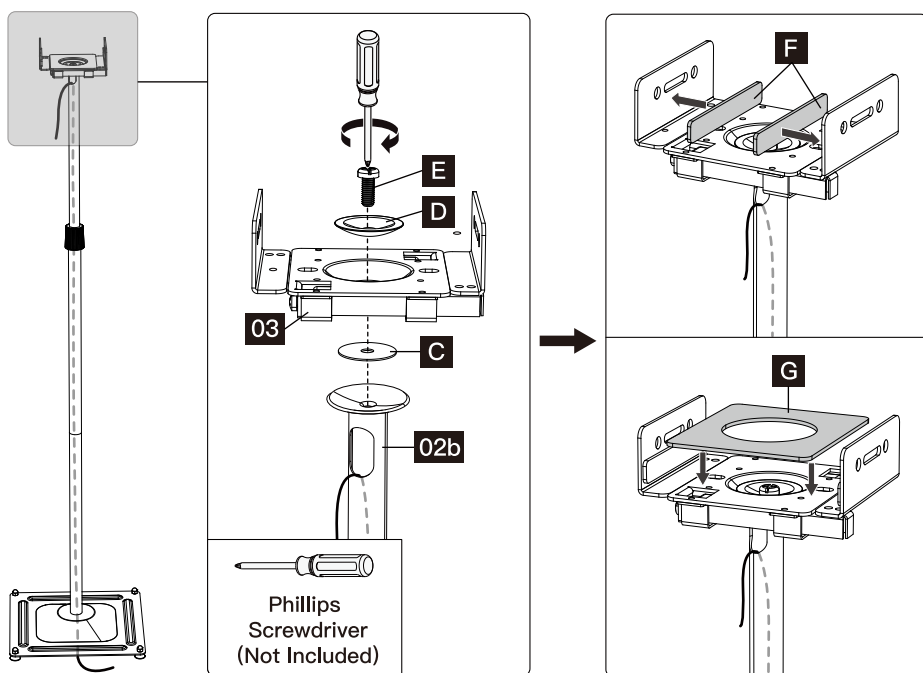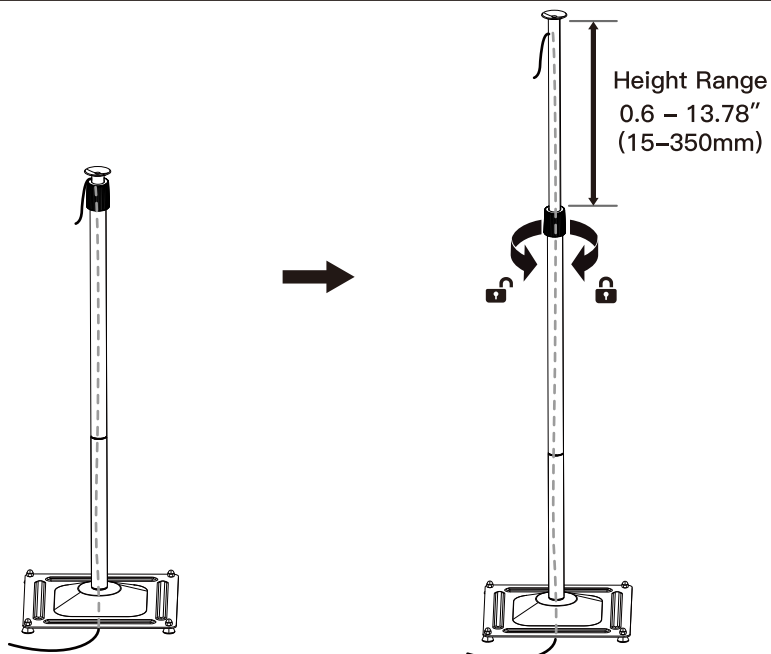


Step 3 Secure the Speaker to the Stand

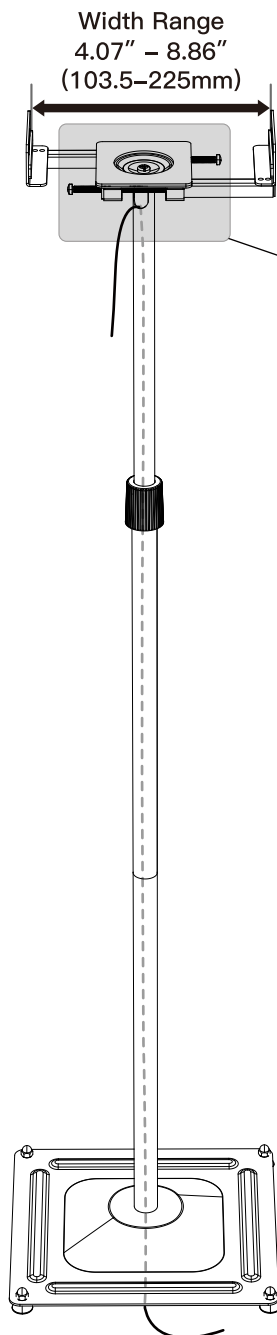


1

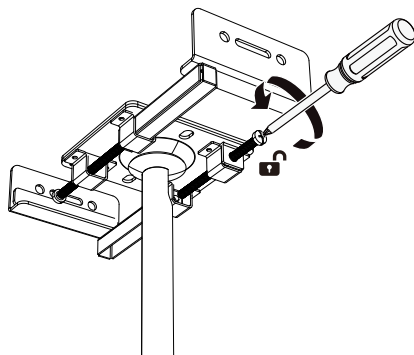

2


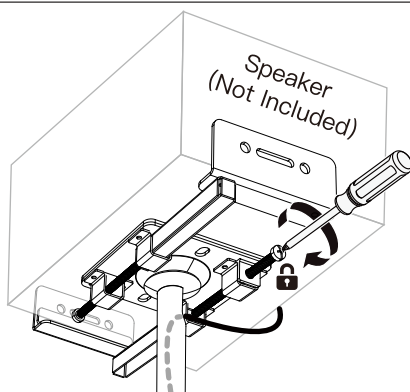


NOTE: The speaker must be installed on the middle of the speaker bracket.

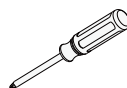


Phillips
Screwdriver
(Not Included)

Step 4 Angle Adjustment

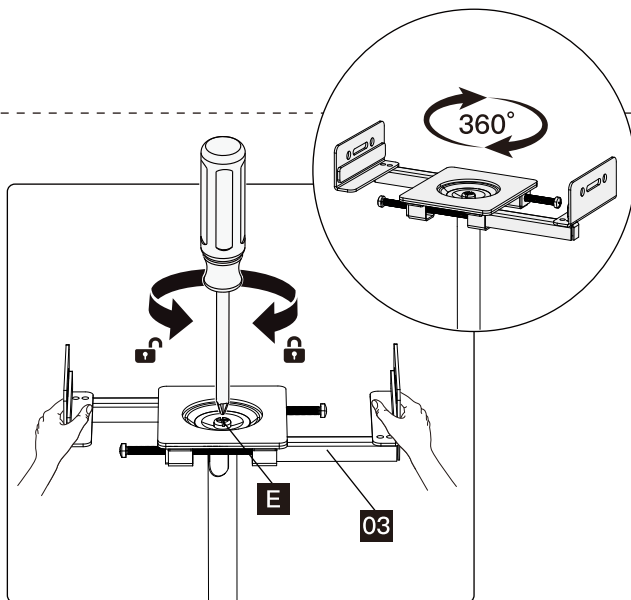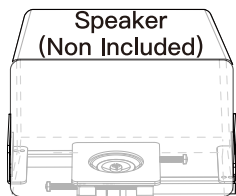

360 Degree All-round Tilt Adjustment If needed, the speaker angle can be adjusted.

1. Remove the speaker from the stand.
2. Slightly loosen the bolt [E].
3. Adjust the speaker bracket [03] to the desired angle.
4. Tighten the bolt [E] to lock, then install the speaker.

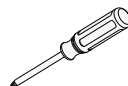

Phillips
Screwdriver
(Not Included)

Informations importantes sur la sécurité

- Vérifier le contenu du colis par rapport aux pièces fournies et à la liste du matériel pour s'assurer que toutes les pièces ont été reçues et intactes. N'utilisez pas de pièces endommagées ou défectueuses. Si vous avez besoin de pièces de rechange, veuillez appeler la ligne de support technique ou envoyer un courriel au service à la clientèle.
- Lisez attentivement toutes les instructions avant de tenter l'installation. Si vous ne comprenez pas les instructions ou si vous avez des questions ou des préoccupations, veuillez appeler la ligne d'assistance technique ou envoyer un courriel au service à la clientèle.
- N'utilisez pas ce produit à des fins qui ne sont pas explicitement spécifiées dans ce manuel. Ne pas dépasser la capacité de poids. Nous ne sommes pas responsables des dommages ou blessures causés par un montage incorrect, un assemblage incorrect ou une utilisation inappropriée.
- Avertissement: pour une utilisation sur des surfaces plates et plates seulement. Ne pas utiliser sur des surfaces inégales ou en pente.

Restriction de poids


Poids capacité

Ne pas dépasser la capacité de poids.




11 livres
(5kg)

Outils nécessaires (non inclus)

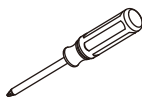


Tournevis Phillips

Pièces et matériel fournis

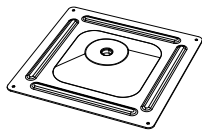


Base
[01] x 2

 

Poteau de
support inférieur
[02a] x 2



Support supérieur
[02b] x 2

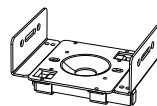

Plateau pour
haut-parleur
[03] x 2



Pied avec
écrou
[A / B] x 8



Rondelle
en PVC
[C] x 2



Rondelle
en plastique
[D] x 2



Boulon
[E] x 2




Coussinet
en EVA
[F] x 4



Coussin
[G] x 2

Étape 1 Fixer les pieds [A] et les poteaux de soutien [02a], [02b] à la base [01]

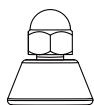



A / B





A



B

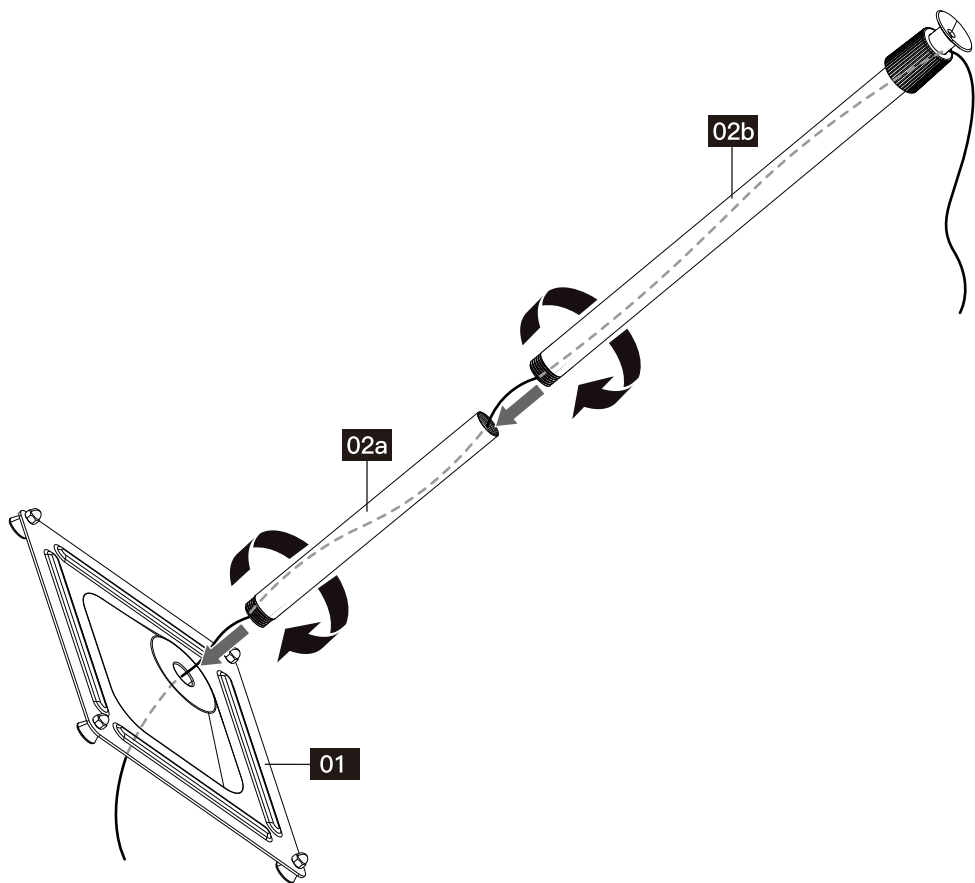
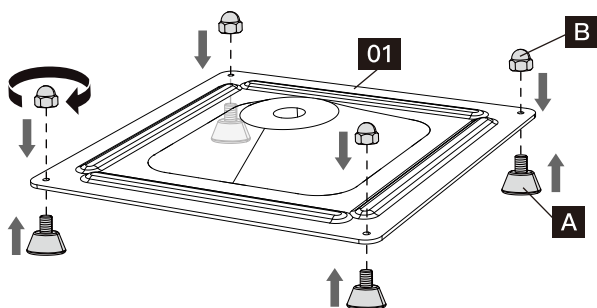


Étape 2 Fixez le plateau pour haut-parleur [03] au poteau supérieur [02b]

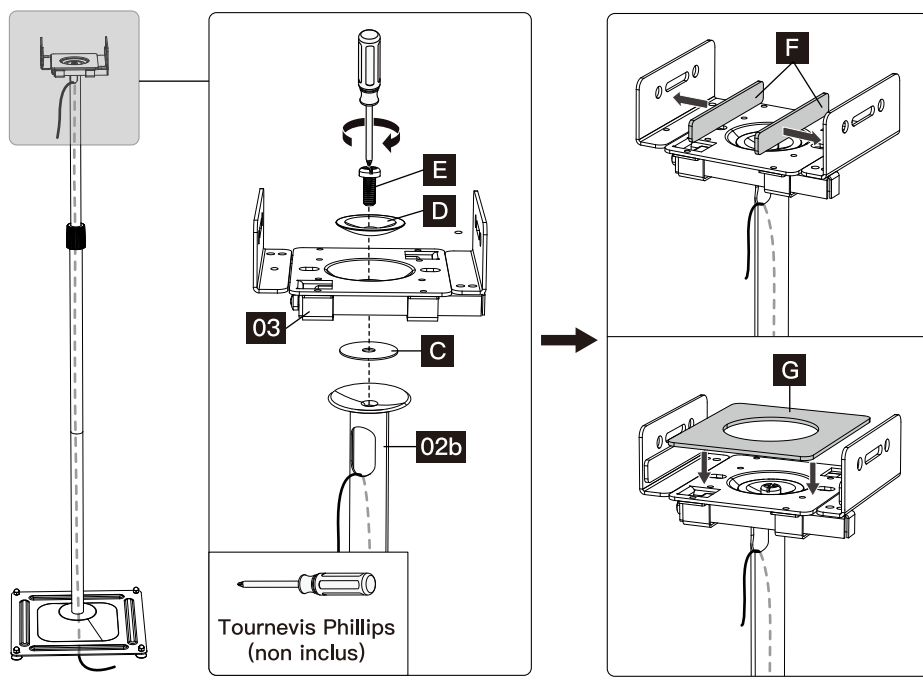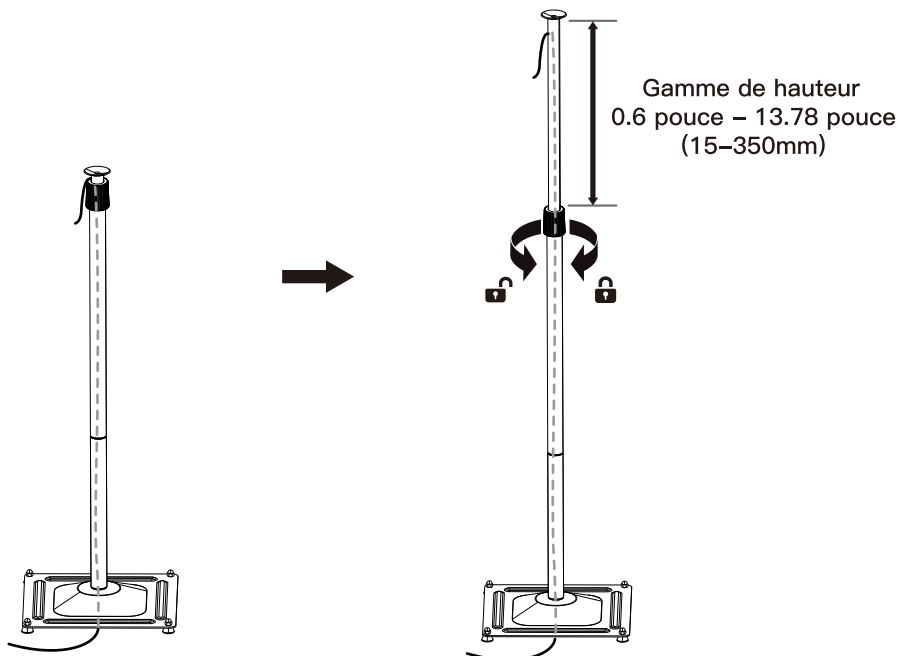


Étape 3 Fixez le haut-parleur au support


Gamme de largeur
4.07 pouce – 8.86 pouce
(103.5–225mm)

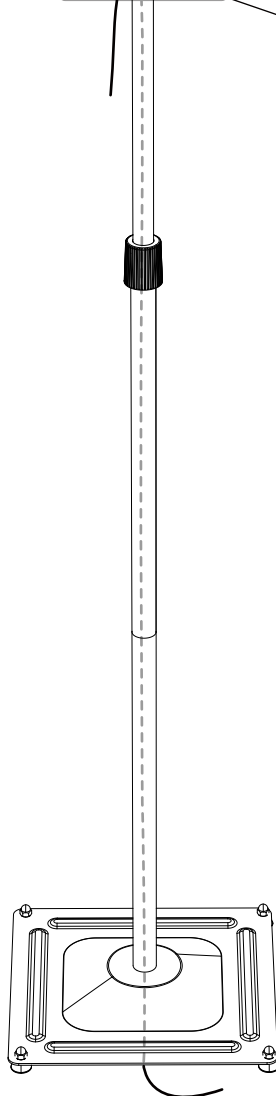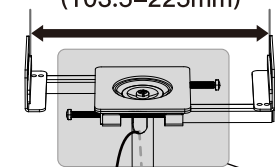


1

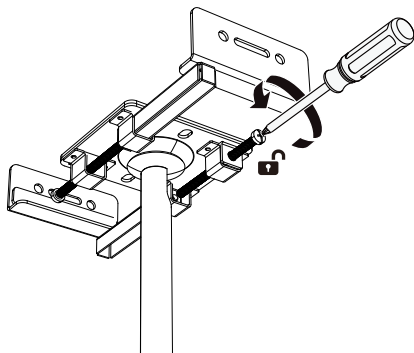

2


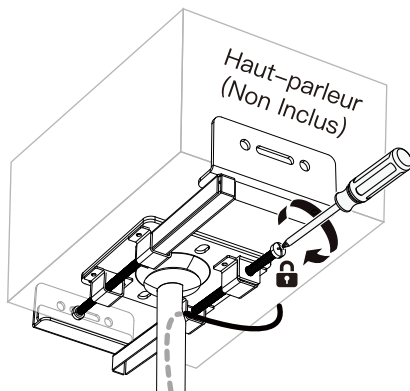


Remarque : Le haut-parleur doit être installé au milieu du support de haut-parleur.

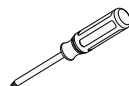


Tournevis Phillips
(non inclus)

Étape 4 Réglage d'angle

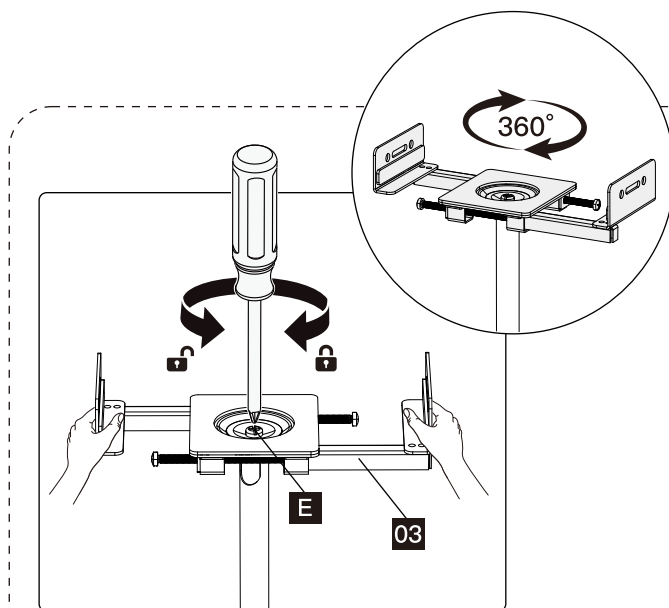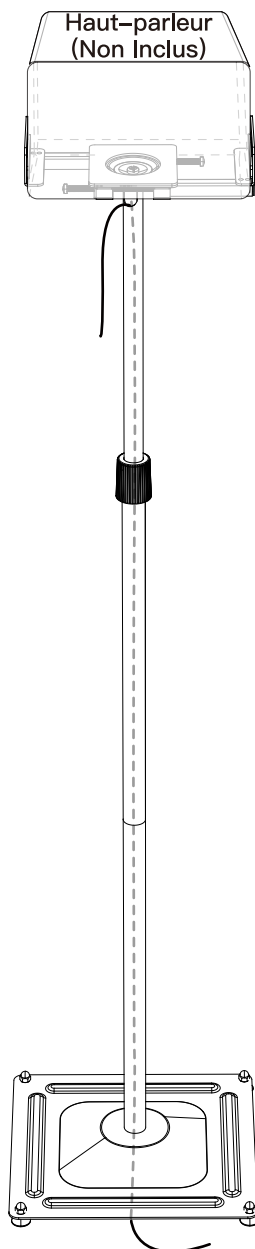

360 degrés d'ajustement à inclinaison tout autour
Si nécessaire, l'angle de l'enceinte peut être ajusté.

1. Retirez le haut-parleur du support.
2. Desserrer légèrement le boulon [E].
3. Réglez le support d'enceinte [03] à l'angle désiré.
4. Serrez le boulon [E] pour verrouiller, puis remontez le haut-parleur.

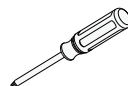

Tournevis Phillips
(non inclus)



PERLESMITH



1-800-556-6806 (US/CA)
44-808-196-3891 (UK)



supportus@perlesmith.com



www.perlesmith.com