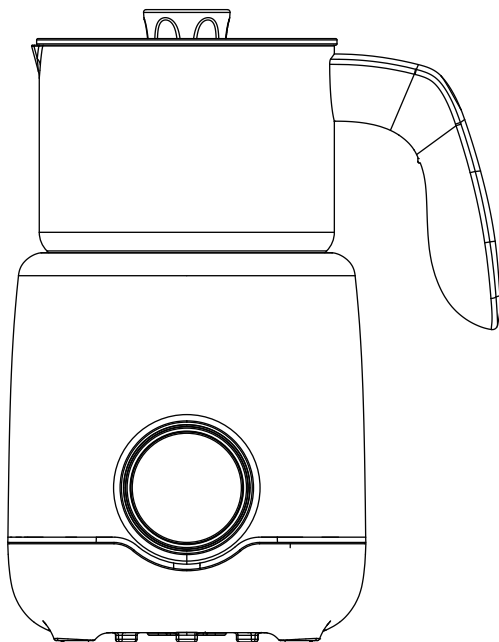 




Milk Frother Instruction Manual



Brand: amzchef
Moder: MMF-9117

**PLEASE READ INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY
RETAIN THIS MANUAL FOR FUTURE REFERENCE**

CONTENT

ENGLISH

Chapter1. Important safety instructions	1
Chapter 2. Learn About Your Milk Foam Machine	3
Chapter 3. Fault Alarm Handling	7
Chapter 4. Tips for Use	8
Chapter 5. Cleaning and Maintenance	8
Chapter 6. Technical Parameters	9
Chapter 7. Discard and Recycling	9
Chapter 8. Warranty	10

Chapter1. Important safety instructions

Please read this Manual carefully before using this Milk Frother, and keep it properly for future reference. This product can be used only by those who are familiar with the following instructions.



1. Do not immerse this Milk Frother in water or any other liquid, and do not rinse it under the faucet; otherwise, it may be in danger of electric shock.



2. It is forbidden to make the main cable loosely hang down, or use any wet hand to touch or move the plug, or place the plug on any heating surface, or make it contact any oily liquid.



3. Do not let children play with the whisk.



4. Do not let this Milk Frother work without milk.



5. The liquid level shall not exceed the maximum volume mark on the inner wall of cup; otherwise, the liquid will overflow.



6. Do not insert any object or finger into the ventilation hole on the back of this Milk Frother.



7. It is prohibited to cover or block the ventilation hole on the back of the plastic base.



8. The surface of milk cup may be hot during and after operations; therefore, it is necessary to use the handle during the use (be sure not to touch any other position in order to avoid scalding).



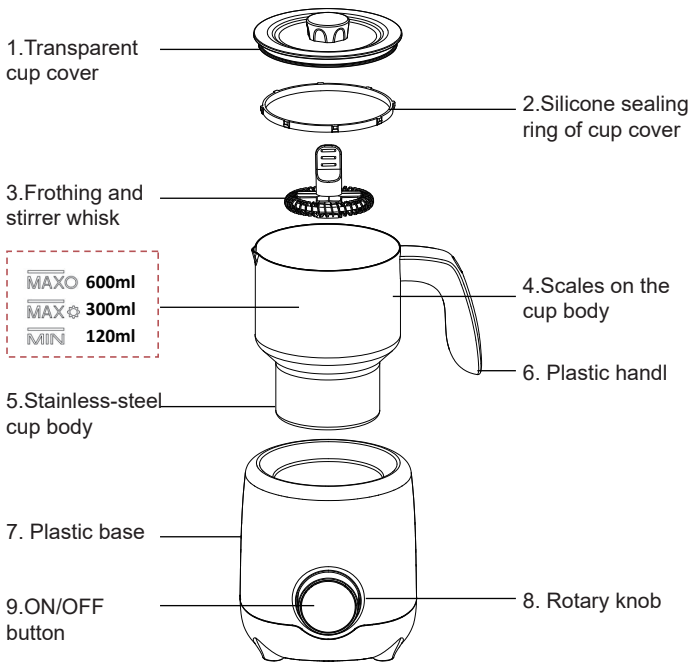 
9. To disconnect the appliance from the mains, it is necessary to press the "On/Off" button and allow the machine to pause before removing the plug from the socket.

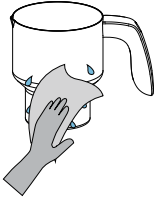 
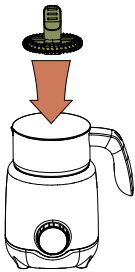 
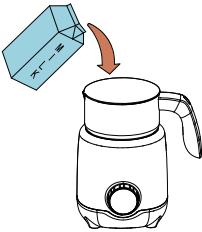 
**CAUTION**

1. Please read all the instructions.
2. Do not operate this Milk Frother if it is damaged.
3. Do not touch any charged part and rotating parts of this Milk Frother, which may cause injury.
4. It is only allowed to use the professionally installed power socket to operate this Milk Frother with a correct voltage.
5. Do not use an extended power cord.
6. It is necessary to unplug this Milk Frother after using it every time or before using or replacing its accessories or cleaning it.
7. Do not use any damaged cable or plug for operating this Milk Frother. If its power cord is damaged, it is a must to entrust the manufacturer or its service agency or a similar professional for replacement in order to prevent any danger.
8. Any operator of this Milk Frother needs to be responsible for his or her own safety; therefore, only the supervised or trained people can operate this Milk Frother; the following people (including children) are forbidden to operate it: those who are disabled, suffer poor perception, mentally unsound or lack professional technical expertise.
9. Do not operate this Milk Frother outdoors.
10. This Milk Frother can be used only with the supplied base.
11. Be sure not to operate this Milk Frother on any uneven surface.
12. This Milk Frother is most appropriate for household use and it is not recommended for commercial and industrial purposes.
13. If you intend to obsolete this Milk Frother, it is forbidden to discard it at will; please first disconnect its power supply and then send it to the officially designated garbage dump.
14. Be sure to unplug the plug from the wall socket when not using this Milk Frother or before cleaning this Milk Frother; please cool the parts of this Milk Frother before installing or removing them.

15. Do not operate this Milk Frother when its power cord or plug is damaged; do not operate this Milk Frother after it goes wrong or is damaged, and it is necessary to send it to the nearest authorized service facility for inspection and repair.
16. The use of any accessory not recommended by the electrical appliance manufacture may cause fire, electric shock or personal injury.
17. Do not hang the power cord on the edge of table or counter, or make it contact any hot place.
18. Do not place it nearby a position with hot air or an electric stove or in a heating oven.
19. If you remove the cup cover when this Milk Frother is working, you may be scalded.
20. When this Milk Frother is working, it is prohibited to place any paper or other object between the groove of the plastic base and the metal cup; otherwise, this machine will be damaged.
21. In case of any damage caused by improper use or failure to comply with these instructions, we will not undertake any responsibility.

Chapter 2. Learn About Your Milk Foam Machine



Usage		
	1	Please use a dry towel to wipe the water trace at the bottom of the metal cup and then put it into the groove of the base. There should be no water or foreign matter left in the groove of the base.
	2	Correctly install the whisk onto the bulging shaft in the cup body.
	3	Pour the milk into the cup of this Milk Frother and put on the cup cover. The milk with different fat content will produce different milk froth effects; we recommend the use of whole milk to make milk froth (fat content > 3.0%), which will be denser and last longer. Note that the milk volume should not exceed the mark (see the maximum volume in the figure below as a reference).
	4	Connect this Milk Frother to the power supply; after this Milk Frother is powered on, its buzzer will ring once, its screen will display the word “amzchef”; the machine will enter the standby status if there is no operation within 60 seconds; at the moment, please press the button “  ” for function selection with specific operations as shown in the following table.

Product Function	Operating Method	Matters Needing Attention
1.  DENSE FROTH MILK	Pour 300ml milk in the cup, press the button "  ", rotate the knob, select the "  ", and then press the key "  again to confirm that the machine starts to work; at the moment, its buzzer will make a sound, meaning the completion of work.	The maximum milk volume is 300ml.
2.  AIRY FROTH MILK	Pour 300ml milk in the cup, press the button "  ", rotate the knob, select the "  ", and then press the key "  again to confirm that the machine starts to work. Its buzzer will make a sound, meaning the completion of work; the milk-froth ratio is smaller than that of the function "DENSE FROTH MILK".	The maximum milk volume is 300ml.
3.  HOT MILK	Pour 600ml milk in the cup, press the button "  ", rotate the knob, select the "  ", and then press the key "  again to confirm that the machine starts to work. Its buzzer will make a sound, meaning the completion of work.	The maximum milk volume is 600ml.
4.  CHOCOLATE MILK	Pour 600ml milk and 30g chocolate beans in the cup, press the button "  ", rotate the knob, select the "  ", and then press the key "  again to confirm that the machine starts to work. Its buzzer will make a sound, meaning the completion of work.	The maximum milk volume is 600ml.

5.  COLD FROTH MILK	Pour 300ml milk in the cup, press the button “”, rotate the knob, select the “” and then press the key  again to confirm that the machine starts to work; at the moment, its buzzer will make a sound, meaning the completion of work.	The maximum milk volume is 300ml.
6.  CASHEW MILK FROTH	Pour 150ml cashew milk and 150ml whole milk (Proportion 1: 1) in the cup, press the button “”, rotate the knob, select the “” and then press the key  again to confirm that the machine starts to work; at the moment, its buzzer will make a sound, meaning the completion of work.	The maximum milk volume is 300ml (150ml cashew milk and 150ml whole milk).
7.  SOY MILK FROTH	Pour 300ml soy milk in the cup, press the button “”, rotate the knob, select the “” and then press the key  again to confirm that the machine starts to work; at the moment, its buzzer will make a sound, meaning the completion of work.	The maximum milk volume is 300ml.
8.  DAIRY BASED BABY FOOD	Pour 300ml cold boiled water (good for baby) and 50g baby milk in the cup, press the button “”, rotate the knob, select the “” and then press the key  again to confirm that the machine starts to work; at the moment, its buzzer will make a sound, meaning the completion of work.	The maximum milk volume is 300ml.

Chapter3. Fault Alarm Handling

Fault Code	Possible Cause(s)	Solution(s)
E1	1. The whisk is not installed in the metal cup. 2. The metal cup is not put into the base. 3. The metal cup is not added with corresponding solution, meaning that this product is heated with nothing; the solution in the metal cup is insufficient. 4. Take out the metal cup when the milk frother is working.	1. Please mount the whisk correctly onto the shaft of metal cup. 2. Please put the metal cup correctly into the base. 3. Please pour an appropriate amount of corresponding solution into the metal cup and it is not allowed to start the machine without corresponding solution; it is necessary to add more than 120ml corresponding solution and it is recommended to make the mixture as per the operating instructions. 4. Please put the metal cup in again and start it again and it is not allowed to take the metal cup out when the milk frother is working.
E2	The voltage is excessively low.	Please apply correct voltage as per the operating manual.
E3	The voltage is excessively high.	Please apply correct voltage as per the operating manual.
E4	1. The machine is continuously heated for a long time and thus the inside of the base is at high temperature. 2. The cooling hole on the back of the base is blocked and thus the inside of the base is at high temperature.	1. Please avoid heating the machine continuously for more than 5 times; please operate the machine after it cools. 2. Remove the obstacles from the cooling hole on the back of the base and then operate the machine after it cools
E5-E8	This product goes wrong.	Please contact the customer service personnel.
The user is required to read the instructions carefully and avoid any wrong operation as much as possible; if the above solutions fail to solve the problem(s), be sure not to disassemble the product by yourself and please contact professional staff to solve the problem(s).		

Chapter 4. Tips for Use

The following tips for use can help you make better milk froth:

- Use a foaming whisk to first heat the milk and then make it into milk foam. When this Milk Frother is working, you need to immediately prepare coffee or hot chocolate.
- This Milk Frother can make frozen milk into milk froth; however, it does not mean that this machine can make frozen milk into frozen milk froth because the working Milk Frother can generate certain heat.
- The ideal milk heating temperature is 60~80°C because such temperature can increase the flavor of coffee while not reducing the taste of coffee and you will not wait too long to drink coffee.
- The whisk is relatively small, so it is necessary to place it in a safe place in order to prevent it from being lost or prevent a child from eating it by mistake.
- This Milk Frother can be used only for heating or frothing; please do not put coffee beans into this Milk Frother; please clean and dry it immediately after using it.
- It is optimal to use whole milk for making milk foam (fat content > 3.0%) and the cooled milk at the temperature of 5-10 °C can take on the best effect. Using the whisk wrongly or pouring excessive whole milk may cause milk overflow.

Chapter 5. Cleaning and Maintenance

Before cleaning this machine, please separate the cup body from the base of the power supply base, take out the cover of the cup body, and do not immerse the power-supply base in water.

1. For the cup body: Clean it with cold water and an appropriate amount of mild detergent as well as a soft towel not losing hair to gently clean it and then wipe it dry with a dry towel. They are not to be washed in the dishwasher.
2. For the cup cover: Take the cup cover away from the cup body, and then directly clean it with water; it is not allowed to put it in a dishwashing machine.
3. For the plastic base: Use a soft and wet towel to gently wipe the columniform metal part. It is not allowed to use any strong detergent or any hard cleaning tool such as a hard nylon brush or a metal brush for brushing the body of cup because such tool may scratch the surface of cup. It is not allowed to put it in a dishwashing machine.
4. For the whisk: Take it out of the cup body, clean it with water, wipe it dry and place it in a safe place; it is not allowed to put it in a dishwashing machine.

Chapter 6. Technical Parameters

Voltage and power- European standard:220-240V~ 50/60Hz 550W

Chapter 7. Discard and Recycling



It is necessary to destroy the package of this product as per the local regulations on waste disposal. It is necessary to classify paperboards and paper as recyclable paper, and classify platinum as recyclable resource (potentially recyclable resource). After this product is discarded, it is not allowed to directly dispose it as household waste and it is a must to send it to the recycle station for recycling electronic products specially. The marks of this product in the user's manual and on the package have shown that it is not allowed to throw this product into any garbage can (see the symbol "X" on the garbage can, as shown in the above picture).

For the problem of how to dispose an old and useless milk frother, you are required to consult your local recycle station (old equipment recycle station designated by your municipal government); if the label reminds that all the materials are reusable, you will make contributions to environmental protection as long as you use the reused old equipment made from recycled materials or otherwise.



The device meets the requirements of Regulation 2014/35/EU as well as the applicable standards EN 60335-1:2012+ A11:2014+ A13:2017+ A1:2019+ A14:2019+ A2:2019+ A15:2021, EN 60335-2-15:2016+ A11:2018+ A1:2021+ A2:2021+ A12:2021, EN 62233: 2008



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health

from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Manufacturer: Guangdong Master Electrical Appliance CO.,LTD

Address: B1-11-01, Xincheng Industry Park, Xincheng Town, Xinxing County 527400 Yunfu City, Guangdong Province, China

Contact: Emily Tel: +1 (838) 910 8317 E-Mail: info@iamzchef.com

EC

REP

Name: EUREP GmbH

Add.: Unterlettenweg 1a 85051 Ingolstadt Germany

Tel: +4984188697744 E-Mail: eurep@eurep-gmbh.com

Please send your Amazon order number to our email (**info01@iamzchef.com**) to register AMZCHEF super member.

Once the email is successfully sent:

- ① You will automatically get 1 year of warranty, and upgrade to full replacement guarantee.
- ② If anything goes wrong with your product, we will provide you with a brand new unit as a replacement, or provide you with a full refund.
- ③ If there is a problem with your parts and accessories, you can replace them for free.



Send: info01@iamzchef.com

Subject: Warranty

Amazon Order ID: _____

Please note: Please send us your order number within 2 weeks of receiving the goods to ensure successful registration.