 


INSTALLATION INSTRUCTION

YZ2231_US1.0

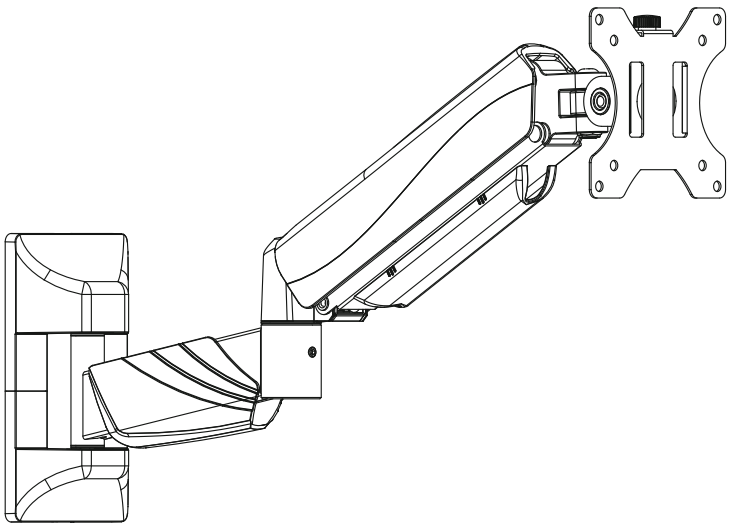

If you have any questions, please feel free to contact Customer Service via Amazon before returning.

Safety Caution

 
Please read this instruction carefully before installation. If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, please contact us.

- This product is designed for use in wood stud or solid concrete wall.
 - **DO NOT install into drywall alone.**
 - The wall must be capable of supporting five times the weight of the monitor and mount combined.
 - Incorrect installation may result in product damage/property damage or body injury.
- We shall bear no responsibility for any damage or injury resulted from incorrect installation, incorrect assembly or misuse.


WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; please contact our customer service team. Never use damaged parts!

Must Check Before Getting Started

Verify Your Monitor Specifications:

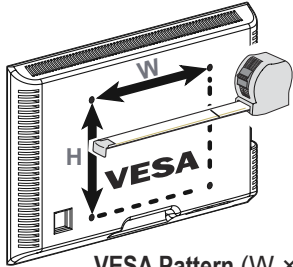


 VESA Pattern (W × H):
75mm × 75mm / 3 in × 3 in
100mm × 100mm / 4 in × 4 in

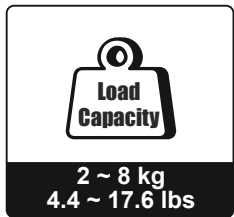


WARNING:
2 ~ 8 kg
4.4 ~ 17.6 lbs
DO NOT exceed the maximum weight indicated.

 Verify Your Wall Construction:

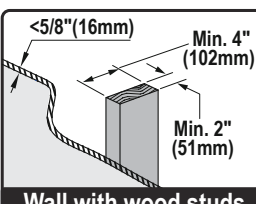

 CAUTION:
Avoid potential personal injuries and property damage!
Drywall covering the wall must not exceed 5/8 in (16 mm).
Minimum wood stud size: nominal 2 x 4 in (51 x 102 mm)
actual 1 1/2 x 3 1/2 in. (38 x 89 mm).

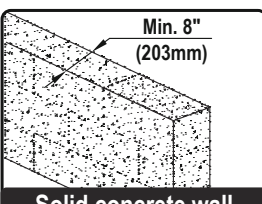

CAUTION:
Avoid potential personal injuries and property damage!
Mount the wall plate assembly directly onto the concrete surface (no surface covering).

CAUTION: DO NOT install into drywall alone.

 


Attention





Tension adjustment should be done only after monitor installation

WARNING:
Gas Spring Arm is under pressure and should be handled with care.
Failure to follow the instructions may result in damage to the mount and/or personal injury.

Product Dimensions

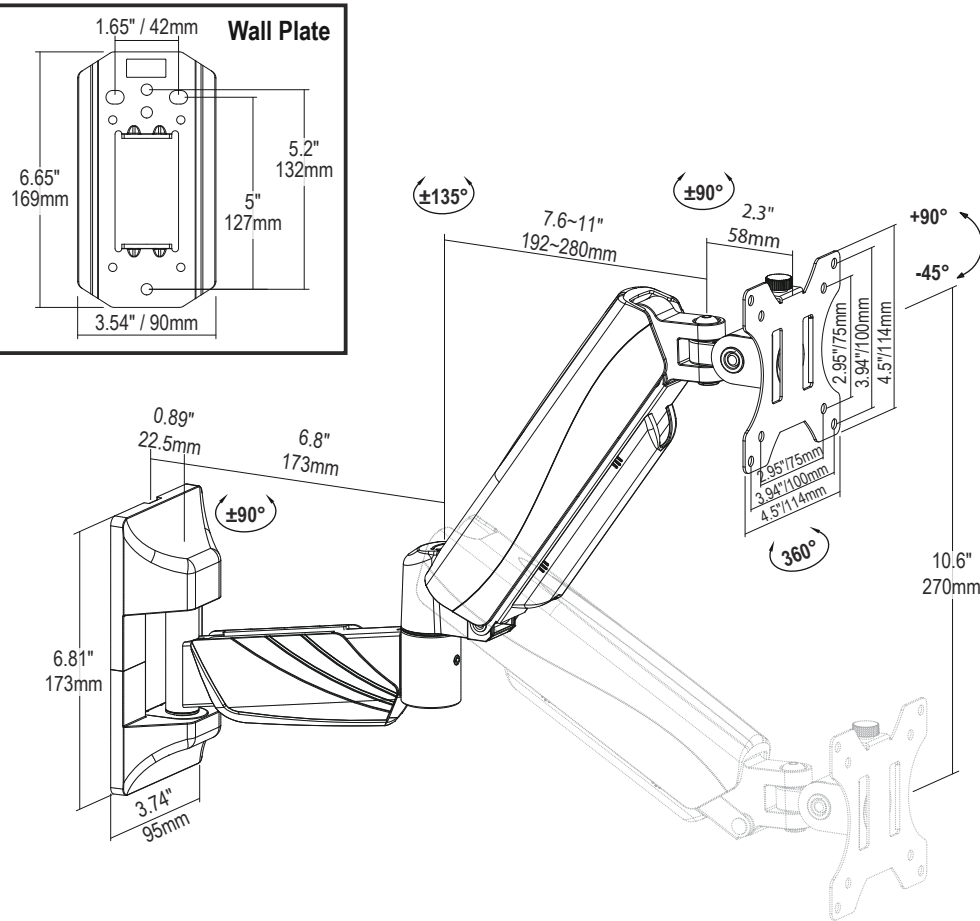


Supplied Parts and Hardware

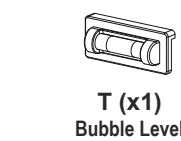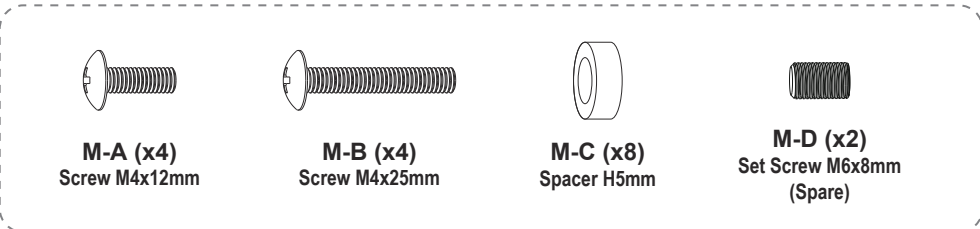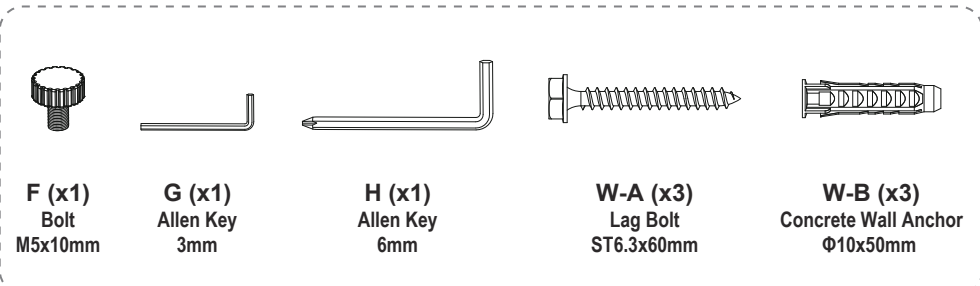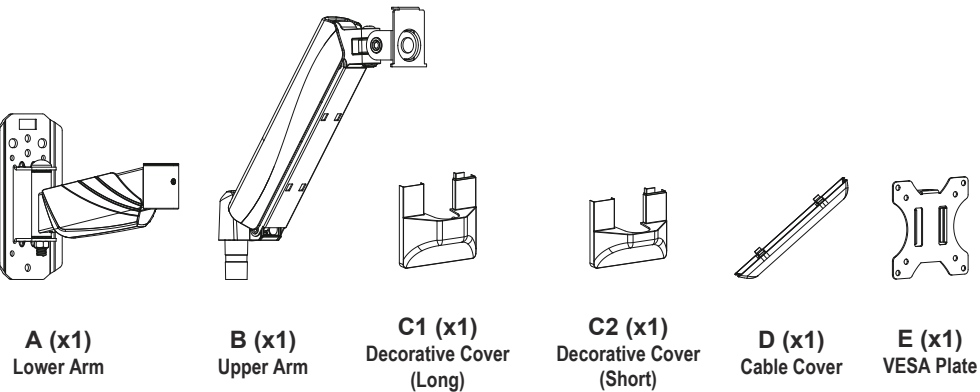    




NOTE: Not all parts and hardware included will be used.

 Extra Tools You Need (Not Supplied)


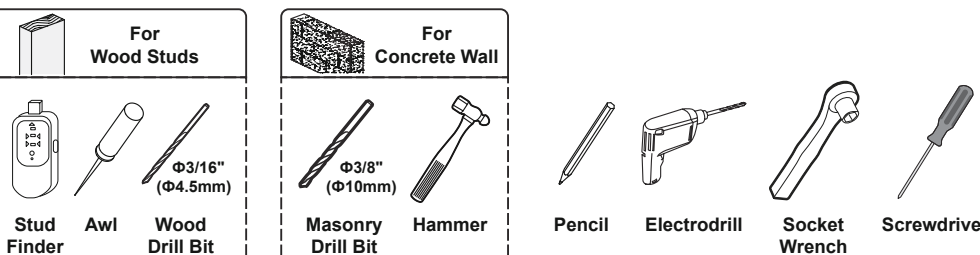


1 Attach VESA Plate to Monitor

   1-1 Select Correct Monitor Screw Length

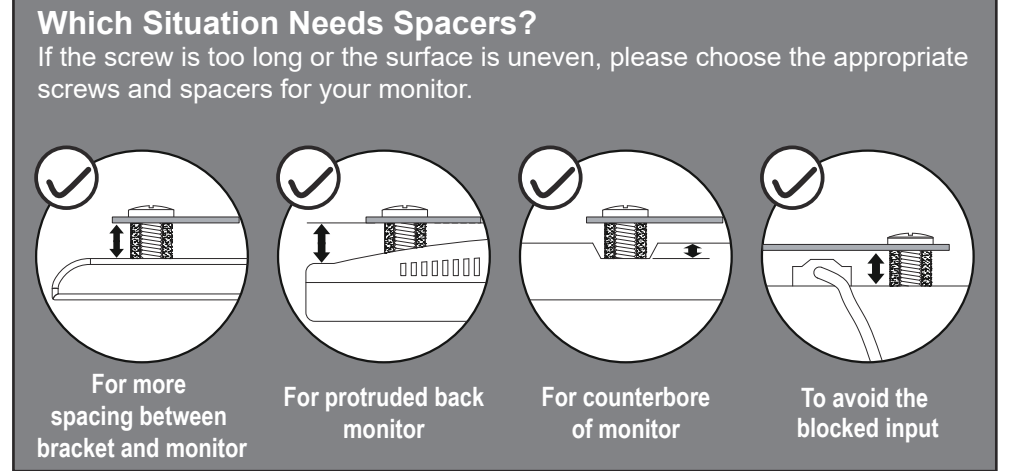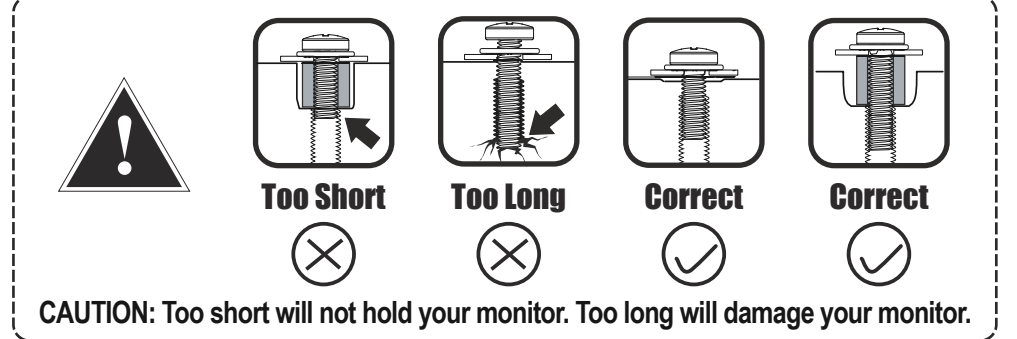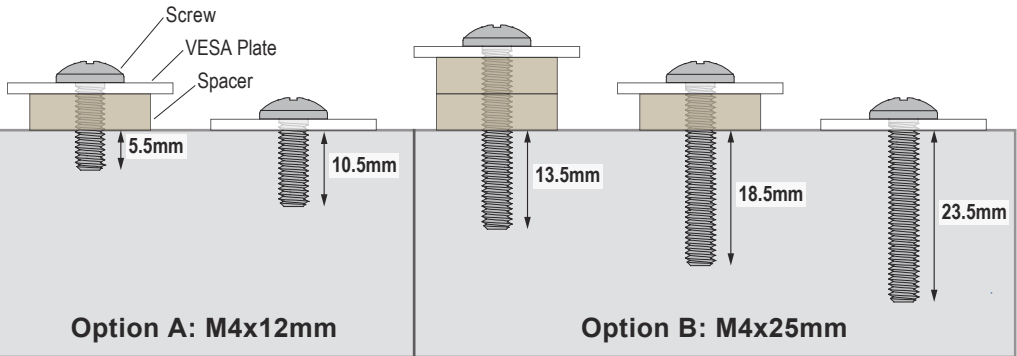


1-2

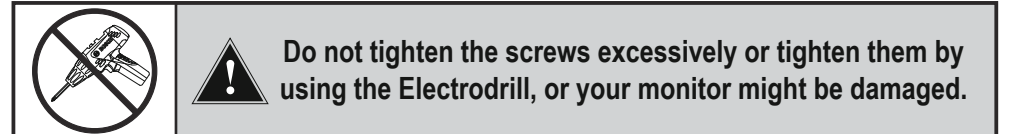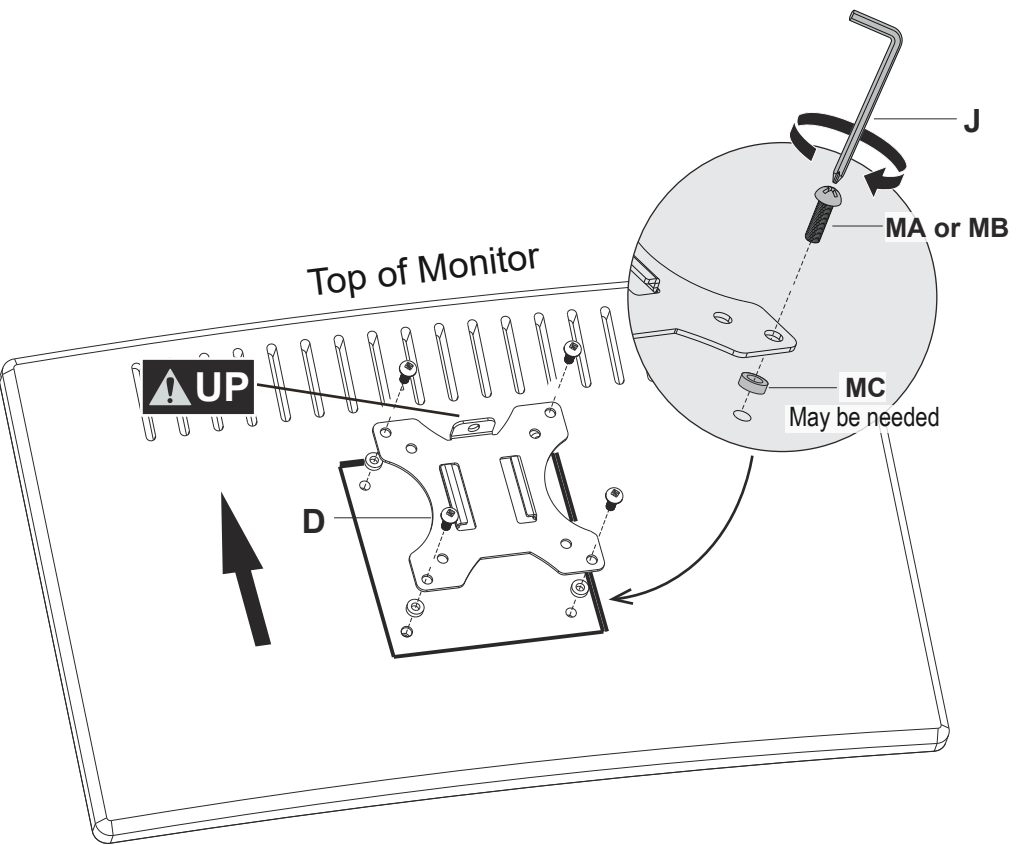  


2-A Attach Arm to Wall

 
OPTION A: Wood Stud Installation

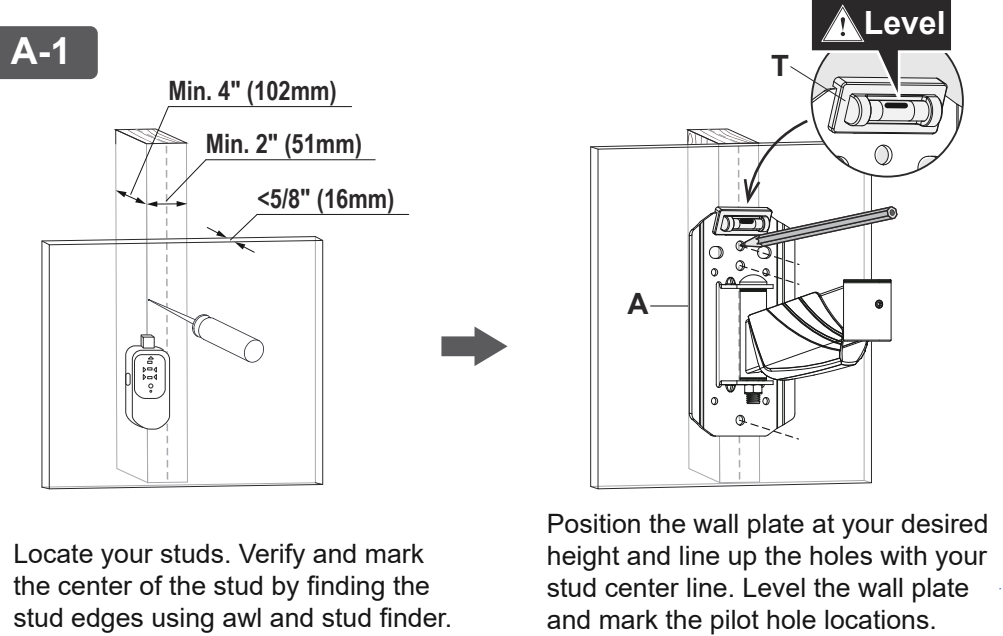

A-2

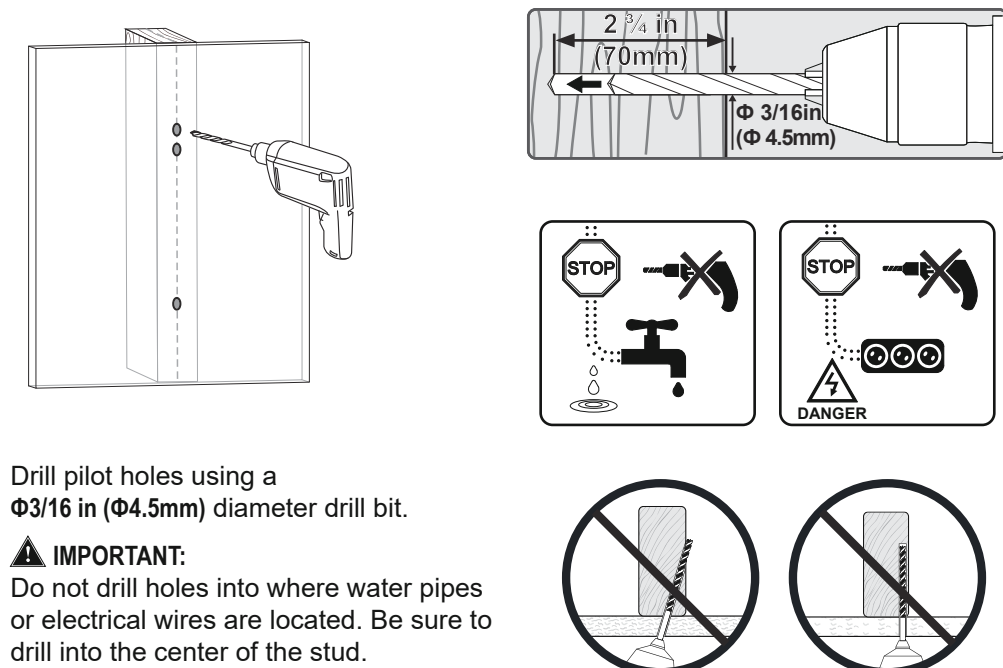 


A-3

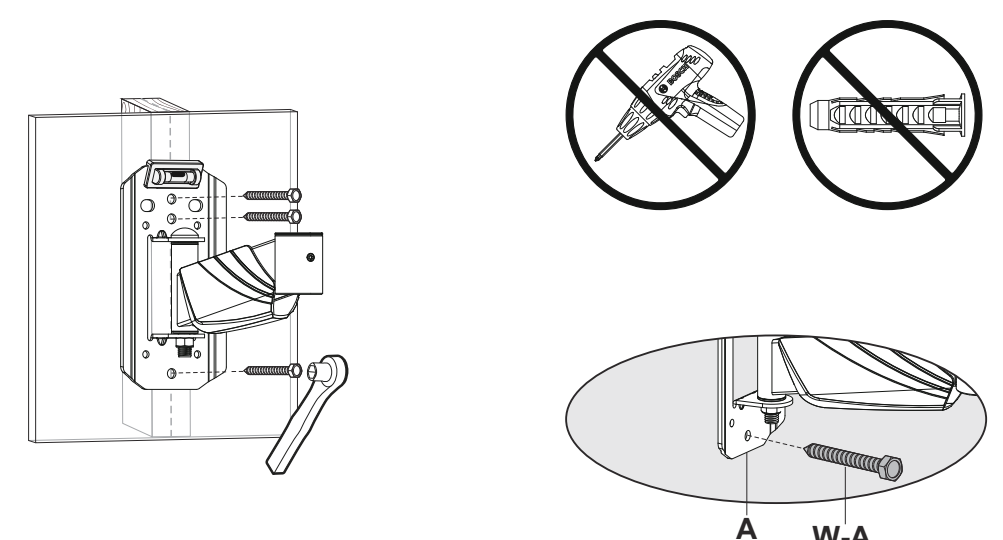 

Install wall plate using lag bolts **W-A** with Socket Wrench, NO Electrodrill. No anchors when installed onto the wood studs.


CAUTION:
To avoid potential personal injury or property damage:
All 3 lag bolts **W-A** **MUST BE** firmly tightened to prevent unwanted movement of the wall plate assembly. Ensure the wall plate assembly is securely fastened to the wall before continuing on to the next step.

 2-B Attach Arm to Wall

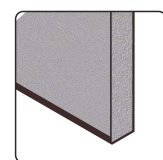


OPTION B: Solid Concrete Wall Installation

 
B-1

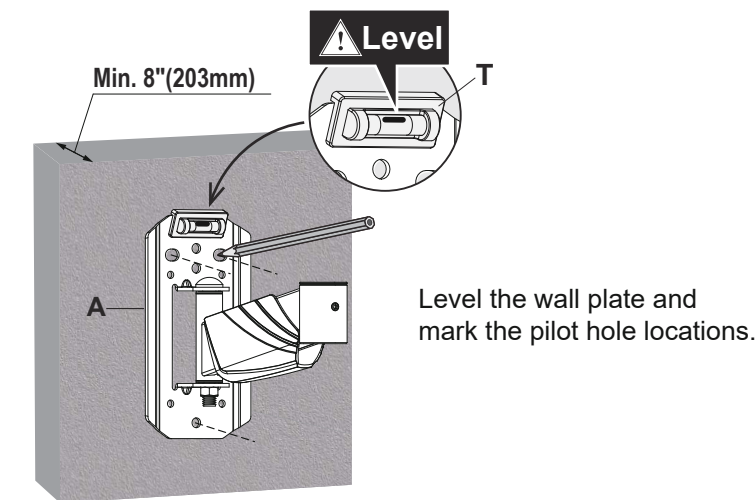

B-2

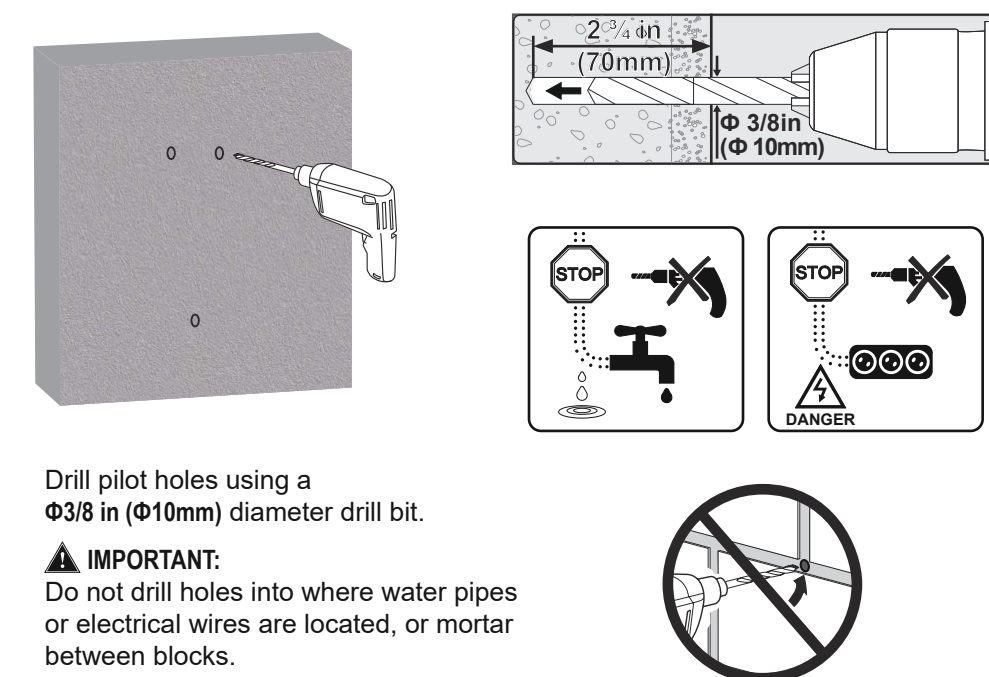 

B-3

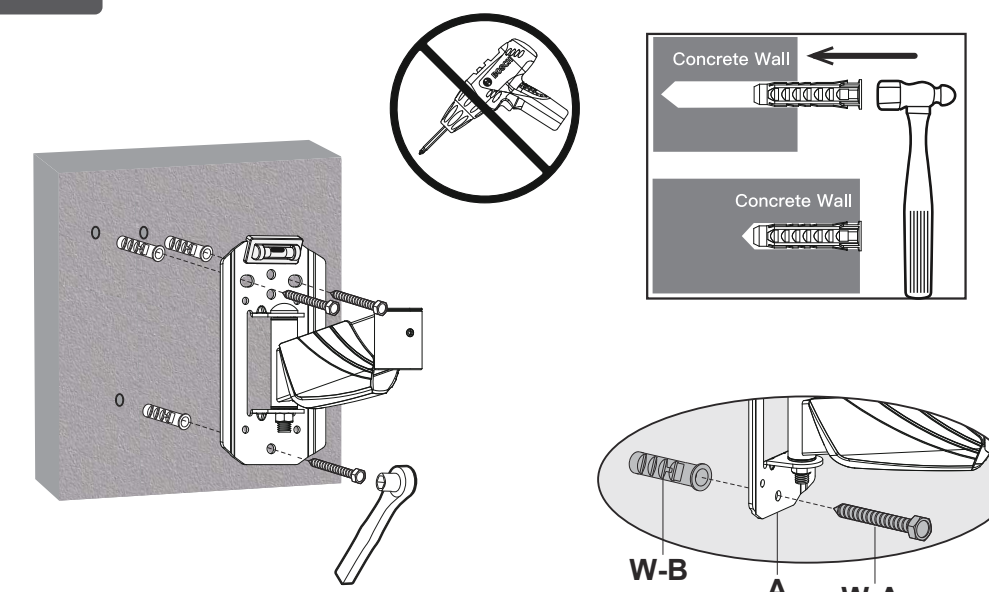 


Use the hammer to knock anchors into the concrete wall. Be sure the anchors are seated flush with the concrete surface. Install wall plate using lag bolts **W-A** and anchors **W-B** with Socket Wrench, NO Electrodrill.


CAUTION:
To avoid potential personal injury or property damage:
All 3 lag bolts **W-A** **MUST BE** firmly tightened to prevent unwanted movement of the wall plate assembly. Ensure the wall plate assembly is securely fastened to the wall before continuing on to the next step.

3 Hang Monitor

 Install the Upper Arm (B) to the Lower Arm (A). Secure the arm by tightening the inside screw using 3mm Allen key (G). Attach Decorative Covers (C) to wall plate.

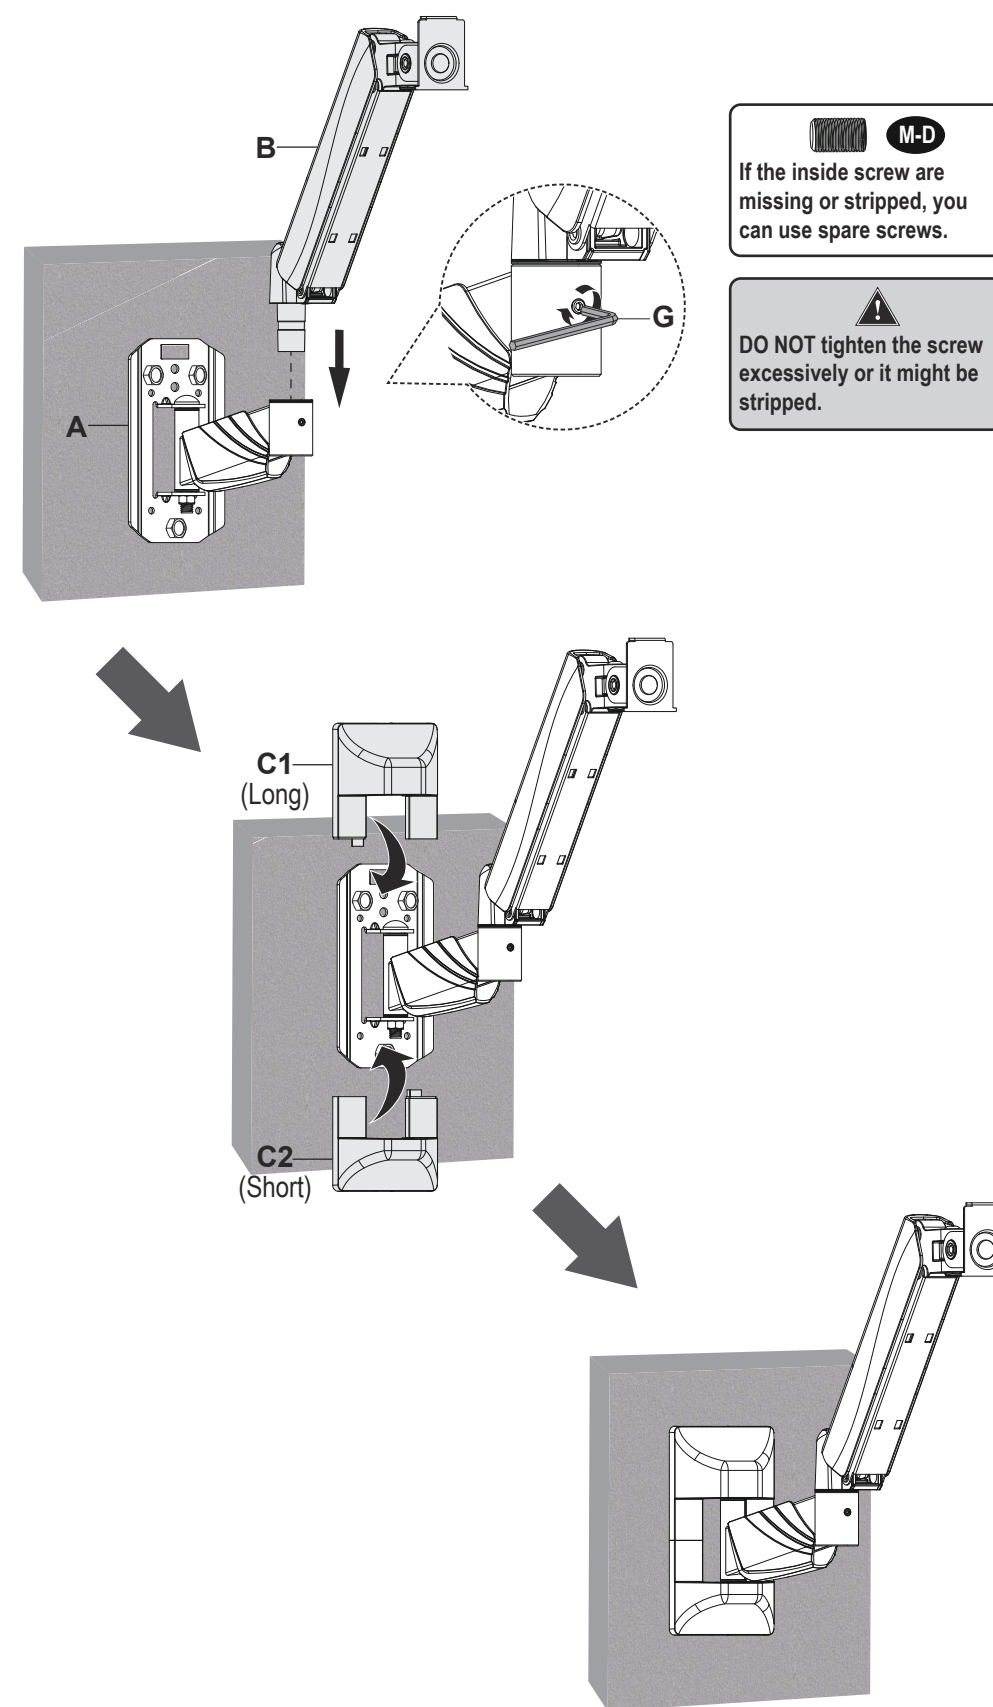

 
Slide the monitor onto the head of swivel arm, install the security bolt (F). Make sure the security bolt is installed before you rotate the monitor.

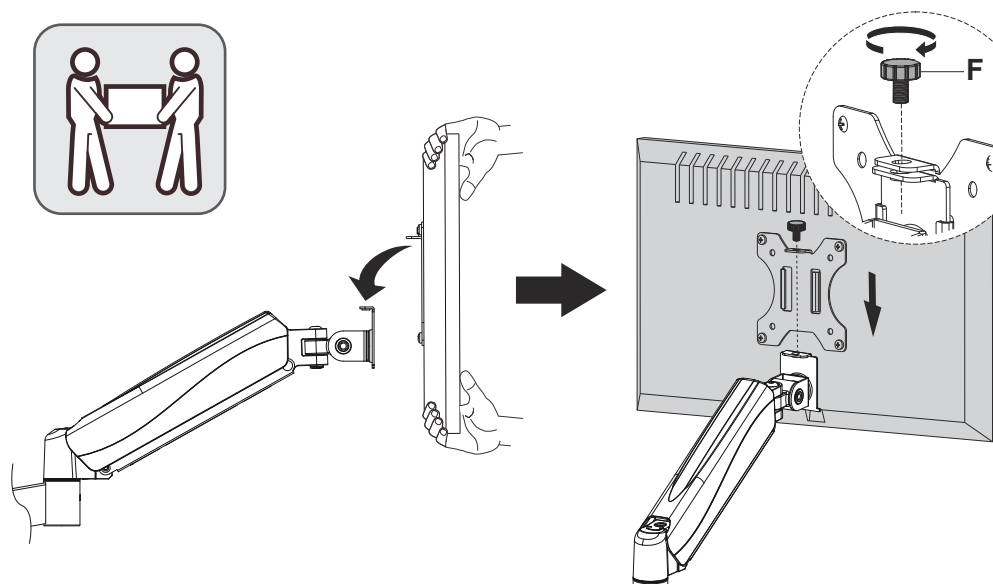

4 Adjustments (If necessary)


4-1 Tilt Adjustment

 1. Loosen the tilting bolt.
2. Adjust monitor to your desired tilt angle.
3. Retighten the tilting bolt to fix the intended angle.

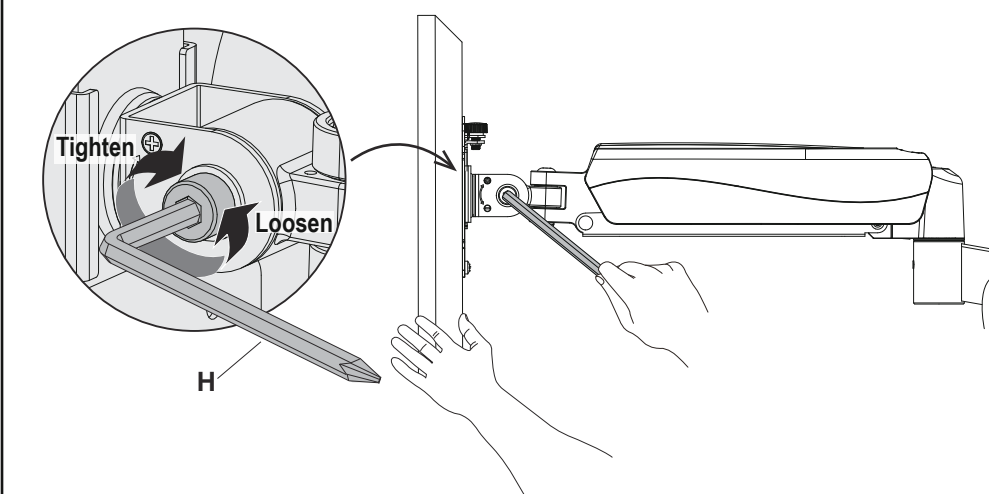


4-2 Tension Adjustment

 
The gas spring is pre-set for a load-bearing range of 8.8 lbs -13.2 lbs. For intended functioning of the mount, you will need to adjust the tension of Arm in accordance with your monitor weight by 6mm Allen Key (H).

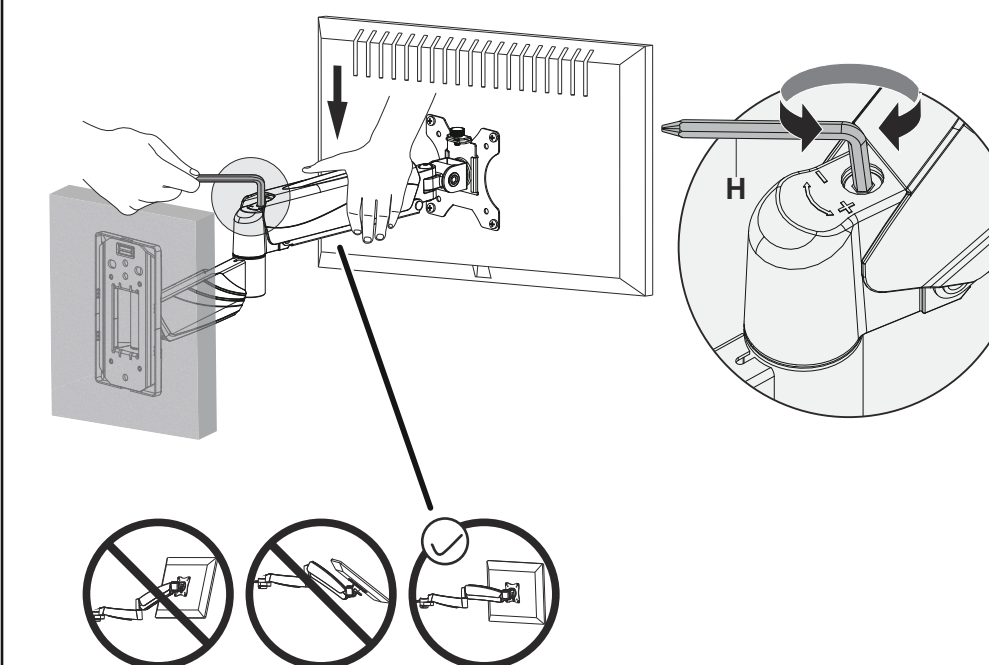

 Note:
Be sure to keep the arm in a horizontal position during adjustment.
Or else it would be difficult to adjust the mount or damage the mount.

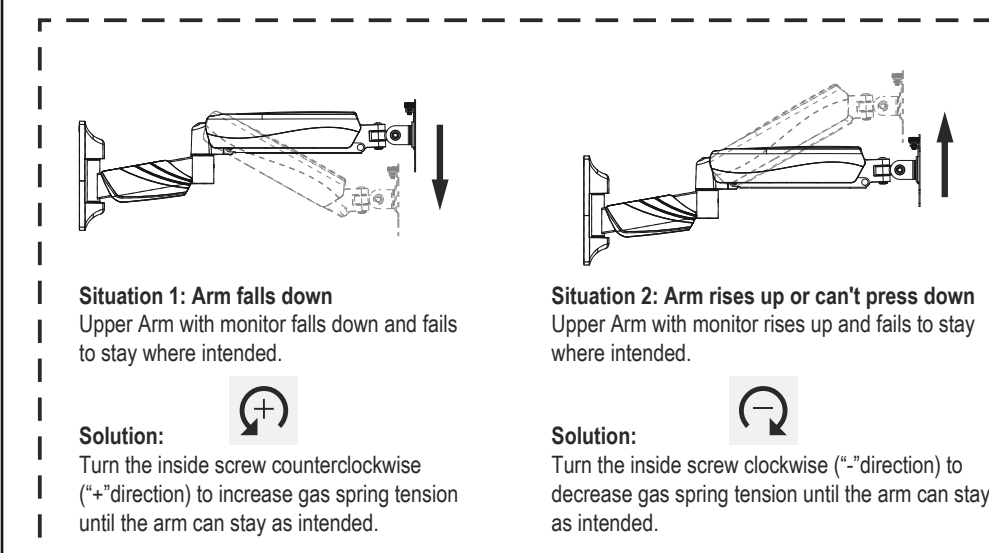

5 Cable Management

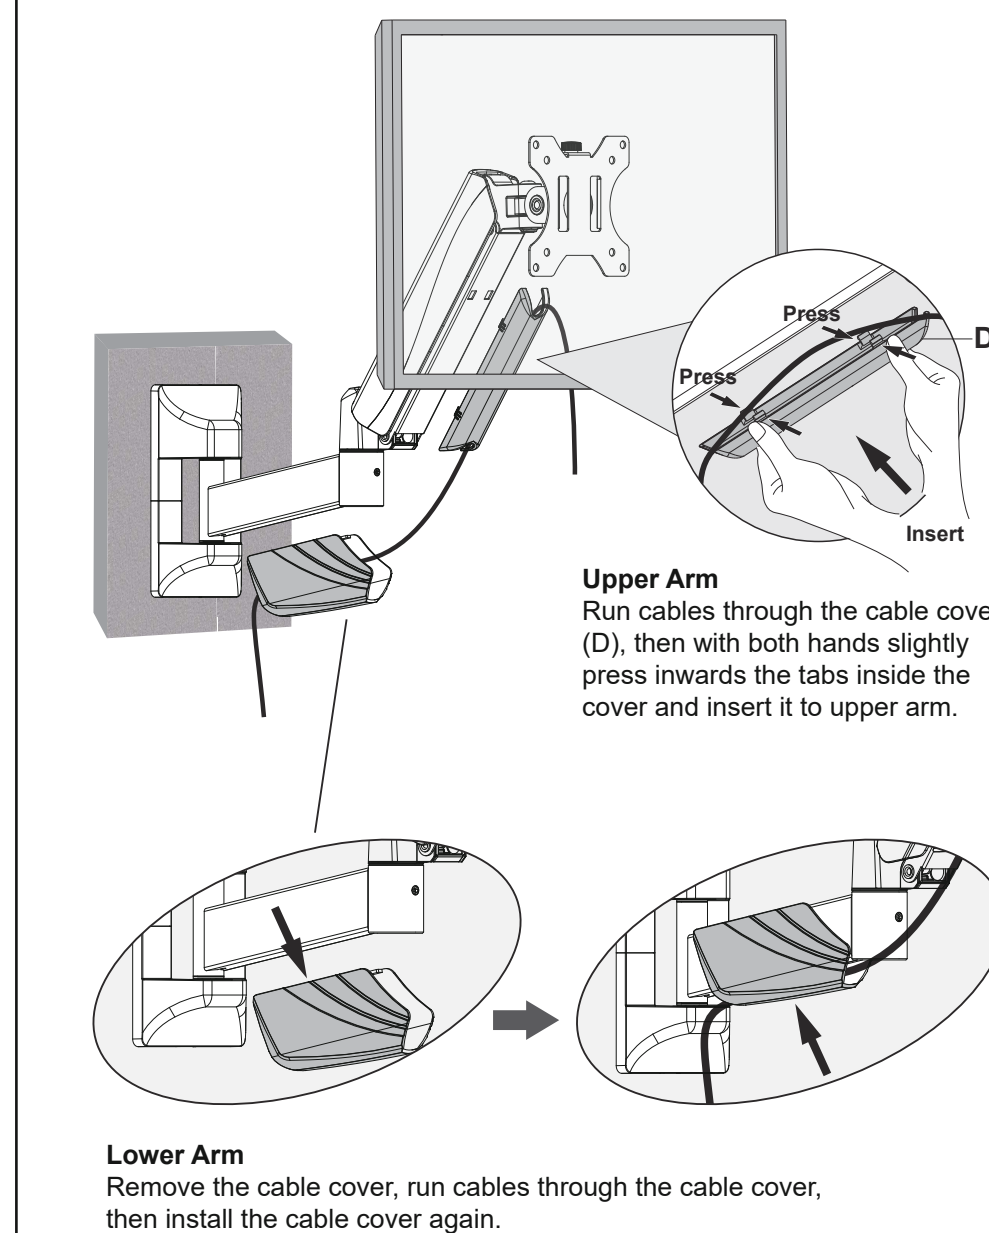 

Adjust monitor position and rotation.

