

# KNIFE EDGE GUARDS

*Noble Home & Chef*



## HOW TO USE EDGE GUARDS

Carefully place the tip of the blade into the cut out at the end of the edge guard and then slide the blade fully into the knife cover to the hilt of the handle.

## HOW TO CHOOSE SIZE

Noble Home & Chef guards are made to fit snugly. Choose a guard that is slightly longer than the length of your blade. Height is not important as the top of the guard is open, allowing the spine of the blade to protrude above the sheath yet remain securely on the knife.

## IMPORTANT INFORMATION

Do not use edge guards if either the knives or the guards themselves are wet. Knives can rust if they remain wet and the edge guards are not designed to dry them. Ensure both are completely dry before use.

## CARE INSTRUCTIONS

- Wash and dry your knives thoroughly before inserting into the edge guards.
- Should you need to clean the guards, wash with warm soapy water by hand and allow to completely air dry before use.
- Do not machine wash.



Contact Us with Any Questions!