

User Manual of Product 1:

PELONIS 40"Oscillating Tower Fan | Remote Control | Quiet Stand Up | 3 Speed Settings | 3 Modes |15-Hour Timer | LED Display | for Bedroom Home Office Use| Black

 
User Manual of Product 2:

PELONIS 30 Inch Oscillating Tower Fan with 3 Speed Settings and Auto-off Timer, Standing Fan PFT28A2BBB, Black

PELONIS

OWNER'S MANUAL

Tower Fan MODEL: PFT40A4AGB

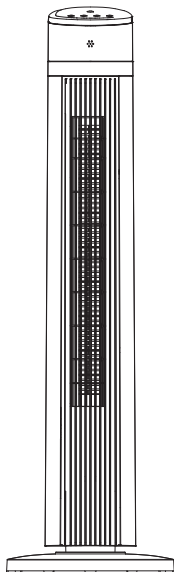

READ AND SAVE THESE INSTRUCTIONS

Attention: Pictures in the IM are for reference only.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION

Read Rules for Safe Operation and Instructions Carefully.

WARNING

 
1. To reduce the risk of fire or electric shock, do not use this fan with any solid state speed control device.
2. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If plug does not fit fully in the outlet, reverse plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify this safety feature.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been supervised or instructed related to use of the appliance by a person responsible for their safety.
4. Do not leave the fan running unattended.
5. Unplug or disconnect the appliance from the power supply before servicing.

READ AND SAVE THESE INSTRUCTIONS

RULES FOR SAFE OPERATION

1. The rules about cord and plug as below:
 - (1) This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the products. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
 - (2) Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
 - (3) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
2. Fan should be used under rated voltage.
3. Connect power after the fan is fully assembled.
4. Never insert fingers, pencils, or any other object through the guard when fan is running.
5. Unplug from outlet when not in use, when moving fan from one location to another, before putting on, or taking off parts, and before cleaning.
6. Be sure fan is on a stable surface when operating to avoid overturning.
7. DO NOT use fan in window. Moisture may create electrical hazard.




PART FIGURE

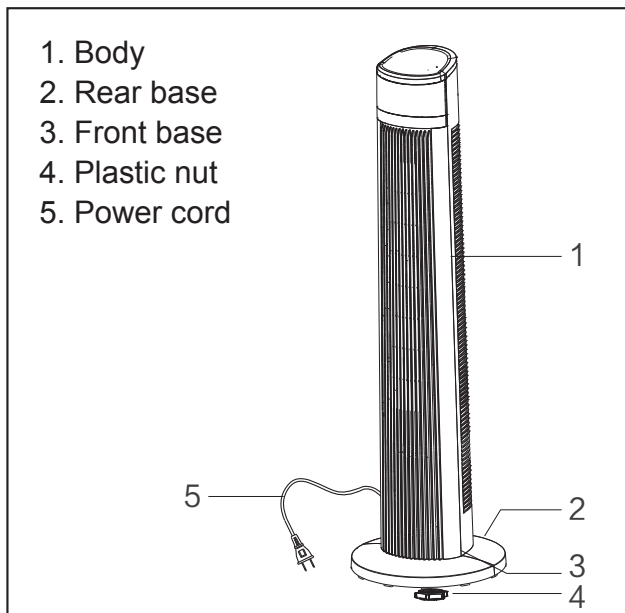

Note: All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.

ASSEMBLY INSTRUCTIONS

   1. Take out the fan body and the spare parts from the box. Put the front base onto rear base and join them together. (See Fig. 1)
2. Unlock the plastic nut from the fan body.
3. Pass the power cord through the flute, then insert the fan body into the base. (See Fig. 3)
4. Fix the fan body on the base with the plastic nut. (See Fig. 2)

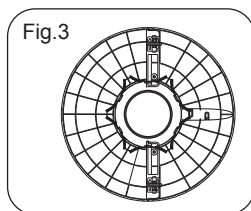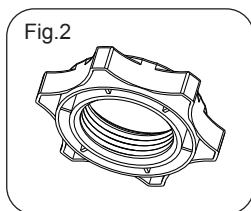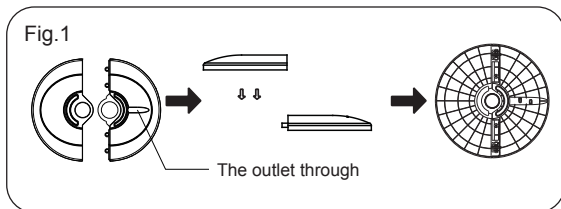

OPERATION INSTRUCTION

I. Remote Controller (Fig.4)

a. KEY INSTRUCTION

1. “” ON/OFF KEY

Press this key to switch on/switch off the fan.

2. “” SPEED KEY

When the fan started, press this key repeated, the fan will work with “1-2-3” circulatory.

3. “” MODE KEY

Press this key to select mode. The sequence is normal, natural, and sleep when this key being touched repeatedly or continuously. The light indicate mode state.

4. “” OSC/LOUVER KEY

After the fan has started, press this key to select oscillation mode. The lights on the display can indicate fan oscillation mode.

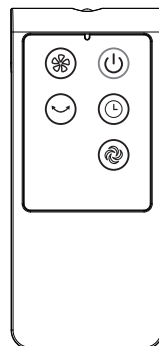 


Fig.4

5. "⌚" TIMING KEY

 
Press this timer key repeatedly to set the time for air delivery. Increase in increments up to "1-2-3-4-5-6-7-8-9-10-11-12-13-14-15" hours.

b. BATTERIES

(battery not included in the packaging)


1. Slide the battery compartment Cover.
2. Insert the batteries, and make sure that the batteries are placed as shown in the Fig.5.
3. Slide back the battery cover.

NOTES: Use manganese or alkaline batteries of type "AAA". Do not use rechargeable batteries.

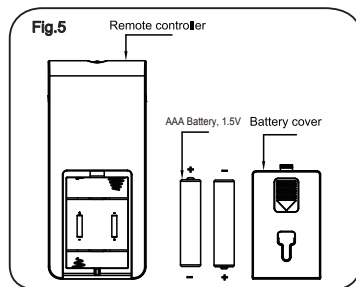

c. BATTERY WARNING AS BELOW

 1. "Do not dispose of batteries in fire, batteries may explode or leak."
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

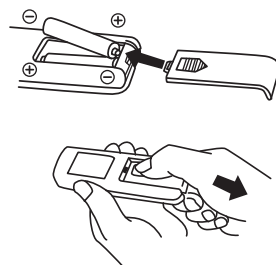

d. REMOTE CONTROLLER OPERATION

Point the remote controller at the receptor on body of the fan and press the desired button. The remote controller will work at distances of up to roughly five meters and the angle of 30 degree included between right and left from the receptor.

The batteries must be removed from the remote controller before it is scrapped and that they are disposed of safely.

e. OVERHEAT PROTECTION OF THE MOTOR

The windings of the motor have a thermal-fuse that burns out and the fan switches off and temperature of the motor is no longer going up so that plastic parts of the fan don't subject to deformation so far so to be burned by the overheat if the motor is overheat for any unexpected reason.

II. Buttons on fan body / Panel indication (Fig.6)


The buttons on the body such as ON/OFF, SPEED, MODE, TIMER, OSCILLATION have the same functions as those of the corresponding keys on the remote controller.



Fig.6

USER SERVICING INSTRUCTIONS

 1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
3. Remove fuse carefully. Push the fuse from the other side to remove fuse.
4. Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse (provided with product.)
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
6. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

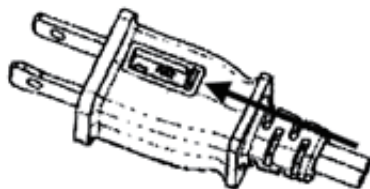

NOTE:

1. When you replace the fuse, please don't operate suddenly or overexert, or else the product will be damage or cause accident.
2. Confirm positioning is correct to avoid any complexity when operating.

CLEANING

1. Be sure to unplug the power cord from the outlet before cleaning.
2. Plastic parts should be cleaned thoroughly with clean water, mild soap and damp cloth or sponge.
3. Be sure not to get water or other liquid enter the inside of the motor.
4. Dry all parts completely before plugging into socket.

SERVICE & SUPPORT

In the event of a warranty claim or if service is required for this heater, please contact us at the following:

Toll Free: 1-866-646-4332

Email us at: customersupport@pelonis.com

For questions or comments, please write to:

Midea America Corporation

Customer Care Center

5 Sylvan Way Parsippany, NJ 07054

For your records, staple your sales receipt to this manual and record the following:

DATE OF PURCHASE: _____

PLACE OF PURCHASE: _____

(STAPLE SALES RECEIPT HERE)

**NOTE: PROOF OF PURCHASE IS REQUIRED FOR ALL
WARRANTY CLAIMS
PRINTED IN CHINA**

ONE (1) YEAR LIMITED WARRANTY

- Please read all instructions before attempting to use this product.

PELONIS warrants as limited herein to the original purchaser of retail that each new Pelonis Ceramic Tower Heater, shall be free of defects in material and workmanship for a period of one (1) year from the date of original purchase. This one (1) year warranty is limited to the heating elements, motor, and electric control circuit board.

In the event of malfunctions or failure of your Pelonis Ceramic Tower Heater, simply deliver or send the heater, postage prepaid along with PROOF OF PURCHASE, within the warranty period of one (1) year, to PELONIS. PELONIS reserves the right to inspect the claimed defective part or parts to determine if the defect or malfunction complaint is covered by this warranty. PELONIS shall, within sixty (60) days after receipt of the product, at its option, repair and/or replace the defective part or parts free of charge. This warranty shall only cover defects arising from normal usage. PELONIS assumes no responsibility whatsoever if the Ceramic Tower Heater should fail during the warranty period by reason of:

- Misuse, negligence, physical damage or accidents.
- Lack of maintenance (see instructions for proper maintenance).
- Repair by any unauthorized party during the warranty period.
- Damage caused by connection to an improper input voltage (see specification label on your heater).

PELONIS makes no further warranties or representations, express or implied except those contained herein. No representative or dealer is authorized to assume any other liability regarding the Ceramic Tower Heater. The duration of the implied warranty granted under State law, including warranties of merchantability and fitness for particular purpose are limited in duration should the duration of the express warranty grant it hereunder. PELONIS shall in no event be liable for direct, indirect, special or consequential damages.

 
Some states do not allow limitations on how long an implied warranty lasts, and/or the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

PELONIS

en

USER MANUAL

30" Tower Fan
PFT28A2BWW
PFT28A2BBB

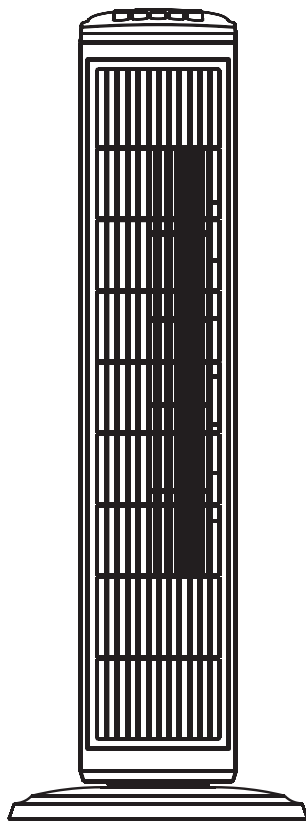

Warning Notice: Before using this product, please read this manual carefully and keep it for future reference. For additional support, please call customer service at 1-866-646-4332.

The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or the manufacturer for details.

version A - 04 - 2021 (PREVIEW01)

PFT28A2BWW
PFT28A2BBB

midea.com

OWNER'S MANUAL

SAFETY PRECAUTIONS	2
IMPORTANT INSTRUCTIONS	3
PARTS AND FEATURES	4
PARTS ASSEMBLY	4
OPERATION INSTRUCTIONS	5
CLEANING AND STORAGE	6
USER SERVICING INSTRUCTIONS	6
SERVICE AND SUPPORT	7
ONE (1) YEAR LIMITED WARRANTY	8

Read This Manual

Inside you'll find many helpful hints on how to use and maintain your appliance properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your appliance. You'll find many answers to common problems in the troubleshooting tips - you should be able to fix most of them quickly before calling service. These instructions may not cover every possible condition of use, so attention to safety details is required when operating and maintaining this product.

SAFETY PRECAUTIONS

To prevent injury to the user or other people and property damage, the instructions shown here must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage. The different levels of risk is shown by the following indications.

 WARNING	This symbol indicates a hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	This symbol indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.
NOTICE	This symbol addresses practices not related to physical injury.

IMPORTANT INSTRUCTIONS

 
NOTICE

Please read and save these important safety instructions!

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. To Reduce The Risk of Fire or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device, other than the one supplied.
2. This product is intended for household use ONLY and not for commercial, industrial or outdoor use.
3. If the supply cord is damaged, it must be replaced by the manufacturer its service agent or a similarly qualified person in order to avoid a hazard.
4. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
7. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
 - a) Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
 - b) Avoid contact with moving fan parts.
8. To avoid overturning, be sure the fan is on a stable surface when operating it.
9. To reduce the risk of electric shock, DO NOT use the fan by a window.
10. Place the fan on a dry level surface.

PARTS AND FEATURES

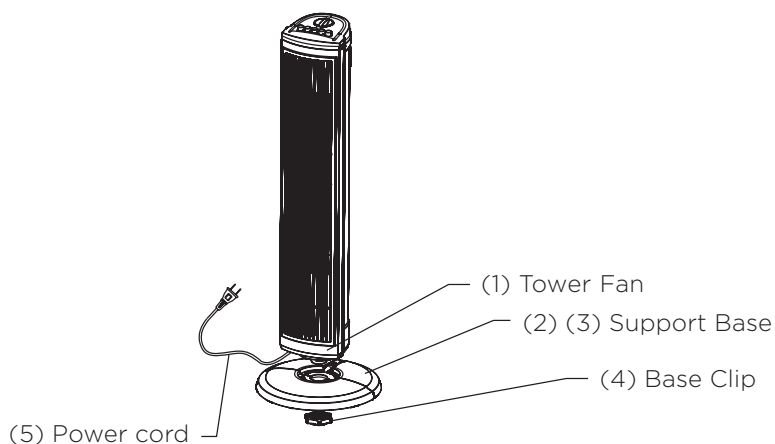

NOTICE

All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.

PARTS ASSEMBLY

NOTICE

 
Please place the machine on the package foam or other soft surfaces and invert it to avoid scratch mark when install the base.

1. Pull power cord (5) out slightly.
2. Assemble the front and rear base components (2) and (3) to form a round base plate assembly.
3. Install the base plate assembly (2+3) to the bottom of the body (1) with power cord retaining clip on the back side of the fan body. Attach using base clip (4).
4. Slide the power cord under the clip on the rear base plate (2).

OPERATION INSTRUCTIONS

a. Control features:


1. Timer
2. Body oscillating switch
3. Speed switch

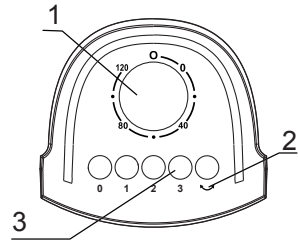

b. Instructions:

1. Plug the power cord into a wall outlet.
2. The air flow can be angled to the left or right by pushing the button of body oscillating switch (2). If you want to stop angling, push it again.
3. Automatic 120-minute timer. Turn the knob of the timer (1) to the desired time the fan will stop when the time is done. The longest timer setting is 120 minutes. If the timer is not in use, set the timer to "0".
4. Speed is controlled by pushing speed switch (3) on the top of the body. There are 4 positions:

 0 - Off; 1 - Low; 2 - Medium; 3 - High

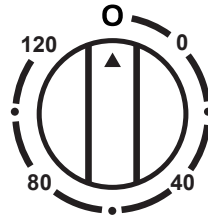


CLEANING AND STORAGE

- Ensure the fan is turned off and unplugged.
- Use only a soft cloth to gently wipe the outer surfaces of the fan clean.
- To clean between the grills and fan blade area, we recommend using a pipe cleaner, flexible dust wand, vacuum cleaner or compressed air to gently remove the dust.
- To clean the rear grill use a soft dry cloth.
- DO NOT immerse the fan in water and never allow water to drip into the motor housing.
- DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
- For storage, you may leave the fan assembled and covered to protect it from dust. Store the fan in a cool, dry place.

USER SERVICING INSTRUCTIONS

 1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
3. Remove fuse carefully. Insert the tip of your tool into fuse slot (close with the terminal), then pry the fuse gradually and slowly, but not overexert. If you feel tight, you can try it at several times and pry the fuse little by little. When one side of the fuse has been pryzed, then you can get the fuse out entirely.
4. Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse.
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
6. To Reduce the Risk of fire, do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attached plug is damaged.

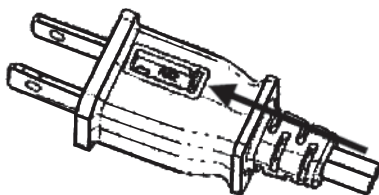

NOTICE

When you replace the fuse, please don't operate suddenly or overexert, or else the product will be damage or cause accident.

SERVICE AND SUPPORT

In the event of a warranty claim or if service is required for this product, please contact us at the following:

Toll Free: 1-866-646-4332

For questions or comments, please write to:

Midea America Corp

759 Bloomfield Ave., # 386

West Caldwell, NJ 07006-6701

Email: customersupport@pelonis.com

For your records, staple your sales receipt to this manual and record the following:

DATE OF PURCHASE: _____

PLACE OF PURCHASE: _____

(STAPLE SALES RECEIPT HERE)

**NOTE: PROOF OF PURCHASE IS REQUIRED FOR ALL
WARRANTY CLAIMS**

PRINTED IN CHINA

ONE (1) YEAR LIMITED WARRANTY

Please read all the instructions before attempting to use this product.

Midea America Corporation warrants as limited herein to the original purchaser of retail that each new Fan, shall be free of defects in material and workmanship for a period of one (1) year from the date of original purchase. This one (1) year warranty is limited to the Motor and Electric Element.

In the event of malfunctions or failure of your Fan, simply deliver or send the Fan, postage prepaid along with PROOF OF PURCHASE, within the warranty period of one (1) year, to Midea America Corporation. Midea America Corporation reserves the right to inspect the claimed defective part or parts to determine if the defect or malfunction complaint is covered by this warranty. Midea America Corporation shall, within sixty (60) days after receipt of the product, at its option, repair and/or replace the defective part or parts free of charge. This warranty shall only cover defects arising from normal usage. Midea America Corporation assumes no responsibility whatsoever if the Fan should fail during the warranty period by reason of:

- Misuse, negligence, physical damage or accidents.
- Lack of maintenance (see instructions for proper maintenance).
- Repair by any unauthorized party during the warranty period.
- Damage caused by connection to an improper input voltage (see specification label on your Fan).

Midea America Corporation makes no further warranties or representations, express or implied except those contained herein. No representative or dealer is authorized to assume any other liability regarding the Fan. The duration of the implied warranty granted under State law, including warranties of merchantability and fitness for particular purpose are limited in duration should the duration of the express warranty grant it hereunder. Midea America Corporation shall in no event be liable for direct, indirect, special or consequential damages.

Some states do not allow limitations on how long an implied warranty lasts, and/or the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

