



RE450

User Guide

AC1750 Wi-Fi Range Extender

Contents

About This Guide	1
Chapter 1. Get to Know About Your Extender	2
1. 1. Product Overview	3
1. 2. Appearance	3
1. 2. 1.LED Explanation.....	4
1. 2. 2.Port and Button Description	4
Chapter 2. Set Up Internet Connection	5
2. 1. Quick Setup.....	6
2. 1. 1.Method One: Via the WPS button	6
2. 1. 2.Method Two: Via a Web Browser.....	7
2. 2. Position Your Extender.....	11
Chapter 3. Customize Your Network.....	12
3. 1. Check Internet Status.....	13
3. 2. Configure Wireless Network	14
3. 3. Change LAN Settings.....	15
3. 4. Specify DHCP Server Settings.....	16
3. 5. Adjust Wi-Fi Coverage	17
3. 6. Set Access Control.....	17
Chapter 4. More Features of Your Extender	20
4. 1. Use Your Extender as a Wireless Adapter	21
4. 2. Transform Your Existing Wired Network to a Wireless One.....	21
4. 2. 1.To Set Up the Extender as an Access Point.....	21
4. 2. 2.To Connect Your Wireless Devices to the Extender via WPS.....	23
Chapter 5. Manage Your Extender	25
5. 1. Set Up System Time	26
5. 2. Control LEDs	26
5. 3. Power Schedule	27
5. 4. Upgrade the Firmware.....	28
5. 5. Backup and Restore Configuration Settings	28

5.6.	Change Admin Account	29
5.7.	System Log	30
FAQ		31

About This Guide

This guide is a complement to Quick Installation Guide. The Quick Installation Guide provides instructions for quick Internet setup, while this guide contains details of each function and demonstrates how to configure them.

When using this guide, please notice that features of the extender may vary slightly depending on the model and software version you have, and on your location, language, and Internet service provider. All screenshots, images, parameters and descriptions documented in this guide are used for demonstration only.

Conventions

In this guide the following conventions are used:

Convention	Description
<i>Blue Italic</i>	Hyperlinks are in blue italic. You can click to redirect to a website or a specific section.
Blue	Contents to be emphasized and texts on the web page are in blue, including the menus, items, buttons, and so on.
>	The menu structures to show the path to load the corresponding page. For example, Advanced > Wireless > MAC Filtering means the MAC Filtering function page is under the Wireless menu that is located in the Advanced tab.
 Note:	Ignoring this type of note might result in a malfunction or damage to the device.
 Tips:	Indicates important information that helps you make better use of your device.
symbols on the web page	 click to edit the corresponding entry.  click to delete the corresponding entry.  click to enable or disable the corresponding entry.  click to view more information about items on the page.

More Info

The latest software, management app and utility are available from the [Download Center](#) at www.tp-link.com/support.

The Quick Installation Guide can be found where you find this guide or inside the package of the range extender.

Specifications can be found on the product page at <http://www.tp-link.com>.

A Technical Support Forum is provided for you to discuss our products at <http://forum.tp-link.com>.

Our Technical Support contact information can be found at Contact Technical Support page at www.tp-link.com/support.

Chapter 1

Get to Know About Your Extender

This chapter introduces what the extender can do and its appearance.

It contains the following sections:

- *Product Overview*
- *Appearance*

1.1. Product Overview

Bring Dead Zones Back to Life

Tired of Wi-Fi “dead zones”? The TP-LINK extender is connected to your router wirelessly, strengthening its signal and expanding its coverage into areas that could not otherwise be reached. The device also reduces signal interference to ensure reliable Wi-Fi coverage throughout your home or office.

Easy Installation & Quick Position


The extender works with any standard wireless router. Instantly connect the extender to a router by pressing the router’s WPS button (if available) followed by the extender’s RE/WPS button. Alternatively, follow the Quick Setup instructions found on the extender’s web management page.

Once the extender is connected to a router, you can relocate it to your preferred location with no further configuration required. The intelligent signal light can help to find the best location.

Easy Management with the Tether App

Tether provides a simple, intuitive way to access and manage your extender with your smart devices.

1.2. Appearance

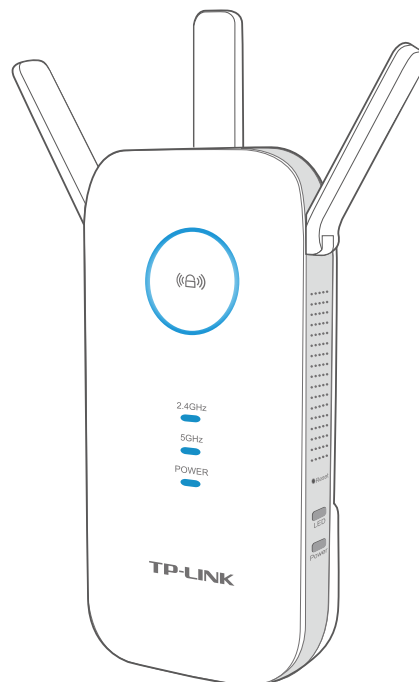

1.2.1. LED Explanation

You can check the extender's working status by following the LED Explanation table.

Name	Status	Indication
Ⓜ (RE)	Solid Blue	The extender is connected to the router, and is in a good location.
	Solid Red	The extender is connected to the router, but is too far away from the router.
	Blinking	The extender is trying to connect to the network via WPS. This process may take up to 2 minutes.
	Off	No active connection.
2.4GHz	On	The extender is connected to the 2.4GHz wireless network of your host network.
	Off	No 2.4GHz wireless connection.
5GHz	On	The extender is connected to the 5GHz wireless network of your host network.
	Off	No 5GHz wireless connection.
POWER	On	The extender is on.
	Blinking	The extender is initializing.
	Off	The extender is off.

1.2.2. Port and Button Description

Ports or Buttons	Description
Ⓜ (RE Button)	Press the WPS button on your host router, and immediately press the RE button on the extender. The RE LED of the extender should change from blinking to solid on, indicating successful WPS connection.
LED Button	To turn all LEDs on or off, press the LED button.
ON/OFF Button	To turn on or off the extender, press the ON/OFF button.
Reset Button (Hole)	Press and hold the Reset button until all the LEDs turn on momentarily to reset the extender to its factory default settings.
Ethernet Port	Connect your Ethernet-only device to the Ethernet port of the extender to join the Wi-Fi network.

Chapter 2

Set Up Internet Connection

This chapter informs you how to boost your host network. Please follow the step-by-step instructions to set up the Internet connection.

It contains the following sections:

- *Quick Setup*
- *Position Your Extender*

2.1. Quick Setup

Power on


Plug the extender into an electrical outlet [near your host router](#), and then wait until the Power LED changes to solid blue.

Connect to the host network

There are two ways to connect to the host network: via the WPS button or via a web browser. Using the WPS button is the easiest way to extend your host network. We recommend you to use this way if your router has a WPS button. The button might look like one of these:  |  | .

2.1.1. Method One: Via the WPS button

1. Press the WPS button on your host router, and then press the  RE button on the extender within 2 minutes.

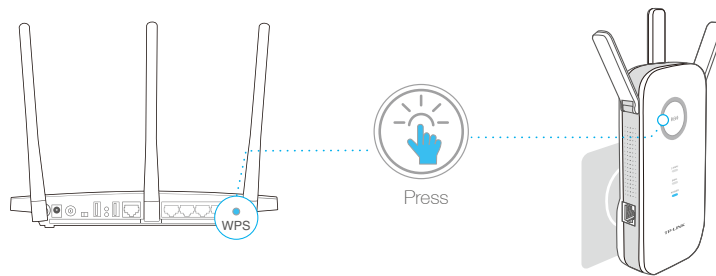

☞ Tips:

- Some ISP gateways disable the WPS function by default. If the WPS connection fails, please refer to [Method Two: Via a Web Browser](#).
 - For more information about using WPS button on your host router, please refer to the router manufacturer's user guide.
2. Wait until the  RE LED changes from blinking to a solid status, which indicates that the WPS connection is successful. If it doesn't, please refer to [Method Two: Via a Web Browser](#).
 3. If you are connecting the extender to a dual-band router but only 2.4GHz or 5GHz LED is on, repeat Step 1 and 2 to connect to the other band.
 4. [Enjoy!](#) Connect to the extended network and enjoy the Internet. Both extended networks share the same SSIDs (network names) and passwords as those of your host networks.

☞ Tips:

Since the performance of the extended networks will be affected by the distance between extender and host router, we recommend that you relocate your extender by referring to [Position Your Extender](#).

2.1.2. Method Two: Via a Web Browser

1. Connect your computer to the extender's wireless network.

Tips:


Before connecting, please find the SSID (network name) on the label of the extender.

- For Windows Users

- 1) Unplug the Ethernet cable from your computer (if any).
- 2) Click the Wireless Network Connection icon on the taskbar.




- 3) Click the refresh icon  and connect to the extender's wireless network: [TP-LINK_Extender_2.4GHz](#) or [TP-LINK_Extender_5GHz](#).

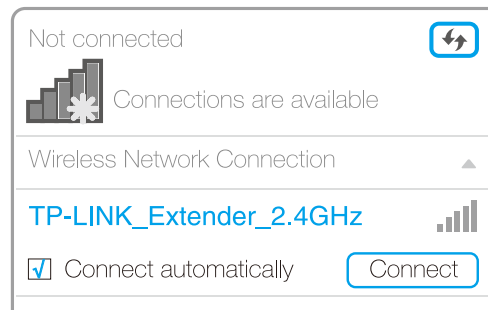


- For Mac OS X Users

- 1) Unplug the Ethernet cable from your computer (if any).
- 2) Click the Wi-Fi icon in the top right corner of the screen, and connect to the extender's network: [TP-LINK_Extender_2.4GHz](#) or [TP-LINK_Extender_5GHz](#).

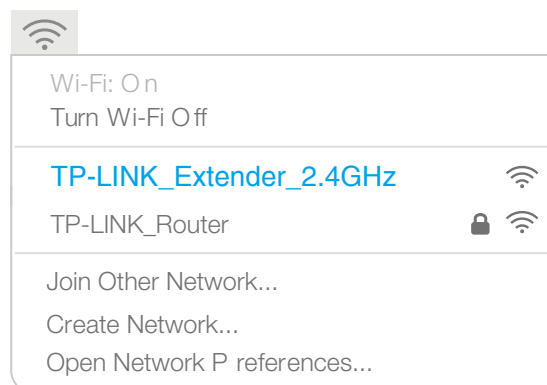

2. Follow the instructions of the Quick Setup Wizard to connect the extender to your host router.

- 1) Launch a web browser and type <http://tplinkrepeater.net> or <http://192.168.0.254> in the address field. Use [admin](#) (all lowercase) for both username and password to log in.

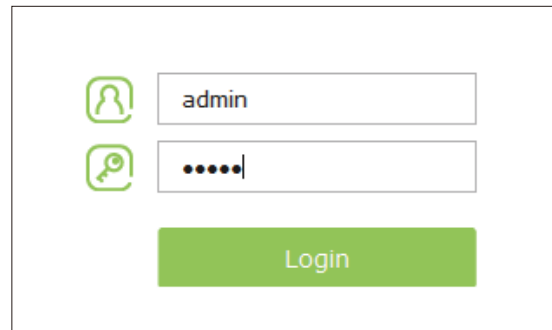


The login form is enclosed in a light gray box. It features two input fields on the right: the top one contains the text 'admin' and is preceded by a green user icon; the bottom one contains seven dots and is preceded by a green key icon. Below these fields is a solid green button with the word 'Login' in white text.

 Tips:

If the login window does not appear, please refer to the [FAQ](#).

- 2) Create a new username and password for secure management purposes, and then click [Confirm](#).

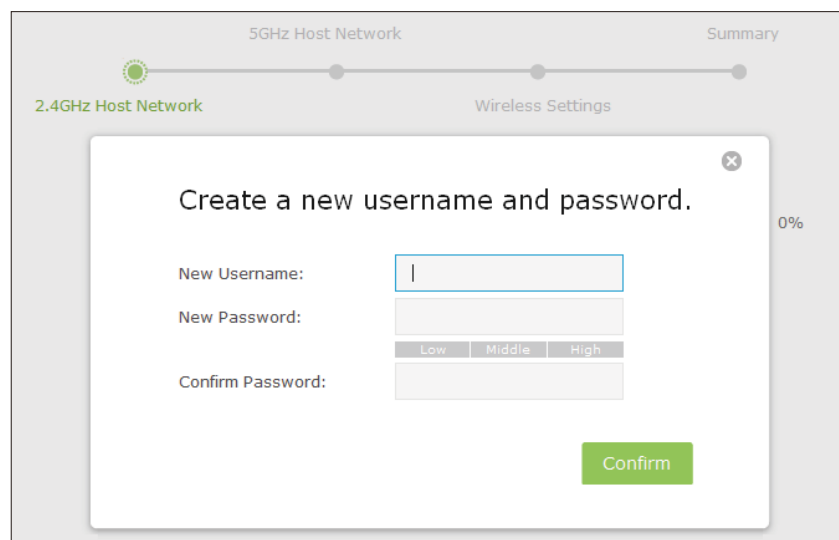

The screenshot shows a web interface with a progress bar at the top. The progress bar has four steps: '2.4GHz Host Network' (active, green dot), '5GHz Host Network', 'Wireless Settings', and 'Summary'. A modal dialog box is open in the center with the title 'Create a new username and password.' and a close button (X) in the top right corner. The dialog contains three input fields: 'New Username:' (with a cursor), 'New Password:' (with a strength indicator below it showing 'Low', 'Middle', and 'High' levels), and 'Confirm Password:'. A green 'Confirm' button is located at the bottom right of the dialog. A '0%' progress indicator is visible on the right side of the dialog.

- 3) Select your host router's 2.4GHz SSID (network name), enter its password (NOT the password you just created for management), and click [Next](#).

5GHz Host Network

2.4GHz Host Network

Wireless Settings

Summary

Please select 2.4GHz host network or skip this network.

ID	SSID	Signal	MAC Address	Security
☐ 1	TP-LINK_A687_5G_2.4G	📶	00:0A:EB:13:7B:00	🔒
☒ 2	TP-LINK_32EB	📶	30:B5:C4:2F:32:EB	🔒

Host 2.4GHz Password:

[Next](#)

[Exit](#) [Other...](#) [Rescan](#) [Skip](#)

- 4) Select your host router's 5GHz SSID (network name), enter its password (NOT the password you just created for management), and click [Next](#).

5GHz Host Network

2.4GHz Host Network

Wireless Settings

Summary

Please select 5GHz host network or skip this network.

ID	SSID	Signal	MAC Address	Security
☒ 1	TP-LINK_A687_5G	📶	00:0A:EB:13:7A:FF	🔒
☐ 2	TP-LINK_0969_5G_1	📶	00:0A:EB:13:09:68	🔒
☐ 3	TP-LINK_000C_5G	📶	E0:05:C5:06:00:0E	🔒

Host 5GHz Password:

[Next](#)

[Exit](#) [Other...](#) [Rescan](#) [Skip](#)

📌 **Tips:**

If your host router does not support 5GHz wireless network, please click [Skip](#) to continue.

- 5) Either keep the default SSIDs (network names) or customize them for the extended networks, and then click [Next](#).

5GHz Host Network

2.4GHz Host Network

Wireless Settings

Summary

Extended 2.4GHz SSID:

TP-LINK_32EB

Copy Host SSID

☐ Hide SSID broadcast

Note:

 The extended 2.4GHz password is the same as your Host password.

Extended 5GHz SSID:

TP-LINK_A687_5G

Copy Host SSID

☐ Hide SSID broadcast

Note:

 The extended 5GHz password is the same as your Host password.

Back

Next

6) Verify your wireless settings and click **Finish**. The corresponding LED(s)(2.4GHz or 5GHz) should turn on.

5GHz Host Network

2.4GHz Host Network

Wireless Settings

Summary



Router



Range Extender

Router

2.4GHz Wireless

SSID: TP-LINK_32EB

Password: 12345670

5GHz Wireless

SSID: TP-LINK_A687_5G

Password: 12345670

Range Extender

2.4GHz Wireless

SSID: TP-LINK_32EB

Hide SSID: Off

Password: 12345670

5GHz Wireless

SSID: TP-LINK_A687_5G

Hide SSID: Off

Password: 12345670

Back

Save

- 7) **Enjoy!** Connect to the extended network and enjoy the Internet. Both extended networks share the same wireless passwords as those of your host networks, but may have different network names if you have customized the SSIDs during the configuration.

5GHz Host Network

Summary

2.4GHz Host Network

Wireless Settings

Congratulations!

Now, connect to your new extended network and enjoy the Internet.

2.4GHz Wireless

SSID: TP-LINK_32EB

Password: 12345670

5GHz Wireless

SSID: TP-LINK_A687_5G

Password: 12345670

☒ I am connected to the extended network.

Finish


Tips:

Since the performance of the extended network will be affected by the distance between extender and host router, we highly recommend you to relocate your extender referring to [Position Your Extender](#).

2.2. Position Your Extender

Please follow the instructions below to achieve optimal performance of the extender.

1. Plug the extender into an electrical outlet between your host router and the Wi-Fi “dead” zone. The location you choose must be within the range of your existing host network.
2. Wait until the ((RE)) (RE) LED is lit and solid blue. If not, relocate it closer to the host router to achieve better signal quality.

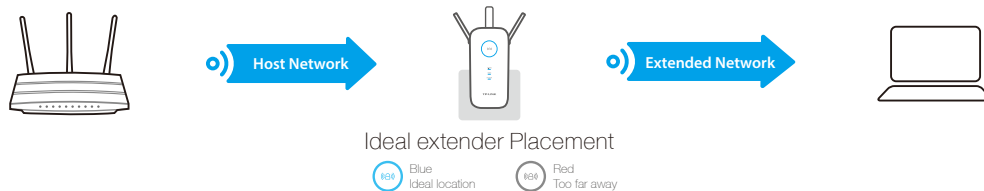

Tips:

To minimize signal interference, please choose a location which is far away from Bluetooth devices and other household electronic devices, such as cordless phones, microwave ovens and baby monitors.

Chapter 3

Customize Your Network

This chapter guides you on how to configure network settings that are available for this extender.


It contains the following sections:

- [*Check Internet Status*](#)
- [*Configure Wireless Network*](#)
- [*Change LAN Settings*](#)
- [*Specify DHCP Server Settings*](#)
- [*Adjust Wi-Fi Coverage*](#)
- [*Set Access Control*](#)


3.1. Check Internet Status

You can view the Internet status of your extender to check whether you have successfully set up the extended network(s).

1. Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [Status](#) to view the Internet status of your extender.
 - The extender is functioning normally.

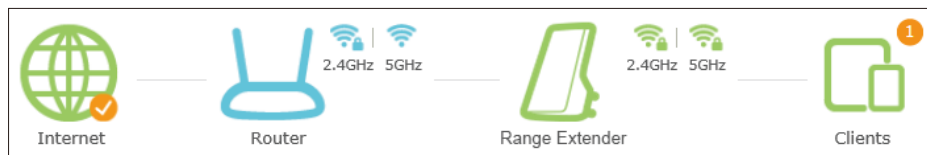

- The extender is not connected to the host networks. Please go to [Settings](#) > [Wireless](#) > [Connect to Network](#) to check the passwords of the host networks. If the problem still exists, please refer to the [FAQ](#) section.

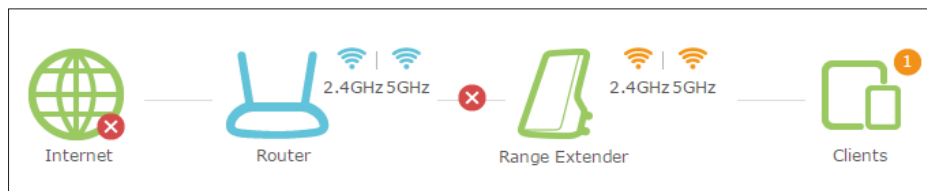

- The extender is connected to the host network, but is not transmitting data. Please check your router's Internet connection.



- The extender is connected to the router abnormally. Please go to [Settings](#) > [Network](#) and try setting your extender to obtain an IP address automatically.



Click the Internet/Router/Range Extender/Clients icon to view corresponding information.

3.2. Configure Wireless Network

If you want to extend another host network after Quick Setup, you can refer to this section. Moreover, you can change the wireless settings for your extended networks.

Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.

■ **Note:**

Here we take the configuration of the 2.4GHz network as an example. If the 5GHz network is available on your extender, please refer to the instructions to set your 5GHz network.

➤ **To extend another host network :**

1. Go to [Settings](#) > [Wireless](#) > [Connect to Network](#).
2. Enable [Connect to 2.4GHz Network](#) and click [Wireless Scanner](#) to find all available networks.

Connect to Host Network

2.4GHz Network: ☒ Connect to 2.4GHz Network

Wireless Scanner

Host 2.4GHz SSID:

Host 2.4GHz Security: No Security ▼

Host 2.4GHz Password:

5GHz Network: ☒ Connect to 5GHz Network

Wireless Scanner

Host 5GHz SSID:

Host 5GHz Security: No Security ▼

Host 5GHz Password:

Save

3. Select the 2.4GHz host network you want to extend.

■ **Note:**

If the network you want to extend is on but not listed, please try the following steps.

1. Move the extender closer to your router, and click [Rescan](#) in the top-right corner of the list.
2. You can manually enter the parameters of the network you want to extend, and click [Save](#).
4. Once a host network is selected, the SSID and security type will be automatically filled in. If the selected network is encrypted, enter the password in the [Password](#) field.
5. Click [Save](#).

➤ **To enable or disable the extended network:**

1. Go to [Settings](#) > [Wireless](#) > [Extended Network](#).
2. Extended networks are enabled by default. If you want to disable the wireless function of a certain band, just clear the [Enable](#) checkbox. In this case, all the wireless settings of this band will be invalid.

➤ **To change the wireless network name (SSID):**

1. Go to [Settings](#) > [Wireless](#) > [Extended Network](#).
2. Create a new SSID in [Extended 2.4GHz SSID](#) or click [Copy Host SSID](#). The value is case-sensitive.

■ **Note:**

If you change the wireless settings via a wireless device, you will be disconnected after the settings are applied. Please write down the new SSID for future use.

➤ **To hide the SSID of the extended network:**

1. Go to [Settings](#) > [Wireless](#) > [Extended Network](#).
2. Select [Hide SSID broadcast](#), and the corresponding SSID will not be displayed when wireless devices scan for local wireless networks. Devices must join the network manually in order to connect.

3.3. Change LAN Settings

The extender is preset with a default LAN IP 192.168.0.254, with which you can log in to the web management page. The LAN IP address, together with the Subnet Mask, also defines the subnet that the connected devices are on. If the IP address conflicts with another device on your local network or your network requires a specific IP subnet, you can change it.

1. Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [Network](#).
3. Select [Use the following IP address](#).
4. Enter a new IP Address as needed and leave the [Subnet Mask](#) as the default settings and enter the gateway that is in the same subnet as the IP address. The gateway is usually the LAN IP address of your extender.



The Network Settings form has a title bar 'Network Settings'. Below it, there are two radio buttons: 'Obtain an IP address automatically' and 'Use the following IP address'. The second option is selected. Below the radio buttons, there are three input fields: 'IP Address:' with the value '192.168.0.254', 'Subnet Mask:' with the value '255.255.255.0', and 'Default Gateway:' with the value '192.168.0.254'. At the bottom right, there is a green 'Save' button.

5. Click [Save](#).

3.4. Specify DHCP Server Settings

By default, the DHCP (Dynamic Host Configuration Protocol) Server is enabled and the extender acts as a DHCP server; it dynamically assigns TCP/IP parameters to client devices from the IP Address Pool. You can change the settings of the DHCP Server if necessary.

1. Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [Network](#).

➤ To specify the IP address that the extender assigns:



The DHCP Server Settings form has a title bar 'DHCP Server Settings'. Below it, there are three radio buttons: 'Auto', 'On', and 'Off'. The 'On' option is selected. Below the radio buttons, there are several input fields: 'IP Address Pool:' with the range '192.168.0.100 - 192.168.0.199', 'Address Lease Time:' with the value '1' and the text 'minutes (1 default, 2880 maximum)', 'Default Gateway:' with the value '192.168.0.254' and the text '(Optional)', 'Primary DNS:' with the value '0.0.0.0' and the text '(Optional)', and 'Secondary DNS:' with the value '0.0.0.0' and the text '(Optional)'. At the bottom right, there is a green 'Save' button.

1. Select [Auto](#) (recommended) or [On](#) to enable the DHCP Server.
2. Enter the starting and ending IP addresses in the [IP Address Pool](#).
3. Enter other parameters if the ISP requires them. The [Default Gateway](#) is automatically filled in and is the same as the LAN IP address of the extender.
4. Click [Save](#).

➤ **To view the DHCP Client List:**


You can view the information of the DHCP clients connected to the extender in the DHCP Client List.

DHCP Client List				
Client Number: 1			 Refresh	
ID	Client Name	MAC Address	Assigned IP Address	Lease Time
1	WIN7-PC	D4-3D-7E-BF-61-5F	192.168.0.100	00:00:31

3.5. Adjust Wi-Fi Coverage

You can set the extender's Wi-Fi coverage depending on how large you want your Wi-Fi area to be.

1. Visit <http://tplinkrepeater.net> and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [Advanced Settings](#) > [Wi-Fi Coverage](#).
3. Select [Min](#), [Mid](#) or [Max](#) to adjust your Wi-Fi coverage of the extender.

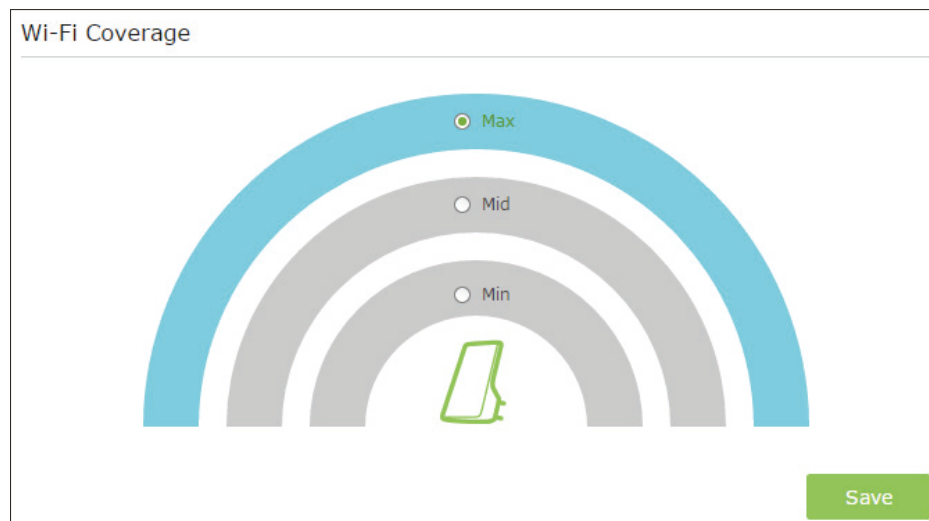

4. Click [Save](#).

3.6. Set Access Control

Access Control allows you to permit or block specific devices from accessing the Internet for a specific period.

1. Visit <http://tplinkrepeater.net> and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [Advanced Settings](#) > [Access Control](#).
3. Enable [Access Control](#).

Access Control

Access Control: ☒ On ☐

➤ **To block specific device(s):**

■ **Note:**

Devices connected to the extender via an Ethernet cable cannot be blocked.

1. Select [Blacklist](#) and click [Save](#).

Access Mode

Default Access Mode: ☒ Blacklist ☐ Whitelist

[Save](#)

2. Select the device to be blocked in the [Online Devices](#) table by ticking the corresponding checkbox.
3. Click [Block](#) and the selected device(s) will be added to the [Devices in Blacklist](#) table.

☒	ID	Device Name	IP Address	MAC Address	Connection Type	Modify
☒	1	NC450 1.0	192.168.1.112	04-18-78-17-10-6F	Wireless	

4. Click  in the [Devices in Blacklist](#) table to set the [Effective Time](#) for a certain entry as needed.

Device Name:

MAC Address:

Effective Time: ☐ Cannot access at any time
☒ Cannot access based on the time schedule

Time: : - :

Day(s): ☐ Monday ☐ Tuesday
☐ Wednesday ☐ Thursday
☐ Friday ☐ Saturday
☐ Sunday

5. Click [OK](#).

➤ **To permit specific device(s):**

1. Select [Whitelist](#) and click [Save](#).

Access Mode

Default Access Mode: ☐ Blacklist ☒ [Whitelist](#)

2. Click [Add](#) in the [Devices in Whitelist](#) table. Enter the [Device Name](#) and [MAC Address](#). And you can set the [Effective Time](#) for a certain entry as needed.

Device Name:

MAC Address:

Effective Time: ☒ [Access at any time](#)
☐ Access based on the time schedule

Time: : - :

Day(s): ☐ Monday ☐ Tuesday
☐ Wednesday ☐ Thursday
☐ Friday ☐ Saturday
☐ Sunday

3. Click [OK](#).

Chapter 4

More Features of Your Extender

This chapter explains how to use the extender as a wireless adapter and as an access point.

It contains the following sections:

- *Use Your Extender as a Wireless Adapter*
- *Transform Your Existing Wired Network to a Wireless One*


4.1. Use Your Extender as a Wireless Adapter

The extender can be used as a wireless adapter to connect any wired-only device, such as a Blu-ray player, game console, DVR, or smart TV, to your wireless network.

After configuration, you can connect an Ethernet-enabled device to the extender via an Ethernet cable.

Note:

Extenders that have no Ethernet port do not support this feature.

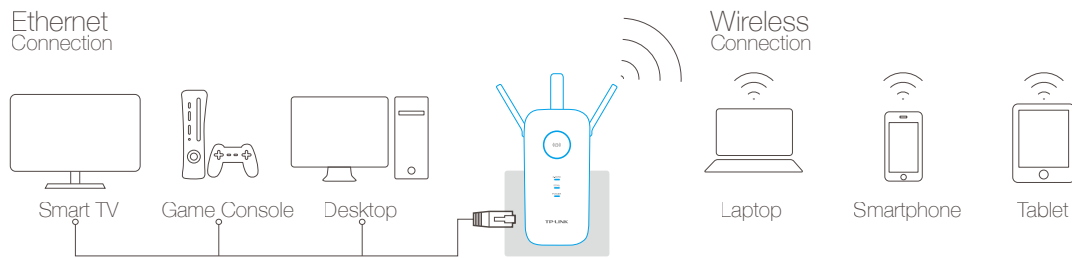

By default, the Ethernet port of the extender is connected to the 5GHz wireless network.

➤ **To change the connected wireless frequency:**

1. Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.
2. Go to **Settings > Network**.
3. Select **2.4GHz** or **5GHz** and click **Save**.

Ethernet Port

Host Network for the Ethernet port:
☒ 2.4GHz
☐ 5GHz


Save

4.2. Transform Your Existing Wired Network to a Wireless One

The extender can work as an access point, transforming your existing wired network to a wireless one.

4.2.1. To Set Up the Extender as an Access Point

1. Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.
2. Click **Mode** in the top right corner of the page. Select **Access Point** and click **Save**. The extender will reboot and switch to Access Point mode.

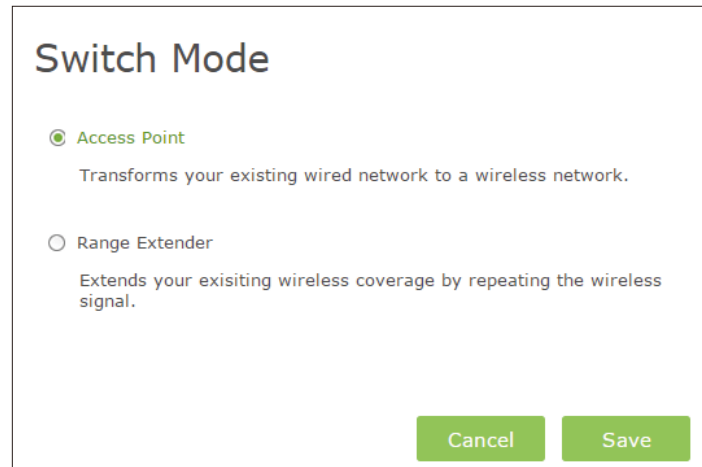

The 'Switch Mode' screen features a title at the top. Below it are two radio button options. The first option, 'Access Point', is selected and includes a description: 'Transforms your existing wired network to a wireless network.' The second option, 'Range Extender', is unselected and includes a description: 'Extends your existing wireless coverage by repeating the wireless signal.' At the bottom right are two green buttons labeled 'Cancel' and 'Save'.


Switch Mode

☒ Access Point
Transforms your existing wired network to a wireless network.

☐ Range Extender
Extends your existing wireless coverage by repeating the wireless signal.

Cancel Save

3. After rebooting, connect the extender to your modem or wired router via an Ethernet cable.
4. Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.
5. Go to [Quick Setup](#) to configure your extender.
 - 1) Configure your wireless settings and click [Next](#).

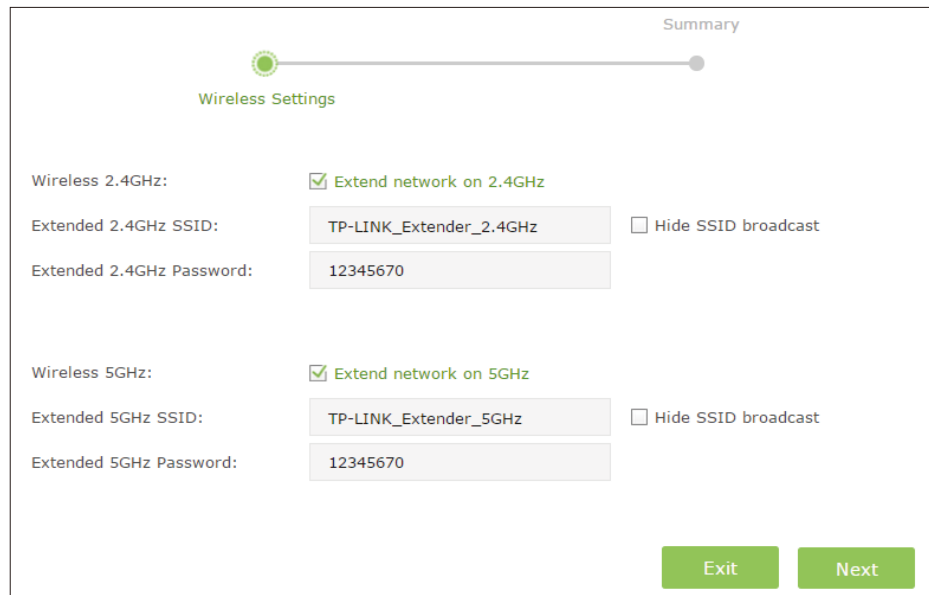

The 'Wireless Settings' screen is part of a multi-step setup process, indicated by a progress bar at the top with 'Wireless Settings' as the current step and 'Summary' as the next. The screen is divided into two main sections for 2.4GHz and 5GHz wireless settings. Each section has a checkbox to 'Extend network on' the respective frequency, which is checked. Below each checkbox are input fields for 'Extended [frequency] SSID' and 'Extended [frequency] Password'. The SSID fields are pre-filled with 'TP-LINK_Extender_2.4GHz' and 'TP-LINK_Extender_5GHz' respectively. There is also an unchecked checkbox for 'Hide SSID broadcast'. At the bottom right are two green buttons labeled 'Exit' and 'Next'.

Summary

Wireless Settings

Wireless 2.4GHz: ☒ Extend network on 2.4GHz

Extended 2.4GHz SSID: TP-LINK_Extender_2.4GHz ☐ Hide SSID broadcast

Extended 2.4GHz Password: 12345670

Wireless 5GHz: ☒ Extend network on 5GHz

Extended 5GHz SSID: TP-LINK_Extender_5GHz ☐ Hide SSID broadcast

Extended 5GHz Password: 12345670

Exit Next

- 2) Confirm the information and click [Finish](#). Now, you can enjoy Wi-Fi.

The image shows a 'Wireless Settings' configuration page. At the top, there is a progress bar with two steps: 'Wireless Settings' (current) and 'Summary'. Below the progress bar, there are two main sections: '2.4GHz Extended Network' and '5GHz Extended Network'. Each section contains a table of settings.

2.4GHz Extended Network		5GHz Extended Network	
Extend network on 2.4GHz:	On	Extend network on 5GHz:	On
Extended 2.4GHz SSID:	TP-LINK_Extender_2.4GHz	Extended 5GHz SSID:	TP-LINK_Extender_5GHz
Hide SSID:	Off	Hide SSID:	Off
Extended 2.4GHz Password:	12345670	Extended 5GHz Password:	12345670

At the bottom right, there are two buttons: 'Back' and 'Finish'.

4.2.2. To Connect Your Wireless Devices to the Extender via WPS

Wi-Fi Protected Setup (WPS) provides an easy way to set up a secure Wi-Fi connection. Wireless devices that support WPS, including Android phones, tablets and most USB network cards, can be connected to your extender through this method (not supported by iOS devices).

1. Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [Wireless](#) > [WPS](#).
3. Enable [WPS](#).

The image shows the 'WPS' configuration page. It has a title 'WPS' and a section 'Enable WPS:' with a toggle switch set to 'On'.

4. Connect via WPS:

- AP's PIN: Enable [AP's PIN](#) and enter the PIN on your device. You can click [Generate](#) to get a new PIN or click [Default](#) to restore the PIN to its factory one.

The image shows the 'AP's PIN' configuration page. It has a title 'AP's PIN' and a section 'AP's PIN:' with a toggle switch set to 'On'. Below this, it shows the current PIN: '59409205'. At the bottom right, there are two buttons: 'Generate' and 'Default'.

- Push Button (Recommended): Click [Connect](#) and push the WPS button on the client device.
- PIN code: Enter the client's PIN, and click [Connect](#).

WPS Wizard

Select a WPS connection method: ☐ Push Button (Recommended) ☒ PIN code

Client's WPS PIN code:

[Connect](#)

Chapter 5

Manage Your Extender

This chapter presents how to manage and maintain your extender.

It includes the following sections:

- *Set Up System Time*
- *Control LEDs*
- *Power Schedule*
- *Upgrade the Firmware*
- *Backup and Restore Configuration Settings*
- *Change Admin Account*
- *System Log*


5.1. Set Up System Time

The System Time of the extender will be used for time-based functions such as the Power Schedule function.

1. Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [Time Settings](#).

➤ **To get system time:**

1. Select your local [Time Zone](#) from the drop-down list.

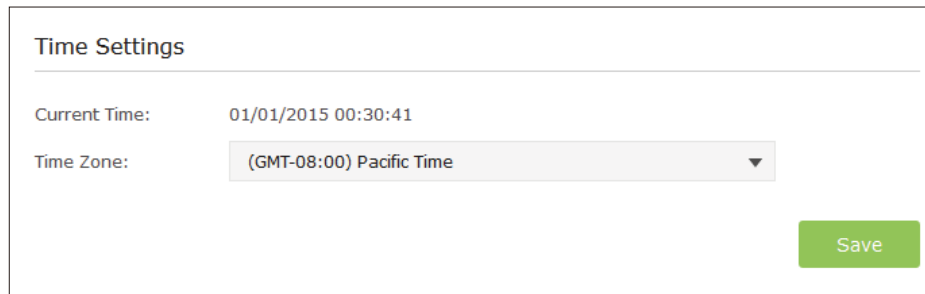


The screenshot shows the 'Time Settings' page. It displays the 'Current Time' as '01/01/2015 00:30:41'. Below this, the 'Time Zone' is set to '(GMT-08:00) Pacific Time' in a dropdown menu. A green 'Save' button is located at the bottom right of the form.

2. Click [Save](#).

➤ **To set up Daylight Saving Time:**

1. Select [Enable Daylight Saving Time](#).

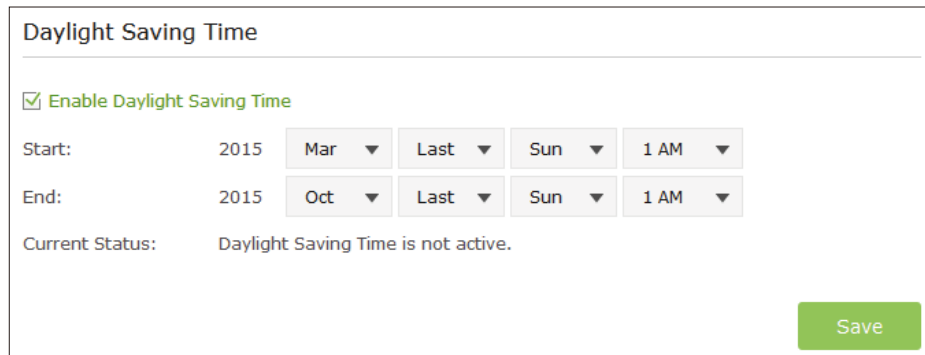


The screenshot shows the 'Daylight Saving Time' page. The 'Enable Daylight Saving Time' checkbox is checked. The 'Start' date is set to '2015 Mar Last Sun 1 AM'. The 'End' date is set to '2015 Oct Last Sun 1 AM'. The 'Current Status' is 'Daylight Saving Time is not active.' A green 'Save' button is located at the bottom right of the form.

2. Select the [Start](#) and [End](#) date and time of the daylight saving time at your local time zone.
3. Click [Save](#).

5.2. Control LEDs

The LEDs of the extender indicate its activities and status. You can enable the Night Mode feature to specify a time period during which the LEDs are off.

1. Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [LED Control](#).
3. Select [Night Mode](#).
4. Specify a time period in the [LED Off Time](#) field , and the LEDs will be off during this period.
5. Click [Save](#).

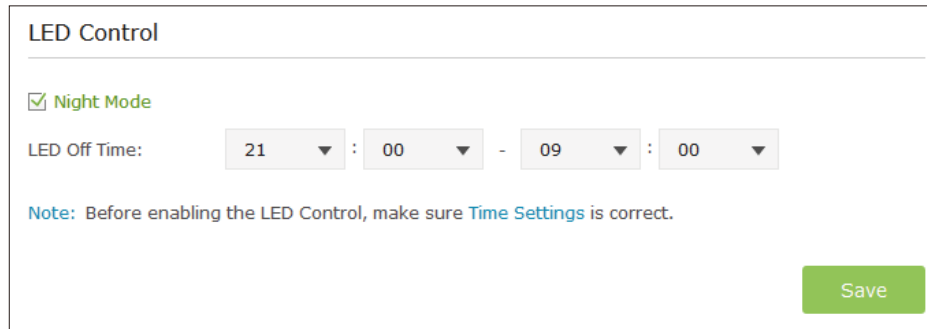

LED Control

☒ Night Mode

LED Off Time: 21 : 00 - 09 : 00


Note: Before enabling the LED Control, make sure [Time Settings](#) is correct.

Save

5.3. Power Schedule

The Power Schdule feature allows you to specify a time period during which the extender is off.

1. Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [Advanced Settings](#) > [Power Schedule](#).
3. Select [Enable Power Schedule](#).
4. Specify a time period in the [Power-Off Time](#) field and days in the [Day\(s\)](#) field, and the extender will be off during this period.

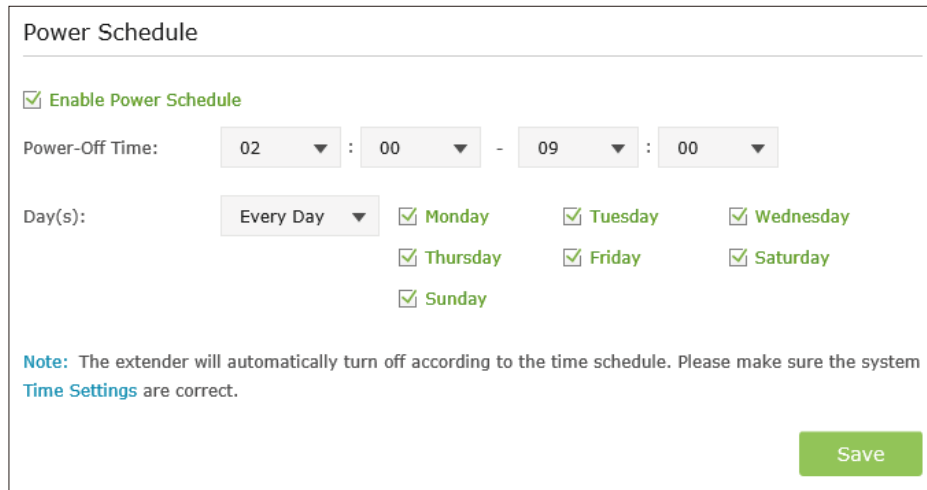

The 'Power Schedule' interface includes a title bar, a green 'Enable Power Schedule' checkbox, a 'Power-Off Time' field with a time picker set to 02:00 - 09:00, and a 'Day(s)' section with a dropdown set to 'Every Day' and checkboxes for all days of the week (Monday through Sunday), all of which are checked. A blue 'Note' states: 'The extender will automatically turn off according to the time schedule. Please make sure the system Time Settings are correct.' A green 'Save' button is located at the bottom right.


5. Click [Save](#).

5.4. Upgrade the Firmware

TP-LINK is committed to improving product features, giving you a better network experience. You can download the latest firmware file from the [Support](#) page of our website www.tp-link.com and upgrade the firmware to the latest version.

■ **Note:**

1. Make sure the latest firmware file is matched with the hardware version (as shown in the download section of the Support page).
 2. Make sure that you have a stable connection between the extender and your computer. It is NOT recommended to upgrade the firmware wirelessly.
 3. Backup your extender configuration.
 4. Do NOT power off the extender during the firmware upgrade.
1. Download the latest firmware file for the extender from our website www.tp-link.com.
 2. Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.
 3. Go to [Settings](#) > [System Tools](#) > [Firmware Upgrade](#).
 4. Click [Browse](#) to locate the downloaded new firmware file, and then click [Upgrade](#).

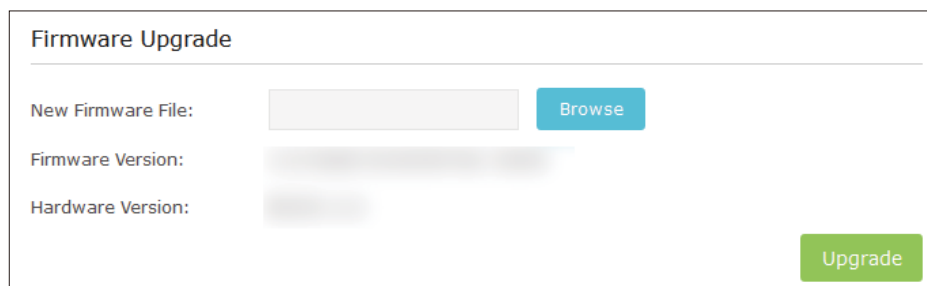

The 'Firmware Upgrade' interface features a title bar, a 'New Firmware File' label next to a text input field and a blue 'Browse' button, and labels for 'Firmware Version' and 'Hardware Version' next to blurred input fields. A green 'Upgrade' button is positioned at the bottom right.

5. Wait a few minutes for the firmware upgrade to complete and the extender to reboot.


5.5. Backup and Restore Configuration Settings

The configuration settings are stored as a configuration file in the extender. You can backup the configuration file and restore the extender to the previous settings from the backup file when needed. Moreover, if necessary, you can erase the current settings and reset the extender to the default factory settings.

1. Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [Backup & Restore](#).

➤ **To backup configuration settings:**


Click [Backup](#) to save a copy of the current settings to your local computer. A '.bin' file of the current settings will be stored on your computer.

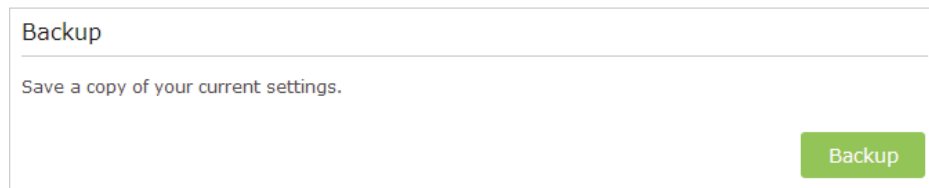

The screenshot shows a web interface titled "Backup". Below the title is a horizontal line, followed by the text "Save a copy of your current settings." In the bottom right corner, there is a green button labeled "Backup".

➤ **To restore configuration settings:**

1. Click [Browse](#) to locate the backup configuration file stored on your computer, and click [Restore](#).

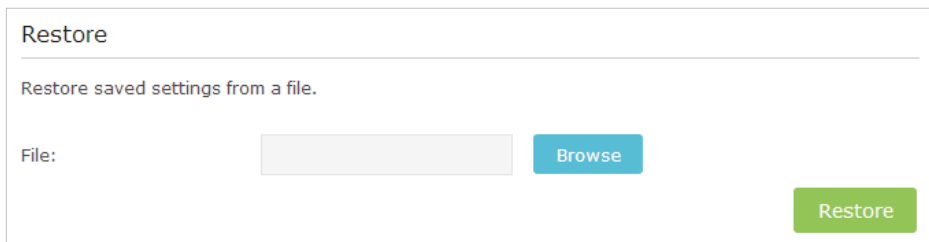


The screenshot shows a web interface titled "Restore". Below the title is a horizontal line, followed by the text "Restore saved settings from a file." Below this text, there is a label "File:" followed by a text input field and a blue button labeled "Browse". In the bottom right corner, there is a green button labeled "Restore".

2. Wait a few minutes for the restore and reboot.

■ **Note:** During the restore process, do not power off or reset the extender.

➤ **To reset the extender to factory default settings:**

1. Click [Factory Restore](#) to reset the extender.

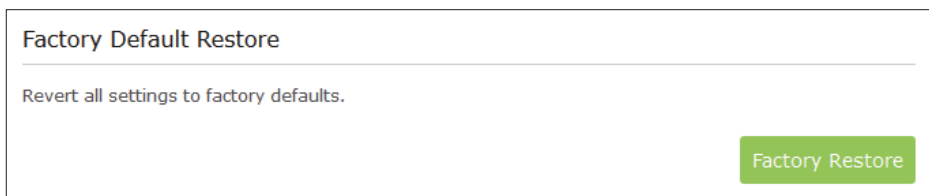

The screenshot shows a web interface titled "Factory Default Restore". Below the title is a horizontal line, followed by the text "Revert all settings to factory defaults." In the bottom right corner, there is a green button labeled "Factory Restore".

2. Wait a few minutes for the reset and reboot.


Note:

1. During the reset process, do not power off or reset the extender.
2. We strongly recommend you backup the current configuration settings before resetting the extender.

5.6. Change Admin Account

The account management feature allows you to change your login username and password of the management webpage.

1. Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [Admin Account](#).
3. Enter the old username and password. Then enter the new username and password twice (both case-sensitive) and click [Save](#).

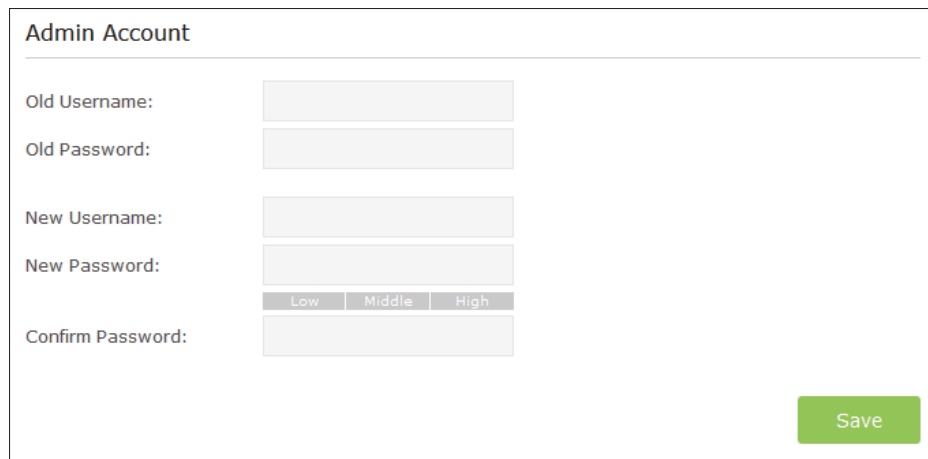

The screenshot shows the 'Admin Account' management interface. It contains the following fields and controls:

- Old Username:** A text input field.
- Old Password:** A text input field.
- New Username:** A text input field.
- New Password:** A text input field with a strength indicator below it showing 'Low', 'Middle', and 'High' levels.
- Confirm Password:** A text input field.
- Save:** A green button located at the bottom right of the form.

4. Use the new username and password for future login attempts.

5.7. System Log

If the extender is not working normally, you can save the system log and send it to our technical support team.

1. Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [System Log](#).

➤ **To save the system log locally:**

1. Choose the type and level of the system log as needed.
2. Click [Save Log](#) to save the system logs to a local disk.

System Log

Log Filter: Type = ALL Level = ALL

 Refresh  Delete All

ID	Time	Type	Level	Content
3	0 days 06:03:53	DHCP	INFO	Received a DHCP offer:Server ID is 54.Assigned IP address is 192.168.1.121
2	0 days 06:03:53	DHCP	INFO	Sent a detection for DHCP.
1	0 days 06:03:52	OTHERS	INFO	User cleared up all the logs.

Save Log

FAQ

Q1. How to reset the extender to its factory default settings?

- With the extender powered on, use a pin to press the [RESET](#) button until all the LEDs turn on momentarily and then release the button.
- Log in to the extender's web management page. Go to [Settings](#) > [System Tools](#) > [Restore & Backup](#) and click [Factory Restore](#).

Q2. What can I do if I forgot my login password?

Refer to [FAQ > Q1](#) to reset the extender, and use the default [admin](#) (in lowercase) as both username and password to log in.

Note: The extender must be reconfigured after a reset to access the Internet. Please note down your new login password for future use.

Q3. What can I do if I forgot my wireless password?

The factory default wireless password is printed on the label of the extender.

If the password has been altered, please connect your computer to the extender using an Ethernet cable and follow the steps below:

1. Visit <http://tplinkrepeater.net>, and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [Wireless](#) > [Wireless Settings](#) to retrieve or reset your wireless password.

Q4. What can I do if I cannot access the web management page?

This can happen for a variety of reasons. Please try the methods below to log in again.

- Make sure your computer is connected to the extended network.
- Make sure your computer is configured as [Obtain an IP address automatically](#) and [Obtain DNS server address automatically](#).
- Use the IP address to access the extender. The default IP is [192.168.0.254](#). If the extender is connected to the router, you should go to your router's DHCP client list to obtain the extender's current IP address.
- Reset the extender. Then connect your computer to its wireless network, enter <http://tplinkrepeater.net> or <http://192.168.0.254> in the web browser and press [Enter](#).

Q5. I enabled wireless MAC filter, wireless access control, or access control list (ACL) on my router, what should I do to configure and use the extender?

When a device connects through the extender to your router, the MAC address of the device shown on the router is translated to another MAC address. If your router's MAC

filter, wireless access control, or ACL is enabled, the devices connected to the extender cannot get an IP address from the extender and cannot access the Internet.

To solve this problem, please follow the steps below:

1. Log in to your router and disable the MAC filter, wireless access control or ACL.

 **Note:** For more information about how to disable your router's MAC filter, wireless access control or ACL, please refer to your router's user guide.

2. Power on your extender, and run the [Quick Setup](#) to configure your extender.
3. Connect all of your devices to the extended network, and make sure the router's Link LED remains lit.
4. On your router, add all the Online Devices' MAC addresses to your router's MAC filter table.
5. Enable the router's MAC filter, wireless access control, or ACL to complete the configuration.

COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice. **TP-LINK** is a registered trademark of TP-LINK TECHNOLOGIES CO., LTD. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-LINK TECHNOLOGIES CO., LTD. Copyright © 2016 TP-LINK TECHNOLOGIES CO., LTD. All rights reserved.

FCC STATEMENT



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

CE Mark Warning



This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

RF Exposure Information

This device meets the EU requirements (1999/5/EC Article 3.1a) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The device complies with RF specifications when the device is used at 20 cm from your body.

Canadian Compliance Statement

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage;
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Caution:

1. The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
2. For devices with detachable antenna(s), the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits specified for point-to-point and non-point-to-point operation as appropriate; and

The high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Avertissement:

1. Le dispositif fonctionnant dans la bande 5150-5250 MHz est réservé uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
2. Le gain maximal d'antenne permis pour les dispositifs avec antenne(s) amovible(s) utilisant la bande 5725-5850 MHz doit se conformer à la limitation P.I.R.E spécifiée pour l'exploitation point à point et non point à point, selon le cas.

En outre, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

Industry Canada Statement

CAN ICES-3 (B)/NMB-3(B)

Korea Warning Statements

당해 무선설비는 운용중 전파혼신 가능성이 있음.

NCC Notice & BSMI Notice

注意！

依據 低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性或功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通行；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信規定作業之無線電信。低功率射頻電機需忍受合法通信或工業、科學以及醫療用電波輻射性電機設備之干擾。

安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 請不要私自打開機殼，不要嘗試自行維修本產品，請由授權的專業人士進行此項工作。



Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.



Safety Information

- When product has power button, the power button is one of the way to shut off the product; when there is no power button, the only way to completely shut off power is to disconnect the product or the power adapter from the power source.
- Don't disassemble the product, or make repairs yourself. You run the risk of electric shock and voiding the limited warranty. If you need service, please contact us.
- Avoid water and wet locations.

This product can be used in the following countries:

AT	BE	BG	CH	CY	CZ	DE	DK
EE	ES	FI	FR	GB	GR	HR	HU
IE	IS	IT	LI	LT	LU	LV	MT
NL	NO	PL	PT	RO	SE	SI	SK

Explanations of the symbols on the product label

Symbol	Explanation
	DC voltage

Symbol	Explanation
	RECYCLING This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.