

DREO

Smart Pedestal Air Circulator Fan

USER MANUAL

www.dreo.com

DR-HAF003S

Looking for help?

Contact us to get expert support.



support@dreo.com

 


[\(888\) 290-1688](tel:(888)290-1688)



www.dreo.com

Mon - Fri, 9:00 am-5:00 pm PST/PDT

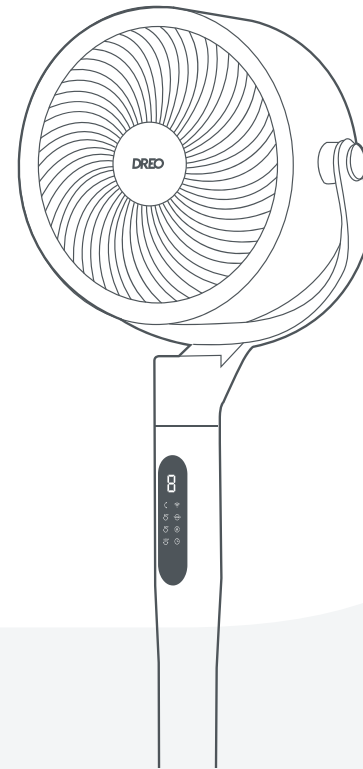

//

Thanks for Choosing DREO!

Your support means the world to us. We hope you enjoy our product as much as we did creating it.



CONTENTS

1

IMPORTANT SAFETY INSTRUCTIONS

1-2

3

CONNECTING TO YOUR PEDESTAL AIR CIRCULATOR

6

5

USING YOUR PEDESTAL AIR CIRCULATOR

9-13

7

TROUBLESHOOTING

17

2

ASSEMBLING YOUR PEDESTAL AIR CIRCULATOR

3-5

4

KNOWING YOUR PEDESTAL AIR CIRCULATOR

7-8

6

CLEANING AND MAINTENANCE

 
14-16

8


DREO CUSTOMER CARE

18-20

IMPORTANT SAFETY INSTRUCTIONS

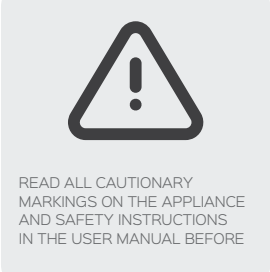

 READ ALL CAUTIONARY MARKINGS ON THE APPLIANCE AND SAFETY INSTRUCTIONS IN THE USER MANUAL BEFORE

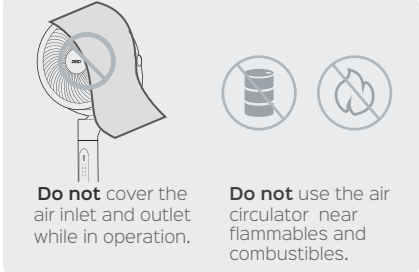

General Safety

1. Children shall not play with the appliance. Cleaning and maintenance shall not be performed by children without supervision.
2. Use the appliance as described in the user manual only. Any other use not recommended in the user manual may cause fire, electrical shock, or personal injury.
3. This appliance can be used by children aged above 8 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of this appliance in a safe way and understand the hazards involved.

Operation Safety

1. Place the appliance on a flat, dry surface before use.
2. **Do not** immerse in water and any other liquids.
3. **Do not** use the appliance until the base is installed.
4. **Do not** insert your fingers, pencil and any other objects into the grilles under any circumstances.
5. **Do not** dismantle, repair, or modify. All servicing should be performed by qualified personnel.
6. **Do not** operate the unit close to the curtain. Do not hang foreign objects on the grille to prevent damaging the balance of the fan or rotational structure.
7. **Do not** operate the fan under overly humid, high-temperature, dusty environment or the place where acid or alkali is stored.
8. Fans should never blow directly on infants, the elderly, and patients for a long time.

 
Electricity Safety

WARNING:

1. Make sure that the voltage of your electricity supply is the same as that indicated on the appliance.
2. Always unplug before cleaning or leaving the appliance unused for a long period of time. Keep your hands dry when plugging/unplugging.
3. Do not operate any air circulator with a damaged cord or plug. Discard air circulator or return to an authorized service facility for examination and/or repair.
4. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
5. **WARNING:** To reduce the risk of fire or electric shock, do not use this air circulator with any solid-state speed control device.
6. Use 24V/1.5A power adapter only. Turn off the appliance before plugging.
7. **WARNING:** To reduce the risk of fire, electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).
8. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

FOR HOUSEHOLD USE ONLY READ AND SAVE THESE INSTRUCTIONS

Gentle Reminder:

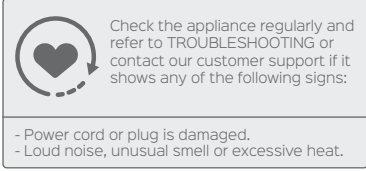

Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

- Power cord or plug is damaged.
- Loud noise, unusual smell or excessive heat.

Specifications

Model	DR-HAF003S
Power Supply	24V $\approx$ 1.5A
Rated Power	36W
Power Adapter	Input: 120V-60Hz 1.0A Output: 24V $\approx$ 1.5A
Battery Type	CR2025 3V

 
ASSEMBLING YOUR PEDESTAL AIR CIRCULATOR

2

Assembly Instructions


When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

1

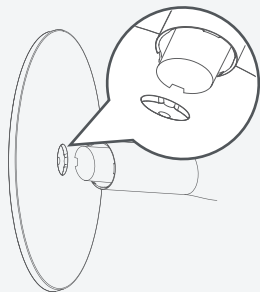


Push the air circulator into the base by aligning the cutout on the bottom of the air circulator with the jutting point in the middle of the base.

 2

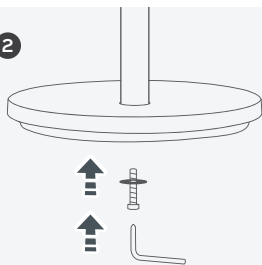


Thread the screw through the flat washer, insert into the base, and use the included screwdriver to drive the screw into the bottom of the air circulator.

 3

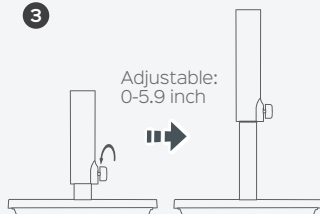


Put the air circulator upright, hold the main body while rotating the Adjustment Collar counterclockwise to raise or lower the air circulator to the desired height.

 4

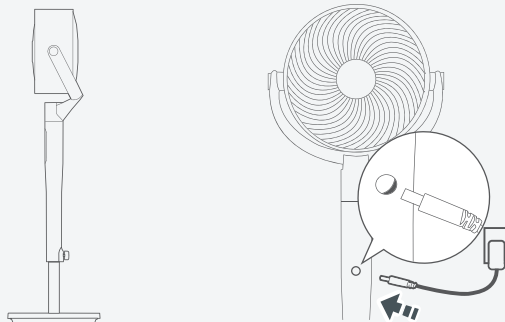


 
Tighten the adjustment collar by rotating clockwise. Plug the power adapter into the power (located at the back of the air circulator), and into the power outlet.

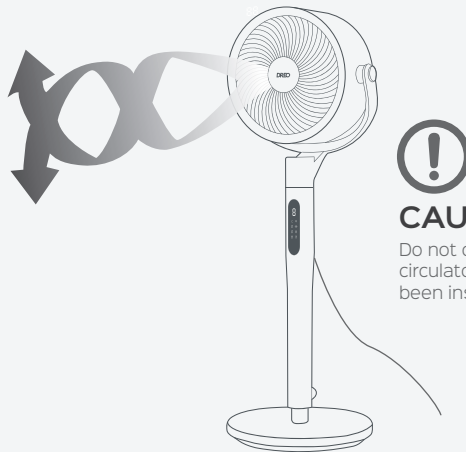

CAUTION

Do not operate the air circulator if the base has not been installed.

  Package Contents

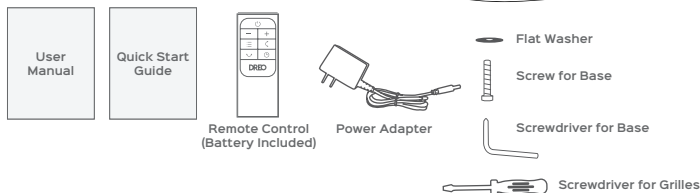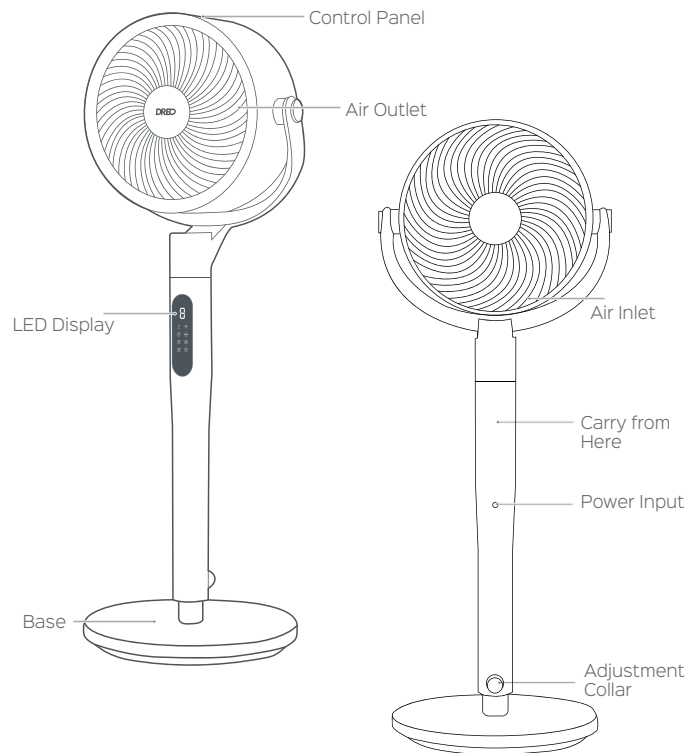

CONNECTING TO YOUR PEDESTAL AIR CIRCULATOR

3

This device includes the radio transmitting module whose CMIIT ID is FCC ID: 2A3SYMBL02.



Before connecting the appliance to your mobile device, please scan the QR code on the left or go to the app store and search “Dreo”, then select and download the app.



You can use the Dreo app to connect your smart pedestal air circulator to **Amazon Alexa** or **Google Assistant**. Please follow the in-app instructions to set up your voice assistant.

NOTE: You must create a Dreo account to access voice assistants.

- 1 Launch Dreo and sign in or create account by following in-app instructions.
- 2 Enable Bluetooth on your mobile device and plug in your air circulator.
- 3 Tap + **Add Device** and select the air circulator you want to link.
- 4 Hold the Oscillation button (🌀) for 5 seconds to start WiFi connection settings.
(Tip: The WiFi icon 📶 will keep flashing when pairing.)
- 5 Follow in-app instructions to complete WiFi connection.
- 6 You're now ready to control the appliance on your app.
(Tip: To restart connection settings, hold the Oscillation button (🌀) again for 5 seconds.)

KNOWING YOUR PEDESTAL AIR CIRCULATOR

Control Panel



Power Button

- Turn power on/off
- Long press 10 seconds to reset to factory settings



Increase Speed Button

- Increase airflow speed (1-8 levels)
- Exit Turbo Mode



Decrease Speed Button

- Decrease airflow speed (1-8 levels)
- Exit Turbo Mode



5s for WiFi

Horizontal Oscillation

- Sweep airflow horizontally (0°/60°/90°/120°)
- Long press 5 seconds to start network settings and device pairing

 


Vertical Oscillation

- Sweep airflow vertically (90°)
- Long press 3 seconds to mute/unmute

Note: This appliance is mute by default. To turn on button sounds, go to the Dreo app.

LED Display

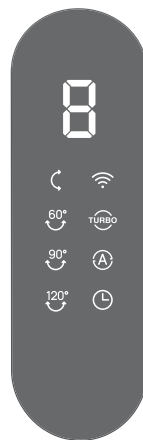

Vertical
Oscillation



60° Horizontal
Oscillation



90° Horizontal
Oscillation



120° Horizontal
Oscillation



Air Circulator
Speed /
Timer Hour



WiFi
Connection



Turbo Mode



 
Auto Mode



Timer

USING YOUR PEDESTAL AIR CIRCULATOR


Getting the Most out of Your Air Circulator

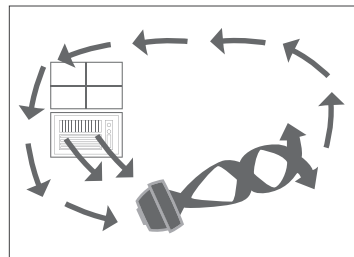

Summer:

Use with Air Conditioner

 
Position the air circulator in front of your AC to circulate cold air and provide better cooling.

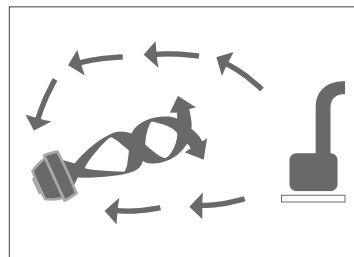

Winter:

Use with Heater

 Send the heat to corner of the room and circulate warm air faster.

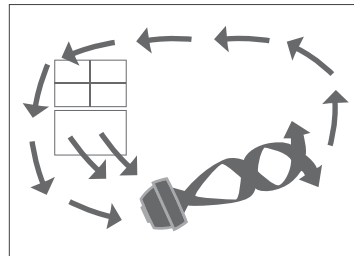


Spring & Fall:

Circulation

Make the indoors as fresh and pleasant as the outdoors.

5

 General Operations

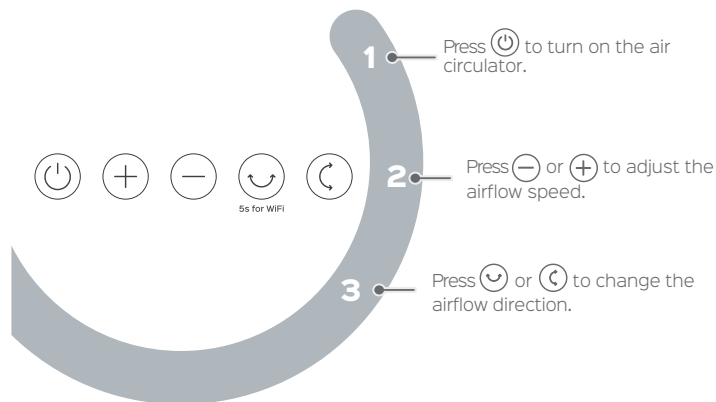

Working Modes (Press on the remote)



Normal Mode

Air circulator runs at the fixed speed.



Auto Mode

Air circulator speed adapts to the ambient temperature.



Turbo Mode

Air circulator runs at the maximum speed.



Natural Mode

(Available in the Dreo app)

Air circulator runs at alternating speeds.



Custom Mode (Available in the Dreo app)

Air circulator speed changes according to temperatures or time you desire.



Sleep Mode (Available in the Dreo app)

Mute auto on.
Air circulator speed decreases every 30 minutes.
Speed decreases by two levels at most and will remain constant if at level 3, 2, or 1:
For level 8: 8 → 7 → 6
For level 7: 7 → 6 → 5
For level 6: 6 → 5 → 4
For level 5: 5 → 4 → 3
For level 4: 4 → 3
For level 3: 3
For level 2: 2
For level 1: 1

Additional Features



Timer

When the fan is ON/OFF, touch the timer button  repeatedly to set a timer from 1 to 8 hours. When the timer ends, the fan will stop/start running automatically. To cancel, set the time to 0 hour.

Note: When the auto off timer is enabled, display will return to fan speed after 3 seconds. Display will show 8 if the timer is beyond 8 hours. To set a timer beyond 8 hours, please go to the Dreo app.



Child Lock

Long press the Horizontal Oscillation button  and Vertical Oscillation button  at the same time for 3 seconds to turn on/off Child Lock.

Note: Child Lock doesn't apply to operations from the remote control and the Dreo app. You can also turn off Child Lock by re-plugging in, resetting to factory settings, or through the Dreo app.



Memory

If the fan is turned OFF or disconnected from power, it will operate under the previous settings (except the Timer setting) when it is turned ON again.



Firmware Update

Check the firmware version on the Dreo app and update regularly for the air circulator to work more efficiently.

 Display will show  during the update process. Do not operate until the update is completed.



 
Display Auto Off

Display turns off after 1 minute (after 5 seconds in sleep mode).


Wake up the display with any button.

To disable this feature, please go to the Dreo app.

Remote Control

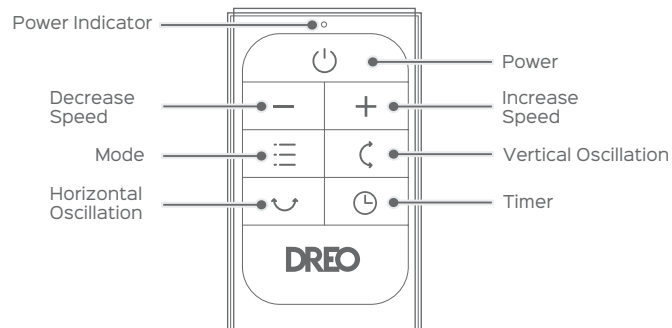

Battery Replacement

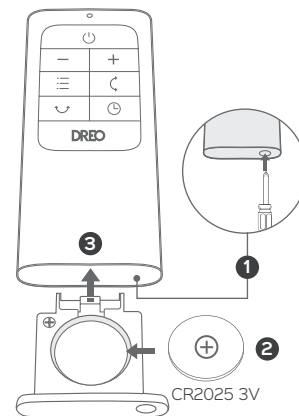 

- 1 Press the locking button to pop out the battery holder.
- 2 Replace with the same battery type with the (+) side facing up.
- 3 Push in the holder until securely locked into place.

Note: If the indicator on the remote control doesn't turn on any more, please consider replacing the battery.



WARNING

 
Chemical Burn Hazard. Keep batteries away from children.

This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the battery, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

The batteries must be disposed of properly, including keeping them away from children. Even used cells may cause injury.

CLEANING AND MAINTENANCE

6

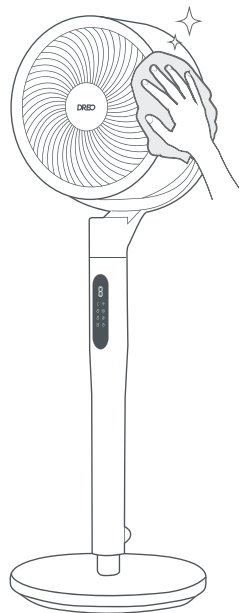

Outer Surface

Gently wipe off the dust with a soft, dry cloth.

Base

The base can be disassembled in the reverse order of assembly.



CAUTION

1. Always unplug the fan before any cleaning or maintenance to avoid the risk of fire, electric shock, or injury to persons.
2. Do not immerse in water or get water inside the motor housing.
3. Do not use any chemical agents when cleaning the fan.
4. Store in a cool, dry place and cover it to protect from dust.

Grilles

 


WARNING


To reduce the risk of electrical shock and injury to persons, turn off and unplug the appliance before any cleaning and maintenance.

1

Front

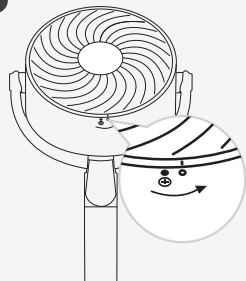


Rear

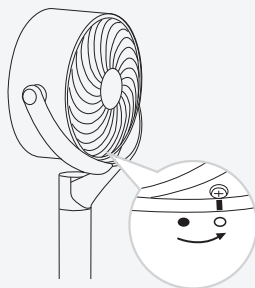 


Remove the screws on the front and rear grilles, rotate the grilles counterclockwise to take them off.

 2

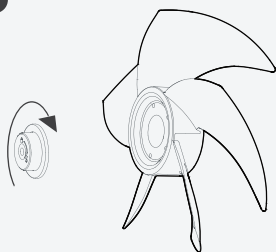


Remove the blade cap by rotating it as shown and take the blade assembly out of the shaft.

 3

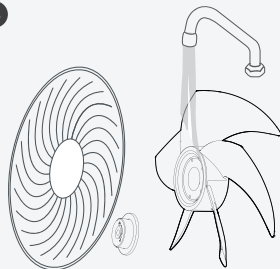

Rinse cap, blades, and grilles under running water or with a clean, damp cloth.

 
4

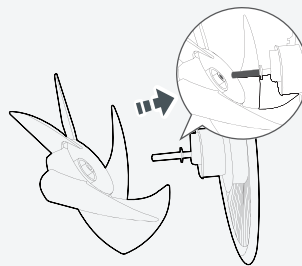


Dry up all parts, and insert the blade assembly back into the shaft by aligning the D-shaped points on the center.

5

 Front

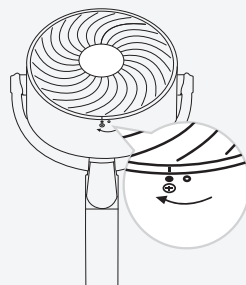

Rear

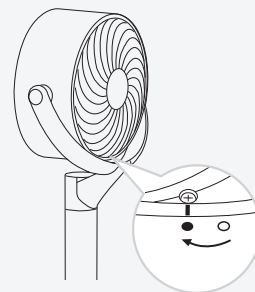 

Align the point on the front grille with the right point on the casing, then rotate the grille clockwise and install the screw back in place. Repeat the steps for the rear grille.

TROUBLESHOOTING



My air circulator won't turn on!

Make sure that the cord is connected to a powered outlet and the mains voltage corresponds with the voltage indicated on the air circulator.

My air circulator is shaky and wobbling!

1. Place the air circulator on a flat, level surface.
2. Incorrect installation might also cause shakiness. Please refer to the assembly instructions in **page 3-4**.

My air circulator is making vibration and noise!

1. Place the air circulator on a flat, level surface.
2. Be sure not to insert anything into the air inlet and outlet.

If your problem is not listed or still persists, please contact our Customer Support (**see page 18**)

DREO CUSTOMER CARE



Default 12-Month Warranty

This appliance is covered by Dreo warranty for 12 months from the date of its original purchase.

Extend Your Warranty

Extend your warranty by registering your new appliance on our website <https://dreo.com/warranty>.

The warranty will not apply in cases of:

1. Accident, misuse, or repairs performed by unauthorized personnel.
2. Any unit that has been tampered with or used for commercial purposes.
3. Normal wear and tear of wearable parts.
4. Use of force, damage caused by external influences.
5. Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or noncompliance with the instructions.
6. Partially or completely dismantled appliances.
7. Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by Dreo.

We can only provide after-sales service for products that are sold by Dreo or Dreo authorized retailers and distributors. If you have purchased the appliance from a different place, please contact your seller for return and warranty issues.



(888) 290-1688



support@dreo.com



www.dreo.com

Mon - Fri, 9:00 am-5:00 pm PST/PDT

FCC STATEMENT

This device complies with Part 15 of the FCC Rules.

This equipment has been tested and found to comply with the limits for a Consumer ISM equipment, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Rev_1.2_EN



www.dreo.com



Shenzhen Hesung Innovation
Technology Co., LTD



26F, Bldg A7, Creative City, Shenzhen, China

MADE IN CHINA



Intertek
3189196