 


PRODUCT INTRODUCTION

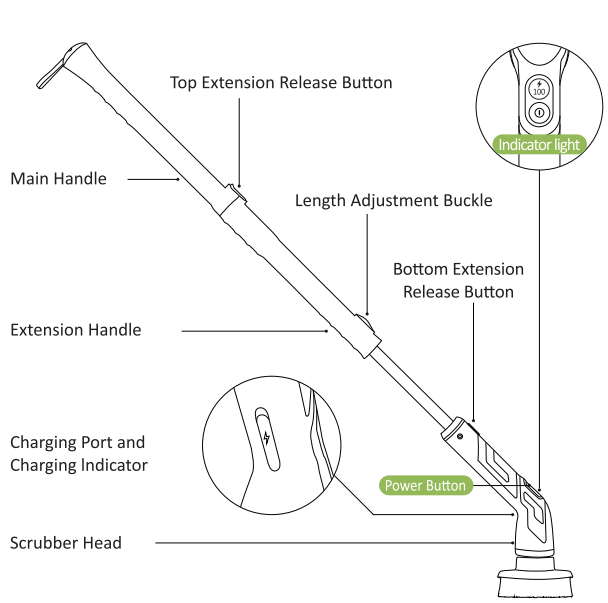

ASSEMBLY

4 Different Types of Cleaning Brush:



Dome Brush
Perfect as a concave cleaning brush for tub, bathtub, sink baseboard or toilet.



Large Flat Brush
Used to clean large flat surface areas, like hard floor, tile, wall, door, window, glass, counter, patio furniture, pool, soap scum, stove, carpet ceramic.



 
Small Flat Brush
Ideal for narrow flat surface areas, like the edge of the sink.



Corner Brush
Great for cleaning tile grout, edges, corners, and cranny places.

Assemble the brush head:
Aligned with the buckle and inserted.

Change brush:
Hold the brush head by hand and pull it out according to the indication on the connection port, then insert another brush head.




AssemblyDisassembly

INSTRUCTIONS

Extension rod:

 The product is a three sectiona design, and the length can reach 1210mm after inserting the extension rod;

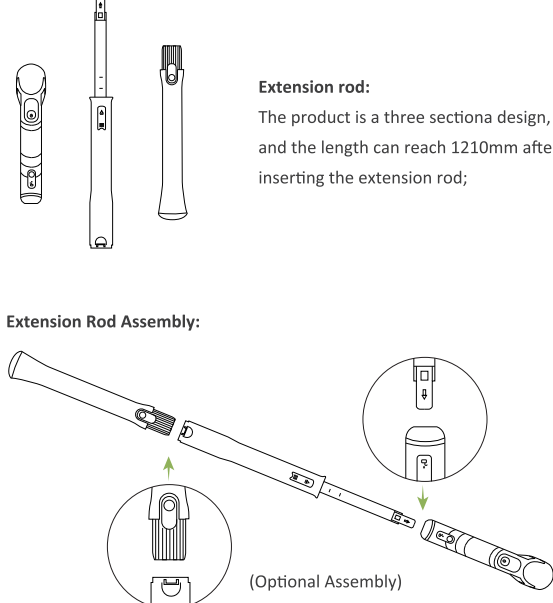


ON/OFF:

Press the power switch to adjust speed,
1)Press once turn on at low speed. 
2)Press twice switch to high speed. 
3)Press again to turn it off.



 
* Note: Do not overuse, or it will be turned off automatically, please turn it on again when reusing.

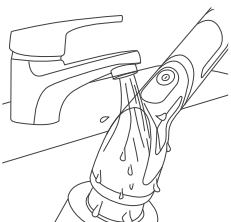

CHARGING


Safe charging:

 The charging port is on the back of the handle.
Before first use, open the silicone cover and insert adapter, then plug into an electrical outlet for charging.

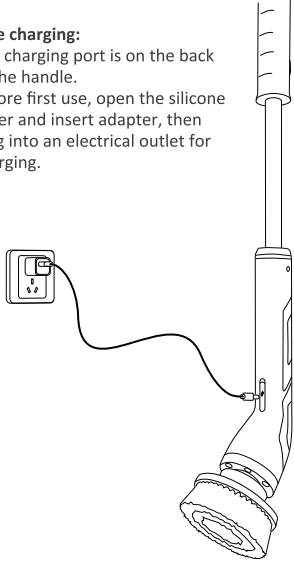

LED Digital Display:

 The lightning mark flashes when charging, the power light and the lightning mark will on for 10 seconds after fully charged, and then go out, the bottom light bar of the power is low-level (into the button end), both sides of the light bars are on at the same time as high-end. The display power is calculated by percentage.

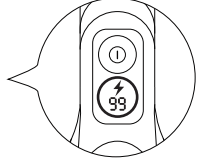

Tips: Allow for transportation safety, the product you obtained is not fully charged Please fully charge the product before first use.

PARAMETERS

Appearance	Model	KS-2640C
	Exterior Size	67*106*1210MM
Parameters	Material	ABS+Stainless steel
	Working time	90Mins
	Charging time	2.0±0.5hrs
	Operating noise	< 70dB
Battery	Operating temperature	32°F -113°F
	Speed	Low Speed High Speed
	Battery volume	2500mAh
	Rated voltage	3.7V
	Charging voltage	5V/2A DC
Others	Waterproof	IPX8

TROUBLE SHOOTING

Does not work	The battery is low, please charge before use.
Can not be recharged	The charging indicator is not on, check charging cable is plugged in correctly or not.
Brush head shedding	The brush head does not rotate or falls off, please check the brush head is firmly inserted or not.
Power on does not work	Please confirm whether it is in charge state, unplug the charging plug and restart.
Stop working while there is power	When the brush is clogged, the indicator flashes for 30s and then turns off. If press the button during the flashing process, then the scrubber will automatically turn on after 30s of flashing. If the scrubber turns off after 30s of flashing, please press the button to turn it on again.

CLEANING & MAINTENANCE

1. Use a wet, non-abrasive cloth to clean TUYU Ultra Cleaner Spin Scrubber. If needed, use a mild detergent. Then place it in a dry environment to allow it to dry thoroughly.

Note:

① Do NOT clean with alcohol or petrol.

② Do NOT recommended to use it underwater too long.

2. Rinse Brush attachments under water and dean thoroughly after use. Then place them in a dry environment to air dry them thoroughly.

Correct Disposal of this product.

This product uses a Li-on rechargeable and recyclable battery. When it can no longer be recharged, it should be removed from the unit and recycled. The battery must not be incinerated or composted.

ATTENTIONS

When using the electric spin scrubber, basic precautions should always be followed, including the following:

· This product is not a toy. Close supervision is required when this machine is used by or near children. Store out of reach of children.

* To protect against the risk of electric shock, do not put the battery charger in the water or other liquid. Do not charge battery if it is wet or shows signs of corrosion, Do not place or store appliance where it can fall or be pulled into a tub or sink.

· Do not incinerate the battery. It may explode in a fire. A small leakage from the battery cell may occur under extreme usage, charging or temperature conditions. This does not indicate a failure.

However, if the outer seal is broken, cracked or damaged and this leakage gets on your skin: Please wash it immediately with soap and water or neutralize with mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with clean water for at least of ten minutes.

Seek medical attention.

· Do not use an extension cord. Plug the charger directly into a standard 100-240V power outlet.

· Do not charge the unit outdoors, store indoors after each outdoor use.

· This appliance can be used by children aged from 8 years, and above and persons with reduced physical, sensory or mental capabilities or lack of

experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

* Do not allow the cord to hang over the edge of a table or counter or touch hot surfaces. The charger should be placed away from sinks or hot surfaces.

* Do not operate charger if it has experienced a sharp blow, been dropped, or otherwise damaged in any way. Do not disassemble the charger for any reason.

· For the best results, do not charge a battery when the air temperature is below 32°F(0°C) or above 113°F(45°C)

* Unplug the charger when not in use or before cleaning.

* Do not abuse the cord, Do not carry the charger by the cord or yank the cord to disconnect. Grasp the charger plug and pull to disconnect. Keep charger cord away from heat and sharp edges.

* Do not operate in the presence of explosives and/or other flammable fumes or liquids.

WARNING

* Always wear rubber gloves and keep proper eye protection to avoid contact from splashing of soaps or detergents on skin and/or eyes while brush head is spinning and when brushes are removed or attached.

· After using TUYU Ultra Cleaner Scrubber, turn the unit off while brush is still contact with surface to avoid getting splashed with soaps or detergents.

* Always test on a small, inconspicuous area before using on a larger area.

Always follow surface manufacturer's guidelines for cleaning and maintenance.

* Do not expose the unit to excessive water, if TUYU Ultra Cleaner Scrubber accidentally becomes submerged in water or water gets into "Charging Port", shake out liquid and air dry the machine 24 hours at least.

1. Choose proper Brush Attachment and attach to TUYU Ultra cleaner Scrubber as directed in "Assembly instructions".

2. Wet the intended area and apply desired cleaning product.

3. Place tip of brush on surface to be cleaned.

 
4. Press ON/OFF button to switch on the machine, then adjust the speed by press speed button.

5. When done, press ON/OFF button to turn off.

TUYU

Electric Spin Scrubber

Model: KS-2640C

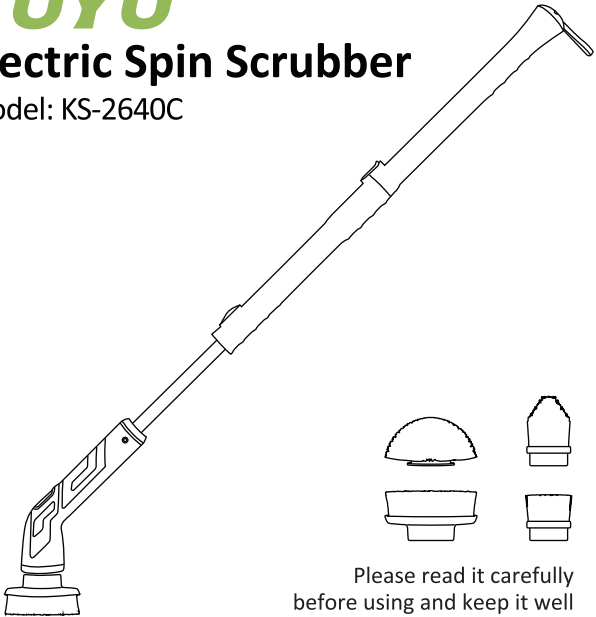



Please read it carefully before using and keep it well

名称	尺寸	材质	工艺
英文说明书	95×105mm	105g双铜	风琴折6折页, 双色