


INSTRUCTION MANUAL

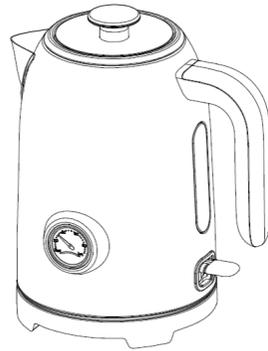

ELECTRIC KETTLE

CAPACITY: 1.8 Quart

PLEASE READ THE INSTRUCTIONS AND SAVE THEM FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed.

SAVETY

1. Read and familiarize yourself with all operating instructions before using this Kettle.
2. Before plugging your kettle into the mains, visually check that the kettle is intact and has not suffered any transit damage.
3. Check that the voltage indicates on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
4. This kettle is only to be used with the stand provided.
5. Close supervision is required when using this appliance near children.
6. Never leave this appliance within reach of children.
7. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use if the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
8. Do not leave the appliance unattended during use.
9. Do not leave the appliance unattended whilst connected to the mains supply.

10. Always use this appliance on a solid, level, non-flammable surface.
11. Do not use this appliance outdoors.
12. It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
13. If the supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified person in order to avoid hazard.
14. Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
15. Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
16. Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
17. Do not allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
18. Do not run the mains cable under carpets, rugs, etc.
19. Allow the unit to cool before storage.
20. Never place the appliance near to flammable material or high pressure containers.
21. This appliance is intended for household use only and should not be used for industrial purposes.
22. Do not use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
23. Do not immerse the appliance, base or its cord in water or any other liquids.
24. Do not use this appliance for anything other than its intended use.
25. Do not push objects into any openings as damage to the appliance or electric shock may occur.
26. Ensure appliance is situated in an open area, do not allow it to come in contact with cupboards, curtains, wall coverings, clothing or other flammable materials.
27. Unplug after each use. Grasp the plug, not the cord.
28. Do not cover this appliance.
29. Never place this appliance on an electric, gas, or any other type of hob.

WARNING : Do not remove lid while the water is boiling.

Never fill the kettle more than its capacity – ensure the water level is between the min and max marks. If the kettle is overfilled, boiling water may be ejected. Always fit the lid during use and do not remove the lid whilst the water is boiling.


CAUTION : The outside surface of the kettle will get hot during use.

Ensure the kettle is switched off before removing it from the base.


SAVE THESE INSTRUCTION

- Short power-supply cord instruction:
1. A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 2. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 3. If a long detachable power-supply cord or extension cord is used:
 - a. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
 - b. The extension cord should be a grounding type 3-wire cord;
 - c. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

DESCRIPTION OF PARTS

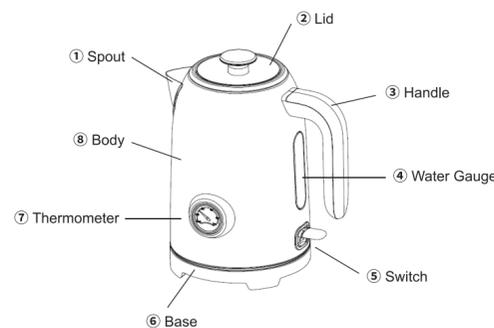

The power cord can be wound into the power base, easy to store, reduce counter clutter.

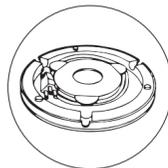

BEFORE THE FIRST TIME YOU USE YOUR KETTLE

Please read these operating instructions thoroughly and keep them in a safe place for future reference.

Before using the kettle for the first time fill to the max mark and allow to boil. Pour away the boiled water and then repeat the process. If a slight taste or odour remains repeat the above process once more.

INSTRUCTIONS FOR USE

1. Place the kettle on a flat level surface
2. Fill the kettle with water to the desired level ensuring that it is above the MIN mark and below the MAX mark.
3. Place the lid on the kettle and place it onto the base.
4. Insert the mains plug (with dry hands) into the mains socket.
5. Push down the power on/off switch, the light on the bottom edge will illuminate and the water will begin to boil.
6. At the end of the boiling cycle the power on/off switch will automatically switch off.
7. Wait until the water has finished boiling before removing it from the base unit.
8. Ensure the lid is correctly fitted before pouring boiling water – beware of scalding.

TROUBLESHOOTING

Fault	The reason for the fault and how to remove it
Auto shut-off before the boil	<ol style="list-style-type: none"> 1. This problem is usually due to the presence of scale in the kettle, so it can be removed by eliminating the scale. 2. This may also be inadequate amount of water in the kettle or the inclusion of an empty kettle, which triggers the kettle protection against running dry. In order to reset the device again pour cold water into the kettle; reset security after approximately 2 minutes; then you can restart the kettle.

Kettle does not work	<ol style="list-style-type: none"> 1. Make sure the plug is properly inserted into the socket and that the socket is working. 2. If there is damage to the power cord must be replaced on the same type of cable for maintenance personnel department manufacturer. 3. There is obvious scale in the kettle.
The water in the kettle has a strange smell	This problem usually occurs when the kettle is used for the first time. In order to solve this problem, fill the kettle with water up to the maximum level, add two tablespoons of baking soda, and after boiling empty the kettle.
Inside the kettle water is dirty and you can see the scale.	Due to the hard water, a precipitate forms in the form of calcium carbonate and magnesium carbonate. Just regularly decalcify kettle.

CLEANING YOUR KETTLE

1. Do not clean your kettle in a dishwasher.
2. Always disconnect the kettle from the mains power supply before cleaning.
3. Wipe clean the outside of the kettle with a soft damp cloth. Never clean any part of the kettle with harsh or abrasive cleaners.
4. Do not submerge any part of the base, mains cable or kettle in water or any other liquids.

DECALCIFICATION OF YOUR KETTLE

1. The frequency of the decalcification depends on the hardness of the water in your area and how often the appliance is used
2. If the kettle switches off before it boils or has a white deposit building up inside then it probably needs to be decalcified.
3. Do not use vinegar but a commercially available decalcification agent; carefully follow the quantities recommended in the instructions of the agent.

TECHNICAL DATA

Voltage: 120 V ~ 60Hz
 Rated power: 1500 W
 Capacity: 1.8 Quart



To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these marked with crossed out items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. In order to obtain information on where and how environmentally safe recycling of this product, household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

If you need assistance with the product, please contact us immediately and we will resolve your issues to your satisfaction.
 Sales company : SUSTEAS
 E-mail : wokii06@gmail.com