

vtech[®]

Instruction Manual

Discover & Learn Tablet™



INTRODUCTION

Thank you for purchasing the **Discover & Learn Tablet™**!

A beginner tablet built just for little ones! The **Discover & Learn Tablet™** features apps that mimic grown-up tablets while introducing numbers, weather and animals.

Twelve Light-up
Activity Buttons

English / Off / Spanish
Control Switch



Four Directional
Control Buttons

INCLUDED IN THE PACKAGE

- Discover & Learn Tablet™
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

 
Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks

- ① Turn the packaging locks counterclockwise several times.
- ② Pull out and discard the packaging locks.

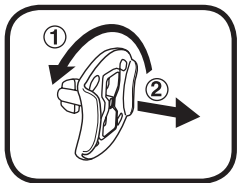

INSTRUCTIONS



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

 


ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA batteries (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

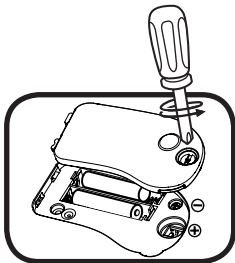

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.

- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

 
RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES

1. English/Off/Spanish Control Switch

To turn the unit **On**, slide the **English/Off/Spanish Control Switch** to the **English (ENG)** or the **Spanish (SPA)** position. To turn the unit **Off**, slide the **English/Off/Spanish Control Switch** to the **Off (●)** position.

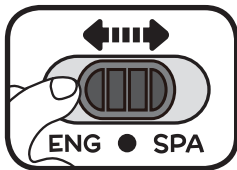

2. Automatic Shut-Off

To preserve battery life, the **Discover & Learn Tablet™** will automatically power down after approximately 25 seconds without input. The unit can be turned **On** again by pressing any button.

 
NOTE

If the unit powers down or if the light fades out during play, while playing, we suggest changing the batteries.

ACTIVITIES

1. English/Off/Spanish Control Switch

Slide the **English/Off/Spanish Control Switch** to turn the unit **On**. You'll hear a power-on sound effect, a sing-along song and a playful phrase, accompanied by flashing lights.

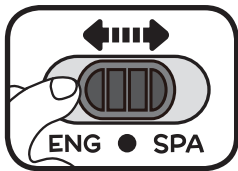

2. Map Button

Press the **Map Button** to pretend to follow the map to various destinations, with phrases, sounds, and flashing lights accompanying the experience.



 
3. Music Button

Press the **Music Button** to hear a variety of melodies and two sing-along songs. The lights will flash with the sound.




4. Entertainment Button

Press the **Entertainment Button** to hear amusing phrases about news, stories and music, accompanied by flashing lights.

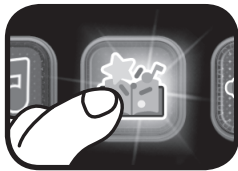


5. **Exercise Button**

 Press the **Exercise Button** to listen to energetic sounds and phrases, accompanied by flashing lights.

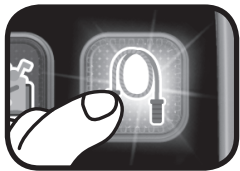


6. **Camera Button**

 Press the **Camera Button** to enjoy playful role-play phrases and sounds, with accompanying flashing lights.

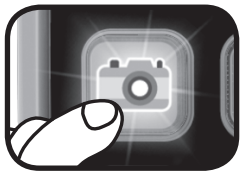

7. **Calendar Button**

 Press the **Calendar Button** to listen to uplifting phrases and sounds, with lights that flash along.

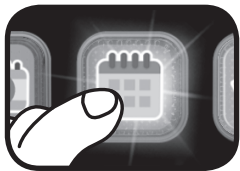


8. **Mail Button**

Press the **Mail Button** to discover numbers and hear counting sounds, with flashing lights.




9. Weather Button

 Press the **Weather Button** to explore different weather conditions, accompanied by flashing lights.

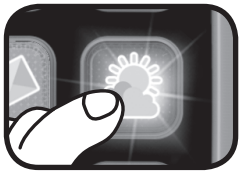

10. Lion Button

 Press the **Lion Button** to hear Lion roaring sounds, with flashing lights.

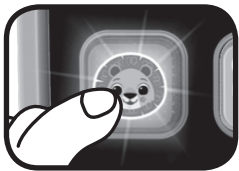

11. Alarm Button

Press the **Alarm Button** to enjoy playful sounds and phrases announcing upcoming events, with flashing lights.



 
12. Message Button

Press the **Message Button** to engage with entertaining role-play phrases and sounds, with flashing lights.




13. Elephant Button

Press the **Elephant Button** to hear elephants sounds, with flashing lights.

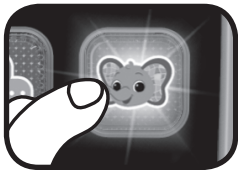

14. Direction Control Buttons

 Press the **Direction Control Buttons** to interact with enjoyable sounds and control the light pattern on the tablet.

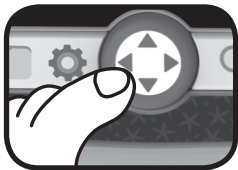

MELODIES

1. One, Two, Buckle My Shoe
2. Good Morning Merry Sunshine
3. Wheels on the Bus
4. Twinkle, Twinkle, Little Star
5. Sailor's Hornpipe
6. Itsy Bitsy Spider
7. Hickory, Dickory, Dock
8. Head and Shoulders
9. Glow Worm
10. Hey, Diddle Diddle

SONG LYRICS

English Song 1

Are you ready to explore and have some fun?
You can take this tablet wherever you go.
Pressing, playing, learning,
and talking with your animal pals.

Spanish Song 1

¿Listo para divertirte y explorar?
Lleva tu tableta adondequiera que vas,
toca, juega y aprenderás.
¡Los animales te ayudarán!

English Song 2

Playing and exploring, with this light-up tablet
We can play pretend and sing-along all day.

Spanish Song 2

Jugando y explorando con esta tableta,
podremos cantar, crecer e imaginar.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, replace with a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please contact our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5785
Product name: Discover & Learn Tablet™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-003(B)/NMB-003(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

