

To make a warranty claim, do not return this product to the store. Please email support@curtiscoms.com or call 1-800-968-9853.

1 Year Warranty

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V-60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

13

CUSTOMER SUPPORT

REPAIRS

DANGER! Risk of electric shock! The One-Cup Coffee Maker is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Model: ECMK088

Voltage 120V ~ 60Hz

Power Rating 700 W

Length: 16cm

Width: 12cm

Height: 26.5cm

12

frigidaire

ECMK088
120V / 60Hz / 700W



frigidaire is a pending or registered trademark used under license from Electrolux Home Products, Inc. For service assistance and product information, please call: 1-800-968-9853 Curtis International Ltd. 7045 BECKETT DRIVE, UNIT 15 MISSISSAUGA, ON, L5S 2A3 www.curtisint.com

RETRO SINGLE CUP COFFEE MAKER

RETRO SINGLE CUP COFFEE MAKER

Important Safeguards	3-4
Parts & Features	5
Setting Up Your Coffee Maker	6
Get Brewing	6-7
Tips & Tricks	7
Maintenance	8
Recipes	9-11
Customer Support	12
Warranty Card	13

2

HOMEMADE PUMPKIN SPICE LATTE

Ingredients

3 oz brewed coffee

1 cup 2% milk

1 tbsp pumpkin purée

1/4 tsp vanilla extract

1/4 tsp pumpkin spice seasoning

dash of cinnamon (optional)

organic whipped cream (optional)

caramel sauce (optional)

Directions

Brew 3-4 oz of strong ground coffee in your One-Cup Coffee Maker.

Over medium heat, bring the milk to a slight boil in a saucepan. Whisk in the pumpkin purée, vanilla extract and pumpkin spice seasoning. Stir as you wait for the mixture to boil.

Take the coffee mug with your already brewed coffee and pour in the warmed pumpkin spiced milk. You may have a little extra milk.

Top it off with a thin layer of whipped cream and/or caramel sauce drizzle. Garnish with a sprinkle of cinnamon.

11

Dairy-Free Vanilla Ice Coffee

Ingredients Directions

1 (8 oz) cup brewed vanilla coffee Using 1 (8 oz) cup of water and 2 tbsp of ground vanilla coffee, brew your coffee.

Almond, coconut or soy milk, to taste After brewing is complete, place cup of coffee into refrigerator and let cool for half an hour.

1 cup of ice Take a separate glass and fill with a cup of ice cubes into the glass. Once the coffee is chilled, remove from fridge and pour into the glass with the ice cubes. Add your milk of preference and stir.

Mason Jar Cappuccino

Ingredients Directions

6 oz brewed coffee Brew 1 (8 oz) cup of coffee using 2 tbsp ground coffee (approximately 2 oz of water will evaporate while brewing, leaving you with 6 oz of coffee).

1/2 cup whole milk dash of cacao powder Take a mason jar and fill halfway with milk. Put on a lid and then shake the jar for a minute. Once shaken, remove the lid and place the mason jar with milk into the microwave for 30 seconds.

Once milk is warm and frothed, combine with your brewed coffee and enjoy your homemade cappuccino.

10

MAINTENANCE

In order to keep your One-Cup Coffee Maker in pristine working order, follow the cleaning recommendations after each use:

- Before cleaning or moving the appliance, unplug the One-Cup Coffee Maker and allow it to cool completely.
- Make sure to dispose of the used coffee immediately after each use.
- Wipe down the Body of the appliance with a soft, damp cloth or sponge. Gently wash the Coffee Filter and Coffee Basket in warm, soapy water and rinse thoroughly. Make sure not to get the bottom of the Coffee Maker wet.
- Note: Clean the permanent Coffee Filter regularly to prevent residue build-up.
- Do NOT dry the inside of the water tank with a paper towel, as lint may remain. Use a sponge.
- Dry all parts thoroughly. Store in a cool, dry place.
- Should your appliance require any maintenance, leave service to qualified personnel.
- Use baking soda or a mild cleaning detergent to remove any stains on the machine.

8

IMPORTANT SAFEGUARDS

PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- For household use only.
- Thoroughly wash and dry One-Cup Coffee Maker before using or the first time. Water is not allowed to splash inside the machine.
- To prevent the risk of fire, electric shock, or personal injury, do not place the cord, plug, or unit near water or other liquids.
- Do not touch hot surfaces. Use handles or knobs.
- Scaling may occur if the lid is removed during the brewing cycles. To reduce the risk of fire or electric shock, do not remove the bottom cover on the appliance.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not use the appliance if any of the parts are damaged.
- Do not use appliance for purposes other than its intended use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.

3

IMPORTANT SAFEGUARDS

- When disposing of the One-Cup Coffee Maker, do not discard it with general household waste; instead, drop it off at a designated electronic waste recycling facility.
- Do not use appliance outdoors or for commercial purposes.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled unintentionally.

SAVE THESE INSTRUCTIONS

4

PARTS & FEATURES



5

SETTING UP YOUR COFFEE MAKER

Clean your One-Cup Coffee Maker thoroughly before use. Always unplug the appliance prior to cleaning or storing.

WARNING: The One-Cup Coffee Maker is NOT dishwasher safe.

WARNING: Always turn Coffee Maker OFF when not in use.

- Make sure all parts are completely dry before and after each use.
- After the Coffee Maker has run for 5 minutes, the appliance will automatically power OFF.
- For your safety, do not open the lid while the Coffee Maker is in use.
- Once you add cold water to the machine, turn on the machine and wait 5 minutes.
- There is an overheating protection device that will activate to prolong the life of the machine.
- After each use, once appliance cools down, discard the used coffee from the Coffee Filter.
- Do not overfill the appliance with water as it may cause overflow. The brewing basket may also overflow if too much water is added. Overfilling could affect the the quality of the next coffee cup as well as the life of the machine.
- We recommend no more than 3 tablespoons of ground coffee.

GET BREWING

ATTENTION: Appliance holds 6 oz to 14 oz of water. Do not overfill Water Tank with water or the Coffee Filter with ground coffee.

WARNING: Allow appliance to cool down before cleaning.

- Place the Coffee Maker on a clean, stable surface.
- Swivel the Shower Head to the left, remove the Coffee Filter from the Coffee Basket and add the desired amount of ground coffee into the Coffee Filter.

6

TIPS & TRICKS

For delicious coffee, we recommend one-time use for ground coffee in the Coffee Filter. The taste will decrease in quality if the coffee is reused. We recommend 2 tbsp per 1 (8 oz) cup of brewed coffee and 3 tbsp (max) for 14 oz of coffee.

Note: If the Coffee Filter overflows the machine will automatically stop.

IMPORTANT: THE ONE-CUP COFFEE MAKER IS NOT DISHWASHER SAFE. DO NOT SUBMERGE COFFEE MAKER IN WATER OR ANY OTHER LIQUIDS. TO AVOID DAMAGING THE APPLIANCE, NEVER USE ABRASIVE OR HARSH CLEANING PRODUCTS TO CLEAN THE COFFEE MAKER.

RECIPES

delicious & satisfying ideas for everyday coffee

- Place the Coffee Filter back into the Filter Basket and swivel the Shower Head back above the Coffee Filter & Basket.
- Add the desired amount of cold water (between 6 oz-14 oz) into the Water Tank. Do not exceed 14 oz.
- Plug in the Coffee Maker and press the Power Button to turn on the appliance. Blue light will indicate that the appliance is working.

9

7