

Kneading Massage Shawl

OPERATION MANUAL



Thank you for your patronage,
Please read the instructions in detail before using.


Dear users:

Hello!





Thank you for choosing the product kneading massage shawl product developed by our company. Please read the manual carefully before using this product. When you start to use the product, you have a detailed understanding of the use of the product.

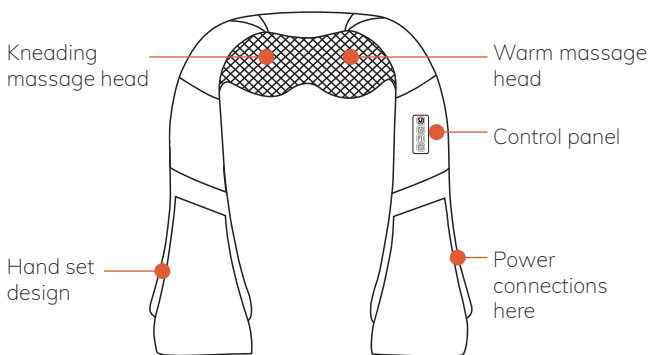Parts to introduce:

1. Product characteristics



Button usage and function (four keys)

-  Power button: On / off
-  Direction button: clockwise / anticlockwise
-  Speed button: medium / fast / slow
-  Heat button

- ▶ The new concept of kneading massage meets ergonomic design of neck and shoulders.
- ▶ A special massage head for your neck and shoulders, giving you the most comfortable experience.
- ▶ U shape and wrist style design, strong or gentle style, the strength of their own grasp.
- ▶ Automatic reversing and kneading automatic converting system.
- ▶ Kneading direction manual selection function.
- ▶ Controlled by warm function alone.
- ▶ The switch operation is very simple.


- ▶ Skin-friendly PU material.
- ▶ Safety device using overheat protection.

Product introduction



Preparation before use

Check that the power cord adapter and plug are in good condition, then place the shoulder massager on the body part that needs to be massaged (eg: neck, back, waist, abdomen or legs, etc.), then connect the connector on the massager to the power source. After the adapter is connected, you will hear a "pop" when successfully connected, and finally plug it into the power socket or the cigarette lighter on the car, and you can enjoy a comfortable massage.


1. Power Button

 Press the "Power Button" the massager starts to work 15 minutes, Press the power button again at any time to turn the the unit off.

2. Direction Button

 Press the  to change the direction.(direction automatically changes every 1 min.).


3. Speed Button

 Press the "Speed Button" to change massage speed: Medium / fast / slow.


4. Heat Button

 Press the "Heat Button" to activate heat and press it again to deactivial the heat.


- It is recommended that each massage should not be used for more than 15 minutes at the same time. if you feel unwell durning the massage, please stop using it immediately.
- After massaging the shawl, please make sure the power plug is removed from the socket.
- If there is a power failure, please turn off the main switch and unplug the power plug so that the product can be reoperated under the condition that the power is suddenly restored.

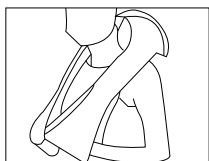


Neck & shoulder

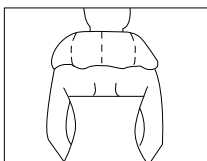


Neck

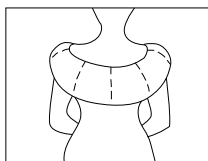


Back

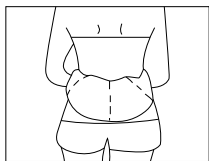

Waist

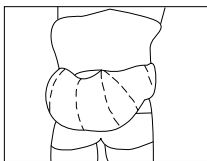

Abdomen

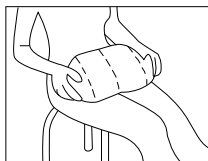

Thighs

Product accessories and usage


The power supply

Input: 100-240VAC 50/60Hz 1.5A

Output: DC 12V

Method of use:

- (1) The power jack is inserted into the massager.
- (2) The power plug is inserted into the socket.

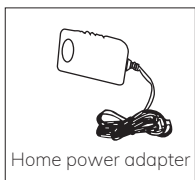

Matters needing attention

Using environment

1. Do not use this appliance in a highly humid environment, such as a bathroom.
2. Do not use this appliance immediately when environmental temperature changes rapidly.
3. Do not use this appliance in dusty or corrosive gas atmospheres.

Security matters

1. This appliance is not intended to provide for people with disabilities, sensory or neurological defects or lack of experience and knowledge (including children), unless they are responsible for the supervision and guidance of what their security personnel on how to use the apparatus. Children must be supervised to make sure they don't play with utensils.
2. In case of any damage or abnormal function of the power adapter, it must be replaced by
3. professionals in the manufacturing, maintenance

or similar departments to avoid danger.

3. Do not use wet hands to plug the power plug.
4. Do not pull the power cord when plugging in the power plug. Do not be too rough.
5. Do not use wires to damage or tamper with this appliance circuit.
6. If there is a power failure, you should leave the appliances on to avoid any damage when the power is suddenly restored.
7. If any appliances are abnormal during use, discontinue use immediately and consult the local supplier.
8. If you feel physically abnormal during the use of this appliance stop using it immediately and consult your healthcare provider.
9. The cover should not be used when it is damaged.
10. Do not press hard or put pressure on the massager. Do not touch with hard objects. Do not press or trample.
11. Prevent water or other corrosive liquid from flowing into the machine and cause trouble and damage the machine.
12. Do not use portable power cord or hand control line, so that the body is suspended and swing, resulting in disconnection of the wire core, so that it can not work properly.
13. Do not alter the structure of the body or replace parts.
14. Please do not put it near the fire source and flammable place. It is prone to malfunction and danger. It is easy to cause deformation, discoloration or damage.
15. The use of the process of abnormal, should immediately stop using and cutoff the power supply.
16. A mentally ill person who is physically paralyzed must be used carefully under someone's care or consult a physician first.

Product parameters

Product name: Kneading Massage Shawl

Rated voltage: 12V

Rated power: 24W

Rated time: 15mins

Implementation standards: GB4706.10-2008

Quality assurance

Thankyou for purchasing our products!
In order to protect your legitimate rights and interests, relieve your worries, and at the sametime improve the after-sales service to customers, this warranty regulation is specially formulated, please read carefully and provide valuable opinions and suggestions.

1. The product is in normal use within a year. If the main parts fail, the parts can be repaired and replaced free of charge.
2. Maintenance vouchers and warranty cards should be included to ensure the warranty period.
3. Product warranty period of one year.

Be careful

1. Improper use and man-made damage are not covered by warranty.
2. If the customer disassemble itself will cancel the warranty.

Purchase date: _____

Place of purchase: _____

Certificate

Test result: _____

Examination clerk: _____

Date of inspection: _____



At the end of its life, the device has to be separated from the other waste. Consign the device and all its components together to a center of electronical and electrotechnical waste recycling center, designated by your local authorities