 




Automatic Pet Feeder

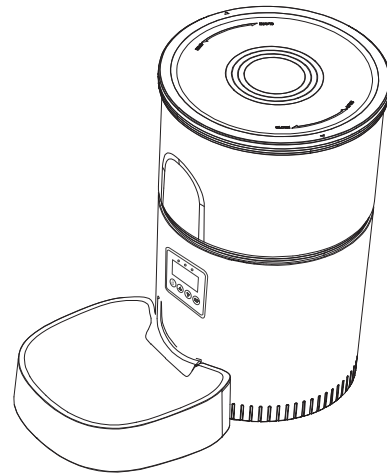

Please Read the Manual Carefully
Before Using the Product

Model: DU3L-KY

Safety Instruction

- 1.Children need to be used in the company of adults.
- 2.Do not use the feeder with pets that cannot reach the food tray or have any physical disabilities.
- 3.Do not immerse the base part in water at any time, because this will damage the control panel and other electronic components.
- 4.Do not place any foreign objects in the pet feeder.
- 5.Do not use canned, wet food.
- 6.Do not disassemble the device in a manner over than the instructions in this user guide.
- 7.Do not modify the pet feeder.
- 8.If the equipment is malfunctioning or damaged, please do not try to repair the pet feeder by yourself, contact the seller immediately and solve it.
- 9.Always unplug the power plug when not in use and before cleaning.
- 10.If the power plug gets wet, turn off the power to the outlet. Don't try to unplug the power plug.

 
Notice

- 1.Do not allow pets to chew or swallow any part. If you are worried about the power cord, please purchase a wire guide (hard plastic protector) at hardware store to protect the power cord.
- 2.Do not install or store pet feeders in places where they will be exposed to weather or temperatures below -10° C~40° C.
- 3.Use alkaline D size battery for power supply. Do not use rechargeable batteries.
- 4.Check the battery regularly. Before leaving for a long time be sure to replace the battery with a new one.
- 5.Do not lift pet feeders with lids, food buckets and food bowl. carry or move with both hands and the base should keeping the device in an upright position.
- 6.Only support dry food, the size range is 2-12 mm in diameter. Larger foods will get stuck at the food outlet.
- 7.Please read and follow all important instructions listed on the pet feeder and packaging.

Product Image


Front view

- 1.Food Tank Lid
- 2.Food Tank
- 3.Display Screen
- 4.Control Panel
- 5.Food Outlet
- 6.Body
- 7.Food Bowl

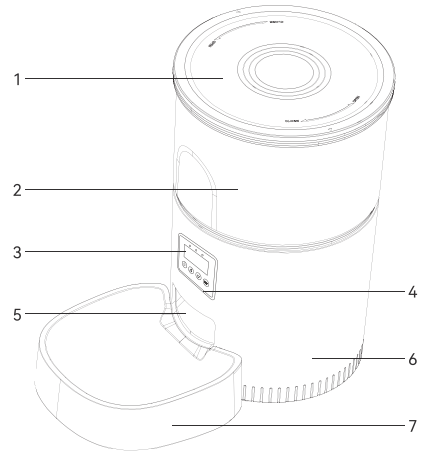


Bottom View

 - 8.Speaker
- 9.Battery Compartment
- 10.DC Interface

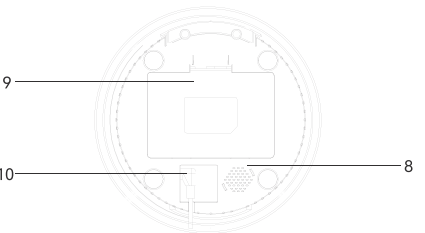

Unlock Screen State

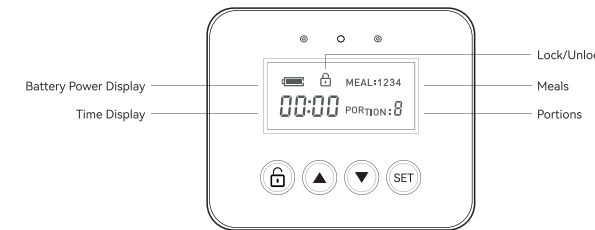 

Prompt the current battery level: The external power supply shows the fully charged state, The battery power is displayed according to the battery level

Unable to operate in locked state, long press the unlock button to open the lock then can operate

Can set 4 meals, in the setting mode, the up and down button can switch the selected number of meals

Display the current time

Display the feeding portions

Button Description

Unlock button: Press and hold for 3 seconds until you hear a beep and the screen is unlocked successfully, changes to .

Up Button: This button can be set to switch numbers.

Down Button: This button can be set to switch numbers.

Setting Button: when enter the operation of setting button to setting.

Note: The screen will automatically lock after 30s standby.

Cleaning and Maintenance

Please clean the feeder regularly to keep your pet's health.

When it starts to get dirty and a lot of loose food in the food trough, you can remove the food cover to clean it.

Use a soft damp cloth to clean the base of the feeder and the control panel. Do not get wet this part, and do not to clean it with running water.

Do not put the product in the dishwasher, otherwise it will be permanently damaged!

Packing list

After opening the product package, please confirm whether the machine is in good condition.

Please check the list to confirm whether the accessories are complete.

The Feeder ×1

Food Bowl ×1

Product Manual ×1

Power Cord ×1

Feeding Guide ×1

Power Adapter ×1



Shenzhen Yichongtianxia Technology Co., Ltd.



36 Months Warranty




help@imipaw.com

BC-041-D

Instructions


01 | Installation

 - ⌚ Remove the feeder from the box.
- ⌚ Place the feeder in the suitable location.
- ⌚ Combine the food tray with the base of the feeder.

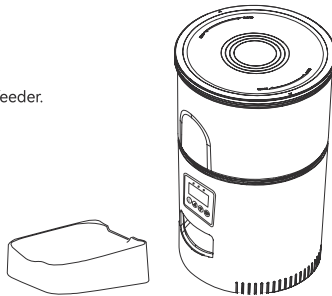

02 | Connect the power supply

 - ⌚ Plug the 5V/1A power adapter into the wall socket and connect the device.
- ⌚ Open the battery compartment at the bottom of the feeder and install 3 pcs D size batteries (not necessary) to prevent power failure.
- ⌚ The display will automatically light up, indicating that the feeder is turned on.

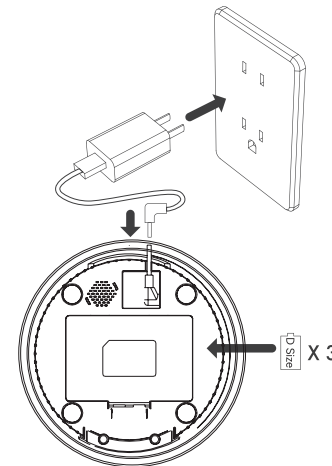


Note:

Does not include battery.
Before turning on the power, make sure that all parts are clean and completely dry.

03 | Put pet food in food tank

 - ⌚ Fill the food tank with dry pet food. Close the lid and it will snap into place due to gravity.

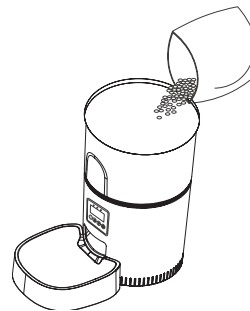


Note:

Do not use canned, wet or damp pet food.
The recommended pet food size range is 2-12 mm.

04 | Setting Time

 - ⌚ Press and hold unlock button (🔓) for 3s to unlock the screen.
- ⌚ After pressing and holding the setting button (⚙️) for 3s, the time icon 0000 will flash the hour setting.
- ⌚ Press the up (⬆️) /down buttons (⬇️) to scroll through the numbers to set the hour.
- ⌚ Press the set button (⏹️) to move to the minute setting, and set the minute the same as the hour setting step.

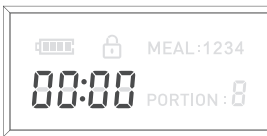

05 | Set up a daily feeding plan

- ⌚ After the current time is set, press the set button (⏹️), and the display will flash the number of meals. Press the up (⬆️) /down buttons (⬇️) to set 1-4 meals a day.



06 | Set meal time and portions

- ⌚ After setting the number of meals, the display will flash the current number of meals.
Eg: The number of meals flashes "3" means that 3 meals per day have been set.



Set the feeding time

- ⌚ Press the "Set" button (⏹️), and the hour field of the time icon will flash.
- ⌚ Press the up (⬆️) /down buttons (⬇️) to set the hour.
- ⌚ Press the set button and the up (⬆️) /down buttons (⬇️) to set the minutes in same step.



Set the feeding portion

- ⌚ Press the "Set" button (⏹️), the number of portions will flash.
- ⌚ Press the up (⬆️) /down buttons (⬇️) to set feeding portion.
- ⌚ If necessary, press the set button (⏹️) to repeat the above process for meals 2 to 4.



07 | Unlock the screen

- ⌚ Press and hold for 3 seconds until you hear a beep and the screen is unlocked successfully, (🔓) changes to (🔓).




08 | Manual Feeding

- ⌚ While unlocking the screen, press both up and down button to manual feeding one portion.

Note:

 The feeding plan will not be affected.

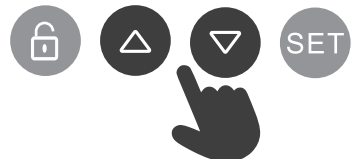

09 | Restore factory setting

- ⌚ In the lock screen state, press and hold the up button for 5s to reset all settings (time, feeding plan and portion per meal).



Troubleshooting

Question Answer

Q: I press any button but can not work.

A: Lock the screen when there is no operation within 30s. Please press and hold the unlock button for 3s to unlock the screen.

Q: I forgot the specific content of the feeding plan

A: Unlock the screen and press the setting button, you can see meals displayed (but not portion per meal).

Q: Can't get food

- A: 1) Make sure to put in dry food and the diameter of the food should be between 2-12 mm.
- 2) Check whether the battery power is low.
- 3) Whether the power adapter is connected.
- 4) Whether the power is cut off when the battery is not installed, if the power is cut off, please reset the feeding plan.

Q: The display does not light up

- A: 1) Without any operation within 30s, the screen is locked and dimmed.
Please press and hold the unlock button for 3s to unlock the screen.
- 2) Check whether the power adapter is connected or the battery is installed.
- 3) When the device is connected to the power supply, the display still does not light up, please contact the seller to solve it.

Specification

Food Tank Capacity:3L

Screen: LCD screen

Power supply: DC 5V/1A power adapter; 3pcs alkaline batteries

Power adapter: AC110-240V input, DC5V output

G.W:1.65KG

Size: 18.2*18.2*28.3cm