



Petcove

FurrFluff

PET GROOMING & VACUUM KIT



User Manual





Hey Friends!

Here at Petcove, we have a clear mission: to enhance pets' well-being with high-quality and inventive products. We offer unique and innovative items, which aim to foster a healthier and more active lifestyle for your pets.

We know you prioritize your companions' health, and we are committed to guarantee our exceptional products. Please register your product within 14 days to activate your exclusive lifetime warranty.

If anything goes wrong with your product, please reach out to us so we can make it right.

+1-844-924-8445 | support@petcoveshop.com | www.petcoveshop.com

The *happy* store for pets!



At Petcove, you can **shop happy**.

We offer innovative products that encourage healthier and more active lifestyles for pets and stand behind our products with a **lifetime warranty!**

+1-844-924-8445 | support@petcoveshop.com



PRODUCT OVERVIEW

The Petcove FurFluff 7-in-1 Pet Grooming Kit is the ultimate solution to keep your beloved pet looking and feeling their best—right from the comfort of your home. This innovative kit has 13 attachments, including a bonus clipper maintenance kit, ensuring you have everything you need for head-to-tail grooming. Groom like a pro with comprehensive tools designed to tackle daily brushing, dematting and deshedding, blow drying, fur and nail trimming, and cleanup. It's complete furr-care in one box! The FurFluff kit makes stressful trips to the groomers a thing of the past and empowers you to create a stress-free and enjoyable grooming experience for you and your pet.


Designed with your pet's well-being in mind, the FurFluff kit is equipped with a low-decibel motor, three adjustable dryer and suction speeds, and three heat levels. Whether your furry friend is prone to anxiety or has a specific coat type, you can effortlessly customize the grooming experience to their unique needs. The kit offers more than just convenience and cost savings; it allows you to monitor your pet for changes in their skin, fur, eyes, ears, or overall health. Moreover, the integrated advanced filtration technology eliminates 99% of dust, allergens, and pathogens, ensuring a clean and safe environment for you and your pet.


Say goodbye to grooming stress and hello to a harmonious bonding experience with your pet. The Petcove 7-in-1 Pet Grooming Kit is not just a grooming tool—it's an investment in your pet's happiness and well-being. Get ready to redefine pet grooming, one pampering session at a time.

GETTING STARTED


1. Remove all of the components from the box and inspect each for shipping damage.
2. Go to petcoveshop.com/furfluff and register your product within 14 days of purchase to activate your exclusive lifetime warranty.
3. Carefully read the **OPERATING INSTRUCTIONS** on page 10 and **IMPORTANT SAFETY INSTRUCTIONS** on page 25 before using your FurFluff Pet Grooming Kit.
4. Complete the steps in the **QUICK & EASY SETUP GUIDE** on page 6 to begin setting up the FurFluff Pet Grooming Kit.
5. Complete the desensitization training steps in the **BEFORE GROOMING: DESENSITIZE YOUR PET** section on page 8.

WHAT'S IN THE BOX

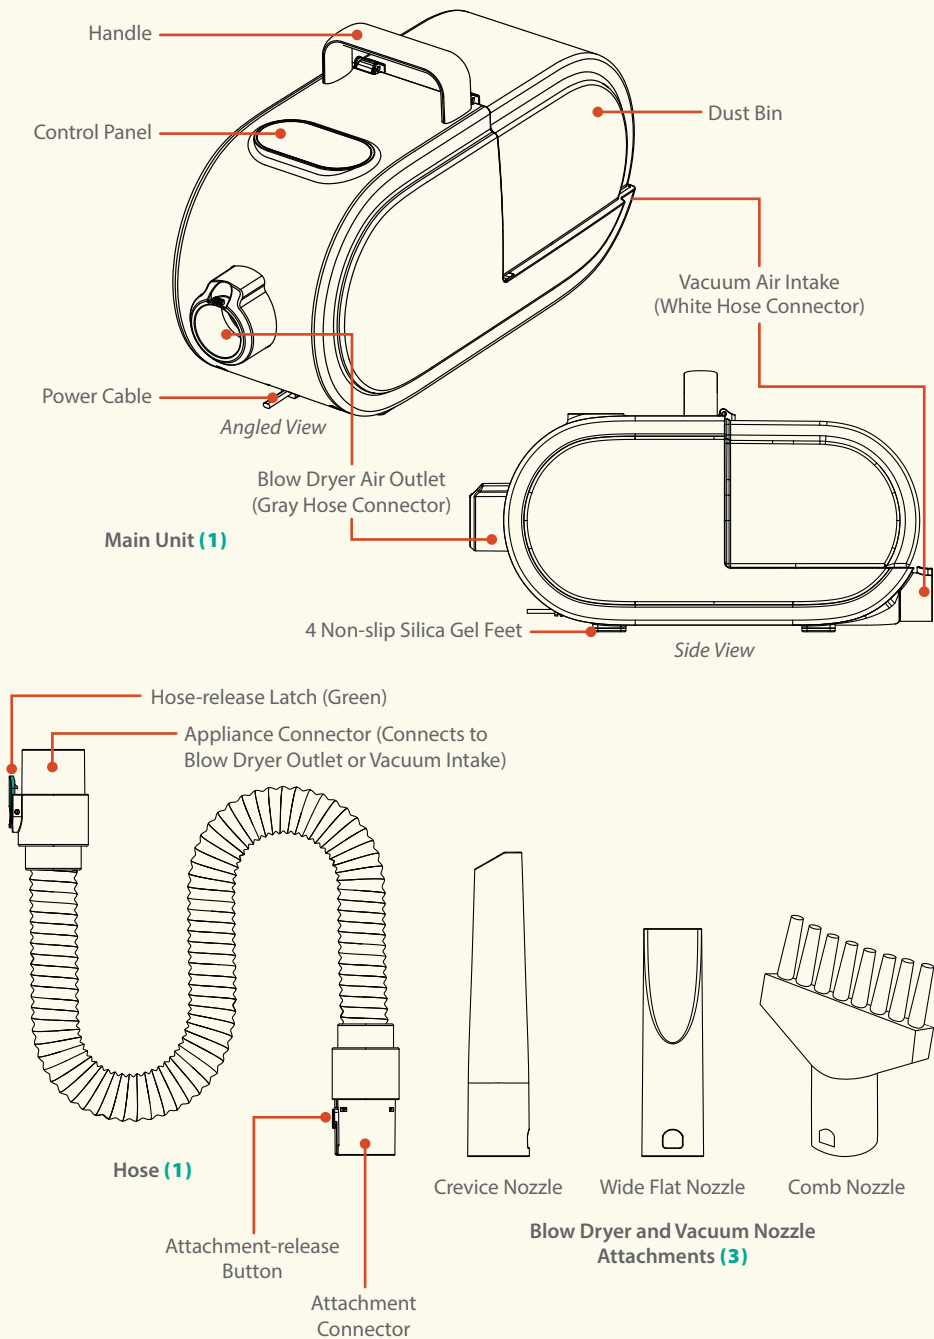


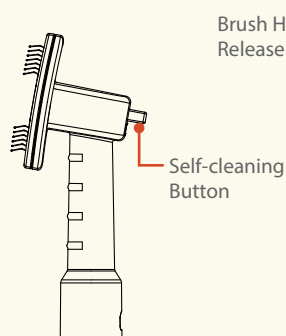


Grooming Brush Attachment (1)

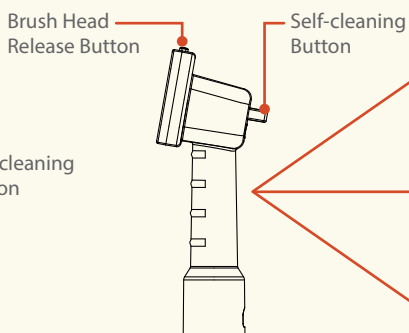

Multiuse Brush Attachment (1)

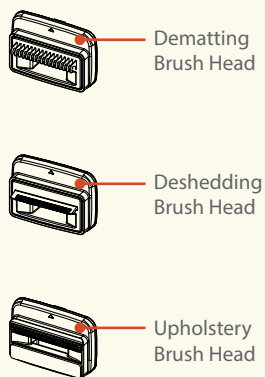

 Brush Heads for the Multiuse Brush Attachment (3)




Clipper & Nail Grinder Attachment (1)




Clipper Guards (3)




Clipper Heads (2)

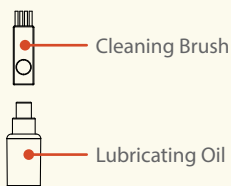

Clipper Maintenance Kit (1)

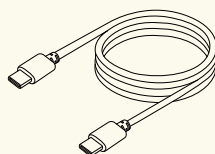

USB-C Charging Cable (1)

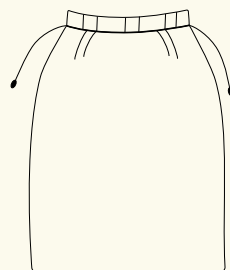

Accessories Bag (1)

QUICK START GUIDE

UNPACKING THE GROOMING KIT

1. Unpack the FurFluff Pet Grooming Kit. Compare the item in the kit to the components shown in the **WHAT'S IN THE BOX** section on pages 4 and 5.
2. Place the appliance on a flat, sturdy surface.

ATTACHING AND REMOVING THE HOSE

- ⚙️ **To Attach:** Press the green hose-release latch to lift it, insert the hose into the vacuum connector (white) or the blow dryer connector (gray), and release the latch. See *Figure 1*.
- ⚙️ **To Remove:** Press the hose-release latch to lift it and remove the hose from the connector.

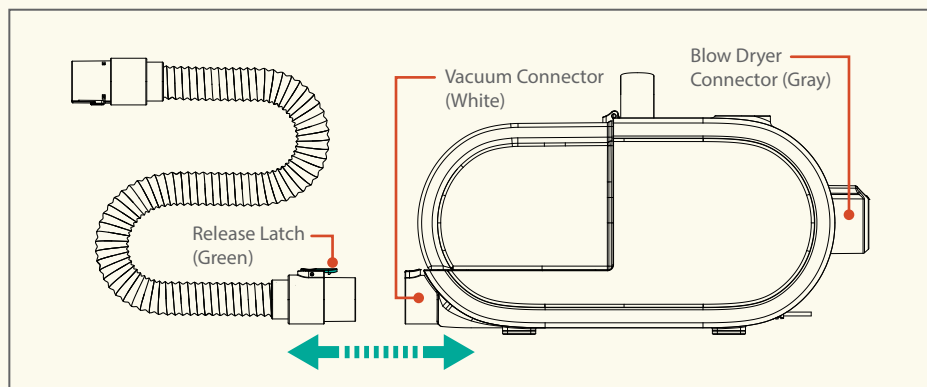


Figure 1

INSTALLING AND REMOVING AN ATTACHMENT

- ⚙️ **To Install:** Align the notch in the base of the attachment with the attachment-release button on the end of the hose. Slide the attachment onto the hose; it will click into place. See *Figure 2*.
- ⚙️ **To Remove:** Press the attachment-release button and pull the attachment to remove it.

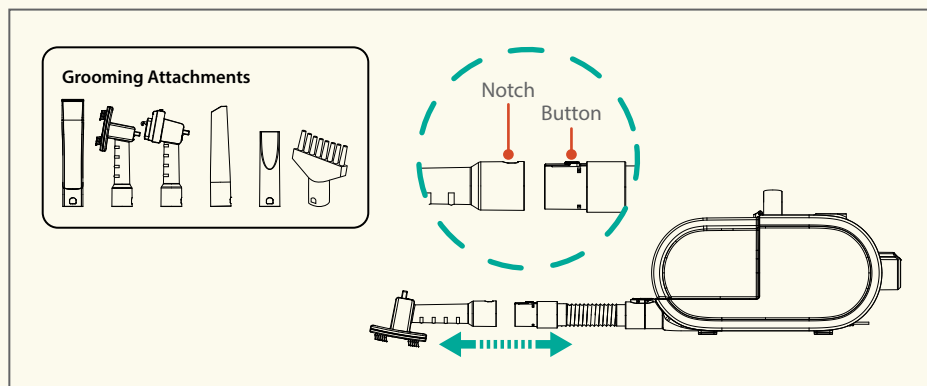


Figure 2

REMOVING AND REINSTALLING THE DUST BIN

- ⚙ **To Remove:** Power off and unplug the appliance. Grasp the end of the dust bin and pull it up and out to remove it. See Figure 3.
- ⚙ **To Reinstall:** Insert the dust bin into the appliance by pressing lightly in and down. The dust bin will click into place when properly installed.

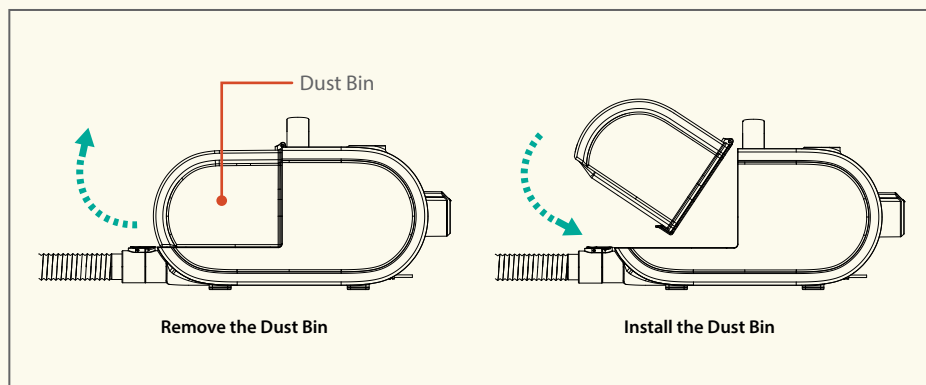


Figure 3

MANAGING THE HOSE AND POWER CABLE

When you are done using the appliance, always secure the hose and power cable to avoid creating a tripping hazard or damaging the appliance.

- ⚙ **Hose:** Wrap the hose around the body of the appliance. See Figure 4.
- ⚙ **Power Cable:** Bundle the power cable and secure it with a zip tie. Do not wrap the power cable around the body of the appliance to avoid damaging it.

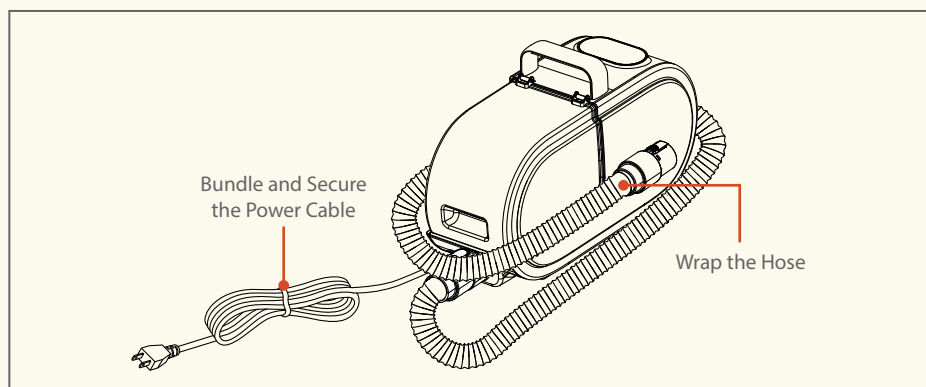


Figure 4

BEFORE GROOMING: DESENSITIZE YOUR PET

It is important to properly prepare your pet for grooming, especially if your pet is anxious or nervous, is sensitive to loud noises, or has never been to the groomer. For detailed instructions on how to use your FurFluff Pet Grooming Kit, see **OPERATING INSTRUCTIONS** on page 10. Please note, that while some pets may tolerate completing all of the desensitization training steps below in one day, some pets may need several days or weeks until they feel comfortable enough to begin using the grooming kit. Don't rush! Rushing through acclimating your pet can result in negative associations with grooming and grooming tools. Reward your pet with treats, toys, and lots of praise or for remaining calm as you introduce each grooming desensitization step below.

1. Unpack the grooming kit and leave it out for a few days to allow your pet to check it out.
2. Get your pet comfortable with brushing and being handled:
 - a. If you do not regularly brush your pet, begin brushing them a few times a week for 5–10 minutes at a time.
 - b. If your pet is anxious about being touched in sensitive areas, gently handle and massage them to help them get used to being touched in all areas.
 - c. If you have never trimmed your pet's nails, help them prepare for nail trimming by frequently touching their paws, pads, and nails.
3. If you have a small or medium-sized pet, you may find it easier to groom them on an elevated surface, such as a large, sturdy table. Always place a non-slip mat on the table to keep your pet from slipping or falling.
 - a. Have your pet get up onto the table, give them a treat, and then have them get off of the table.
 - b. Repeat a few times, gradually increasing the time you have your pet stay on the table.
4. Get your pet acquainted with the noise of the appliance:
 - a. Turn on the appliance to the lowest intensity when your pet is in the same room.
 - b. Repeat this several times gradually bringing the appliance closer and gradually increasing the intensity level to see how your pet tolerates the increased noise and proximity.
5. Once your pet can tolerate being near the appliance while the motor is turned on, it's time to help them get used to the grooming attachments.
6. Get your pet acquainted with the grooming and multipurpose brushes:
 - a. Turn on the lowest vacuum level and brush your pet with slow, short strokes from neck to tail.
 - b. Next, brush your pet's sides, belly, and legs.
7. Get your pet acquainted with the blow dryer:
 - a. Turn on the lowest blow dryer level. With the heat off and no nozzle installed, blow air on your pet's feet or hindquarters for a few minutes.
 - b. Try blowing air on your pet's sides and chest. Be careful not to blow air in your pet's face.
8. Get your pet acquainted with the electric clipper:
 - a. Run the clipper, with the power off and the longest guard installed, through your pet's hair.
 - b. Turn on the clipper and allow your pet to see and smell it. Turn the clipper off and run it through your pet's hair again. Repeat several times as needed.
 - c. Turn on the clipper and trim a small section of your pet's fur to see how they tolerate it.
9. Get your pet acquainted with the nail grinder:
 - a. With the power off, touch the grinder to a nail and give your pet a treat. Repeat with each nail.
 - b. Turn on the grinder and allow your pet to see and smell it. Trim one nail and give your pet a treat. Repeat until all nails are trimmed.

HOW TO APPROACH GROOMING IF YOUR PET IS PRONE TO ANXIETY OR NERVOUSNESS

- ☀ Take your pet on a long walk or run or give them extra playtime before a grooming session.
- ☀ Stay calm and be patient. Your pet can sense if you are anxious or nervous.
- ☀ Use the lowest suction and blower intensity levels to keep the noise level low.
- ☀ Work slowly and take breaks frequently to avoid overwhelming your pet. Try brushing one section of hair or trimming the nails on one paw at a time, then pause to reward your pet for staying calm. Keep grooming sessions short and positive, only doing as much as your pet will tolerate calmly. Break grooming tasks into multiple sessions.
- ☀ Have another adult work with you to distract your pet and keep them calm and still with treats.
- ☀ Play calming music. Classical music has been found to have a calming effect on anxious pets.
- ☀ Try a pheromone spray or diffuser, aromatherapy, or anti-anxiety food or treats.
- ☀ Try pet ear muffs or noise-canceling headphones.
- ☀ Talk to your veterinarian for advice and strategies for your pet's particular needs.
- ☀ Be alert for, and always heed, any signs of distress. When distress signals go unnoticed or ignored, pets can react aggressively out of fear.

WHAT TO DO IF YOUR PET SHOWS SIGNS OF DISTRESS DURING GROOMING

- ☀ Stop and take a break. Distract your pet by going for a long walk or giving them a favorite toy to play with. Some pets may prefer, instead, to calm down in a quiet, safe space.
- ☀ If your pet is still distressed after taking a break, work on desensitization training for a day or two before trying grooming again. Refer back to the steps on the previous page.
- ☀ Never punish your pet or forcefully groom them, as this will only reinforce negative associations with grooming and could lead to aggressive behavior.

SIGNS YOUR DOG IS DISTRESSED

- ☀ Your dog yelps, whimpers, or appears fearful, agitated, or stressed.
- ☀ Your dog shows signs of distress including yawning, lip licking, drooling, shaking, whining, excessive licking or chewing on fur, shedding copiously, pacing, backing away, or trying to hide.
- ☀ Your dog's ears are lowered, their tail is tucked between their back legs, or their hackles are raised.
- ☀ Your dog displays new aggressive behavior, such as snarling, growling, lunging, snapping, or biting and shaking.
- ☀ Your dog begins to eliminate in the house (and this was not a previous behavioral issue).

SIGNS YOUR CAT IS DISTRESSED

- ☀ Your cat shows signs of mild to moderate anxiety including, avoiding eye contact, shifting their body or head away from you, flicking their tail or holding their tail tightly against their body, partially dilated pupils, ears partially to the side, increased breathing rate, or crouching or leaning away.
- ☀ Your cat shows signs of severe anxiety including, trying to run away, fully dilated pupils, ears back, raised hair, or behaving aggressively towards people or other pets.

NEXT STEPS: Read carefully through the following sections to make your pet's grooming experience a positive one:

- ☀ **OPERATING INSTRUCTIONS** on the next page.
- ☀ **TIPS FOR USE** on page 22.

OPERATING INSTRUCTIONS

⚠ WARNING! This product is not for use with aggressive animals. Do not use this product if your pet is prone to aggressive behavior. Aggressive pets can cause severe injury to their owner or others. If you are not sure that this product is right for your pet, please talk to your veterinarian or a professional groomer. Stop using the product immediately if your pet begins behaving aggressively.

USING THE CONTROL PANEL

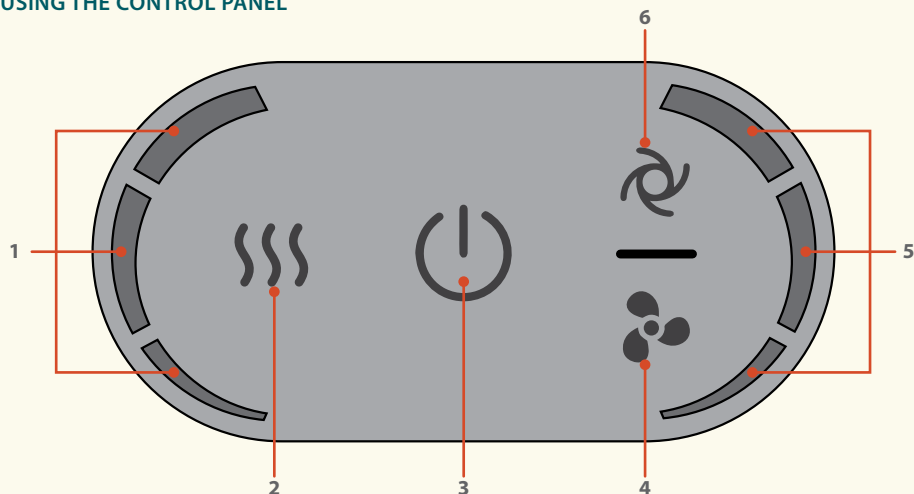


Figure 5

1. **Heat Level LEDs (Red):** The red LEDs light up to indicate the selected heat setting, low, medium, or high. One lit LED indicates low heat, two LEDs indicate medium heat, and three LEDs indicate high heat. The LEDs are off when the heat is off.
2. **Heat Button** : Press to toggle through the three heat levels, low, medium, and high, when using blow dryer mode. The heat is off by default. Please note, the heat function is not available when using vacuum mode.
3. **Power Button** : Press to turn the appliance on and off. The button LED lights up when the power is turned on.
4. **Blow Dryer Mode Button** : Press to turn on blow dryer mode and toggle through the three blower intensity levels, low, medium, and high. The default intensity is low.
5. **Suction/Blower Intensity LEDs (Blue):** The blue LEDs light up to indicate the current suction/blower intensity, low, medium, or high. One lit LED indicates low intensity, two LEDs indicate medium intensity, and three LEDs indicate high intensity. The LEDs are off when both the vacuum and dryer are off.
6. **Vacuum Mode Button** : Press to turn on vacuum mode and toggle through the three suction intensity levels, low, medium, and high. The default intensity is low.

USING THE GROOMING BRUSH

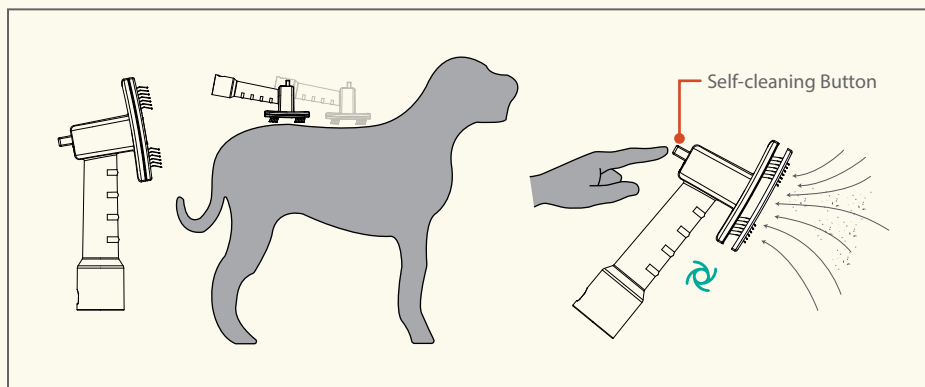


Figure 6

1. Connect the hose to the vacuum inlet and attach the grooming brush attachment to the hose.
2. Press the **Power**  button on the control panel to turn on the appliance.
3. Press the **Vacuum Mode**  button to turn on the suction. Low suction intensity is selected by default. Press the button a second time to choose medium intensity. Press a third time for high.
4. Brush your pet slowly and gently with short strokes from neck to tail. Then brush your pet's sides, belly, and legs.
 - a. Brush in the direction of the hair growth and keep the brush head flat against your pet's body.
 - b. Use caution to avoid irritating your pet's skin with the brush's wire pins.
5. When the brush starts to get full of hair, press the **Self-clean button** on the back of the grooming brush attachment to remove hair from the bristles and suck it into the vacuum hose. See Figure 6.
6. Turn off the appliance, unplug it, and allow it to cool before cleaning or storing.

NOTES

- ⚙ Always start by brushing dry fur with the grooming brush. If you encounter knots or mats that cannot be easily untangled with short, gentle strokes of the grooming brush, switch to the multiuse brush with the deshedding or dematting brush head. See the next section for details.
- ⚙ You can spray your pet's hair with a bit of detangling spray or leave-in conditioner, as these products can help make the brushing process less painful for your pet, prevent hair breakage, and make detangling easier.
- ⚙ If your pet tries to bite the brush, run away, or hide, you may be brushing too hard or the vacuum intensity may be set too high. Try using the lowest vacuum level and brushing more gently.
- ⚙ It's best to avoid using the grooming brush on your pet's face, paws, and other sensitive areas, as the wire bristles can be uncomfortable. Instead, use the multiuse brush with the deshedding brush head.
- ⚙ Regular brushing has many benefits for your pet, including removing loose hair, trapped dirt and debris, and dead skin cells; preventing mats and tangles; reducing shedding; and distributing the hair's natural oils for healthy skin and a shiny coat. Brushing gives you a chance to regularly inspect for unusual skin bumps, lumps, or irritation, as well as fleas, ticks, and other parasites. Brushing is also a great time to pamper and bond with your pet.

USING THE MULTIUSE BRUSH

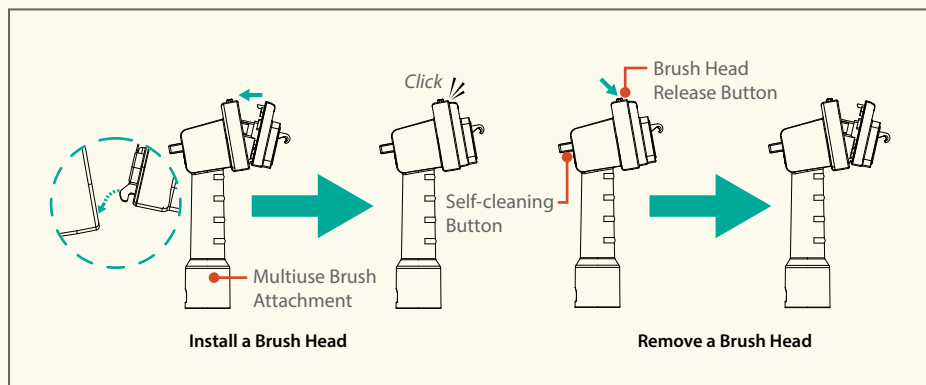


Figure 7

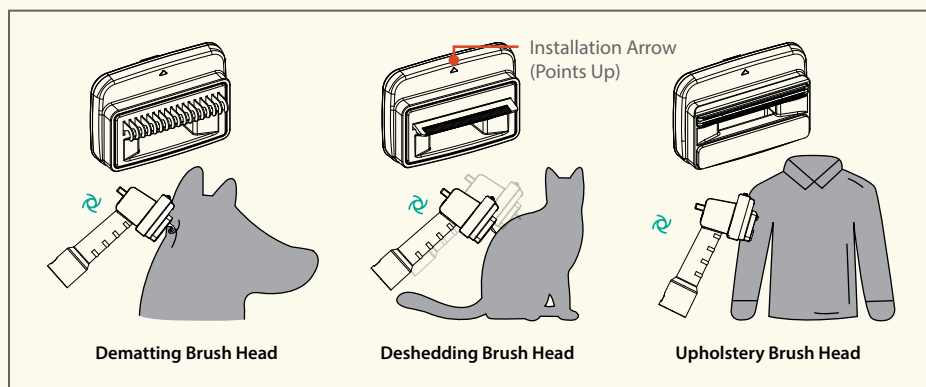


Figure 8

1. Spray knots and mats with a small amount of detangling spray to help relax the hair. Then use your fingers to loosen the hair and isolate the mat.
2. Connect the hose to the vacuum inlet and attach the multiuse brush attachment to the hose.
3. Attach the deshedding or dematting brush head. See *Figure 7*.
 - a. Insert the hooks on the bottom edge of the brush head and then press the top edge into place.
 - b. The small arrow on the brush head will point up when installed properly. See *Figure 8*.
4. Press the **Power**  button on the control panel to turn on the appliance.
5. Press the **Vacuum Mode**  button to turn on the suction. Low suction intensity is selected by default. Press the button a second time to choose medium intensity. Press a third time for high.
6. Use extra care and very short strokes when detangling with the multiuse brush attachment.
 - a. Use one hand to hold the base of the mat or knot to avoid pulling or tugging painfully on your pet's skin as you brush. Avoid direct contact with the skin or applying pressure to the brush.
 - b. Start by brushing the ends of the hair and working your way slowly toward the skin.

7. Press the **Self-clean button** on the back of the multiuse brush attachment to remove hair from the brush head so it can be sucked into the vacuum hose. See *Figure 7*.
8. Press the **Brush-head Release button** on the top edge of the brush to remove the brush head.
9. Turn off the appliance, unplug it, and allow it to cool before cleaning or storing.

NOTES

- ⚙️ The dematting brush head is best for removing mats and large tangles. The deshedding brush head is great for removing loose hair from the undercoat to reduce shedding; it's also perfect for smaller knots and tangles and brushing double coats. The upholstery brush head is designed to pick up pet hair off of upholstered furniture and clothing. See **CLEANING UP** on page 17.
- ⚙️ Always start with dry fur. Trying to detangle wet fur can cause hair breakage and worsen knots.
- ⚙️ Go slow and be patient! Take lots of breaks and reward your pet with plenty of treats and praise.
- ⚙️ Mats are most often located in the armpits, at the base of the tail, behind the ears, under the collar, on the belly, and in other areas where friction occurs.
- ⚙️ Regular brushing and haircuts are the best ways to avoid mats. Small knots and tangles can grow into large mats if left unattended. Matted hair can cause your pet significant discomfort and distress, and may also cause skin irritation and sores, infections, and other skin problems.
- ⚙️ Never shave or cut out mats as you can accidentally cut your pet's skin. If the mats are so large you think cutting them out may be necessary, it's time to seek the help of a professional groomer.

USING THE BLOW DRYER

⚠️ WARNINGS

- ⚙️ Avoid pointing the nozzle in any area for longer than a few seconds to avoid burning your pet's skin.
- ⚙️ Keep a careful eye on your pet to make sure they do not overheat. Depending on the size and breed of your pet, you may want to switch between low heat and no heat to avoid overheating. If your pet displays any of the following signs or symptoms: panting or drooling excessively, vomiting, rapid heart rate, diarrhea, or lethargy, they may be experiencing heat exhaustion; seek advice from your veterinarian immediately.
- ⚙️ Avoid blowing air directly into your pet's eyes, ears, nose, mouth, or near their genitals, as this may cause your pet discomfort. When drying near sensitive areas, use the lowest blower level and no heat. You may also consider removing the nozzle to further diffuse the strength of the airflow.

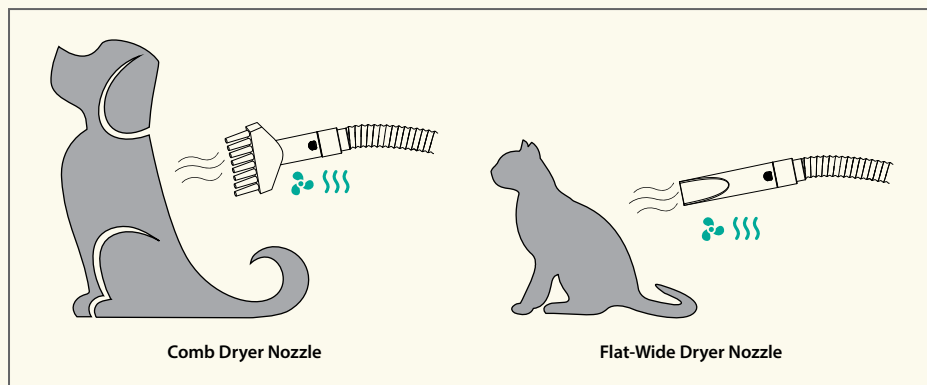


Figure 9

1. Connect the hose to the blow dryer outlet and attach the flat-wide or comb nozzle to the hose.
 - a. The wide-flat nozzle concentrates airflow to dry hair quicker.
 - b. The comb nozzle allows you to comb through hair while drying to help minimize tangles.
2. Press the **Power**  **button** on the control panel to turn on the appliance.
3. Press the **Blow Dryer Mode**  **button** to turn on the blower. Low blower intensity is selected by default. Press the button a second time to choose medium intensity. Press a third time for high.
4. Press the **Heat**  **button** to turn on the heat function. Low heat is selected by default. Press the button a second time to choose medium heat. Press a third time for high heat.
5. Hold the nozzle at least a couple of inches away from your pet's hair and slowly move the nozzle to dry their coat. See *Figure 9*.
 - a. Angle the dryer nozzle so that your pet's fur blows straight away from the end of the nozzle to blow water away from the body and avoid tangles.
 - b. Generally, it's best to dry your pet from top to bottom.
 - c. When using higher heat settings, make sure to hold the nozzle further away and avoid lingering in one spot for long periods to avoid burning your pet.
6. Turn off the appliance, unplug it, and allow it to cool before cleaning or storing.

NOTES

-  We recommend using low heat or no heat for puppies and pets with sensitive skin or hair that is prone to heat damage.
-  Always towel dry your pet before blow drying them, as the towel will absorb more than half of the water held in their coat and significantly reduce the drying time. Avoid rubbing your pet's hair with the towel as this can cause knots and tangles. Instead, drape a thick, clean towel around your pet and press or gently squeeze a section of hair at a time. Allow dogs to shake as this can further reduce the drying time.

USING THE ELECTRIC CLIPPER

WARNINGS

-  The clipper blades are very sharp; use caution when handling the clipper and blades to avoid injuring yourself, others, or your pet. Keep fingers, all body parts, and clothing away from the blades.
-  Use extra caution when trimming around your pet's eyes, ears, nose, mouth, paws, genitals, in areas with extra skin folds, and in bony areas such as joints to avoid cutting or scratching their skin.
-  Always use an appropriate clipper guard to avoid cutting or scratching your pet's skin.
-  Be sure to always keep the clipper blade flat against your pet's body. Holding the clipper at an angle may result in cutting or irritating your pet's skin.
-  Be sure to frequently stop and turn off the clipper to check the blade for heat. If the clipper blade begins to feel too warm, allow it to cool before resuming to avoid burning your pet's skin.
-  If you are trimming your pet on an elevated surface, make sure to properly secure them to the table to ensure they are not able to jump off and injure themselves. Never leave your pet unattended while on the grooming table.

1. Connect the hose to the vacuum inlet and attach the electric clipper attachment to the hose.
2. Select the desired clipper head. Slide the clipper head onto the installation post inside the attachment base. Then, install the desired clipper guard. See *Figures 10 and 11*.

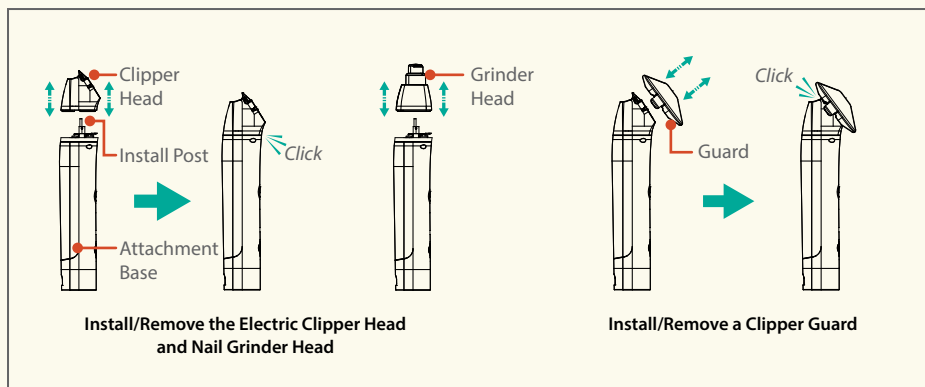


Figure 10

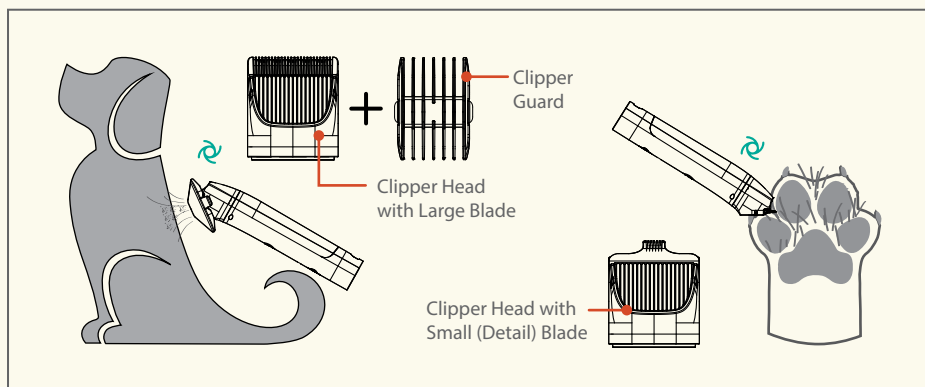


Figure 11

3. Press the **Power**  button on the control panel to turn on the appliance.
4. Press the **Vacuum Mode**  button to turn on the suction. Low suction intensity is selected by default. Press the button a second time to choose medium intensity. Press a third time for high.
5. Press the green **Power** button on the clipper to turn it on.
6. While keeping your pet as still as possible, use a slow, steady combing motion through their hair.
 - a. Trim in the direction of the hair growth. Make sure to pay close attention because the direction of hair growth can change in different areas of the body.
 - b. Do not apply a lot of pressure to the clipper to avoid accidentally trimming large chunks of hair or hurting your pet.
7. Once you have trimmed your pet's fur to the desired length, brush their coat to find any uneven spots and re-trim where needed.
8. Press the **Power** button on the clipper to turn it off. Turn off the appliance, unplug it, and allow it to cool before cleaning or storing.
9. When completely cool, clean the clipper with the included brush. See **CARE AND MAINTENANCE** on page 18.

NOTES

- ☀ Have styptic powder on hand in case you accidentally scratch or cut your pet's skin. Wipe away blood with a clean dry cloth and apply styptic powder, as directed on the product, to superficial cuts to stop the bleeding. Monitor the treated area to ensure the bleeding has stopped and to check for signs of infection such as redness, swelling, and irritation. Contact your veterinarian with any concerns.
- ☀ Ensure the clipper blade is clean and sharp before use.
- ☀ Only trim your pet's hair when it is clean, dry, and carefully brushed to remove any tangles and mats.
- ☀ Use the large clipper blade when trimming large areas of hair and use the small detail blade for trimming around your pet's paws, face, sanitary areas, and other sensitive areas.
- ☀ Always start with the longest guard, especially when you are first learning to use the electric clipper to avoid getting an uneven cut or inadvertently trimming the hair too short. The longest clipper guard provides the largest distance between the electric clipper and your pet's skin and results in the longest haircut. The shortest clipper guard will result in the shortest haircut.
- ☀ If you have never trimmed your pet's hair before, we recommend seeking guidance from your veterinarian or a professional groomer before attempting to do it yourself. Trimming techniques and frequency will depend on their breed and hair type. Special caution should be taken when grooming dogs with thick, double coats as trimming can disrupt their normal hair growth patterns. Check with your veterinarian or a professional groomer for advice.
- ☀ We do not recommend shaving your pet—both because using the clipper without a guard increases the risk of cutting or scratching your pet's skin and because shaving can put your pet at risk for a skin infection, sunburn, and even skin cancer. In addition, shaving your pet does not help them stay cool in the summer because your pet's fur helps them naturally regulate their body temperature.

USING THE NAIL GRINDER

⚠ WARNINGS

- ☀ Use caution when trimming your pet's nails with the nail grinder to avoid accidentally cutting into the quick which can cause bleeding and be quite painful for your pet.
- ☀ If you have never trimmed your pet's nails before, seek guidance from your veterinarian or a professional groomer before attempting to do it yourself.

1. Connect the hose to the vacuum inlet and attach the electric clipper attachment to the hose.
2. Pull firmly on the clipper head to remove it and replace it with the nail grinder head. The grinder head will click into place. Refer back to *Figure 10* on page 15.
3. Press the **Power**  button on the control panel to turn on the appliance.
4. Press the **Vacuum Mode**  button to turn on the suction. Low suction intensity is selected by default. Press the button a second time to choose medium intensity. Press a third time for high.
5. Press the green **Power**  button on the attachment to turn on the nail grinder.
6. Apply the grinder gently to one nail at a time. See *Figure 12*.
 - a. Go slowly to avoid trimming too much too quickly.
 - b. Keep a careful eye on the quick of the nail (the nerves and blood vessels inside the nail) to avoid hitting it, as this will hurt your pet.
7. Press the **Power button** on the attachment to turn off the grinder. Turn off the appliance, unplug it, and allow it to cool before cleaning or storing.

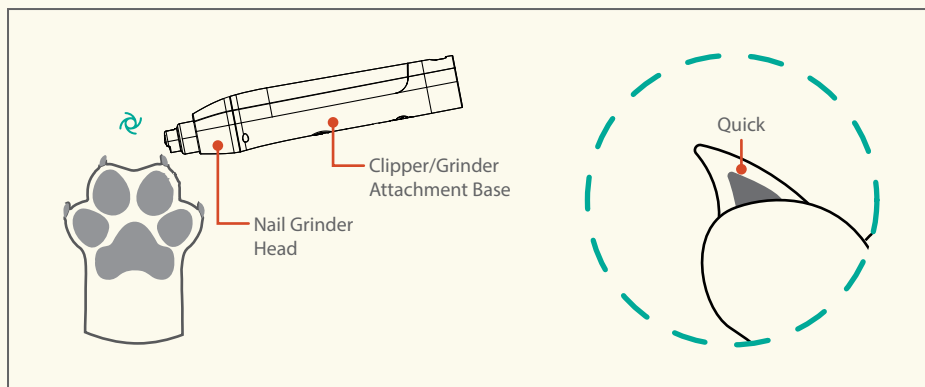


Figure 12

NOTES

- ⚙ If you accidentally trim to the quick, apply pressure to the bleeding nail with a tissue for at least 3 minutes to stop the bleeding. You can also apply styptic powder or a styptic pencil, as directed on the product, to the nail to stop the bleeding. Monitor the injured nail for bleeding or infection.
- ⚙ Darker nails make it more difficult to see the quick. We recommend seeking guidance from your veterinarian or a professional groomer before attempting to trim dark nails yourself.
- ⚙ The nail grinder has two sides: a large side for large pets and a small side for small pets.
- ⚙ Make sure your pet's paws and nails are clean and dry before trimming.

CLEANING UP

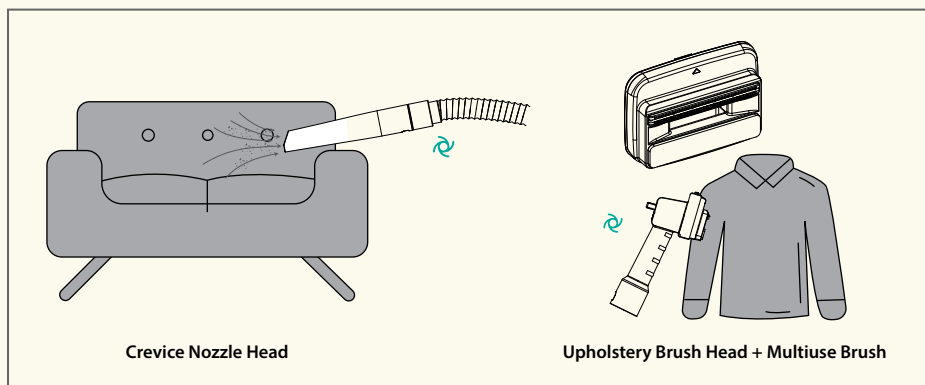


Figure 13

1. Connect the hose to the vacuum inlet and install an attachment. See *Figure 13*.
 - a. To remove pet hair from upholstered furniture or clothing, attach the multiuse brush to the end of the hose and install the upholstery brush head. See **USING THE MULTIUSE BRUSH** on page 12.

- b. To pick up pet hair, dust, allergens, and other debris, attach the crevice nozzle to the end of the hose.
2. Press the **Power**  button on the control panel to turn on the appliance.
3. Press the **Vacuum Mode**  button to turn on the suction. Low suction intensity is selected by default. Press the button a second time to choose medium intensity. Press a third time for high.
4. Turn off the appliance, unplug it, and allow it to cool before cleaning or storing.

CHARGING THE ELECTRIC CLIPPER

To charge the clipper:

1. Make sure the electric clipper attachment is turned off and disconnected from the appliance.
2. Open the USB-C port on the clipper attachment and plug in the USB-C charging cable.
3. Plug the charging cable into a 5V–1A USB adapter and plug the USB adapter into an electrical outlet. The indicator LED will be red to indicate the clipper attachment is charging.
4. When the clipper attachment is fully charged, the indicator LED will turn green. Disconnect the charging cable and close the charging port cover securely. Do not overcharge.

NOTES

- ⚙ The battery will take about 3.5 hours to charge. The average use time per charge is about 3 hours.
- ⚙ During use, the indicator LED will flash red for 30 seconds and then turn off to indicate that the battery is low and needs to be charged.
- ⚙ Never operate and charge the clipper at the same time.
- ⚙ Always close the charging port cover securely to keep out moisture and avoid damage to the battery.
- ⚙ The battery is not removable or replaceable.

CARE AND MAINTENANCE

⚠ WARNINGS

- ⚙ Do not allow water or other liquids to come into contact with the appliance. Do not soak or immerse the appliance in water or other liquids.
- ⚙ Always turn off and unplug the appliance before performing any care or maintenance tasks, such as emptying the dust bin, removing the filter, or cleaning the clipper to avoid electric shock.
- ⚙ Always ensure the dust cup and filters are completely dry before reinstallation to avoid electric shock or damage to the appliance.
- ⚙ Always reinstall the filters and dust bin before using the appliance again. Never use without the filters and dust bin properly installed as this can damage the motor.
- ⚙ Do not use harsh detergents or abrasive, corrosive, solvent, or chemical cleaners to clean any part of this appliance.

EMPTYING AND CLEANING THE DUST BIN

To empty the dust bin:

1. Power the appliance off, unplug the power cable, and remove the dust bin.
2. Lift the latch on the front of the dust bin to open the lid. See *Figure 14*.
3. Empty the dust bin in the trash, shaking carefully to loosen any fur or dirt clinging to the bin.
4. Reinstall the dust bin.

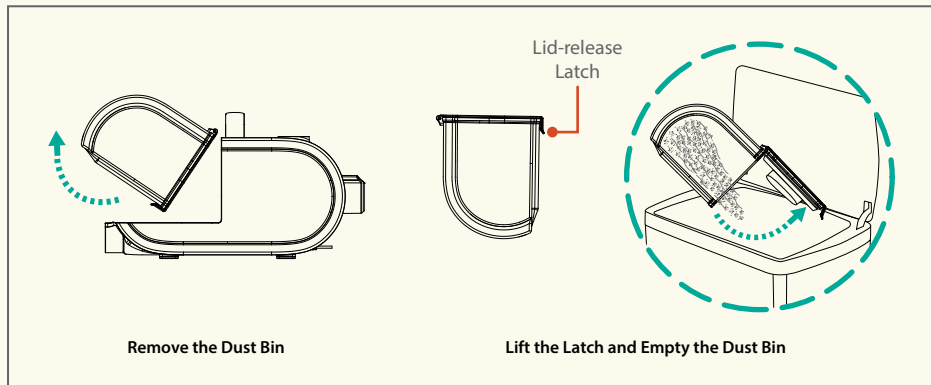


Figure 14

To clean the dust bin:

1. Power the appliance off, unplug the power cable, and remove the dust bin.
2. Wash the dust bin in warm, soapy water, then rinse it thoroughly.
3. Place the dust bin, with the lid open, in a well-ventilated location and allow to air dry for at least 24 hours.
4. Once the dust bin is completely dry, reinstall it.

NOTES

- ⚙ Empty the dust bin regularly. Do not overfill as this may affect performance or damage the product.
- ⚙ Always properly dispose of the dust bin contents in the trash.
- ⚙ We recommend cleaning the dust bin at least once per month. Always make sure the dust bin is completely dry before reinstalling.
- ⚙ Consider wearing a mask when emptying or cleaning the dust bin to reduce your exposure to pet dander, dust, allergens, and other potential irritants, particularly if you have allergies or respiratory sensitivities.

REMOVING AND CLEANING THE FILTERS

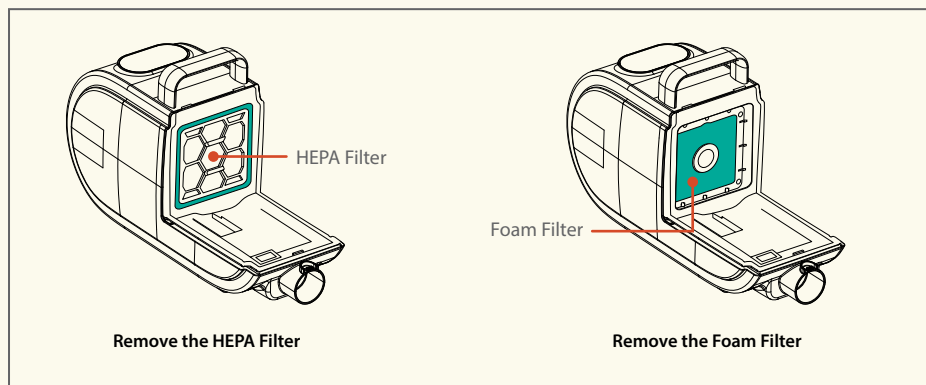


Figure 15

To remove and clean the filters:

1. Remove the dust bin following the instructions on the previous page.
2. Remove the HEPA filter by pulling gently from the center of the filter. You may need to gently wiggle it to loosen it. Remove the foam filter behind the HEPA filter. See Figure 15.
3. Shake out the foam filter over a trash bin. Use a vacuum cleaner to remove dust and debris from the HEPA filter.
4. Rinse each filter under cool running water for 5 minutes.
5. Shake out the HEPA filter and squeeze the foam filter to remove excess water.
6. Place the filters in a well-ventilated location and allow them to air dry for at least 24 hours.
7. Once the filters are completely dry, reinstall them.
 - a. Press the foam filter into place.
 - b. Insert the HEPA filter over the foam filter.
 - c. Make sure both filters are fully seated.

NOTES: To keep the filters functioning optimally, clean them at least once per month. More frequent cleaning may be necessary depending on how often the appliance is used.

CLEANING THE BRUSHES

Clean the brushes regularly to minimize dust, allergens, and pathogens, and to reduce cross-contamination when using the brushes with multiple pets.

1. Disconnect all brushes and brush heads.
2. Use a vacuum cleaner to remove any hair, dirt, or dust from the brushes and heads.
3. Rinse each brush and brush head under cool running water for 5 minutes to clean.
4. Lay the brushes and brush heads on a clean, dry towel with the teeth or pins facing down to drain water out and avoid mold growth. Allow the brushes to completely dry before using them again.

CLEANING THE CLIPPER AND LUBRICATING THE CLIPPER BLADES

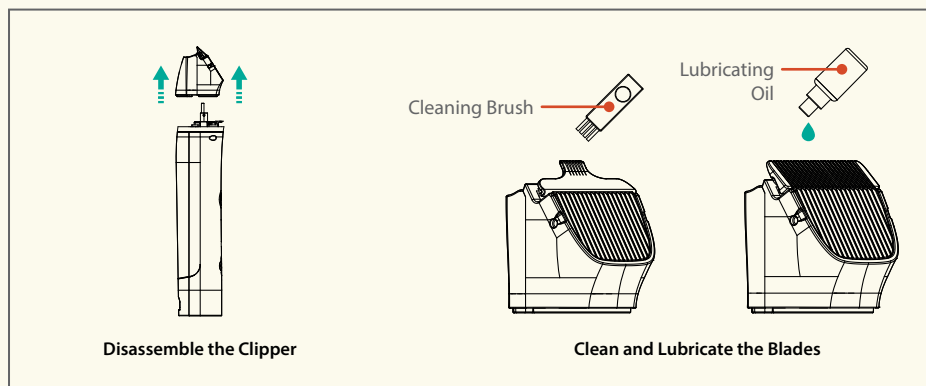


Figure 16

To clean the electric clipper and lubricate the clipper blades:

1. Turn off and unplug the appliance, then remove the clipper attachment.
2. Remove the clipper head from the attachment body. See Figure 16.
3. Use the included clipper cleaning brush to remove any hair, dirt, or debris from the clipper blades as well as the head and body of the attachment.
4. Reassemble the electric clipper.
5. Apply 1–2 drops of lubricant to the teeth of the clipper blade.
6. Turn on the clipper for 10–20 seconds to evenly distribute the oil.
7. Use a soft, clean cloth to remove any excess oil.

NOTES

- ⚙ We recommend cleaning hair, dust, and debris from the clipper and blades after each use.
- ⚙ We recommend lubricating the clipper blades after every 10 uses. Lubricating the blades helps keep them sharp, reduces friction, and ensures optimal performance.
- ⚙ Do not use other types of oil to lubricate the clipper blades; only use the included lubricating oil.



At Petcove, you can **shop happy**.
We offer innovative products that encourage healthier and more active lifestyles for pets and stand behind our products with a **lifetime warranty!**

+1-844-924-8445 | support@petcoveshop.com

TIPS FOR USE

- ⚙ Carefully read through all safety warnings before using and follow all usage instructions.
- ⚙ Do not use this product if your pet:
 - ⚙ Is prone to aggressive behavior.
 - ⚙ Is prone to biting when nervous, scared, or anxious.
 - ⚙ Has open or bleeding wounds. Do not use if your pet has flea bites, a rash, or raw, infected, bruised, swollen, inflamed, red, or irritated skin. If the skin becomes irritated, red, or scratched during grooming, discontinue use until your pet's skin has completely healed.
- ⚙ If your pet has a skin condition or sensitive skin, consult your veterinarian for guidance before beginning grooming or using this product.
- ⚙ Always groom your pet in a calm, safe, well-lit location with minimal distractions such as windows, pet or people traffic, and loud noises. You can try pheromone diffusers and/or playing calming music to help ease stress and anxiety.
- ⚙ Always groom your pet on a non-slip mat on a flat, sturdy surface to keep your pet from slipping or falling.
- ⚙ Properly and safely restrain your pet during grooming especially when using sharp tools such as the electric clipper or nail grinder, to keep them from running or jumping as this could result in injury.
 - ⚙ For advice on a safe, suitable restraint method for your pet, seek guidance from your veterinarian or a professional pet groomer.
 - ⚙ Introduce the restraint method or device gradually.
 - ⚙ Always use positive reinforcement and be on the lookout for signs of discomfort, pain, or distress, such as shaking or excessive panting.
 - ⚙ Never leave your pet unattended while restrained.
 - ⚙ Never use excessive force to restrain your pet and never use restraint as a punishment.
 - ⚙ Use a muzzle if necessary.
- ⚙ Always prioritize personal safety and the safety of your pet by recognizing when to stop and seek guidance from your veterinarian, a professional groomer, or a professional trainer. Examples of such cases include:
 - ⚙ If your pet begins to display any type of aggressive behavior, such as bared teeth, snapping, growling, lunging, or trying to nip or bite you (dogs); or hissing, growling, chattering, crouching, flattened ears, or trying to bite or scratch you (cats). Consult with your veterinarian.
 - ⚙ If your pet demonstrates severe, ongoing distress or anxiety that is not mitigated by desensitization training. Ongoing distress may be caused by an underlying medical condition, such as arthritis, therefore, it is important to make an appointment with your veterinarian to rule out this possibility. If a medical condition is ruled out, seek guidance from a professional groomer and/or trainer.
 - ⚙ If your pet's fur is extremely matted. We recommend taking your pet to a professional groomer, as you can unintentionally cause your pet a lot of pain trying to detangle very matted hair.
- ⚙ Start slowly, gradually introducing the grooming tools to your pet in a positive, non-threatening way. Introduce the tools one at a time to avoid overwhelming your pet.
- ⚙ Be alert for, and always heed, any signs of distress from your pet. When distress signals go unnoticed or ignored, pets can react aggressively out of fear.

- ⚙ Take a break and finish grooming later if your pet becomes anxious or distressed.
- ⚙ Use positive reinforcement to help your pet build positive associations with grooming. Reward your pet with treats, toys, and lots of praise for good behavior and remaining calm during grooming.
- ⚙ Start with short grooming sessions and gradually work your way up to longer sessions if your pet can tolerate it. Shorter, more frequent grooming sessions are better for many pets, especially those who are prone to anxiety and stress.
- ⚙ Always start with the lowest suction and blower intensity. Higher intensity levels are louder and can cause more anxiety for your pet.
- ⚙ Always use caution when grooming around your pet's eyes, ears, nose, mouth, paws, near their genitals, in areas with extra skin folds, and in bony areas such as joints to avoid causing your pet discomfort or injury.
- ⚙ Only groom one pet at a time.
- ⚙ Keep grooming tools clean and sanitized to avoid cross-contamination and transferring fleas, infections, bacteria, or pathogens between pets.
- ⚙ Have another adult work with you to distract your pet and keep them calm and still with treats.
- ⚙ Try taking your pet on a long walk or giving them extra playtime before grooming sessions to help burn off some excess energy if they tend to be a bit anxious about grooming.
- ⚙ Regular grooming is a great way to monitor your pet for any changes in the appearance of their skin, fur, eyes, ears, and other areas that could indicate potential health conditions or concerns. Always consult with your veterinarian for advice about changes in your pet's appearance and health.
- ⚙ Always thoroughly brush your pet to remove tangles, mats, and debris before bathing them.
- ⚙ Most dogs need to be bathed regularly, at least once every three months, to keep them healthy and keep odor to a minimum. Some dogs will need more frequent baths, depending on their breed, coat type, any medical or skin conditions, and how much time they spend outside. Cats do not need regular bathing because they typically self-groom daily, and baths can be bad for their skin. Consult your veterinarian for bathing recommendations for your particular pet species and breed.
- ⚙ Always use a pet shampoo suitable for your pet's species/breed, coat type, and any skin conditions they may have. Avoid products with fragrances.
- ⚙ Always brush, bathe, and dry your pet before trimming their hair.
- ⚙ Choose the correct brush for the job. The grooming brush is great for general brushing and detangling small knots and tangles. The deshedding brush is great for small tangles and removing loose fur from your pet's undercoat. The dematting brush is designed to detangle mats and larger knots and tangles.
- ⚙ We recommend reading up on grooming techniques and best practices for your particular pet species/breed.
- ⚙ Avoid picking up large clumps of hair at one time as this may clog the appliance. If it becomes clogged, turn off and unplug the product, remove the hose, and use a long, slender rod to remove the blockage.

TROUBLESHOOTING GUIDE

Quickly troubleshoot simple issues you might experience with your Petcove FurFluff using the table below. Please contact a customer support representative for additional assistance at **844-924-8445** or support@petcoveshop.com. Please do not attempt to repair the appliance.

ISSUE	POSSIBLE REASON	HOW TO RESOLVE
The appliance will not turn on.	The power cable is not plugged in.	Check the power cable to ensure the plug is fully inserted into the electrical outlet.
	The appliance is not turned on.	Press the Power button on the control panel to turn on the appliance.
	The electrical outlet is not functioning.	Plug another appliance into the electrical outlet to test it, try another electrical outlet, or check the circuit breaker.
The suction or blow dryer intensity is weak.	The dust bin is full.	Check the dust bin and empty it if full.
	The air intake or hose is blocked.	Turn off and unplug the appliance. Remove the hose and check the hose and intake valve for blockages.
	The filters are blocked or dirty.	Remove the dust bin and check for any blockages. Clean the filters.
The appliance suddenly shuts off.	The power cable has come unplugged.	Check the power cable and plug it into the electrical outlet.
	The dust bin is full.	Check the dust bin and empty it if full.
	The air intake or hose is blocked.	Turn off and unplug the appliance. Remove the hose and check the hose and intake valve for blockages.
	The appliance has overheating protection and will shut down automatically if it has been running for a long time to prevent damage to the motor. We do not recommend using the appliance for longer than 60 minutes at a time to avoid triggering overheating protection.	Unplug the product, disconnect the hose, and remove any blockages from the hose and intake valve. Remove and empty the dust bin. Check the filters and clean them if necessary. Allow the motor to cool down for at least 60 minutes before using the product again.

IMPORTANT SAFETY INSTRUCTIONS

Before using this product, read all safety warnings and operating instructions. Failure to do so may result in electric shock, fire, serious injury or death, and/or damage to the appliance or property. When using an electrical appliance, basic safety precautions should always be followed, including the following:

KEEP THIS MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE.

CONTRAINDICATIONS

- ⚙ This product is only intended for use with pets. Do not use on humans.
- ⚙ Do not use this product if your pet:
 - ⚙ Is prone to aggressive behavior.
 - ⚙ Is prone to biting when nervous, scared, or anxious.
 - ⚙ Has open or bleeding wounds. Do not use if your pet has flea bites, a rash, or raw, infected, bruised, swollen, inflamed, red, or irritated skin. If the skin becomes irritated, red, or scratched during grooming, discontinue use until your pet's skin has completely healed.
- ⚙ Consult with your veterinarian before using this product if your pet:
 - ⚙ Is under the care of a veterinarian for a chronic health condition.
 - ⚙ Is an elderly or senior pet.
 - ⚙ Has skin cancer, hemophilia, a bruising disorder, an immune-mediated disorder, Cushing's disease, or thrombocytopenia.
 - ⚙ Has recently had surgery or is recovering from injury.
 - ⚙ Has severe allergies or a skin condition, such as eczema, or sensitive skin.
 - ⚙ Has a pacemaker or other electronic medical device.
 - ⚙ Has a heart condition, such as heart disease, arrhythmia, or heart defects.

DISCLAIMER

- ⚙ Use this product and its accessories only as instructed in this manual. Using this product for unintended purposes can lead to hazardous situations which may result in personal injury, pet injury, and/or damage to the product.
- ⚙ The use of this product is entirely at the user's discretion. Please read all instructions and safety information carefully before using this product. We assume no responsibility and expressly disclaim any and all liability for personal injury, pet injury, death, or property damage or loss sustained through improper use, failure to follow the instructions and warnings in this manual, improper setup, neglect, or inadequate or improper maintenance of this product.
- ⚙ It is the responsibility of the owner to ensure that all users of this product are adequately informed of all warnings and cautions.



WARNING:
CHOKING HAZARD - Small Parts.
Not for children under 3 years.

⚠ WARNING: This product can expose you to chemicals which are known to the State of California to cause cancer, birth defects, or other reproductive harm. Go to www.P65Warnings.ca.gov for more information.

WARNING

To reduce the risk of serious injury or death or damage to the product or property:

-  To ensure proper setup, use, and maintenance of the product, it is important to carefully read and adhere to the instructions provided in this user manual.
-  Do not allow children to use this product.
-  This product is not intended for use by people with diminished mental, sensory, or physical capabilities, or lack of experience and knowledge unless closely supervised by an adult responsible for their safety.
-  Supervise children and pets to ensure they do not play with or around the product and its accessories. This product is not a toy.
-  Store the product in a secure location out of reach of children to prevent unauthorized use.
-  Close attention is necessary when using this product and its accessories near children or pets.
-  Plastic bags and films can be dangerous. To avoid the danger of suffocation, keep all plastic bags and product packaging from babies and children.
-  If you are not sure that this product is right for your pet, please talk to your veterinarian or a professional groomer for advice.
-  This product is intended for pets only; do not use on humans.
-  It is very important to closely supervise your pet's interaction with the product. Be vigilant for any signs of distress, anxiety, pain, or other issues related to its use. Immediate action should be taken if any problems arise.
-  Properly and safely restrain your pet during grooming especially when using sharp tools such as the electric clipper or nail grinder, to avoid personal or pet injury.
-  Keep a careful eye on your pet to make sure they do not overheat during blow drying. If your pet displays any of the following signs or symptoms: panting or drooling excessively, vomiting, rapid heart rate, diarrhea, or lethargy, they may be experiencing heat exhaustion; seek advice from your veterinarian immediately.
-  Avoid blowing air directly into your pet's eyes, ears, nose, mouth, or near their genitals as this may cause your pet discomfort.
-  Gradually introduce the appliance to your pet, to avoid pet or personal injury.
-  The clipper blades are sharp. Use caution when handling the clipper and blades to avoid personal injury or injury to your pet.
-  Do not apply the clipper with excessive force to avoid scratching or cutting your pet's skin. Always use an appropriate clipper guard.
-  Only use the product on a flat, stable surface. Using the product on an unstable surface can cause it to fall which could result in injury. Do not carry the product around while operating it.
-  Never place the product where it may tip or fall, such as on furniture or on or near stairs, inclines, or other sloped surfaces.
-  Do not use or store where the power cable could create a tripping hazard. Always bundle the power cable after use.
-  Keep your work area clean and well-lit to reduce the risk of accidents.
-  Pay attention and use common sense while operating this product. Do not use this product while smoking, under the influence of alcohol, drugs, or medication, or when you are tired. Inattention can result in serious personal injury or injury to your pet.
-  Do not wear loose clothing or accessories such as jewelry that can get caught in openings or moving parts. Keep hair, clothing, accessories, fingers, and all body parts away from all openings and moving parts to avoid injury.
-  Consider wearing appropriate personal protective equipment, such as eye and hearing protection and non-slip shoes to reduce the risk of personal injury.

- ⚙ Consider using a dust mask to reduce your exposure to dust, allergens, and other potential irritants, particularly if you have allergies or respiratory sensitivities. Emptying the dust bin and cleaning the product can generate dust and allergens.
- ⚙ Always practice good hygiene. Wash your hands thoroughly after handling the dust bin, filters, and dirty accessories.
- ⚙ Always empty the dust bin into an appropriate trash receptacle.

⚠ ELECTRICAL WARNINGS

To reduce the risk of burns, fire, electric shock, serious injury or death, or damage to the product or property:

- ⚙ Only connect the integrated power cable to a properly grounded outlet with the specified voltage.
- ⚙ Do not use this product if the power cord or plug is damaged. A damaged power cord or plug may only be replaced by the manufacturer, its service agent, or a similarly qualified professional to avoid electrical or fire hazards.
- ⚙ This product may only be serviced by a qualified repair person using original replacement parts from the manufacturer to avoid electrical hazards or fire.
- ⚙ Do not use this product with scented filters or other products with fragrances as chemicals in the fragrances may cause a fire.
- ⚙ Do not operate or store the appliance in high temperatures, near open flames, flammable substances or liquids, combustible gases or chemicals (such as mothballs, paint thinner, oil-based paints, and flammable dust), or in direct sunlight. Do not operate or store in the presence of aerosol (spray) products or corrosive gases, or where concentrated oxygen is administered.
- ⚙ Never operate the appliance on soft furnishings such as a bed or couch as this can block ventilation openings which can result in overheating and fire or electrical hazards.
- ⚙ Do not use or store this appliance outdoors, in high-moisture environments such as bathrooms, or in any place where the product may become wet. This product is for indoor use only. If this product is left outdoors or the electrical components become wet, unplug the product and do not use it.
- ⚙ Never operate the appliance when placed in standing or running water to avoid electric shock. Do not use on wet surfaces. Do not expose the appliance to water or other liquids. Do not soak or immerse the appliance, clipper, or power cable and plug in water or other liquids. If the appliance becomes wet, unplug it, and do not use it.
- ⚙ Do not use this product to pick up hot ashes, matches, cigarette smoke, high-temperature items, and items that are on fire or smoking.
- ⚙ Do not pick up flammable or combustible liquids such as lighter fluid, gasoline, kerosene, or propane.
- ⚙ Do not pick up toxic chemicals such as chlorine bleach, ammonia, or drain cleaner.
- ⚙ Do not pick up sharp or hard objects such as nails, screws, coins, rocks, or glass.
- ⚙ Do not pick up liquids.
- ⚙ Do not attempt to modify, repair, disassemble or tamper with the appliance. A damaged or modified product could result in electric shock, fire, explosion, and injury. If repairs are needed, contact customer support.
- ⚙ Do not drag, drop, throw, or set the product down forcefully to avoid damaging the electrical components and creating hazardous conditions.
- ⚙ Always ensure there is plenty of clear space around the product during operation to allow for proper ventilation. Do not block or insert objects into any opening. Do not use if an opening is blocked or if the airflow is reduced as this may result in overheating and/or a fire or electrical hazard. Regularly clean dust, lint, hair, and anything that may obstruct airflow from openings and air intakes.
- ⚙ Do not use this appliance with any speed-control device.
- ⚙ Do not touch the product or the power cable plug with wet hands.
- ⚙ Use only manufacturer-recommended attachments and accessories with this product.

- ⚠ Do not use during thunderstorms. Unplug the appliance in the event of a power outage or thunderstorm.
- ⚠ Do not use with an extension cord or an adapter plug.
- ⚠ Do not allow pets to chew on the power cable or charging cable to avoid the risk of electric shock. Always keep the cables out of reach of children and pets.
- ⚠ Do not modify, tamper with, or damage the power cable or the plug. Never bend, stretch, tie, pull, or twist the power cable. Keep the power cable away from hot surfaces or objects, sharp edges or corners, and moving parts. Never drag or carry the product via the power cable, use the cable as a handle, or close the cable in a door. Never unplug by pulling on the cable; always pull from the plug itself. Never use a damaged or modified power cable to power the device.
- ⚠ Keep sharp objects away from the product, power cable, and charging cable.
- ⚠ Regularly inspect the product and all accessories for damage, cracks, misalignment, electrical issues, loose components, blocked openings or vents, moving parts that have become stuck, or any other conditions that may affect safe operation. Stop using this product immediately if it shows signs of damage or wear, if it begins malfunctioning, or if it is dropped, left outdoors, or exposed to or submerged in water or other liquids.
- ⚠ Regularly inspect the power cable for signs of damage, wear, or fraying. Do not use if damaged or worn.
- ⚠ Only carry the appliance by its handle. Do not carry it via the power cable or hose.
- ⚠ Always power off the product before unplugging the power cable.
- ⚠ Turn off and unplug the appliance when not in use and before removing the dust bin or cleaning, moving, or performing maintenance on the product to avoid electric shock or other serious injury. Never leave the appliance unattended when it is turned on or plugged in.
- ⚠ Turn off the appliance when changing out attachments and accessories.
- ⚠ Do not use this product without the dust bin and filters properly installed. Using the product without the filters and dust bin in place may result in hazardous conditions or damage to the product.
- ⚠ Only a responsible adult may move, clean, or perform maintenance on the product.
- ⚠ Do not use continuously for more than 60 minutes to avoid overheating the motor.
- ⚠ This product is equipped with overheating protection; it will shut down automatically if the motor begins to overheat or the air intake valve becomes blocked. If the product shuts down automatically, unplug the product, remove the hose and remove any blockages from the intake valve, and remove and empty the dust bin. Check the filters and clean them if necessary. Allow the motor to cool down for at least 60 minutes before using the product again.
- ⚠ Empty and clean the dust bin regularly. Do not allow the dust bin to overfill as this may affect performance or damage the product.
- ⚠ Clean the filters regularly. Using the product when the filter or dust bin is dirty may affect performance or damage the product.
- ⚠ Please note, this product may emit a non-hazardous odor upon first use. The odor should dissipate after a short time. However, if the burnt odor persists, stop using the product immediately and contact customer support.

⚠ BATTERY WARNING

To reduce the risk of burns, fire, electric shock, serious injury or death, or damage to the product or property:

- ⚠ Only use the provided USB-C charging cable at the specified voltage to charge the rechargeable lithium-ion battery of the clipper attachment. Using a charging cable other than the one provided may result in a fire or explosion.
- ⚠ Do not leave the clipper attachment unattended while charging. Do not leave it charging for an extended period full charge is reached. Overcharging can result in a fire or explosion, shorten the battery's lifespan, or reduce battery performance.

- ⚠ Do not charge the clipper attachment near heat sources or flammable or combustible items.
- ⚠ The rechargeable battery is not removable or replaceable. Do not attempt to disassemble, modify, or tamper with the battery. Disassembling the battery can result in exposure to hazardous materials, fire, or other safety risks.
- ⚠ Never operate or charge the clipper attachment if the battery has been damaged, opened, tampered with, or modified.
- ⚠ If storing long term, partially charge the battery to avoid a reduction in battery life or performance.

STORAGE AND MAINTENANCE

⚠ WARNING: Do not attempt to disassemble, modify, or repair the product. This product contains no user-serviceable parts.

- ⚠ Store the product and accessories in a cool, dry, indoor location out of reach of children and pets. Do not store in direct sunlight.
- ⚠ Unplug and neatly bundle the power cable before storing.
- ⚠ Always clean and thoroughly dry the dust bin and filters before storing the product long-term.
- ⚠ Do not store objects on top of the product.

NOTICE

- ⚠ Excessive force or weight applied to the product or accessories can crush or damage them. Do not sit, stand, or place heavy objects on the product or accessories.
- ⚠ Long-term UV exposure can cause the product to fade or degrade.
- ⚠ This product is intended for in-home use only. Do not use in commercial, industrial, or rental settings.
- ⚠ Dispose of the product and all accessories according to state and federal regulations.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



PRODUCT SPECIFICATIONS

UNIT SPECS

Dimensions: 16.5"W × 5.9"D × 9.4"H
Net Weight: 7.7 lbs.
Dust Bin Capacity: 0.57 Gal / 2.6 L
Power: 1100 W
Voltage: 120V / 60 Hz
Clipper / Nail Grinder Speed:
Low: 4000 RPM (± 5%) High: 6500 RPM (± 5%)
Decibel Rating by Intensity Level:
Low: 65 dB Med: 70 dB High: 78 dB
Suction by Intensity Level:
Low: 2 kpa Med: 6 kpa High: 10 kpa
Air Flow by Intensity Level:
Low: 10 ft/s Med: 18 ft/s High: 26.3 ft/s
Heat Range by Setting:
Low: 105 °F Med: 122 °F High: 140 °F
Power Cord Length: 8.2 ft
Hose Length: 4.9 ft
Materials:
Main Appliance Body: ABS + PP
Hose: PU
Attachments & Clipper Guards: ABS
Brush Teeth: Stainless Steel & Ceramic

Clipper Battery Specs:
Type: Lithium
Capacity: 2200 mAh
Charging Time: ~3.5 hrs
Use Time: ~3 hrs
Charging Port Input: 5V-1A
USB-C Cable: 24AWG 1.2M
Certifications: UL, FCC IC, CA65
MADE IN CHINA

FEATURED PETCOVE PRODUCTS

PAWGUARD WIRELESS PET FENCE & DOG TRAINING COLLAR

The Petcove PawGuard Wireless Pet Fence & Dog Training Collar is a multi-function system perfect for medium and large dog breeds. Setup is a breeze with the easy-to-use wireless transmitter. No need to dig trenches or replace your yard. Wireless fence mode provides a circular boundary area of up to 500 ft, allowing your pet to safely enjoy time outside. Quickly change from wireless fence mode to remote training mode to train your dog. Target unwanted behavior such as barking, chasing cars, chewing, jumping, digging, and more.

Play freely and safely with your pets! All of our products are designed with your pets in mind. We use premium silicone caps to protect your dog's skin while wearing the collar. Our portable base and collar are great for at home, travel, or any outdoor activity. Plus the IPX7 waterproof receiver allows for play in any conditions. Take your dog for a walk in the rain, a romp on the beach, or a swim in the pool!



SWIFTPAWS PRO DOG AGILITY COURSE

The Petcove SwiftPaws Pro Dog Agility Course is ideal for dogs at any skill level, making it suitable for beginners and dogs with advanced abilities. Using the SwiftPaws Pro course fosters teamwork, trust, and communication between you and your dog. Not only does agility training keep your dog physically fit, but it also provides valuable mental stimulation. With its five exciting obstacles, the agility course ensures your dog remains interested and focused throughout training sessions. Moreover, this type of training can be beneficial for high-energy dogs by promoting a sense of calm focus and aiding dogs with anxiety. It also helps older dogs stay active and engaged while providing dogs with behavioral issues a fulfilling task to concentrate on.



The *happy* store for pets!

