

140\*210mm

# Laekerrt

## INSTRUCTION MANUAL

MODEL - CMEP02

- Espresso Coffee Maker -



Please read this manual thoroughly  
before use and save it for future reference.

✉ [support@laekerrt.com](mailto:support@laekerrt.com)


# CONTENTS

Important Safeguards .....	1
Know Your Coffee Maker .....	2
First Use Preparation or Not in Use for a Long Period .....	3
Espresso Coffee Making .....	3
Steam Milk Foam Function .....	4
Hot Water Function .....	5
How to Make the Perfect Latte .....	5
Memorized Coffee Making Function .....	7
Descaling Reminder Function .....	7
Cooling Function .....	9
Cleaning and Maintenance .....	9
Troubleshooting .....	10
Warranty .....	13
Disclaimer .....	13

# IMPORTANT SAFEGUARDS

1. Before using, make sure that the voltage of wall outlet corresponds to coffee maker rating plate. Use original accessories only.
2. This coffee maker can be used by physically/mentally disabled people or people who are lack of experience and knowledge about the coffee maker if they are under close supervision and instruction by persons who take responsibility for their safety and when they are aware of possible risks and dangers.
3. Do not let children use, touch, clean or play with the coffee maker.
4. This coffee maker is for household coffee making only and can be stopped by pressing the ON/OFF button anytime during its operation. Unplug the coffee maker when not in use.
5. The coffee maker must be placed on a flat surface. Do not move the coffee maker or turn off the power while it is working. Do not move the coffee maker when there is still water in the water tank.
6. Before using the coffee maker for the first time, operate it twice with clean water to remove the odor.
7. Do not damage the cord or put the power cord and the plug into water or any other liquids; do not wash the coffee maker or power cord in water or other liquids.
8. Do not use the coffee maker in high temperature, high magnetic field and damp environment; do not use it when the plug is damaged or when the coffee maker is out of order.
9. For effective operation, it is recommended to descale the coffee maker every 2-3 months.


# KNOW YOUR COFFEE MAKER

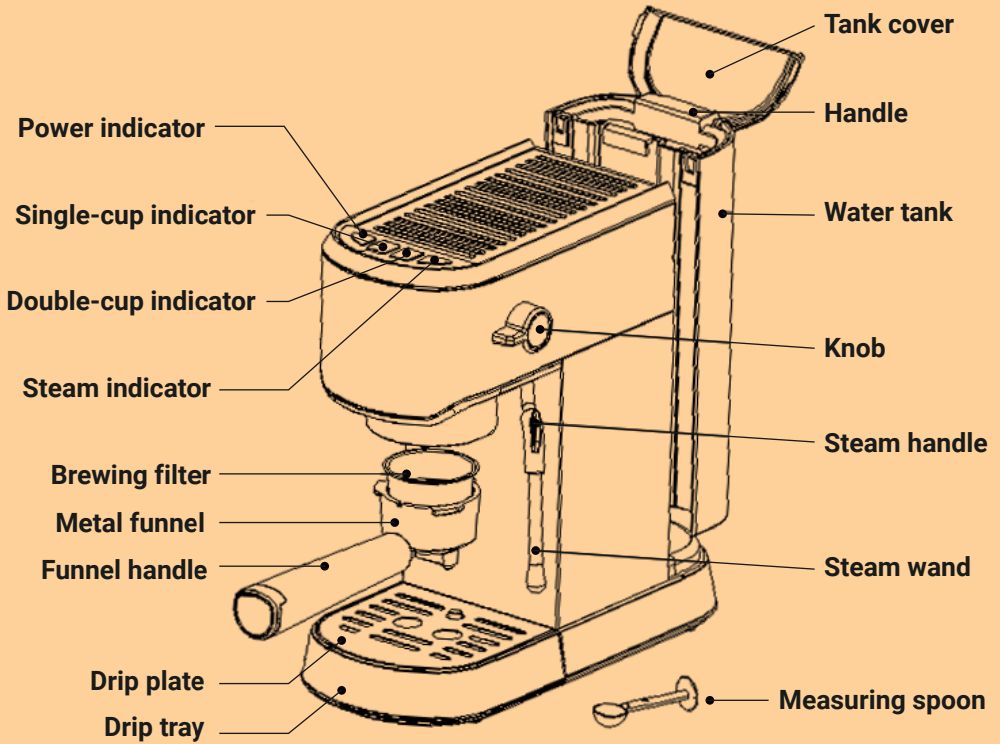







 


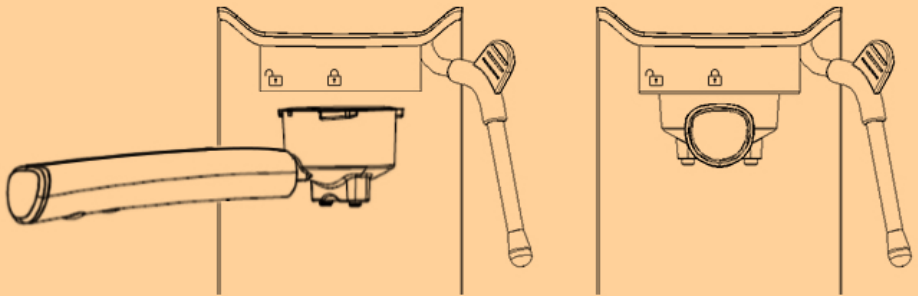

## First Use Preparation or Not in Use for a Long Period

---

Before you use it for the very first time, clean the coffee maker twice based on the guidelines below.

1. Pour water into the water tank and do not exceed the "Max" mark in the tank.
2. Put the filter into the funnel, tighten and align it with the "  " mark (see below pictures).




3. Plug in the power, press the "  " button, the coffee maker beeps. "  " and "  " button lights flashing together indicates the coffee maker starts to warm up (Make sure that the steam knob points to "  ". If it points to "  ", the four lights will flash together and the machine will not work.).
4. Turn the steam knob to "  " for the steam nozzle to discharge hot water. Then turn the steam knob back to "  ".
5. When the indicator lights of "  " and "  " are always on, press the button of "  " to wash the coffee filter or coffee cup with hot water.

## Espresso Coffee Making


---

1. Insert filter to the funnel, load ground coffee powder into the filter and compress it with the rear of the coffee spoon; meanwhile, clean the coffee powder at the edge of the funnel.

**Note:** When inserting the filter, please first align the small groove and then slightly rotate the filter to prevent it from falling. When removing the filter, please turn the filter back to the small groove position.

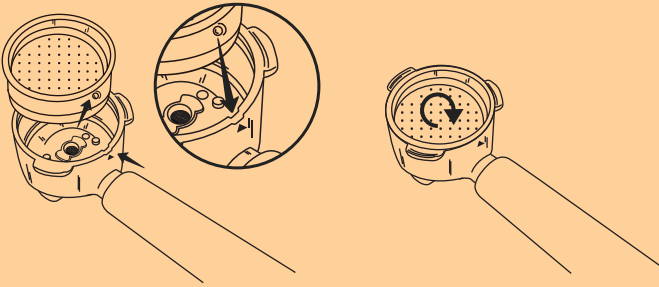

2. Insert the funnel and lock it tightly as shown by the indication sign, then place a cup under the funnel.

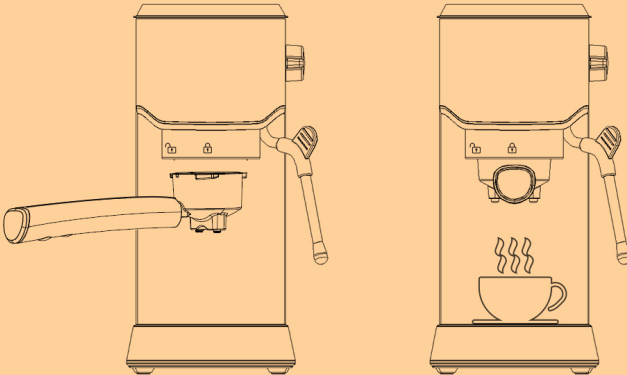


3. When the "☕" and "☕☕" lights are on, press the "☕" button or "☕☕" button to discharge corresponding amount of coffee.  
4. Wait for the coffee to drip into the cup, it's done!

## Steam Milk Foam Function

---

1. Press ☞ button
2. Insert the steam nozzle.
3. Spin the steam knob to ☞
4. When done, twist the steam knob to ☞ and press ☞

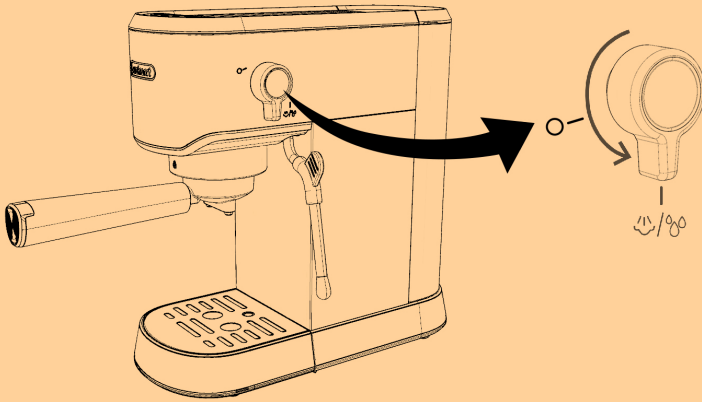


## Hot Water Function

Press the " ⏻ " button, turn the "steam knob" to " 1 ", and the steam pipe will start to discharge hot water; Turn the "steam knob" to " 0 " to stop the hot water.


**Note:** it is normal for the machine to make relatively large vibration sound during the process of discharging hot water.

## How to Make the Perfect Latte


### 1.Prepare Milk Jug 2.Before Texturing Milk

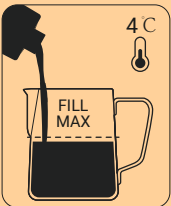



Fill Jug with cold milk just below the bottom of the spout.

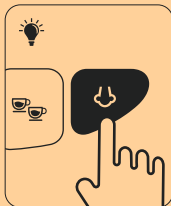

Press the ⏻ button until the ⏻ button stops flashing.

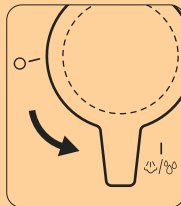


Spin the steam knob to 1 and hold it for 3 secs to drain the remaining water in the pipe.

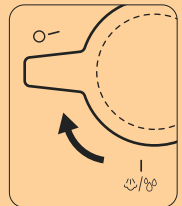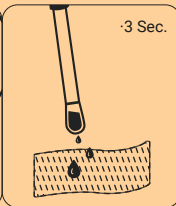

Spin the steam knob to 0 .


### 3.Position Steam Wand

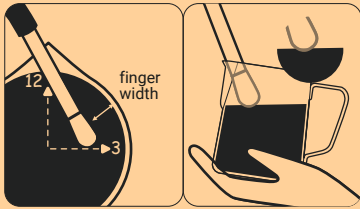

Insert Steam Wand Arm at 12 o'clock. Tip at 3 o'clock. Keep Finger Width from edge and the steam vent is just a little below the surface of the milk.

### 4.Start Texturing Milk

 

Spin the steam knob to  to start texturing milk. Texturing makes a smooth hissing noise. Milk is moving in a whirlpool action.

### 5.Milk Texturing




As milk level rises, lower Jug to keep Tip just below surface.




When desired microfoam achieved, immerse Steam Wand half way.



Milk ready when Milk Jug base is too hot to touch for 3 sec.

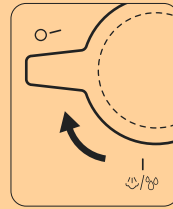




Spin the steam knob to .





Remove Jug from Steam Wand.
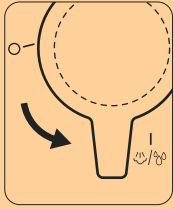
### 6.Purge Clean Steam Wand



Spin the steam knob to  on for 3 secs and then turns the steam knob to .

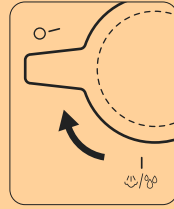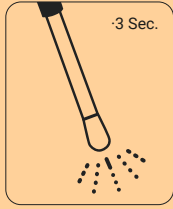

Remove the stainless steel foaming nozzle. Wipe the milk dirt at the steam port with a cloth.

#### **IMPORTANT AND BASIC:**

Clean the foam nozzle immediately after making steamed milk foam.

## Memorized Coffee Making Function

---

1. When all the indicator lights are on, press and hold the "☕" button for 3 seconds to enter the flow setting function, the light for single-cup coffee is always on, press it again and the funnel starts to pour coffee. When the desired amount is reached, release the "☕" button, you will hear a sound from the coffee maker. That means the time has been memorized.

**Note: The single-cup flow rate setting limit is at least 30ml and at most 70ml.**

2. "☕☕" two-cup button memorized coffee making function setting can be operated the same as above. The minimum flow setting limit of the double cup is 80ml and the maximum is 120ml.

3. Hold and press together "⏻" "☕" "☕☕" for 3 seconds. All the button will keep light fixed, the machine will back to ready mode. The machine is restored to the default setting.

## Descaling Reminder Function

---

1. After 500 cups of coffee, the coffee maker will warn for descaling.

2. When the coffee maker is turned on, the control panel lights (all 4 buttons) will flash 5 times and the coffee maker will beep for 5 times. This warning reminder shall happen each time the coffee maker is turned on until the reminder is cancelled.

3. Fill the water tank with water and descaler to the MAX level (The scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use "household descaler").


4. Press the "⏻" button to turn on the coffee machine.

Press "☕☕" button to allow water to flow into the drip tray. Then turn off the appliance and leave the descaling solution in the appliance for 5 minutes.

5. After five minutes, press the " ⏻ " button and repeat the Step 4 for 3 times.

6. Fill the water tank with water(No need to put in descaler). Press the " ⏻ " button and repeat the Step 4 for 3 times.


7. To cancel the descaling reminder after cleaning, please press " ☕ " " ☕☕ " and " ⏴ " at the same time for 3 seconds to cancel the flashing light.

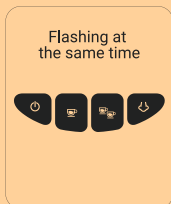


1. All 4 buttons Flash 5 times and the coffee maker beeps for 5 times.





2. Fill the water tank with water and descaler to the MAX level.

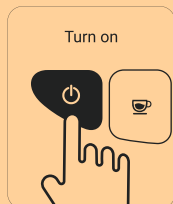

3. Press the " ⏻ " button to start to heat the water.

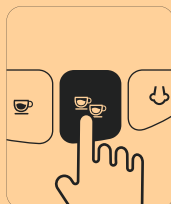

4. Press the " ☕☕ " button and hot water flows into the drip tray.

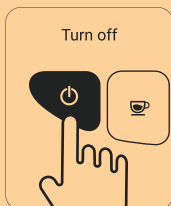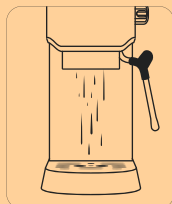


5. Press the " ⏻ " button to shut down and leave the descaling solution in the water pipe for 5 minutes.



6. After five minutes, press the " ⏻ " button to start the machine and repeat the Step 3 and the Step 4 for 3 times.



7. Fill the water tank with water (No need to put in descaler).

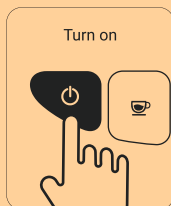


8. Press the " ⏻ " button and repeat the Step 4 for 3 times.



9. Press the " ⏻ " button. Press " ☕ " " ☕☕ " and " ⏴ " button at the same time for 3 seconds to cancel the flashing light.

## Cooling Function


When the coffee maker is operating in a high temperature, please make sure that the steam knob is turned to " ☉ " . And when the indicator lights for " ☕ " and " ☕☕ " buttons flash quickly, which means that the coffee maker need to be cooled. At this time, rotate the "steam knob" to " ☉☉ " , and the steam pipe starts to continuously discharge water and cool down. Once the " ☕ " and " ☕☕ " indicator lights stop flashing quickly, turn the steam knob to " ☉ " and the machine will stop cooling down. You can start making coffee when the power indicator is on.

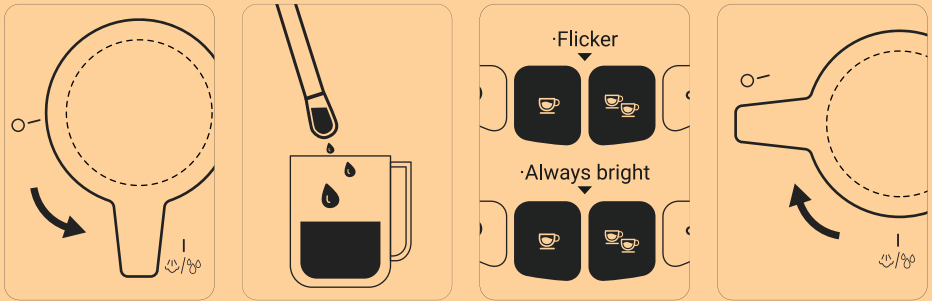

## Cleaning and Maintenance

1. Unplug the power cord and make sure the coffee maker completely cools down before cleaning it.
2. Wipe the exterior parts of the coffee maker with a damp cloth or a clean sponge.
3. Please clean the gadgets when they are taken off from the coffee maker.
4. Clean the water tank once a week with mixture of soap and cleanser.
5. Do not use alcohol or solvent cleaner, do not clean the coffee maker while it is in the water.
6. Do not use the steam function to clean the coffee maker.

7. Do not scrub the coffee maker with a metal brush.
8. Unscrew the coffee funnel and clean the coffee grounds in the filter.
9. Clean the frothing nozzle each time after using it:
  - A. Make sure there is water in the water tank. The water should not exceed the maximum level of the water tank.
  - B. Put a cup (with water) underneath the frothing nozzle and immerse the frothing nozzle in the cup.
  - C. Press "☺" and turn the steam knob to "☺/☺" for 3-5 seconds.
  - D. Remove the cup.
  - E. Wipe it and let it dry.

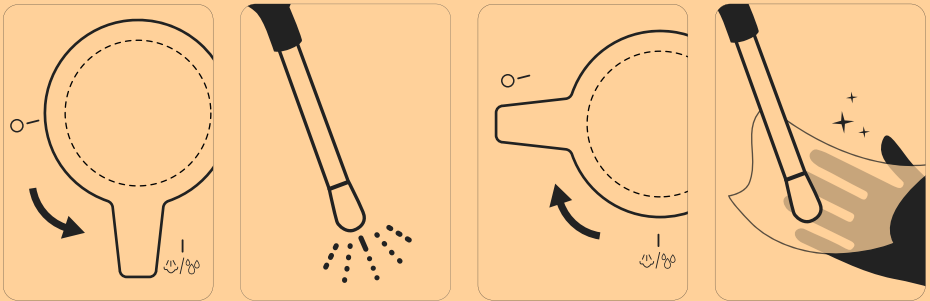







## Troubleshooting

Problem	Reason	Method
No water/steam	<ol style="list-style-type: none"> <li>1. There is no water in the water tank.</li> <li>2. The coffee maker is not preheated.</li> <li>3. Steam pipe has clot.</li> <li>4. Steam button and/or steam knob are not on or the preheating is not completed</li> </ol>	<ol style="list-style-type: none"> <li>1. Fill the tank with water and press the ON/OFF button and the "☺" and "☺☺" button.</li> <li>2. The coffee maker needs to be preheated before the coffee can be produced. That is, the coffee maker will turn to normal light from the flickering state.</li> <li>3. Use a small wire to poke around the steam hole.</li> <li>4. Turn on the steam button and/or steam knob and wait for the preheating to complete before steam comes out.</li> </ol>

No grease	<ol style="list-style-type: none"> <li>1. The coffee grounds are too thick or the grounds are not pressed.</li> <li>2. Coffee beans are not fresh enough.</li> </ol>	<ol style="list-style-type: none"> <li>1. Change to a finer ground coffee and use the back of the coffee scoop to flatten it horizontally.</li> <li>2. Use fresh coffee beans/ground.</li> </ol>
The milk does not foam well	<ol style="list-style-type: none"> <li>1. Whether it is whole milk.</li> <li>2. The steam is discharged too early.</li> </ol>	<ol style="list-style-type: none"> <li>1. Use whole milk.</li> <li>2. Steam nozzle can only be started after the indicator light for steam button turns from flashing to constant light.</li> <li>3. Please see "How to Make the Perfect Latte" section.</li> </ol>
No coffee, coffee light flash	The temperature is too high after steaming.	Please see "Cooling Function" section.
Water scale	The coffee maker has been used for a fairly long time.	<p>Purified water is recommended. If the water quality in your area is poor, please perform a descaling operation every 2 months.</p> <p>Please see "Descaling Reminder Function" section.</p>
Coffee not hot enough	<ol style="list-style-type: none"> <li>1. The coffee ground is too fine and too much, resulting in too little water output.</li> <li>2. Ambient temperature or cup temperature is too low.</li> </ol>	<ol style="list-style-type: none"> <li>1. Adjust the grinding degree of freshly coffee ground.</li> <li>2. Flush the filter and coffee cup with hot water.</li> </ol>

## Flash and Sound Explanation

Problem	Reason	Method
 <p>Flash altogether, steam knob points to    </p>	<p>The steam knob points to the wrong place and the coffee maker will not operate.</p>	<p>Rotate the steam knob to  .</p>
 <p>Flash after use and the coffee maker becomes hot.</p>	<p>The coffee maker is hot.</p>	<p>Please see “Cooling Function” section.</p>
 <p>Flash 5 times and the coffee maker beeps for 5 times.</p>	<p>The coffee maker needs to be descaled.</p>	<p>Please see “Descaling Reminder Function ” section.</p>

# Warranty

---

Every CMEP02 espresso machine comes with a 1-year limited warranty from the date of purchase. Please scan the QR code on our website to view the specific warranty policy. For more information, visit our website ([www.laekerrt.com](http://www.laekerrt.com)) or contact us directly.



# Disclaimer

---

WE ARE NOT RESPONSIBLE FOR DAMAGES CAUSED BY THE FOLLOWINGS:

1. Misunderstanding and misuse of the instruction manual.
2. Instances other than coffee-making.
3. Modifying the coffee maker by consumers instead of technicians from authorized retailers or Laekerrt.
4. Usage of non-original gadgets.



# Laekerrt

✉ [support@laekerrt.com](mailto:support@laekerrt.com)

🌐 [www.laekerrt.com](http://www.laekerrt.com)

📞 1-855-856-8742

📘 Laekerrt