



# Scout's Learning Lights Remote

Find learning fun on every channel!



## Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

## FUN NEXT STEPS ON YOUR CHILD'S LEARNING JOURNEY!



**Sing & Play Farm**  
6-36 months



**My Pal Scout™**  
6-36 months



**AlphaPup™**  
12+ months

Products are sold separately, and may not be available in all countries.  
Actual products may vary.



Share your special learning moments!  
Like us at [facebook.com/leapfrog](https://facebook.com/leapfrog)

## Register your product online!

You can also sign up to receive email updates with special offers, educational insights and the latest in learning from LeapFrog.

**leapfrog.com**

## CORE LEARNING SKILLS

### PRETEND PLAY

Play pretend by pressing buttons on Scout's Learning Lights Remote, and hear fun audio and see lights that emulate a real television remote. Pretend play helps develop children's imagination and allows them to act out situations they observe in the adult world.

### NUMBERS AND COUNTING

Press number buttons 1-10 to hear counting audio and to play a counting game for exposure to early mathematics. Light-up shapes accompany counting audio to strengthen children's developing sense of numbers and quantities.

### SHAPES

Press the Shapes button to hear audio about shapes, and play a game about finding shapes. The Shapes song reinforces vocabulary, while light-up shapes help children associate the names of the shapes with how they look.

## TROUBLESHOOTING

Symptom	Try This
<b>Toy does not turn on or does not respond</b>	<ul style="list-style-type: none"> <li>Make sure the Off/Low/High switch is not in the Off position</li> <li>Make sure batteries are correctly installed</li> <li>Make sure battery cover is securely attached</li> <li>Remove batteries and put them back in</li> <li>Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth</li> <li>Install new batteries</li> </ul>
<b>Toy makes improper responses</b>	<ul style="list-style-type: none"> <li>Follow the above instructions to clean battery contacts</li> <li>Install new batteries</li> </ul>

## INSTRUCTIONS FOR PLAY



### GETTING STARTED

To turn on Scout's Learning Lights Remote, slide the volume switch to the desired volume setting. To turn it off, slide the switch to OFF.

**Note:** Scout's Learning Lights Remote will turn off automatically after a period of inactivity. You can wake it up again by pressing any button.

### HOW TO PLAY

**D-Pad Button:** Listen to tunes, count and play a shapes game with Scout.

**Channel Buttons:** Learn how Scout finds fun in every kind of weather, and look for shapes in Scout's garden.

**Number Buttons:** Press any number to count light-up shapes with Scout.

## INSTRUCTIONS FOR CARE FOR DRY, INDOOR-LOCATION USE ONLY

Keep food and beverages away from product. Do not spill liquid of any kind on this product as it may render it inoperative. Clean with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry before re-use. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

**CAUTION:** Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

**ATTENTION :** Vérifiez régulièrement que ce jouet est en bon état et qu'il ne présente pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.

**CAUTION:** To be used under the direct supervision of an adult.

**ATTENTION :** Doit être utilisé sous la supervision directe d'un adulte.

### BATTERY INFORMATION

Requires 3 AAA (called LRO3 in some countries) alkaline batteries. Batteries included are for in-store demonstration and should be replaced for home use.

### BATTERY REMOVAL AND INSTALLATION INSTRUCTIONS

- Open the battery door with a screwdriver, coin or other household tool.
- If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
- Install new batteries inside the battery compartment as shown in the polarity diagram (+/-).
- Replace battery door securely.

### BATTERY SAFETY

Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

**DO NOT** incinerate used batteries.

**DO NOT** dispose of batteries in fire, as batteries may explode or leak.

**DO NOT** mix old and new batteries or types of batteries (i.e. alkaline/standard).

**DO NOT** recharge non-rechargeable batteries.

**DO NOT** short-circuit the supply terminals.

Rechargeable batteries are to be removed from the toy before being charged.

Rechargeable batteries are only to be charged under adult supervision

### SÉCURITÉ RELATIVE AUX PILES

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent. Les piles incluses dans les produits lors de l'achat sont uniquement destinées aux démonstrations en magasin et doivent être remplacées pour améliorer les performances du produit.

**NE PAS** incinérer les piles usagées.

**NE PAS** jeter les piles au feu car elles peuvent exploser ou fuir.

**NE PAS** mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

**NE PAS** recharger des piles non rechargeables.

**NE PAS** court-circuiter les terminaux d'alimentation.

les accumulateurs doivent être chargés uniquement sous le contrôle d'un adulte.

les accumulateurs doivent être enlevés du jouet avant d'être chargés.

### FCC NOTICE:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**Note:** Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

### CANADA

CAN ICES-3(B)/NMB-3(B)

### ENVIRONMENTAL PHENOMENA

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

### IMPACT DE L'ENVIRONNEMENT

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

### CONSUMER SUPPORT

#### U.S. Consumer Service Contact:

Visit our U.S. Consumer Support website at [www.leapfrog.com/support](http://www.leapfrog.com/support) 24 hours a day.

#### Canada Consumer Service Contact:

Visit our Canada Consumer Support website at [www.leapfrog.ca/support](http://www.leapfrog.ca/support) 24 hours a day.

#### U.K. Consumer Service Contact:

Visit our U.K. Consumer Support website at [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support) 24 hours a day.

#### Australia Service Contact:

Visit our Australia Consumer Support website at [www.leapfrog.com.au/support](http://www.leapfrog.com.au/support) 24 hours a day.

**LIMITED WARRANTY:** Subject to a limited three (3) month warranty. Visit our website at [www.leapfrog.com](http://www.leapfrog.com) for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

**GARANTIE LIMITÉE :** Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse [www.leapfrog.com](http://www.leapfrog.com) pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

**For information on how this product might be recycled, visit [www.leapfrog.com/recycle](http://www.leapfrog.com/recycle) or call (800) 701-5327.**

TM & © 2015 LeapFrog Enterprises, Inc. All rights reserved.

**leapfrog.com**

Part number: 605-12197-D

For ages 6-36 months./Convient aux enfants de 6 à 36 mois.