

Electric Spin Scrubber Instruction Manual



This appliance is only for household use, not for commercial or industrial use. Scrubber gloves are recommended while using it.

BRUSH HEAD ASSEMBLY

Assemble Scrubber Brush Head



Disassemble Scrubber Brush Head



- | | | |
|---------------|---|---|
| Dome Brush |  | Perfect for cleaning curved sinks, bathtubs and corners. |
| Flat Brush |  | Ideal for cleaning large flat surface, like walls, floors and tiles. |
| Corner Brush |  | Great for cleaning grout, corners and tight places. |
| Scouring Pads |  | Ideal for tough and stubborn stains, like kitchen utensils, stove and grills. |

Tips On Charging

- Please shut down the electric spin scrubber before charging.
- The indicator light is red during charging, it turns green when fully charged.
- Please don't charge for more than 12 hours.
- Please don't use an extension cord.
- Please don't charge it when explosives or other flammable gases or liquids are present.

2

HOW TO USE

1. Install the brush head according to your needs.
2. Apply cleaning spray or cleanser to the surface of dirt, or apply it to the brush head.
3. Put the brush head on dirty area, click the button to turn on the scrubber.
4. Hold the electric brush and move it slowly, gently press it for deeper cleaning.

Warm Tips

- For safe transportation and delivery, the product is not fully charged. It is recommended to fully charge before use. It takes around 2.5-4 hours to complete charging.
- please be careful not to get splashing stains into your eyes or on your skin during use.
- Please don't apply excessive external force during use to avoid blockage. If it stopped, just turn it on again to use it.
- Please close the silicone cover after charging to avoid water.
- Please store the scrubber in dry and cool place.

3