


尺寸:L110xW70mm

纸质:128g铜版纸

User Manual

CASSETTE PLAYER SUPPORT MICRO SD CARD

CR-381

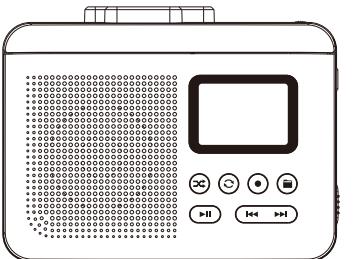

Thank you for purchasing our Cassette player which is an electronic acoustic technology well-designed by our company. For having a good product experience and better extending product life, using correctly is very important. Please read this manual carefully before using this product.

CONTENTS


- FUNCTION DESCRIPTION
- POWER ON&TWO MODE PLAY
- LCD DESCRIPTION
- TAPE PLAYBACK
- SD CARD OPERATION
- POWER USE CHARGING
- QUESTIONS & ANSWERS
- PRECAUTIONS FOR USE
- SPECIFICATIONS

Kindly Note:

Please do not open the battery cover for your personal safety, and the built-in battery is not replaceable


1

FUNCTION DESCRIPTION

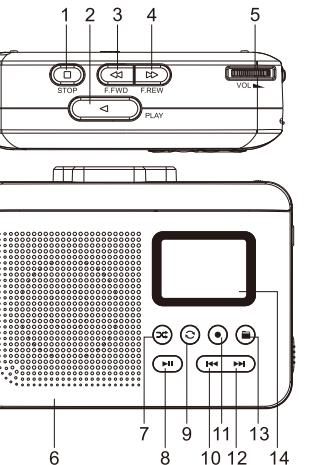

1. Stop(only tape mode)
2. Play(only tape mode)
3. Fast Forward (only tape mode)
4. Fast Rewind (only tape mode)
5. Volume Control
6. Cassette Door
7. Random Play (only SD mode)
8. Play/Pause(only SD mode)
9. Single/All loop (only SD mode)
10. Previous/Fast Rewind (only SD mode)
11. SD/Sound Record
12. Next/Fast Forward (only SD mode)
13. Music/Recording File
14. LCD Screen

2

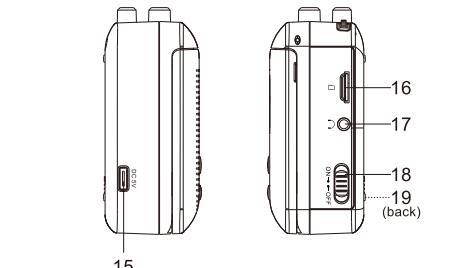


15. DC Input(5V 0.6~1A)
16. Micro SD(TF) Card Socket
17. Earphone Jack
18. Power ON/OFF
19. Battery Compartment(BACK)

POWER ON&TWO MODE PLAY

- ◆ Power ON/OFF: Please push the button to "ON/OFF" to power ON/OFF.
- ◆ SD Card Mode: After power on, the system will automatically enter SD card play. When insert SD Card, the word "SD" will show in the LCD screen.
- ◆ Tape Mode: Press any tape function button to enter tape play, also the word "TAPE" will show in the LCD screen.

3

LCD DESCRIPTION

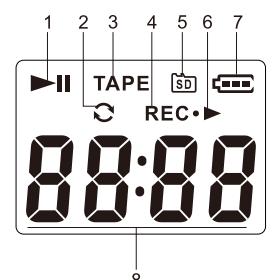

1. Play/Pause display (SD card mode)
2. Always light up: Single song loop play (SD card mode)
3. Always light up: All song loop play (SD card mode)
4. Flashing: Random play (SD card mode)
5. Tape playback display
6. Recording display (SD card mode)
7. SD card playback display
8. Recording file playback display
9. Battery power display
10. Play songs and time display

4

SPECIFICATIONS

Power Supply	5V 0.6~1A
Rated Power	3W
Li-on Battery	1000mAh 3.7V
Speaker	8Ω 0.5W
Tape Rotation Speed	4.76cm/s ±3%
Support Format	MP3/WMA
Size	121x91.6x39.5mm/4.76x3.61x1.56in
Weight	224g /0.49lb



Made in china

TAPE PLAYBACK

1. Push the power switch(18) to "ON" to turn on the power.
2. Open the tape cassette door, correctly put the tape in and close the cassette door, and press the tape play "▶" button to start playback.
3. Press the tape fast forward "◀◀" button or tape rewind "▶▶" button to quickly forward or rewind.
4. If you need to stop playing, press the tape stop "□" button.

※ Note

1. When playing, when the tape plays to an end, the tape play button will automatically pop up.
2. When the tape is fast-forward or rewind to the end, please press the tape stop button to prevent damage to the machine.

Earphone jack

In order not to bother others' relaxation, you can use earphone to listen to the tape. Insert the earphone plug into the earphone jack "↑", and the built-in speaker of the player will automatically disconnect. After that, please push the volume control button "vol" to adjust the appropriate volume.

5

SD CARD OPERATION

SD Card Playback

1. Insert the SD card into the SD card socket "□".
2. Push the power switch (18) to "ON" to turn on the power, the cassette player will play automatically.
3. Short press the previous song "◀◀" button/next song "▶▶" button to select the previous or next track and play, long press this button to fast back songs or fast forward songs to play.
4. Press the pause button "■■" to pause the current playback, then press this button to resume playback. To exit SD playback, please remove the SD card.

SD Card Recording

A. Record tape sound to SD card

1. Push the power switch to "ON".
2. Put the tape into the cassette door, and close the cassette door.
3. Insert the SD card into the SD card socket. (Make sure have some MP3 file in the SD Card)
4. Press the tape Play button "▶" to play the tape.
5. Press and hold the record button "●" to enter the transcription mode, then "REC" flashes, and the tape content will be transcribed to the SD card.

6. Press the pause button "■■" to stop/continue recording. Long Press the record button "●" again to finish the transcription and auto-save the recorded audio.
7. If you need to listen to the recording just transcribed, please press the tape stop button "□", and then short press the file button "●" to enter the recorded file playback, and press the previous song button "◀◀" to find the audio just recorded.

6

QUESTION&ANSWERS

Q: Why does it no sound?

1. The batteries don't have enough power, it needs to be replaced or plugged into the power supply.
2. The power adapter is not plugged in properly.

Q: Why is the sound distorted?

1. The tape roll is messed up.
2. The tape may be moldy.
3. The tape is stuck up.
4. The magnetic head pressure wheel is dirty and needs to be cleaned.
5. The battey doesn't have enough power and need to charge.

Q: Why is there no sound in MP3 playback?

1. The battery is low and needs to be charged.
2. The volume is not turned up, in the lowest state.

Q: Why can not be transcribed?

1. SD card does not have MP3 files inside, need to copy MP3 files into the SD card.
2. Wrong operation, press the wrong button, according to the instructions step by step.
3. SD card is not inserted.
4. SD card capacity is not enough, need to replace.
5. The battery power is insufficient, needs to be replaced.

DC power use

This cassette player uses USB cable to charge and connects directly to DC 5V 0.6~1A external power supply for use.

7

POWER USE CHARGING

-When the battery is low, the display battery symbol shows "■■■". Please charge in time, plug in the external 5V power supply will automatically start charging, the display battery power symbol "■■■" is flashing state, after fully charged battery power symbol "■■■" is always on.

DC power use

This cassette player uses USB cable to charge and connects directly to DC 5V 0.6~1A external power supply for use.

8

PRECAUTIONS FOR USE

- Please do not open the battery cover for your personal safety, and the built-in battery is not replaceable.
- Do not expose the unit to rain or wet places, place and use the unit away from bathtubs, washing boxes, swimming pools, etc.
- Do not place any hazardous sources on the unit (e.g. objects containing liquids, lit candles).
- The machine should not be subjected to water splashes or drips, and objects filled with liquids such as vases should not be placed on the device.
- Do not use the machine near heat sources, including heat sinks, heaters or other appliances that generate heat.
- Be careful not to let solids or liquids enter the machine through the vent.
- Do not use dilapidated tapes, keep the head and the pressure wheel clean to avoid stranded tapes or small and unclear sound.
- Do not disassemble, repair, modify or drop the machine.
- Do not touch benzene, thinner and other chemicals.
- Do not get close to strong magnetic fields, electric fields
- Do not listen at high volumes to avoid adverse effects on hearing.
- The product shall not be exposed to overheating environment. (such as direct sunlight, open flame or similar environment)

9

10