 


TECH SPECS

MODEL	VT12024
BATTERY	Internal lithium-ion battery
CHARGE TIME	Around 6 – 10 hours
WORKING TIME	24+hours depending on the function used
FAN SPEED	2.2 - 4.0 m/s
SOUND	30 - 36db
MATERIAL	ABS+PP+PC
WEIGHT	1.06 kg
DIMENSIONS	200mm x200mm x 89mm (folded) 200mm200mm x 930mm (extended)
CHARGING	5v3a Type C
REMOTE BATTERY	CR2032




FAN USER MANUAL

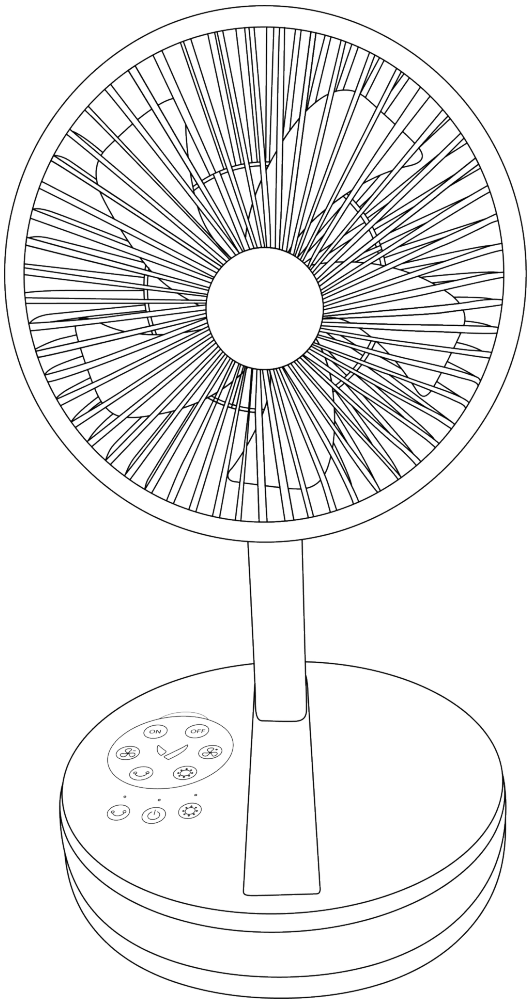


Visit: www.ventyfan.com
For support, email us at ventyfan@gmail.com
Designed in California | Made in China
2024, All Rights Reserved

WHAT'S INCLUDED

 
- Venty Fan
- Type C Charging Cable
- Fan User Manual

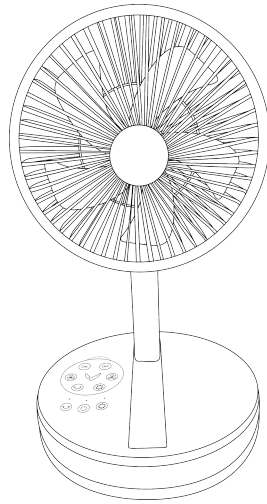

FAN DESIGN

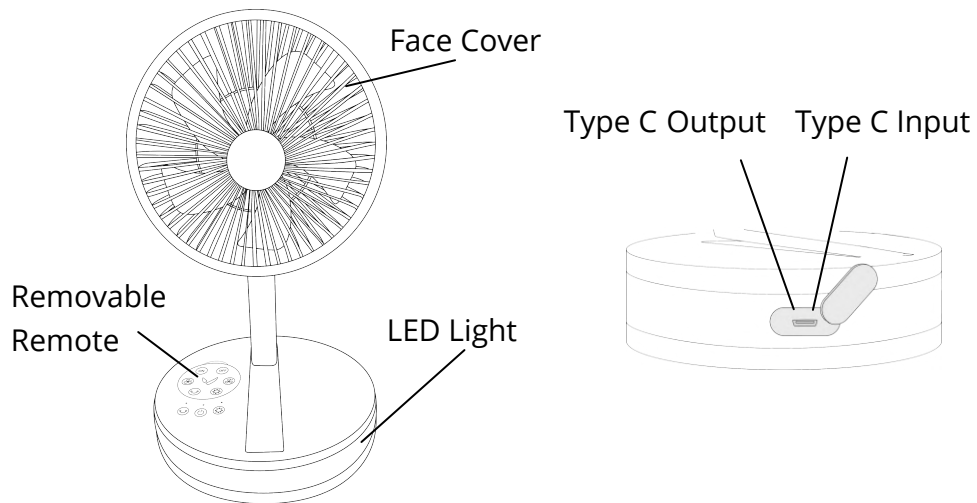 

CHARGING SPECIFICATIONS

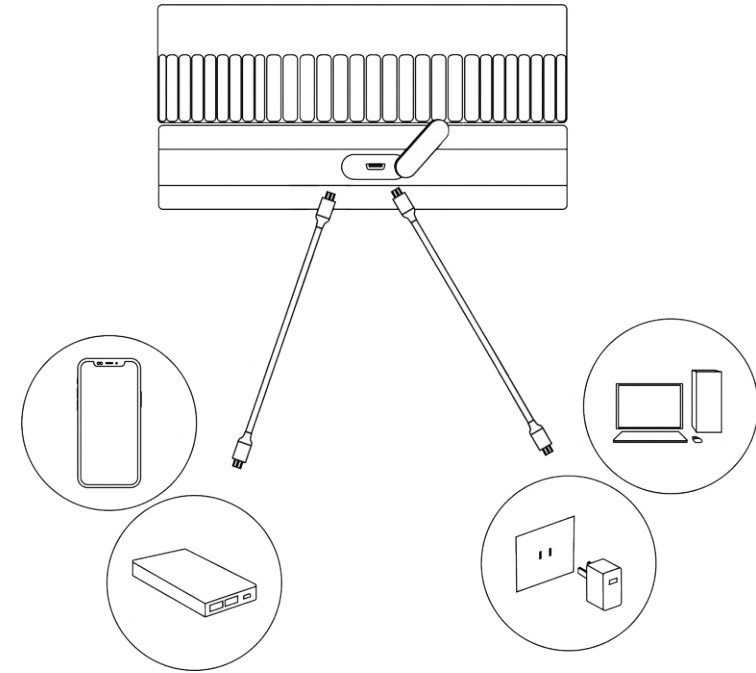 

CHARGING THE FAN:

- The lithium ion battery can be used 24+ hours depending on which features are used
- The battery can take up to 8 hours to fully charge and the charging light will switch from red to green when fully charged
- Make sure you are charging directly into a head that is plugged into the wall. Do not use a multi port or extension cord.

 
USING THE FAN TO CHARGE YOUR DEVICE:

The included cord can charge your mobile device or tablet using the TYPE-C output.

CHECKING BATTERY LEVEL

To check how much battery is left, long press the power button on the console. 1, 2 or 3 lights will light up to represent how much juice is left in the battery

FOLDING FUNCTION

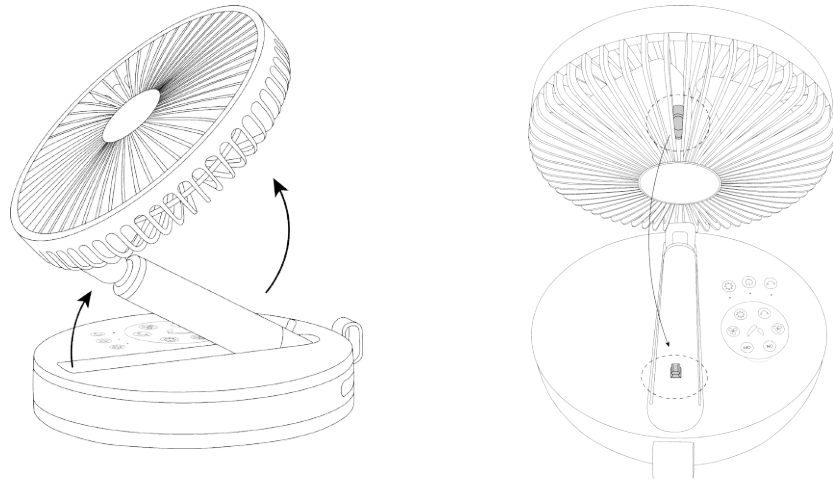


OPENING THE FAN:

To open the Venty fan, gently pull at the head of the fan towards the back of the unit. Here there is a little clip that locks the head in place. Next, tilt the fan back so that the extension rod is fully set in place. Extend the rod up or down to the desired height.

CLOSING THE FAN:

To close the Venty fan, first ensure that the extending rod is fully pushed down to the lowest position. Tilt the head backwards, and push it back to click into place.

 
ADJUSTING FAN

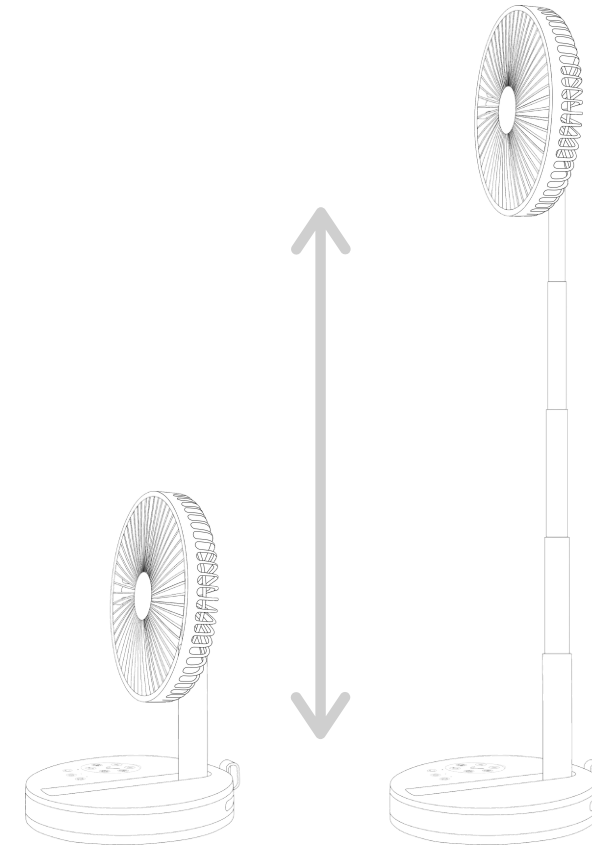

ADJUSTING THE FAN HEIGHT:

To adjust the height of the fan, simply pinch the back of the fan where the extension rod meets the face plate. Adjust up or down to the desired height.

 CONTROL FEATURES

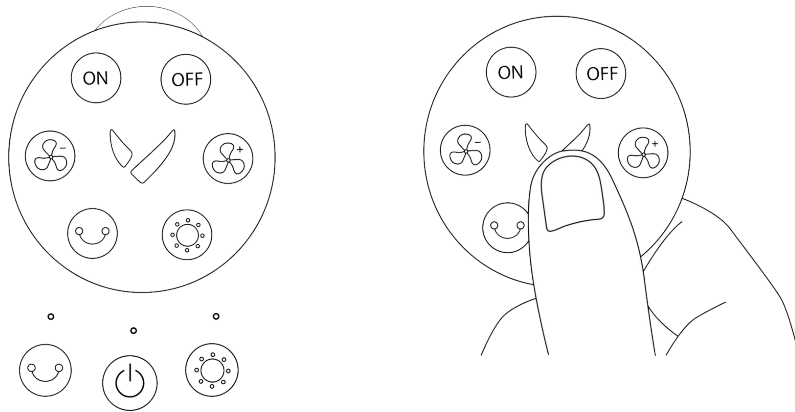

POWER ON: Turn Venty on by a long press of the ON button.

POWER OFF: Turn Venty off by a long press of the OFF button

SPEED INCREASE: 4 speeds are accessible from the remote, or by pressing the power button.

SPEED DECREASE: 4 speeds are accessible from the remote, or by press the power button.

 
 
LIGHT SETTING: 3 modes of light can be accessed by pressing the button on the control panel, or via remote control.

OSCILLATION: Press to allow the fan to oscillate airflow.

Trouble Shooting - REMOTE PAIRING

- 1) On the console, hit the light button once.
- 2) On the console, HOLD the oscillation button until you see the lights blink.
- 3) On the remote, press the "on" button once.

CLEANING FAN

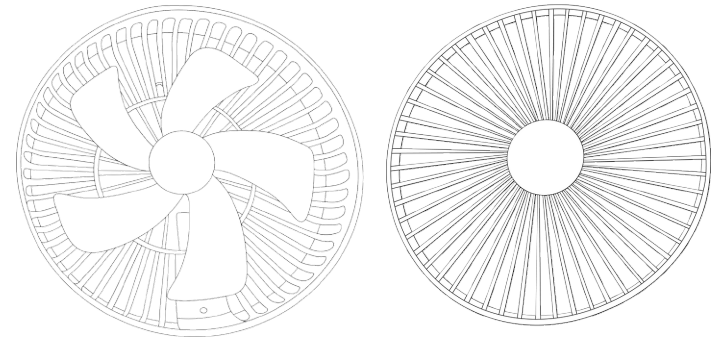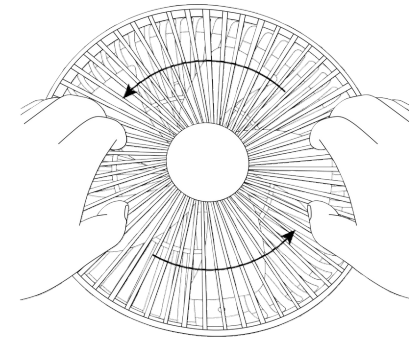

REMOVING THE FACEPLATE:

To clean the Venty fan, you can remove the faceplate by twisting the interior plate counterclockwise. Do not try to take the head off, only the face plate. Once removed, you can use a damp rag to remove any dust built up on the fan blades. Do not try to remove the fan blade and never submerge in water. The faceplate can be put back in place by turning clockwise.