



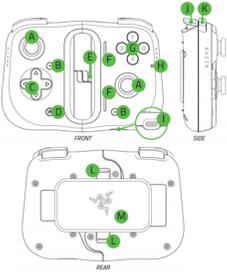
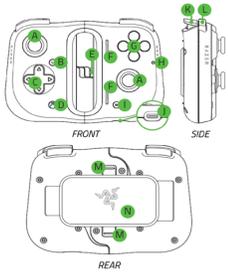
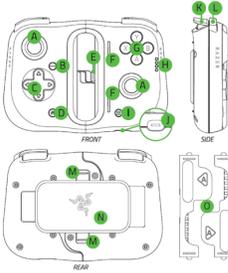
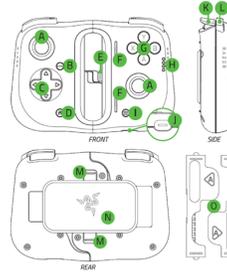
Razer Kishi | RZ06-02900x, RZ06-03360 Support

Updated 25-Aug-2022 | Article ID: 3562

SPECIFICATIONS



Bring console-level control to your mobile gaming with the Razer Kishi. With its portable design, it fits most Android devices, always stay at the top of your game everywhere you go.

Category	Kishi for Android (RZ06-02900100)	Kishi for Android - Xbox (RZ06-02900200)	Kishi for iPhone (RZ06-03360100)	Kishi for iPhone - Xbox (RZ06-03360200)
Product Image				
Device Layout	 <p>A. Clickable analog thumbsticks B. Function buttons C. 8-way D-pad D. Special function button E. Type C connector F. Speaker ports G. Face buttons H. Status indicator I. Type C port* J. Triggers (L2/R2) K. Bumpers (L1/R1) L. Release latches M. Retaining plate</p> <p>*Only supports pass-through charging. Type C headphones and other accessories are not supported.</p>	 <p>A. Clickable analog thumbsticks B. View / Function button C. 8-way D-pad D. Xbox / Special function button E. Type C connector F. Speaker ports G. Face buttons H. Status indicator I. Menu / Function button J. Type C port* K. Triggers (L2/R2) L. Bumpers (L1/R1) M. Release latches</p> <p>*Only supports pass-through charging. Type C headphones and other accessories are not supported.</p>	 <p>A. Clickable analog thumbsticks B. Options button C. 8-way D-pad D. Home button E. Lightning connector F. Speaker ports G. Face buttons H. Status indicator I. Menu button J. Lightning port* K. Triggers (L2/R2) L. Bumpers (L1/R1) M. Release latches N. Retaining plate O. Interchangeable rubber grips**</p> <p>*Only supports pass-through charging. Type C headphones and other accessories are not supported. **Rubber Grips B are pre-installed with the controller.</p>	 <p>A. Clickable analog thumbsticks B. Options button C. 8-way D-pad D. Home button E. Lightning connector F. Speaker ports G. Face buttons H. Status indicator I. Menu button J. Lightning port* K. Triggers (L2/R2) L. Bumpers (L1/R1) M. Release latches N. Retaining plate O. Interchangeable rubber grips**</p> <p>*Only supports pass-through charging. Type C headphones and other accessories are not supported. **Rubber Grips B are pre-installed with the controller.</p>
Features	<ul style="list-style-type: none"> • Pass-through USB-C charging port • Clickable analog thumbsticks • Dual bumper buttons • Dual Triggers • 8-way D-Pad • 4 action buttons • Select and Start buttons 	<ul style="list-style-type: none"> • Pass-through USB-C charging port • Clickable analog thumbsticks • Dual bumper buttons • Dual Triggers • 8-way D-Pad • 4 action buttons • Select and Start buttons 	<ul style="list-style-type: none"> • Pass-through Lightning port • Clickable analog thumbsticks • Dual bumper buttons • Dual Triggers • 8-way D-Pad • 4 action buttons • 3 multi-function buttons <ul style="list-style-type: none"> ◦ 1 Options button 	<ul style="list-style-type: none"> • Pass-through Lightning port • Clickable analog thumbsticks • Dual bumper buttons • Dual Triggers • 8-way D-Pad • 4 action buttons • 3 multi-function buttons <ul style="list-style-type: none"> ◦ 1 Options button

- | | | | |
|--|---|--|--|
| <ul style="list-style-type: none"> • 3 multi-function buttons <ul style="list-style-type: none"> ◦ 2 Function buttons ◦ 1 Special function button • 1 Status indicator LED (Blue) | <ul style="list-style-type: none"> • 3 multi-function buttons <ul style="list-style-type: none"> ◦ 1 View/Function button ◦ 1 Nexus/Special Function button ◦ 1 Menu/Function button • 1 Status indicator LED (White) | <ul style="list-style-type: none"> ◦ 1 <input type="checkbox"/> button ◦ 1 Menu button <ul style="list-style-type: none"> • 4 LEDs, Top LED functions as status indicator (Red) | <ul style="list-style-type: none"> ◦ 1 Home button ◦ 1 Menu button <ul style="list-style-type: none"> • 4 LEDs, Top LED functions as status indicator (Red) |
|--|---|--|--|

Compatible Devices

- | | | | |
|---|---|--|--|
| <ul style="list-style-type: none"> • Razer Phone 1 & 2 • Samsung Galaxy S8/S8+ /S9/S9+/S10/S10+ /S10+/S20/S20+/S21 /S21+/S21 Ultra/Note 8/Note 9/Note 10/Note 10+, • Google Pixel 2/2 XL/3/3XL /4/4XL • Other Android devices with center-mounted USB-C port and within the supported dimensions of 145.3 – 163.7 mm (Height) x 68.2–78.1 mm (Width) x 7.0 – 8.8 mm (Depth) | <ul style="list-style-type: none"> • Razer Phone 1 & 2 • Samsung Galaxy S8/S8+ /S9/S9+/S10/S10+ /S20/S20+/S21/S21+/S21 Ultra/Note 8/Note 9/Note 10/Note 10+, • Google Pixel 2/2 XL/3/3XL /4/4XL • Other Android devices with center-mounted USB-C port and within the supported dimensions of 145.3 – 163.7 mm (Height) x 68.2–78.1 mm (Width) x 7.0 – 8.8 mm (Depth) | <ul style="list-style-type: none"> • iPhone 12, 12 Pro, 12 Pro Max • iPhone 11, 11 Pro, 11 Pro Max • iPhone X, XR, XS, XS Max • iPhone 6+, 6s+, 7+, 8+ | <ul style="list-style-type: none"> • iPhone 12, 12 Pro, 12 Pro Max • iPhone 11, 11 Pro, 11 Pro Max • iPhone X, XR, XS, XS Max • iPhone 6+, 6s+, 7+, 8+ |
|---|---|--|--|



RAZER INSIDER

Have a question? Ask the Razer Community for help!

[ENTER INSIDER](#)



NEED HELP?

Get support by phone, chat, or email

[CONTACT SUPPORT](#)