

3) Rotate the Drain Selector switch in a clockwise direction and select Drain.



4) Close both lids and rotate the spin timer in a clockwise direction to select the desired spinning time. See the Washing Guide to set the correct time.



5) Open the External and Internal lids of the spinning tub and remove the plastic spin disc.



6) Rotate the Drain Selector in an anti-clockwise direction and select Wash.



Maintenance and Storage

The appliance is fitted with a lint collection point that must be cleaned regularly.

1) Drain all water from the appliance and remove the filter.



2) Wash down with clean water and then replace. With the appliance disconnected from the AC input all external surfaces can be cleaned with warm soapy water taking care not to allow too much water to enter the control panel. Do not use abrasive cleaners or bleach.

Do not submerge the appliance in water.

When storing for periods of time, flush out washing and spinning tub with clean water then allow to dry completely before storing away.

Identification of parts

1. Wash Timer
2. Drain Selector
3. Spin Timer
4. Wash Lid
5. Spin Lid
6. Drainage Hose
7. Wash Tub
8. Spin Tub



Brand:	Panda
Model:	WV306
Height:	650mm
Depth:	450mm
Width:	502mm
Weight (Net):	11kg
Washing/Spinning Capacity:	3.6/2.0kg
Rated Voltage:	110V AC/60Hz
Rated Power:	210W Wash / 120W Spin
Water Casing:	ABS plastic
Timer Casing:	ABS plastic
Drain Type:	With drain pump

Distributed by
Panda App Corp.
www.szbyonline.com



Panda Portable Twin Tub Washing Machine Instruction Manual



IMPORTANT

Read these instructions for use carefully. Familiarize yourself with the appliance before use. Keep these instructions for future reference.

Customer Service: 1-888-329-8832

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using this appliance, please read precautions included in the following:

1. Read all instructions before using the appliance.
2. Do not wash articles that have previously been in contact with, or treated with, insecticides, pesticides, herbicides, or other chemicals or substances, or that have been treated with such agents or substances.
3. Do not use all-purpose, dry-cleaning solvents, or other flammable or explosive substances in the wash basin. These substances can self-ignite and cause serious conditions, because gas may be produced in a hot-water system that has not been used for 2 weeks or more. (W100262-03)
4. PRECAUTION: Some hot-water systems are not safe and fire risk is present, before using a washing machine, turn on all hot-water faucets and let the water flow from each for several minutes. This will remove any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
5. Do not allow children to play or sit in the appliance. Close supervision of children is necessary when the appliance is used for any purpose.
6. Before the appliance is moved from service or discarded, clean the drum.
7. Do not reach into the appliance if the tub is agitated or moving.
8. Do not attempt to clean the appliance when it will be exposed to the weather.
9. Keep the appliance in a shaded environment. Do not expose the directly sunlight for extended periods and keep away from external sources of heat.
10. Do not tamper with controls.
11. Do not repair or replace any part of appliance in attempt to attempt any activities unless specifically recommended in the owner-manual instructions or in qualified professional instructions that you understand and have the skills to carry out.
12. The temperature of water used in the appliance should not exceed 60 degrees centigrade as this may result in damage to the internal tub of the appliance.
13. Do not place heavy articles on the lid of the appliance as this may result in damage to the unit.
14. This appliance is designed to be used on with fabric articles and must not be used with solid objects or articles.

WARNING: PRECAUTION: This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING: PRECAUTION: Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with qualified electrician or determine if you are in doubt with whether the appliance is properly grounded. Do not modify the plug provided with the appliance—if it will not fit the receptacle, have a proper outlet installed by a qualified electrician.

CAUTION: If this appliance is supplied from a cord extension set or electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.

Installation and operation of appliance

It is important that your appliance is installed and operated in accordance with the manufacturer's instructions.

Power requirements

This appliance is designed to be operated on AC input only, voltage is required to be 110V/60 Hz.

To ensure correct operation of your appliance read and understand the instructions fully prior to using the machine.

Advice and tips before washing

- Use washing powder or liquids suitable for front load machines only
- Washer capacity - 5.0kg
- Maximum water temperature - 45°C

Sort your laundry

- Sort items according to how soiled they are, colour and material.

Clothing

- Read all labels and manufacturer's washing instructions prior to washing.
- Do not use items that are not made of fabric.
- New colored items may contain excess dye and should be washed separately. It is recommended to wash new colored items by hand for the first few times to avoid dyeing the plastic tub.
- Turn delicate items inside out or use a wash bag.
- Empty pockets and wash them inside out if possible.

Washing Guide

Clothing Type	Wash/Rinse	Spin
Delicates	3-5min	4-5min
Cotton and Synthetics	5-9min	5-9min
Towels and Sheets	12-15min	8-9min
Heavy Soiled	12-15min	8-9min

The above is to be used as a guide only.


It is recommended that small and delicate articles firstly be placed in a mesh washing bag prior to being placed in the washing tub.

Washing

- 1) Position appliance in a suitable location.
- 2) Connect to suitable AC outlet.



- 3) The drain hose must be placed into a drain pipe or sink at least 4cm in diameter. Use the grommet drain hook to hold the hose in place. To avoid possible water back-up, the drain hose must reach a height of at least 75cm minimum and 100cm maximum.

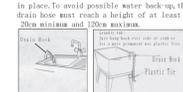


- 4) Ensure the lint cover is securely clicked into compartment inside of washing machine tub prior to use.


- 5) Lift the lid and half fill (1) tub with water via either the water inlet located on the top of the appliance (A) or directly in to the tub (B), taking care not to allow water to flow over the control panel. The detergent packaging will give a recommendation about how much detergent you should use based on the amount and level of soiled clothing that is to be cleaned. Water should not be added to spin compartment (smaller compartment).



- 6) Place articles in the tub and complete filling the tub with water, ensuring that the water level inside the tub does not exceed the top of the lint receiver compartment.

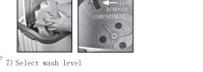

- 7) Select wash level.

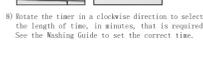

- 8) Rotate the timer in a clockwise direction to select the length of time, in minutes, that is required. See the Washing Guide to set the correct time.

Draining

- 1) Once the appliance has completed the washing cycle ensure that the drain pipe is located in a suitable position.
- 2) Rotate the Drain Selector switch in a clockwise direction and select Drain.
- 3) Allow all water to drain away from the appliance.



- 4) If the appliances can not drain properly, just lift drain hose up, then lower it, this makes to release excess air from the drain hose. Try step 3 again to drain water.



Rinsing

- 1) Rotate the Drain Selector in an anti-clockwise direction and select Rush.



- 2) Half fill (1) tub with water via either the water inlet located on the top of the appliance (A) or directly in to the tub (B).



- 3) Place articles in the tub and complete filling the tub with water to the required level mark - Do not use washing liquid or powder.



- 4) Rotate the timer in a clockwise direction to select the length of time, in minutes, that is required. See the Washing Guide to set the correct time.



- 5) Repeat the Draining Operation.

Spin drying

- 1) Open the External and Internal lids of the spinning tub and remove the plastic spin disc. Note: It is important that the spin disc is used every time so as to allow correct operation of the spinner tub.



- 2) Place a selection of articles in the spinning tub and insert the spin disc.

