

FOLDING UMBRELLA

SAFETY WARNING

Always keep the umbrella away from you when opening and closing. The umbrella is spring loaded and opens very quickly.

Allow at least 3ft of space in front, to the left, and to the right of you when opening.

INSTRUCTIONS

- **Opening:** Remove the sleeve from the umbrella. With the umbrella pointing away from you, press the open/close button on the umbrella handle.

- **Closing:**

Attention: You don't need to close the umbrella by grabbing the shaft.

1. Press the open/close button to collapse the canopy and ribs.
2. Take one hand to grasp the handle, and place the palm of your other hand at the top of the umbrella. Your palm should be placed on the small circular plastic cap at the top.
3. Firmly press the handle and top of the umbrella together until you hear it click into place.

HAVE AN ISSUE WITH YOUR G4FREE UMBRELLA?

ENJOY A NEW REPLACEMENT: we provide a warranty of 12 months. If your umbrella is damaged, contact us for a new replacement **ABSOLUTELY FREE**. If there are any problems with our product, get in touch with G4Free Support Team for fast service!

Contact G4free directly via Amazon for any assistance. We're here to help!

- Go to the product page and select G4Free.
- Click the "Ask a Question" button.
- Write your message and send it! We'll reply within 24 hours.
- Or just click the button below to contact us!

Ask a question


OPENING / CLOSING INSTRUCTIONS




1 Press the button to open



2 Umbrella canopy bounce

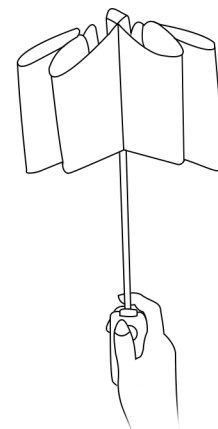

3 Press the button, umbrella canopy collapsed

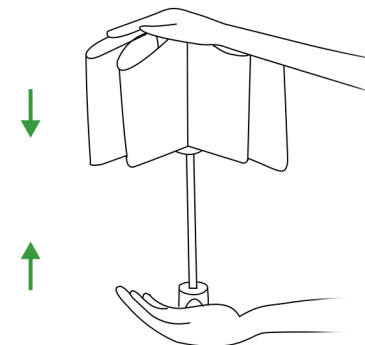

4 Push back with both hands