



ELECTRIC OVEN TOASTER GRILL (OTG)

WARRANTY CARD

Customer's Name & Address :

.....

.....

Tel. : Date :

Bill / Cash Memo No. :

Dealer's Stamp & Signature

FOR CUSTOMER COMPLAINTS, CONTACT: MANAGER, CONSUMER CARE CELL
TOLL FREE NO.: 1800-425-66666 | MISSED CALL & SMS : +91-97400 34444
EMAIL: CUSTOMERCARE@STOVEKRAFT.COM | WEBSITE: WWW.STOVEKRAFT.COM

IMPORTED, MARKETED BY & CUSTOMER CARE ADDRESS:

STOVE KRAFT LIMITED

AN ISO 9001 : 2015 CERTIFIED COMPANY
81, HAROHALLI INDUSTRIAL AREA, KANAKAPURA TALUK
RAMANAGARA DISTRICT, BANGALORE RURAL - 562 112, INDIA
COUNTRY OF ORIGIN: PEOPLE'S REPUBLIC OF CHINA



+91-63649 14202



ELECTRIC OVEN TOASTER GRILL (OTG)

1
YEAR
WARRANTY

16
LITRE
CAPACITY



BAKE



GRILL



HEAT



COOK

INSTRUCTION MANUAL AND WARRANTY CARD

WARRANTY TERMS AND CONDITIONS

Stove Kraft Limited warrants to the purchaser of this Pigeon ELECTRIC OVEN for a period of 1Year commencing from the date of purchase of the product, the company will repair or replace free of charge any part or parts of the product, should the company be fully satisfied in its sole directions, that the defect/s is/are due to faulty material or workmanship only. The warranty will be governed by the following clauses.

- 1) The company or their Authorised Service Agent/Dealer will repair / replace all parts that are failing due to faulty material or defective workmanship pertaining to the above product.
- 2) Only the Company or its Authorised Service Agent / Dealer can service / repair or attend to install/reinstall the above product.
- 3) No on-site warranty will be executed. The warranty will be executed only at authorized service centers and in which the authorized representative / dealer is situated including outstation locations. All to and fro traveling and other incidental expenses as prevailing from time to time incurred in connection with the visit of the purchaser to the service location for the purpose of execution of warranty shall be borne by the said purchaser only.
- 4) The warranty extended herein is in lieu of all implied conditions and warranties under the law and is confined to the repair or replacement of defective parts and does not cover any consequential or resulting liability, damage or loss arising from such defects. Further more, the warranty in no case shall extend to the payment or any monetary consideration whatsoever, of the replacement or return of the product as a whole.
- 5) This warranty does not cover corrosive, plastic and glass components adding decorative value to the product.
- 6) The warranty is issued subject to Jurisdiction of Bangalore Court of law.
- 7) The warranty is covered by force Majeure clause. In the event of the above product struck by any natural Calamity, This Warranty stands Null & Void.

SPECIFICATIONS:

Power : 1280 W

Voltage : 220 - 240 V AC, 50 Hz/60 Hz

DEAR CUSTOMER

Welcome to the Stove Kraft family.

Congratulations on choosing Pigeon ELECTRIC OVEN

To get the best benefit of this Product, kindly go through the user manual* before using the Product.

Pigeon products are manufactured with state-of-the-art technology. They offer a valuable hand in your cooking and they would integrate with your life style and be your reliable support. If however, for some reason, you need any assistance or help - please let us know we shall be happy to resolve your issues at the earliest.

Assuring you of our best services and hoping to have patronage for other Pigeon products as well.

Yours
Team Stove Kraft

BEFORE USING THIS OVEN, PLEASE READ THIS INSTRUCTION MANUAL COMPLETELY


IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed, which include the following:

1. Read all instructions before use or cleaning.
2. Do not touch hot surfaces.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not immerse cord, plug, or any parts of the appliance in water or other liquids.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service center for examination, repair, or adjustment.
7. Do not place appliance on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
8. When operating the oven keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
9. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
10. To disconnect, turn the control to OFF, before removing the plug. Always hold the plug, but never pull the cord.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Do not cover any part of the oven with metal foil. This may cause overheating of the oven.
13. Use extreme caution when removing tray or disposing of hot grease or other hot liquids.
14. Do not clean the appliance with metal scouring pads.
15. Never leave the appliance unattended while broiling or toasting.
16. Oversized foods or metal utensils must not be inserted into the appliance as they may create a fire or risk of electric shock.
17. Do not place any item onto the oven or cover the oven with inflammable material during operation as it may cause fire.
18. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
19. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
20. Do not store any materials, other than manufacturer recommended accessories, in this oven when not in use.
21. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
22. Do not use appliance for other than its intended use.
23. This appliance is for HOUSEHOLD USE only.

LIST OF COMPONENTS

1. Power light
2. Timer
3. Selector dial
4. Thermostat dial
5. Glass door handle
6. Bake rack
7. Bake pan
8. Pan handle
9. Heating elements
10. Glass door clips

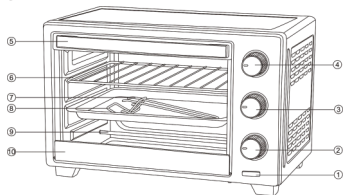

SELECTOR DIAL

1. OFF
2. Top heating
3. Bottom heating
4. Top & bottom heating



BEFORE USE

- Ensure that there is enough ventilation around the oven.
- Ensure that the oven is completely dry before use.
- The oven should not be placed on untreated wooden surface. Place the oven on a heat resistant surface.
- The feet of the oven can leave some marks on the table, if this happens, remove the marks with a damp cloth.

OVEN USE

- Turn the thermostat dial clockwise to the desired temperature.
- Turn the Heating selector dial to the desired position.
- Turn the timer dial clockwise to the desired cooking time.
- The power light will light up after timer is turned on, and will go out when the timer is turned to OFF.
- When the cooking time is over, the timer will auto shut off and the bell will ring.
- If the cooking is finished earlier than the set cooking time, please turn back the timer to OFF to turn off the oven.
- In the first use of this oven, there might be some light smoke coming out from the oven, this is normal. After 5-10 minutes the smoke will disappear.
- In order to get better cooking performance, it is recommended to pre-heat the oven about 10-15 minutes.

GRILL COOKING

- Leave the door at the open point.
- Turn the selector to GRILL setting (top heating), and Convection is recommended.
- Turn the temperature dial to 250°C.
- Turn the timer to the desired grill time.
- When the grill cooking is done, turn back the timer to OFF to turn off the oven.

AFTER USE

- Turn back the Timer to OFF.
- Turn the Heating Selector Dial to OFF.
- Turn the Rotisserie & Convection Dial to OFF.
- Unplug the appliance from the outlet.
- Wait until the oven is completely cool before any cleaning or maintenance.

MAINTENANCE AND CLEANING

- Unplug the appliance and allow it to cool before cleaning.
- Do not immerse the appliance in water. All surfaces can be cleaned with a clean damp cloth.
- If stains still appear, it is recommended to use soap.
- Do not use abrasive cleaners or sharp utensils to clean the appliance.
- Clean the interior chamber with a clean damp cloth.

Due to the constant development of product functions and designs, we reserve the right to make changes to the product without prior notice.