 




ELECTRIC SPIN SCRUBBER

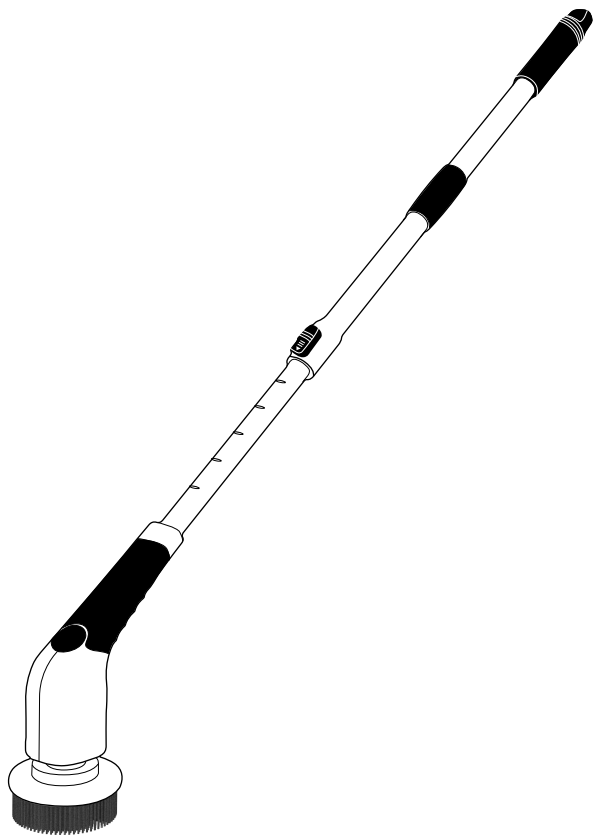

Model:ANS-8051A

Thank you for your purchase!

Please read this instruction carefully before use to ensure that you can use this appliance correctly and safely and keep it for future reference.

IMPORTANT SAFEGUARDS

Fire and electric shock are present in all electrical appliances and may cause personal injury. Read this manual and follow the safety precautions below.

1. Please check the accessories carefully before use.
2. Check whether the voltage you use is in line with the rated voltage of the appliance.
3. Be sure to use the standard charger (5V=1A) of this appliance.
4. Do not place the charging line in a humid environment.
5. Be sure to check whether the charging hole is sealed when cleaning.
6. Dry the appliance's surface in time after cleaning to ensure that the appliance is in a dry state.
7. This appliance can not be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision of instruction concerning use of the appliance in a safe way.
8. Take good care of this appliance, do not allow the child under 8 years of age to take the appliance.
9. Children should be supervised to ensure that they do not play with the appliance.
10. Do not use hot water when cleaning appliances. When using warm water, check that the temperature is not too high to prevent burns.
11. Do not touch the rotating parts with hands or clothing when using.
12. Do not store or use the appliance close to high temperatures.
13. Do not disassemble, repair or modify internal parts of this appliance by yourself.
14. Allow for transportation safety, the appliance you obtained is not fully charged. Please fully charge it before first use.
15. For safety reasons it can only be operated cordless.

PACKAGE CONTENTS

1 × Spin Scrubber




8 × Brush Heads

1 × Brush holder

1 × Main Handle

1 × Extension Handle

1 × Charging Line

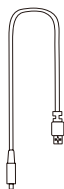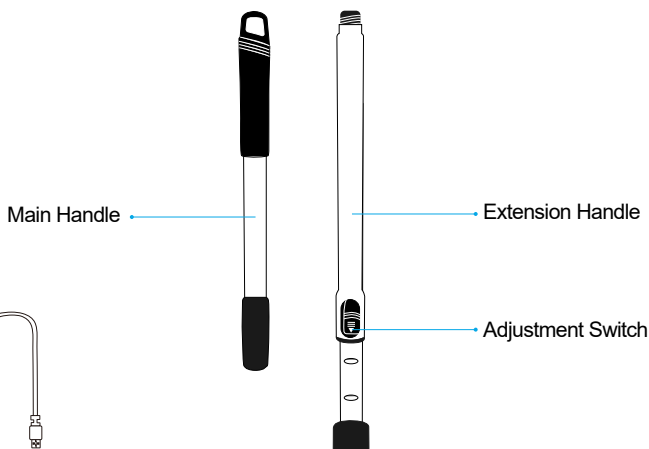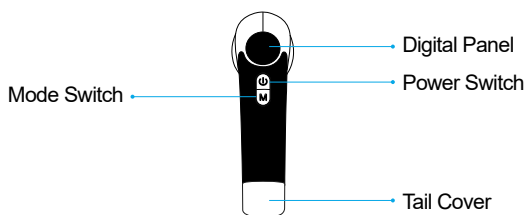

Charging line



Large flat brush



Small flat brush



Corner brush



Chenille cloth



Sponge brush



Absorbent cloth



Scouring pad



Copy wool brush



Brush head holder

▲ NOTE: Before assembling any component of this appliance, make sure the unit is turned off.

SPECIFICATIONS

Battery Type:	Li-ion Battery
Battery Capacity:	2500 mAh
Input:	5V$\overline{=}$1A
Power:	25W
Charging Time:	3 Hours
Running time:	75-90 Minutes
Rotating Speed:	260RPM/360RPM/420RPM

DIGITAL PANEL FUNCTION

Power Switch

Function 1: Short press the power switch to start the product. Voice prompt: "Power ready, please press M to start" Digital panel displays the current remaining power and 0 standby mode. When the  is displayed, it means the current voice mode is turned on.

Function 2 : Long press the power switch for 3 secs to lock the product. Voice prompt: "locked" Digital panel displays the  When the product is locked, press the power button cannot turn on the power. Voice prompt: "Please unlock" You should long press the power switch for 3 secs again to unlock when the product is locked. Voice prompts: "Power ready, please press M to start"

Mode Switch

Function 1: When the machine enters the standby state, short press the M key 1-2-3-4 times, representing low speed - medium speed - high speed - Stop. The digital panel displays 1-2-3-0 number.

Function 2: In standby state, long press the M key for 3 secs to enable or disable the Voice function. When the  is displayed, voice mode is turned on, and the voice prompt: " Voice mode on" . When the  is not displayed , the Voice mode is mute, and the voice prompt: "Voice mode off"

Fault Alarm


If you press too hard or overload the product during use, the product will enter the protected state within two seconds and automatically stop working. The  is displayed on panel, Voice prompt: "Overload, product stop, please restart". Press the M key again to enter the working mode.

Low Battery

When the remaining power is less than 30%, the digital panel displays ⚡ Voice prompt: "The power is low, please charge"

When the remaining power is less than 10%. Voice prompt: "Low power, is about to shut down"

Diagram of Digital Control Panel

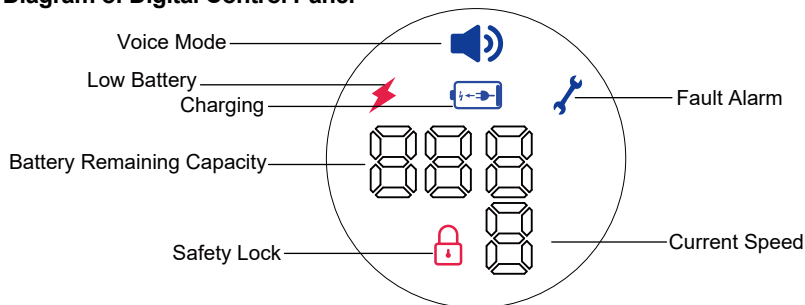


How to Clean

Handle Part

Gently wipe handle part of the scrubber with a wrung soft cloth.

Brush Head

Disassemble the brush head and immerse it into water to clean. Clean it with neutral detergent if it is difficult to clean.

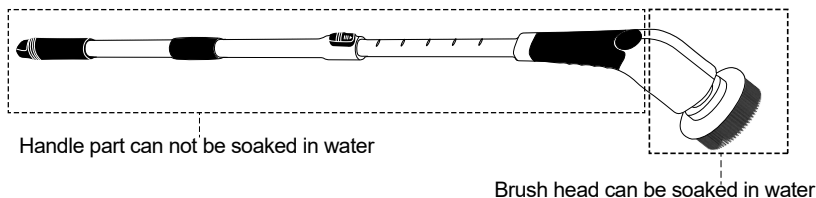


Cleaning tips

- For better cleaning effect, it is recommended to use the brush with detergent (such as Mold&Mildew Remover, Water Strain Remover, Oven Cleaner, Bleach Cleaner and All Purpose Cleaner) You can use different detergents and brushes for different needs.
- For better removing stubborn hard stains, apply your cleaning detergent of choice to the surface and let it soak for 10 minutes before you start cleaning with the scrubber. You will be amazed with the results!

ASSEMBLY TIPS

Assembly with Extension Handle


Use the main handle through clockwise rotation to connect the extension handle

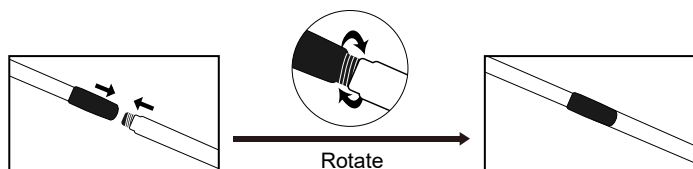

Take out the tail cover of spin scrubber and Insert the front end of extension handle vertically into the end of the appliance




The extension handle can be adjusted freely by pushing the adjustment switch to achieve 7 kind of lengths.

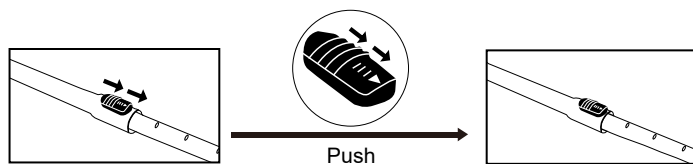

▲ NOTE: Please make sure the charging hole protection cover is installed before use if you only use this appliance without extension handle.


Assembly with Brush Head

- Firmly hold the scrubber with one hand and press the selected brush until secured.
- Align the semicircular groove of the brush head with the convex groove of the brush head connector and mount it vertically.
- For sponge brush, absorbent cloth, scouring pad and copy wool brush, you should stick these four brushes to the brush holder to use them.

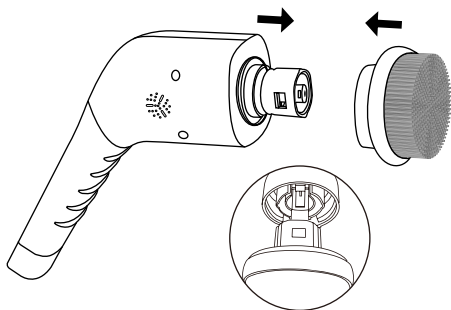

Disassembly with Brush Head

- Hold the connection part of the brush head and pull it out vertically
- Gently swing the brush head while pulling, it will be easier to disassembly.

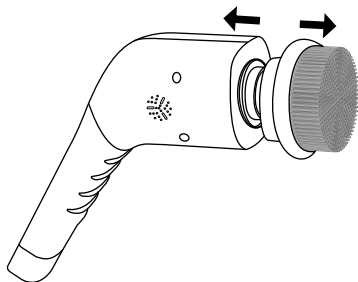

▲ NOTE: When replacing the brush head, the product should be turned off.

Suggestions for Use of Brush Head

Large flat brush

Large flat brush is used to clean large flat surface area, like hard floor, tile wall, bathtub, pool, stove, carpet, ceramic and automobile hub.

Small flat brush

Small flat brush is suitable for stove, sink and clean the small area of moderate dirt of outdoor supplies.

Corner brush

Corner brush is good at cleaning tile, corners, cranny and automobile hub.

Chenille cloth

Chenille cloth is perfect as a smooth surface cleaning brush for glass and wood floor.

Sponge brush

Sponge brush is suitable for deep cleaning of bright or easily damaged surface and removal of subtle stains, oil stains and water stains, such as kitchenware and car surface.

Absorbent cloth

After using the brush head, use absorbent cloth to wipe the surface water stains and finish the surface polishing.

Scouring pad

Scouring pad applies to surfaces with heavy oil pollution that are not afraid of scratching, which need to be used with no corrosive cleaner, such as gas cooker, kitchen ventilator, kitchenware and other kitchen utensils.


Copy wool brush

Copy wool brush head is suitable for paint, leather and other easily damaged surface cleaning and polishing, such as car surface, sofa, furniture and other precious goods surface.

How to charge

Please fully charge the Jorking spin scrubber before using it for the first time.

Take out the tail cover and insert charging line for charging

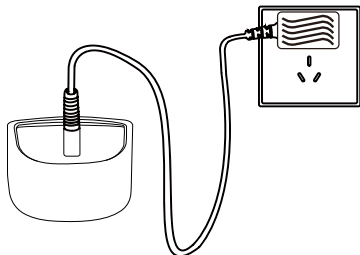

When the power is lower than 10%, the battery needs to be charged. Voice prompt "Low power is about to shut down"

When the spin scrubber is being charged, the number of power display is flashing and the digital panel displays 

When the spin scrubber is fully charged, the power level shows 100. Voice prompt "Full charge"

▲ NOTE:

- 1.First check to ensure that there is no water on the surface of the machine.
- 2.During the charging time, please ensure that the machine is in a reliable and fixed position and cannot be suspended.
- 3.After charging, please remember to install the tail cover on the appliance if you didn't use extension handle.

FAQ

Why does the electric spin scrubber stop working?

Please check whether the product triggers the safety lock, if so, long press the power button for 3 sec to unlock it.

If you press too hard or overload the product during use, the product will enter the protected state within two seconds and automatically stop working. Press the M key to enter the working mode again.

If neither of the above two situations, please contact our customer service via email: jorkingcustomerservice@outlook.com

How to buy brush heads for replacement?

Please contact our customer service via Amazon,
Our customer service will tell you how to buy it.

Can this appliance be immersed in water to work? Like, could I use it to clean a swimming pool?

Although our product has reached IPX5 waterproof, we still do not recommend you to soak in water to use it in order to prolong the service life of the product. When you want to clean a swimming pool or something like that, you can drain the water and then clean it with our product.

How to achieve maximum cleaning results with scrubber?

For stubborn hard stains, apply your cleaning detergent of choice to the surface and let it soak for 10 minutes before you start cleaning with the scrubber. You will be amazed with the results!

Does this product come with a charger?

We provide a charging line, but the adapter is not included in our package.

The ordinary adapter is suitable for this product. (Input - AC 100-240V, Output - DC 5V / 1A)

Contact Us

If you have any questions, please contact our customer service any time and we will be willing to help you. Thanks for choosing Jorking Electric Spin Scrubber.

Email: jorkingcustomerservice@outlook.com