

170mm

Hello buyer,

First of all, thank you for choosing our Electric Spin Scrubber. We cherish the opportunity for your cooperation.

We Need Your HELP !

Firstly, we will offer product warranty services.

If any non-human issues occur within one year, please feel free to contact us. It is our pleasure to serve you.

Secondly, we are a small business and your good review and feedback are very important to us. If you are not satisfied, please contact us before leaving your review, so that we can have an opportunity to know the defect of our products and to compensate you. We will do our best to satisfy you.

Please feel free to contact us through WhatsApp:

WhatsApp : +8613566140272

Or Email: mimostyle.service@outlook.com

Thank you for being one of our customers.

We love our customers and will always be here if you need us!




Mimo Style Home

120mm

Electric Cleaning Brush DS-258

Instruction Manual

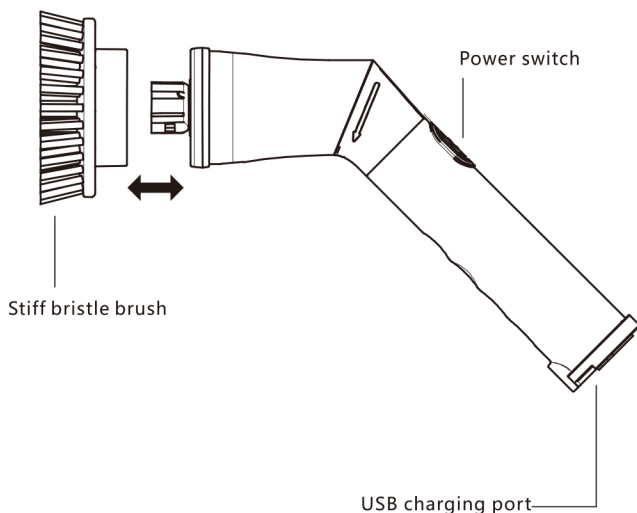

Please read this manual carefully before using.

120mm

Instructions for Use

1. Press the Power switch button and use the slow speed gear by default. One blue indicator lights on.
2. Press the switch button again and switch to the fast gear. Two blue indicators light on.
3. Press the switch button three times to shut down the machine.
4. In the process of using, if the speed significantly slows down which means the power is insufficient, it should be charged in time.
5. The device cannot turn on during the charging process, unplug the power cable before turning on the device.
6. The red light is on when the machine is in charging, and the green light is on when the charge is full.
7. The machine will shut down automatically at low voltage.
8. When charging, pull away the silicone of the USB port at the tail and plug in the Type-c cable for charging. After it is full, the silicone of the USB port must be sealed and installed properly to prevent water entering the product from the USB port and causing the product can not work.
9. The product should be fully charged for the first time and after long-term storage.

(Charge the product once every three months)

Precautions

1. Please use the supporting USB charging cable to charge, which is only used to connect the mobile phone charger (conforming to GB4706.1 standard certification, output 5V=), charging bank, car USB interface, computer USB interface to charge.
2. This product should not be regarded as a toy by children. Children should use it under the guidance of adults.
3. When cleaning, unplug the USB cable and clean the product with a damp soft cloth and non-corrosive liquid cleaner.
4. If the product is damaged, please do not use the product again, otherwise it may cause harm to human body.
5. Do not disassemble or repair this product by yourself.
6. In different cleaning scenarios, please choose the appropriate brush head to avoid damaging the cleaning items.
7. After cleaning, please remove the brush head after the it stops rotating.
8. When the product is working, do not squeeze the brush head with force to cause the brush head stop rotating.
9. After the brush head finish using, clean it with water to avoid residual stains.
10. Do not immerse the product in water or other liquids for cleaning.
11. Do not use this product near explosive and flammable objects or liquids.
12. This product contains lithium battery. It is strictly prohibited to open the product shell to avoid the damage of the battery or other dangers.
13. Do not charge this product in a humid environment.
14. Do not burn lithium battery or this product, it may cause explosion.

120mm


Brush head installation and replacement

1. According to the cleaning requirements, choose the appropriate brush head, and make sure that the brush head must be firmly installed.
2. When installing the brush head, just align the card slot of the brush head with the rotating shaft of the machine and jam the brush head.
3. Replace the brush head by gently pulling it out and inserting it into the replacement brush head.
4. Velcro adapter head is suitable for sponge/clean cloth, coarse fiber and all kinds of brush head interchangeably.


Optional brush and accessories



Circular disc brush
(Applicable to tile, marble, floor, stove, bathtub pollution cleaning)

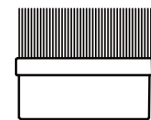


Small round brush
(Applicable to small area surface cleaning of footwear and various articles)

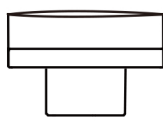


Sponge
(Applicable to tableware, glass, mirror, furniture surface and car waxing)



Semi circular brush
(Applicable to washbasin, toilet, and concave-shaped 360-degree cleaning)

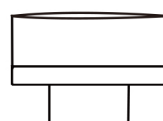

Coarse fibre
(Applicable to grill, uncoated fryer, stubborn stain cleaning))

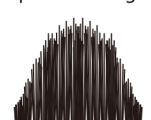


Pointed brush
(Applicable to washing basin corner, shower room corner, and other corner crevice cleaning)


120mm



Rotate and install the connecting rod connection, and tighten it.
Turning the handle counterclockwise can adjust the required length of the telescopic rod, and turning it clockwise can fix the telescopic rod for use.

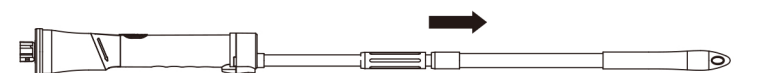


Install the telescopic rod into the rear of the host until it clicks into place. Press the connection button to quickly remove the telescopic rod.

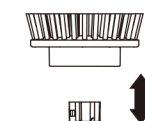

Press the brush head into the brush shaft, and remove the brush head when replacing.



Rotate the top of the product clockwise, and the body is in a position of 0°.

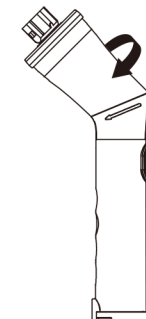

Rotate the top of the product counterclockwise, and the body is in a position of 45°.

120mm

Technical parameters

Product name	Electric Cleaning Brush
Model	DS-258
Waterproof rating	IPX 7
Lithium battery capacity	3000 mAh
Rated working voltage	3.7V
Rated working power	10W
Rated input voltage	5V 1A

Common Faults

Fault Symptoms	Possible cause	Treatment Method
The motor does not rotate or the speed is slow.	Lithium battery is used up or insufficient.	Please charge it fully in time before using.
The product suddenly stops when it is working.	In the process of using the product, the brush head is under too much pressure, resulting in motor blocking.	In the process of use, the cleaning items should be pressed with appropriate force, do not use with too much force.
Abnormal sound or failure of product operation	In the process of use, the brush head is under too much pressure, resulting in motor blocking.	Remove the items in time, check whether the sealing cover of the charging port is tightened properly, or whether the silica gel of the USB port is sealed properly and start to use after the internal water dries naturally.
The indicator light is off when charging.	The specifications of the power adapter are not correct, and the power supply is not connected well.	The size of the power adapter needs to be 5V. Check whether the USB cable is connected to the charging port or not.

Certificate of conformity

Product name: Electric Cleaning Brush

Product model: DS-258

Inspector code:



The product has passed the quality inspection and conforms to the leaving factory inspection standard