


LED Display

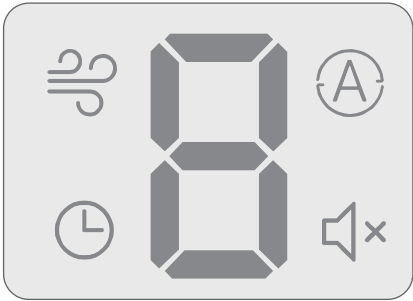

Normal Mode



Fan Speed /Timer Hour



Auto Mode



Timer



Mute

Control Panel



Oscillation Button



Timer Button
(0-8h)



Fan Speed Button
(1-4 levels)



Mode Button
(Normal/Auto)



Power Button
(On/Off)

Extend Warranty to 30 Months

Scan the QR code or visit
dreowarranty.com to extend your war-
ranty for free.



Looking for help?

Contact us to get expert support.
Fast, professional, helpful.



support@dreowarranty.com



(888)290-1688

Mon - Fri. 9:00 am - 5:00 pm PST/PDT

www.dreowarranty.com