 


INSTRUCTION MANUAL

AIR FRYER TOASTER OVEN

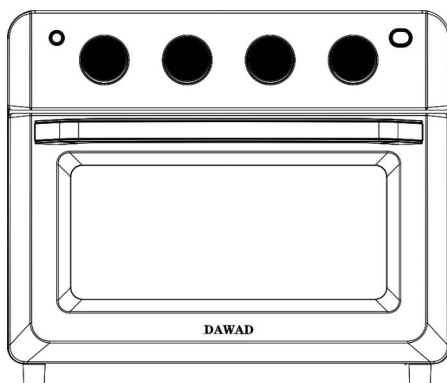

MODEL: WL-18L

CAPACITY: 18 LITRES

120V~/60Hz, 1550W

Read all the sections of this booklet and follow all the instructions carefully.

**SAVE THESE INSTRUCTION-
For Household Use Only**

If you have any questions to our products, please contact us by E-mail:
dawadusa@163.com. Our customer services are always ready to offer you a satisfying solution.

IMPORTANT SAFEGUARDS

When using electric appliances, basic safety precautions should always be followed:

PREPARATIONS BEFORE USING:

1. Read all instructions.

• Purpose of the application:

2. Do not use the appliance for any other purpose than described in this manual. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
3. Do not use outdoors.
4. For household use only.
5. This appliance is not intended for use by persons (including children younger than 8) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have supervision.
6. Do not use appliance for other than intended use.

• Placement of the application:

7. Do not place the appliance on or near combustible materials such as a tablecloth or curtain. The accessible surfaces may become hot during use. Do not place on or near a hot gas or electric burner, or in a heated oven.
8. Do not place the appliance against a wall or against other appliances. Leave at least 4 inches of free space on the back and sides and 4 inches of free space above the appliance. Do not place anything on top of the appliance.

• Safety check:

9. Check if the voltage indicated on the appliance corresponds to the local main voltage before you connect the appliance.
10. Check whether the plug, the main cord and the application are damaged. Do not use the appliance if the plug, the main cord or the

appliance itself is damaged. Always make sure that the plug is inserted properly into a wall outlet.

11. To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid. Do not plug in the appliance or operate the control panel with wet hands.

- **Regarding to children:**

12. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.

DURING USING:

- **Avoid damage of application:**

13. Do not let the cord hang over the edge of the table or counter or touch hot surfaces.
14. Never connect this appliance to an external timer switch or separate remote-control system in order to avoid a hazardous situation. To disconnect, turn off the appliance, then remove plug from wall outlet.

- **Avoid injuries of users:**

15. Do not let the appliance working unattended. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
16. Do not touch the hot surfaces; use handle. During air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings. Also be careful of hot steam and air when you remove the pan from the appliance.
17. Use extreme caution when removing tray or disposing of hot grease.

- **Placement of items in the application:**

18. Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
19. Extreme caution should be exercised when using containers

constructed of anything other than metal or glass.

- 20. Do not use accessories, which are not recommended, on the oven.
- 21. Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- 22. Do not place anything on the glass door when it is opened.

• **Operation of application:**

- 23. Suggest to follow setting of temperature, time and function from professional recipes.
- 24. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

• **Placement of application:**

- 25. A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.

• **Emergent situations:**

- 26. Immediately unplug the appliance if you see dark smoke coming out of the appliance. Wait for the smoke emission to stop before you remove the pan from the appliance.

AFTER USING:

• **Cleaning of application:**

- 27. After using the appliance, avoid contact with the hot metal inside. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning the appliance.
- 28. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.

• **Damage of application:**

- 29. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest qualified service facility for examination, repair, or adjustment.

- **Storage of application:**

30. Do not store any materials, other than manufacturers-recommended accessories, in this oven when not in use.

- **Movement of application:**

31. Check the oven is power off before moving the oven.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

CORD SAFETY

1. A short power-supply cord is provided to reduce risk of becoming entangled in or tripping over a longer cord.
2. Extension cords may be used if care is exercised in their use.
3. If an extension cord is used:
 - The marked electrical rating of the extension cord should be at least equal to the electrical rating of the appliance;
 - The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.



ELECTRICAL POLARIZED PLUG

This unit has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, the plug is intended to be used by inserting it into the electrical outlet only one way.

If the plug does not fit securely into the outlet, reverse the plug and re-insert. If it still does not fit, contact a qualified electrician for assistance. Do not modify the plug in any way.

SPECIFICATIONS:

Model Number: WL-18L

Voltage &: 120V~ 60Hz

Product Dimension: 16" x 15" x 13.5" (L x D x H)

Packing Dimension: 19" x 17" x 16" (L x D x H)

Power:1550W

Capacity: 18L

Net weight: 17.5 lbs

Gross weight: 21 lbs

Accessories : Pan, Grill rack, Fry basket Crumb tray

Up heating tube: 60V~ 350W 60Hz 4pcs,

Down heating tube: 60V~ 400W 60Hz 2pcs

USING YOUR AIR FRYER OVEN



BEFORE USING FOR THE FIRST TIME

1. Remove all packaging stickers, and labels from the unit
2. Wash the Fry Basket, Oven Rack, Baking Pan, and Crumb Tray with hot water, some dish-washing liquid, and a non- abrasive sponge. Dry before placing trays into Air Fryer Oven.
3. Place the Crumb Tray in the bottom of the Air Fryer Oven.

CAUTION:

1. Do not place the Air Fryer Oven against a wall or against other appliances. It is important to leave at least 4 inches of free space on the back and sides, and 4 inches of free space above the Air Fryer Oven to allow for proper ventilation.
2. Do not put anything on top of the Air Fryer Oven.
3. Water may be leaved on the countertop since water will release from food during cooking.

KNOW YOUR AIR FRYER OVEN FUNCTION:

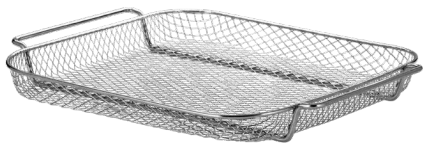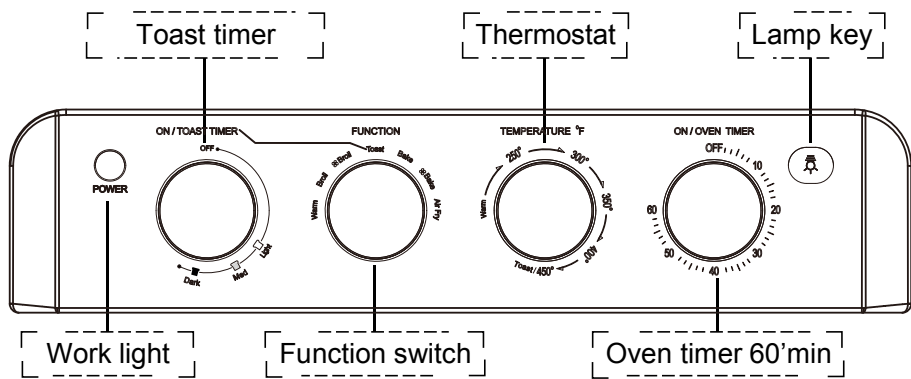

Fry Basket



Oven Rack



Baking Pan



Crumb Tray

The Baking Pan Should Always Be Used
Onto The Oven Rack



When using baking pan, please put
it on the oven rack.

FUNCTION INTRODUCTION:

Broil:

This function is used to cook beef, chicken, pork, fish and other meats.

Tips for broiling:

- Do not put food exceed the capacity of the container.
- Avoid to use glass dishes.

Toast:

This function is commonly used to toast bread. DAWAD oven allows to select three modes of toasting, satisfying different preferences of tastes.

Tips for toasting:

- Put the container in the middle of the application.

Bake:

This function is usually used to cook various dishes, including cake, muffin, cookies and so on.

Tips for baking:

- When cooking frozen food, it is recommended to place the container at the upper part of the oven.
- When cooking fresh food, it is recommended to put the containers at the lower part of the oven.

Air Fry:

This function is designed to replace deep fry. It mimics the taste of oil-fried food using much less oil and in a way with low calorie and low fat, and provides delicious and healthy food for those who have preference of fried food.

Tips for air frying:

- Distribute some oil evenly on the surface of the food before cooking.
- Some food with large volume requires to flip halfway during cooking.
- Coating, such as breadcrumbs, can be used on the air fried food.

WORKING INSTRUCTIONS:

Warm:

- Warm: turn the function knob to warm, turn the thermostat knob to warm, turn the OVEN TIMER, oven working. (power:800w, down heating tube)

Broil:

- Broil (top browning): turn the function knob to broil ,turn the thermostat knob to 450 degrees F or less, turn the OVEN TIMER, oven working. (power:730w, 2pcs up heating tube and motor)
- Convection Broil (even browning): turn the function knob to Convection Broil ,turn the thermostat knob to 450 degrees F or less, turn the OVEN TIMER, oven working. (power:750w, 2pcs up heating tube and motor)

Toast:

- Toast: turn the function knob to toast, turn the thermostat knob to 450 degrees F, turn the TOAST TIMER, oven working. The knob scale is the time of cooking 2-4 slices of bread at a time. The increase or decrease of the number of bread slices needs corresponding increase or decrease time. (power:1500w, down heating tube and up heating tube and motor)

Bake:

- Bake (top browning): turn the function knob to bake ,turn the thermostat knob to 450 degrees F or less, turn the OVEN TIMER, oven working. (power:1530w, down heating tube and motor and up heating tube)
- Convection Bake (even browning): turn the function knob to Convection Bake, turn the thermostat knob to 450 degrees F or less, turn the OVEN TIMER, oven working. (power:1550w, down heating tube and motor and up heating tube)

Air fry:

- Air fry: turn the function knob to air fry ,turn the thermostat knob to 450 degrees F or less, turn the OVEN TIMER, oven working. (power:1450w, up heating tube and motor)

DAWAD



Food	Function	Accessories	Position	Note
Fries/Bacon/Chicken wings/ETC	Air Fry	Fry Basket	Upper Layer	For better air circulation and prevent the oil from dripping on the heating tube, place the baking pan on the LOWER LAYER
Toast	Toast	Oven Rack	Middle Layer	
Beef/Chicken/Pork/ETC	Broil (Top Browning)	Baking Pan	Upper Layer	For chicken or other larger foods, the pan can be in LOWER LAYER
Fish/ETC	Convection Broil (Even Browning)	Baking Pan	Upper Layer	
Cake/Custard/Pizza/Chicken	Bake (Top Browning)	Baking Pan	Middle Layer	For chicken or other larger foods, the pan can be in LOWER LAYER
Scones/Cookies/Pastry/Bread	Convection Bake (Even Browning)	Baking Pan	Middle Layer	

Note: The baking pan should always be used onto the oven rack.

CLEANING & MAINTENANCE

WARNING: Never immerse cord, plugs, or appliance in water or other liquid. Do not plug in the appliance or operate the control panel with wet hands.

- Clean the appliance after each use.
- Always unplug the appliance and let it cool down completely before cleaning.
- Never use abrasive cleaner or corrosive products to clean the appliance, as this may damage the appliance surface and cause rust.
- Clean the exterior with soapy sponge or towel.
- Wet the towel or sponge in soap water, and clean the interior with wet towel or sponge. Remove all the residue after each use.
- Clean accessories in dishwasher, or hand wash with a nylon scoring pad or brush in warm, soapy water.

STORAGE

1. Unplug the appliance and let it cool down.
2. Make sure all parts are clean and dry
3. Store the appliance in a clean and dry place.

ENVIRONMENT

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

GUARANTEE AND SERVICE

If you need service or information or if you have a problem, please contact us by email dawadusa@163.com.

TROUBLESHOOTING

Problem	Solution
The Air Fryer Oven does not perform	Ensure the unit is plugged into a dedicated power outlet.
Food is not cooked	Use smaller batches for more even cooking
	Raise temperature and continue cooking
Food is not fried evenly	Turn over food halfway through cooking process
	Cook similar sized foods together
White smoke is coming out of the Air Fryer Oven	Clean the Air Fryer Oven and accessories after each use to remove greasy residue
French Fries are not cooking evenly	Fry less potatoes at a time
	Blanch potatoes with boiling water before frying
	Use firm, fresh potatoes cut into sticks
Fries are not crispy	Remove excess water from potatoes
	Cut potatoes into more narrow strips
	Mist with a little more oil