 


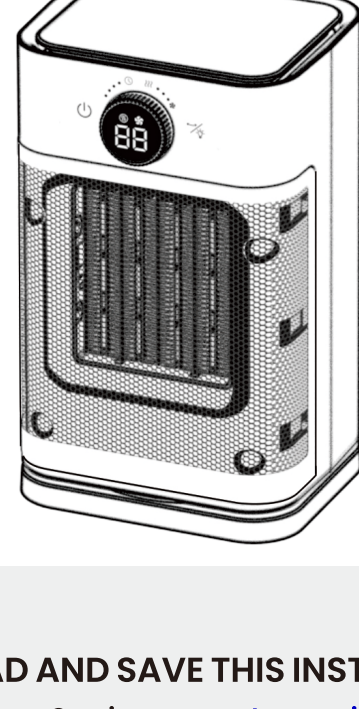

PLEASE READ AND SAVE THIS INSTRUCTIONS

Customer Service: support@cegsin.com
We will reply you within 1 day.

EXTEND YOUR WARRANTY FOR FREE.

Scan or visit
cegsin.com/pages/warranty

to extend your warranty for 36 months for free by registering your product. If you have any product issues, we always stand ready to help.



Contents

01

IMPORTANT SAFETY INSTRUCTIONS
P3-6

02

KNOWING YOUR HEATER
P7

03

USING YOUR HEATER
P8-9

04

CLEANING & MAINTENANCE
P10-11

05

TROUBLESHOOTING
P12

06

PRODUCT SPECIFICATIONS
P13

07

CUSTOMER CARE
P14

01

IMPORTANT SAFETY INSTRUCTIONS



WARNING

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons and hyperthermia, including the following:

	CAUTION	
	TO REDUCE RISK	
	CAUTION: TO REDUCE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER. NO USER SERVICEABLE PART INSIDE. REFER SERVING TO QUALIFIED SERVICE PERSONNEL.	
	DANGEROUS VOLTAGE: The lightning flash with the arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.	
	ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.	

HOT SURFACE

  THE FRONT SURFACE CAN BE VERY HOT DURING USE. DO NOT TOUCH WHEN IN USE.

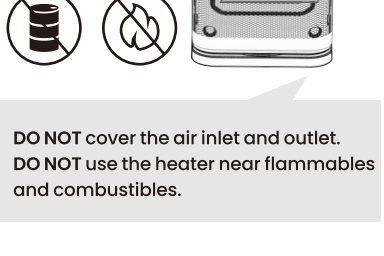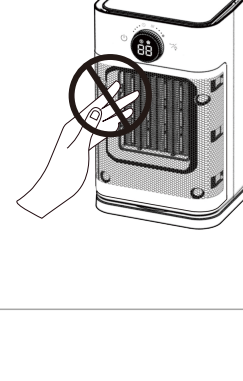

DO NOT cover the air inlet and outlet. DO NOT use the heater near flammables and combustibles.

GENERAL SAFETY

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
3. Use the handle to move this heater.
4. This heater is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Extreme caution is necessary when any heater is used by or near children or invalids, and whenever the heater is left operating and unattended.
6. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the heater.
7. Do not attempt to modify or repair the product by yourself. Doing so could void the warranty and cause damage or personal injury. No user serviceable parts inside. Only a repair technician may disassemble or repair this product.
8. Make sure that no pieces of polystyrene or other packaging material have been left between elements of the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
9. If the machine is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use and contact Customer Support.
10. There may be a trace of smoke or odor when the unit is first operated. This indicates that a drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not re-occur.

LOCATION SAFETY

1. For residential use only. Do not use outdoors.
2. Ensure that the heater and power cord are placed in a safe, stable, secure surface to prevent tripping and eliminate the risk of tipping over.
3. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
4. Children should be supervised to ensure that they do not play with the appliance.
5. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.

6. This heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.

ELECTRICITY SAFETY

1. Always unplug heater when not in use.
2. If your home is wired with aluminum, have a licensed electrician check the outlet connections. Aluminum cord connections may cause safety problems when using a 1400 watt heater.
3. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
4. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
5. Always plug heater directly into a wall outlet/receptacle.
6. Never use with an extension cord or relocatable power tap (outlet/power strip).
7. This appliance has a polarized plug (one prong is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to rig this safety feature.
8. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
9. It is normal for the plug to feel warm to the touch.
10. A plug or cord which becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging the heater into a worn outlet/receptacle may result in overheating of the power cord or fire.
11. To disconnect the heater, first turn off the product, then grip the plug body and pull it from the wall outlet. Never pull by the cord.

HYPERTHERMIA SAFETY

1. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
2. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.
3. CAUTION - High temperature, keep electrical cords, drapery, and other furnishings at least 3 feet (0.9 m) from the front of the heater and away from the side and rear.



Check the appliance regularly and refer to
TROUBLESHOOTING or contact
our customer support :

 
- Power cord or plug is damaged.
- Loud noise, unusual smell or excessive heat.

FOR HOUSEHOLD USE ONLY
READ AND SAVE
THESE INSTRUCTIONS

02

KNOWING YOUR HEATER

Package Contents

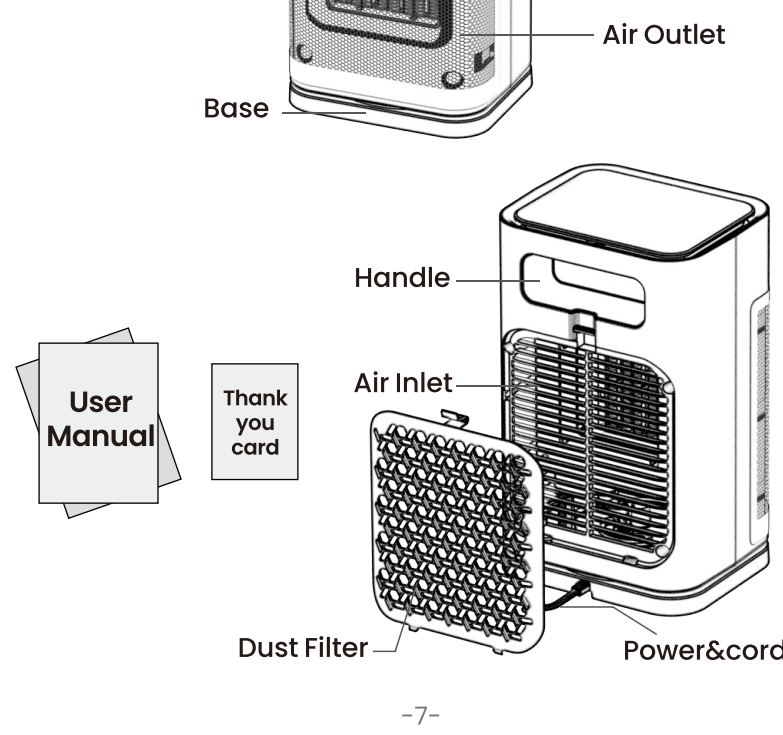

03

USING YOUR HEATER

Control Panel

	Power On/Off Touch to turn the heater on or off. Note: -When the heater is plugged into the electric outlet, the screen will show flashing. -Once turned off, the fan will continue to run for 15 seconds to blow out the remaining heat.
	Oscillation & Night Light ① Touch to turn on or off oscillation. ② Long touch 3 seconds to turn on or off the night light.
	Timer Twist the knob counterclockwise to set a timer cycle through: 0H->2H->4H->6H->8H->0H Note: -When a timer is set, the screen displays switched between the heat level and the remaining time. -To cancel, set the timer to 0H.

Mode Setting
Twist the knob clockwise to set work mode cycle through:
3(High) -> 2(Medium) -> 1(Low) -> -> 3(High)
Note:
-Power-up default fan 3(High);
- Means only fan mode.

More Features

Tip-Over Protection When the heater is tipped over, it will shut off automatically with the error code "ET" on the display.	
Overheat Protection When the heater overheats, it will shut off automatically with the error code "ET" on the display.	

04

CLEANING & MAINTENANCE

Always turn off and unplug before cleaning.

Outer Surface
Use a soft, dry cloth to gently wipe clean the outer surface.

Dust Filter
1. Remove the filter from the back.
2. Rinse the dust filter with running water.
3. Wait until dry.

TIP: For best performance, please clean the filter every 2-4 weeks.

Air Inlet
Use a soft, dry cloth or a cotton-tipped swab to remove any dust from the air inlet.

ATTENTION

DO NOT unscrew the unit.

DO NOT use cleaning agents.

DO NOT use abrasives scrubbers

Fire or electrical shock hazard. DO NOT immerse the main unit in water. NEVER allow water to get inside the heater.

Except for cleaning, any servicing should be performed by an authorized service representative.

Store in a cool, dry area and keep the cable out of high-traffic areas to avoid tripping hazards.

05


TROUBLESHOOTING

Problem	Possible Cause	Solution
The LED display shows "ET"	Tip-Over Protection	Place the heater back on a flat, level and stable surface.
	Overheat Protection	Unplug and wait for it to cool down before plugging in again.
Heater does not start	Power cord is not properly plugged in.	Connect the plug to a powered electrical outlet.
	Overheat protection has been activated.	Unplug and allow it to cool. Remove any objects on or near the heater.
	No power is passing through the unit	Ensure that your circuit breaker or fuse is working properly. Ensure that your heater is placed on a flat, level and even surface.
The heater suddenly stops during heating	The temperature exceeds the threshold of the thermal cut off.	Turn off and unplug the unit. Allow it to cool and plug into the electrical outlet again.
	The heater is tipped over.	Place it on a flat, level and stable surface

*If your problem is not listed or still persists, contact our Customer Support (see page 14).

06

 PRODUCT SPECIFICATIONS

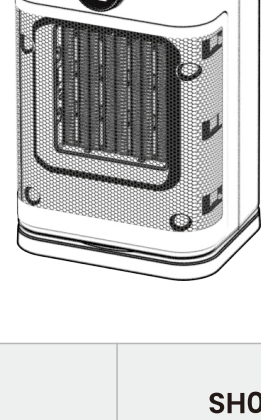

Model	SH001
Input	120V~60Hz
Rated Power	1400W
Dimension	5.32*6.3*10.24inch (13.5*16*26cm)
Weight	1.5kg

07

CUSTOMER CARE

Default 12-Month Warranty

This appliance is covered by Cegsin warranty for 12 months from the date of its original purchase.

Extend Your Warranty For Free

Extend your warranty by registering your new appliance on our website www.cegsin.com/pages/warranty

The warranty will not apply in cases of:

1. Accident, misuse, or repairs performed by unauthorized personnel.
2. Any unit that has been tampered with or used for commercial purposes.
3. Normal wear and tear of wearable parts.
4. Use of force, damage caused by external influences.
5. Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or noncompliance with the instructions.
6. Partially or completely dismantled appliances.
7. Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by Cegsin.

We can only provide after-sales service for products that are sold by Cegsin or Cegsin authorized retailers and distributors. If you have purchased the appliance from a different place, please contact your seller for return and warranty issues.

NOTE: If you experience a problem, please contact consumer service first. Do not Attempt to open the motor housing yourself, doing so may void your warranty and cause damage to the product or personal injury.

We're Here to Help!