





V1

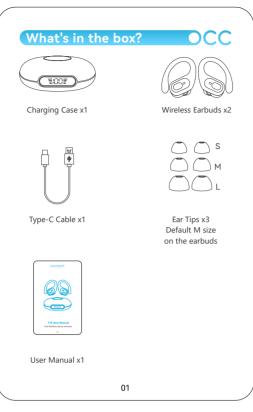

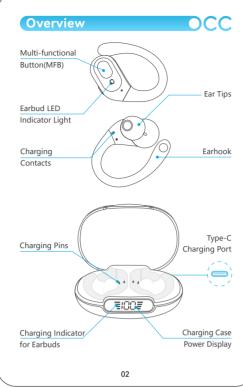

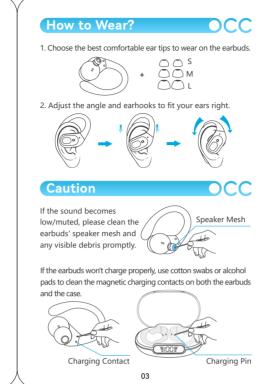

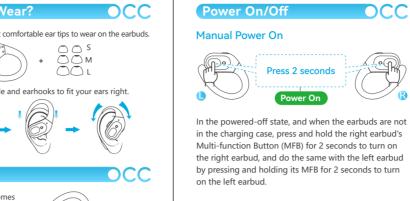



If the earbuds are not in the charging case, press and hold on either earbud's MFB for 5 seconds, both earbuds will power off together.

(Note: The earbuds cannot be turned off manually while music is playing/while on a call)

04

Pairing

(Prior to first use - Please ensure that both the earbuds and the charging case are fully charged.)





 Take out both earbuds from the charging case, both earbuds will power on automatically and enter pairing mode.


(Note: In pairing mode, one earbud's indicator flashes a blue light rapidly, while the other earbud's indicator blinks blue slowly.)


2. Then, search "T19" in the Bluetooth list on your divice, click to connect.

Note: The earbuds will reconnect to the paired device by priority. If you want to pair to the second device, please disconnect Bluetooth on the paired device or turn off the Bluetooth.

If the earbuds are not connected to any devices over 5 minutes, they will automatically power off.

05

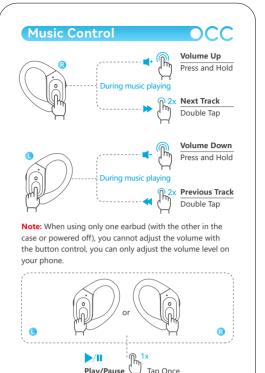

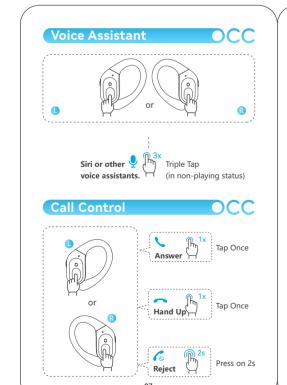



When should I reset?

When only one side plays music.

When you can't use both earbuds together.

When both earbuds fail to pair with each other or occur connection related issues.

How to reset T19?

Step 1: Ensure both earbuds are disconnected. Turn off Bluetooth on any nearby devices that are paired with the earbuds.

Step 2: Remove both earbuds from the case and press and hold the multi-function button (MFB) for 2 seconds to power them off manually.

Step 3: Press and hold the MFB for 5 seconds to manually power on the earbuds. Make sure they do not connect to any devices at this time.

Step 4: Tap both earbuds' MFB 5 times. The earbud indicator light will flash blue three times, then the earbuds will power off, and the reset is complete.



After resetting, manually power on both earbuds. They will enter pairing mode again. Turn on Bluetooth on your device and search for "T19" to connect.

If it shows "Unsuccessfully connected," please unpair or delete all "T19" records on your device and then search for "T19" to connect again.

Charging

Earbuds Charging

The earbuds will reminds you with voice prompt "Low battery please Charge" when the battery life is lower than 15min, every 2min prompts.

DCC

Please put the earbuds into the charging case in time, they will automatically enter charging mode.

in the case




Note: You can check the power level of the earbuds in the Bluetooth list or in the notification bar after connecting them to your phone.

- LED lights will turn off once the earbuds fully charged

To avoid charging failures, please clean the charging contacts of the earbuds and the charging pins of the charging case promptly.

Charging Case Charging

After inserting the charging cable into the USB Type-C charging port on the case, the case will automatically start getting charged.

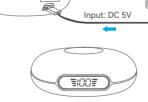

The LED screen will display an incremental change of power from 0 to 100 during charging. 100 indicates full charge.

How do I check the battery level of the charging case?

The case LED indicates the battery level when you place the earbuds into charging case or when the case is charging.

10

Product Parameters

Model No.	T19
Bluetooth Version	5.3
Charging Port	Type-C
Input	5V == 1A
Battery Capacity	Earbuds: 55mAh 3.7V, 0.204Wh Charging Case: 650mAh 3.7V, 2.405Wh
Earbuds Battery Life (60% default volume)	9.5h playback on single charge
Charging Time	1.5-2 hours for earbuds 2 hours for charging case
Transmission Range	33 feet (with no obstacle)

Usage Guide and Precautions

Please do not use it in environments with large electromagnetic fields / high radiation level. Bluetooth signal will be interfered with.

 Please do not keep the battery of the earphones is below 10%, which will result in insufficient audio output.
It is recommended to use the earbuds at sufficient battery.

In case of obstacles or multiple 2.4GHz signals in the same frequency band, Bluetooth signal will be interfered with, which may occur stuttering. Please do not put the Bluetooth earphones in water or apply excessive force on it, which may cause damage to the earphones and degraded sound quality.

5. Please charge the earbuds once every 30 days if it's not used for extended periods of time. Prevents failure to start due to lack of power when needed.

6. We may upgrade or modify the software or hardware and appearance of this product without notice to you.

Storage and Maintenance OCC

- 1. If the earbuds have been unused for more than 3 months, we recommend that you fully charge them before use.
- Please use chargers that are FCC (Federal Communications. Commission) approved.
- 3. Do not disassemble Earbuds.
- 4. Adult supervision is required for children age 6 and under
- 5. Do not expose the earbuds in high or low temperature, do not use the earbuds in a thunderstorm.
- 6. Avoid falling or violent impact of the device.
- 7. Keep the device away from fire.8. Do not put the device in water.
- 6. Do not use oil or any volatile liquid to clean this product.
- Do not use oil or any volatile liquid to clean this pro

12

FCC Warning Statement OCC

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and(2) this device must accept any interference received,

including interference that may cause undesired operation.

.