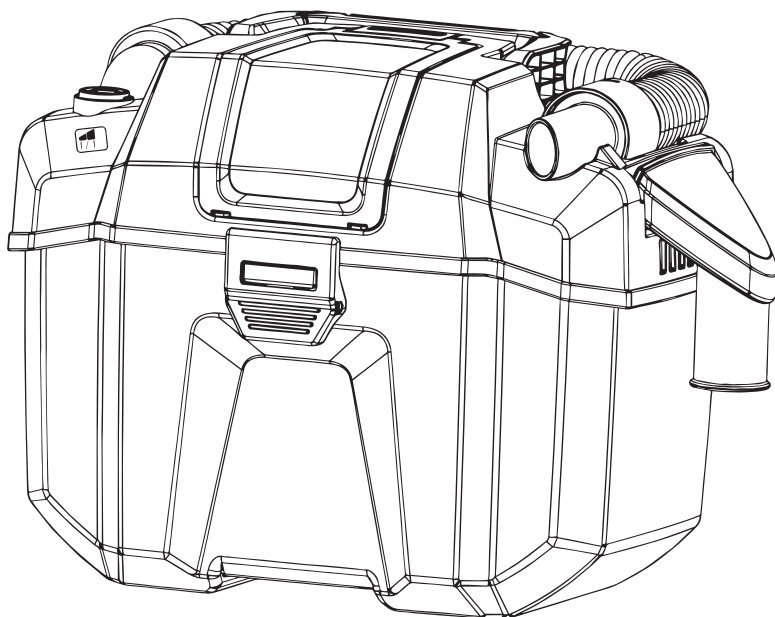


OPERATING INSTRUCTIONS

VACUUM CLEANER

TYPE: L10-Plus



For any questions and malfunctions of the appliance during use, please contact our customer service email: usa@imoosoo.com

Congratulations on the purchase of this high-quality product. Please read this operating instruction attentively before you take the appliance in operation. It gives important notes for security, the use and maintenance of the appliance. If you have further questions, please contact our customer service.

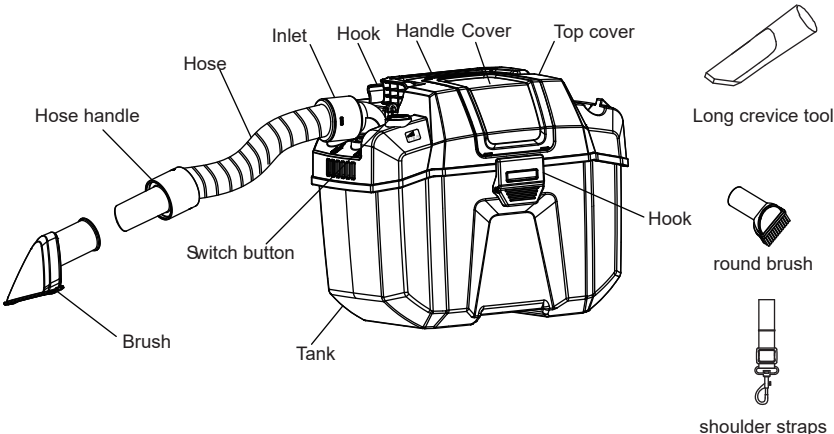
CONTENTS:

- Description of the appliance
- Appliance figure
- Important safety instructions
- Assembly
- Operation
- Cleaning and maintenance
- Error detection
- Technical data

DESCRIPTION OF THE APPLIANCE:








 







 
- Powerful and compact.
- Wet & Dry
- Multiple air filter system guarantees a hygienic cleaning.
- With special air-blowing function.
- Special parking position for easy use and space saving.
- User-friendly design.

APPLIANCE FIGURE:

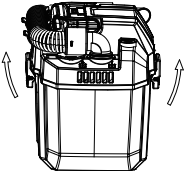
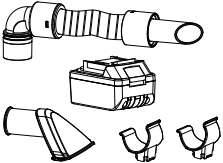
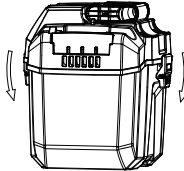
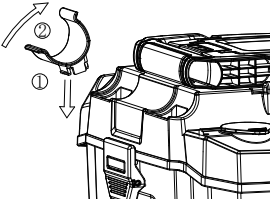
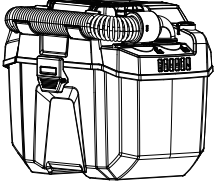
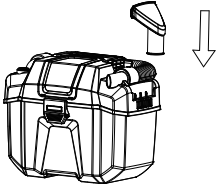


IMPORTANT SAFETY INSTRUCTIONS:

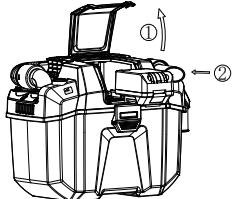
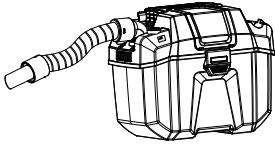
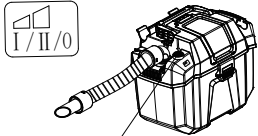

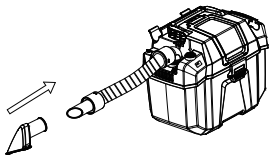
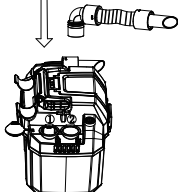
This appliance is not intended for use by persons(including children)with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

	<p>Do not vacuum any sharp-edged, hot or incandescent materials.</p>	
	<p>The appliance should not be exposed to heat.</p>	
	<p>Do not put any object into openings. Do not use with any opening blocked. Keep free of dust, lint, hair etc.</p>	
	<p>Do not use the vacuum cleaner without dust container or dust filter in place.</p>	
	<p>Do not vacuum any flour, cement etc, in order to avoid the overloads.</p>	
	<p>The appliance should be cleaned with a dry or damp cloth only; it should never immersed in water. Do not use any solvents for cleaning.</p>	
	<p>This appliance is intended for domestic use only and not for commercial applications.</p>	
	<p>The nozzle or brush should be avoided to touch the surface of the furniture.</p>	

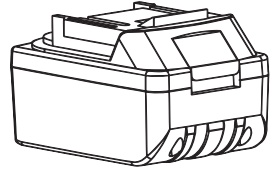
ASSEMBLY:

<p>Open the buckles, to release the top cover.</p>	
<p>Take out all accessories</p>	
<p>Fix the top cover back, and lock the buckles</p>	
<p>Hook assembly: 1. Insert the hook onto the right position on top cover. 2. Turn upward, enable the hook onto top cover completely.</p>	
<p>Fix the hose well</p>	
<p>Fix the brush onto the right position</p>	

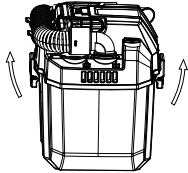
 
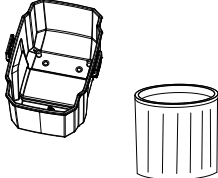
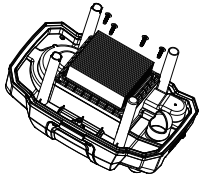
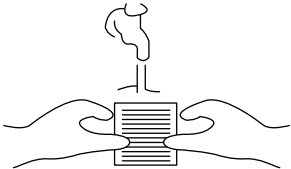
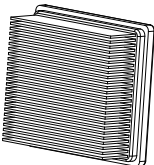
OPERATION:

<p>Assembly the battery pack: 1. open the cover 2. insert the battery pack</p>	
<p>Pull out the hose</p>	
<p>Push switch button, vacuum cleaner start to work. Remark: Press one time, working under low power. Press again, working under high power. Press again, power off</p>	 <p>Switch button</p>
<p>The light will be in green when working under low power. The light will be in red when working under high power</p>	
<p>Please attach the brush if you want to clean water from the ground .</p>	
<p>When inlet insert to position ①, it is air blowing function. When insert to position ②, it will be dust and water cleaning function. Remark: Please open the cover to start using blowing function, and put it back when finish.</p>	

Please take the battery for charging if it is lack of power or you will keep the appliance unused for a long time



CLEANING AND MAINTENANCE:

<p>Release the hook</p>	
<p>Take out the top cover</p>	
<p>Cleaning the dust</p>	
<p>Release 4pcs screws by tools, take out the filter</p>	
<p>Wash off the Filter with cleaning water. (In necessity)</p>	
<p>Dry the filter in cool and ventilated place Attention: Do not put it in the sunshine.</p> <p>Assemble the vacuum cleaner.</p>	

ERROR DETECTION:

Before you contact our service center, please check the following:

Problem	Problem	Problem
Motor does not start	- no battery - no power for the battery -Vacuum is not power on	- insert the battery - battery charging -Power on the vacuum
Suction power is weaker	-Unit is clogged -Filter is clogged -Top cover is not fixed well	-Remove the blockage. -Clean or change the filter - Fix well the top cover

GUARANTEE:

This product is guaranteed for a period of one year from the date of purchase. During this period we will remedy all defects free of charge, which can be demonstrably attributed to material or manufacturing defects, by repair or exchange.

This guarantee is only valid if the appliance has been used in accordance with the instructions and provided that it has not been modified, repaired or interfered with, by any unauthorized person, or damaged through misuse.

Battery pack rated voltage: DC18V

Power: 200W

Capacity: 10L

Running time: 30mins at low power and 16mins at high power

Vacuity : 10Kpa/17Kpa

Charge time: 8h