


Inflatable Leg Pillow Manual




Quick&Easy Inflation valve

Inflation

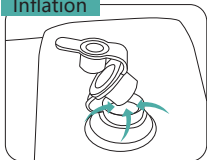


1. Blow air into larger; transparent valve firstly until it is 90% full.

Inflation

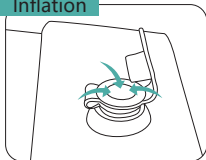


2. Close the black cap and open the upper transparent cap, keep blowing into the small, black valve till desired hardness

Closure

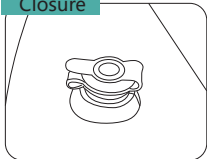

3. Close the transparent cover to prevent air leakage and can be used

Deflation

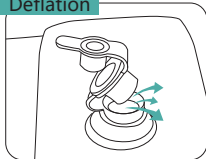


4. Pull open the black cover compress and deflate by hand

Inflation method



 
1 Expend the product




2 Connect the air bag and pillow



 3 Open the air bag to inflate



4 Squeeze the air into the pillow

 


5 Plug the air valve and press the exposed part to prevent leakage

★ **Tip:** You can also use it by blowing, but using an air bag to inflate will greatly improve your efficiency


Storage Tips



 
1. Vent the air from the pillow and lay it flat



 
2. Press from the middle to smoothly discharge more air outward



 3. Fold and repeat to the minimum area



 4. Leave a gap in the middle and fold the two sides inward



5. Fold the two sides into one piece and put it in the box

After-sales service

Thank you for your support

If you encounter problems in the process of use, such as appearance damage, missing parts, air leakage, etc., please contact us in time. We will provide free return service within 24 hours to help you solve the problem.

Cleaning method: wipe the surface with a wet towel


Note: This product is flocked material does not support soaking



Artificial surface design



Material	Thickened Flocked PVC
Load capacity	150 KG / 330. 7 LB

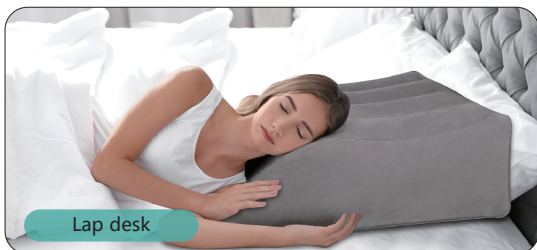



More instructions for use:
<https://blabok-vip.com/Usevideo>

Service Support:
support@blabok-vip.com

