


COSORI®

User Manual


Dual Basket 9.0-Quart Air Fryer

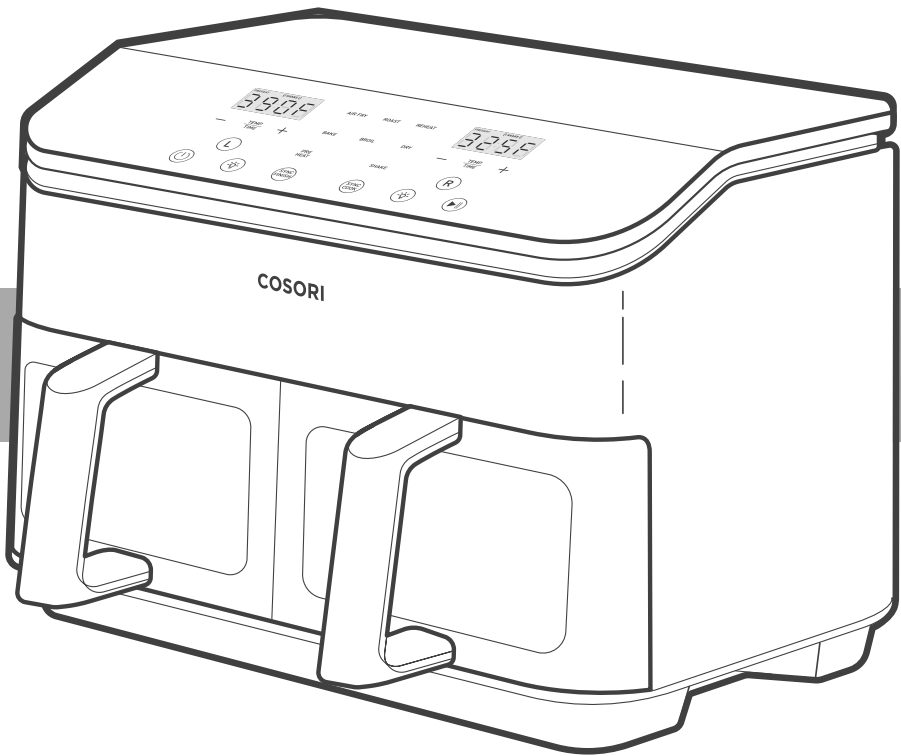

Questions or Concerns?

support@cosori.com | 1-888-402-1684

Mon–Fri, 9:00 am–5:00 pm PST/PDT

 Thank you for
your purchase! 

(We hope you love your new air fryer as much as we do)



Get Creative with COSORI

Download the free VeSync app to access original recipes and video tutorials from the COSORI chefs, interact with our online community, and more!



explore

our digital recipe gallery
cosori.com



enjoy

weekly, featured recipes
made exclusively by our in-house chefs



CONTACT OUR CHEFS

Our helpful, in-house chefs are ready to assist you with any questions you might have!

Email: recipes@cosori.com

Toll-Free: 1-888-402-1684

Mon–Fri, 9:00 am–5:00 pm PST/PDT

On behalf of all of us at COSORI,

Happy cooking!

Table of Contents

Package Contents	3
Specifications	3
Important Safeguards & Warnings	4
Getting To Know Your Air Fryer	7
Before First Use	10
Using Your Air Fryer	11
Care & Maintenance	18
Accessories	18
Troubleshooting	19
Limited Warranty Information	21
Customer Support	24

Package Contents

1 x Dual Basket 9.0-Quart Air Fryer
2 x Crisper Plate
1 x User Manual
1 x Recipe Book & Quick Reference Guide

Specifications

Model	CAF-R901-AUS
Power Supply	AC 120V, 60Hz
Rated Power	1,750W
Capacity	9.0 qt / 8.5 L (serves 3–5 people)
Temperature Range	95°–450°F / 35°–230°C
Time Range	1 min–48 hr
Dimensions (including handle)	17.3 x 15.4 x 11.9 in / 44.0 x 39.1 x 30.3 cm
Weight	19.2 lb / 8.7 kg

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS & WARNINGS

Follow basic safety precautions when using your air fryer. Read all instructions.

Key Safety Points

- **Do not** touch hot surfaces. Use handles.
- **Do not** block any ventilation openings. Hot steam is released through openings. Keep your hands and face clear of openings.
- **CAUTION:** The hot crisper plate may fall out when turning the basket over.

Note:

- *Firmly insert the crisper plate into the basket to reduce the chance of it falling out.*
- **Always** use tongs to carefully remove hot food.

General Safety

- To protect against electric shock, **do not immerse the air fryer** housing, cord, or plug in water or other liquids.
- Close supervision is necessary when the air fryer is used by or near children.
- Unplug when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- **Do not** use your air fryer if it is damaged, not working, or if the cord or plug is damaged. Contact **Customer Support** (see page 24).
- **Do not** use third-party replacement parts or accessories, as this may cause injuries.
- **Do not** use outdoors.
- **Do not** place the air fryer or any of its parts on a stove, near gas or electric burners, or in a heated oven.
- Be extremely cautious when moving your air fryer (or removing the basket) if it contains hot oil or other hot liquids.
- **Always** place the crisper plate on a heat-resistant surface after removing it from the basket.
- **Do not** clean with metal scouring pads. Metal fragments can break off the scouring pad and touch electrical parts, creating a risk of electric shock.
- **Do not** place anything on top of your air fryer. **Do not** store anything inside your air fryer.
- **Only** use your air fryer as directed in this manual.
- This air fryer is **not** to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Do not** allow children to clean or perform maintenance on the air fryer.
- Children should be supervised to ensure that they **do not** play with the appliance.
- This air fryer is not intended to be operated by means of an external timer or separate remote-control system.
- Not for commercial use. Household use **only**.


While Air Frying

- An air fryer works with hot air **only**. **Never** fill the basket with oil or fat.
- **Never** use your air fryer without the basket in place.
- **Do not** place oversized foods or metal utensils into your air fryer.
- **Do not** overfill the air fryer basket. Heaping amounts of food may touch the heating coils and cause a fire hazard.
- **Do not** use cooking sprays with propellants. Propellants may damage the air fryer basket's coating.
- **Do not** touch the basket or crisper plate during or immediately after air frying.
- **Do not** place paper, cardboard, non-heat-resistant plastic, or similar materials into your air fryer. You may use parchment paper or foil.
- **Never** put baking paper, parchment paper, or foil into the air fryer without food on top. Air circulation can cause paper to lift and touch heating coils.
- **Always** use heat-safe containers. Be extremely cautious if using containers that aren't metal or glass.
- Keep your air fryer away from flammable materials (curtains, tablecloths, etc.). Use on a flat, stable, heat-resistant surface away from heat sources or liquids.
- Immediately turn off and unplug your air fryer if you see dark smoke coming out. White smoke is normal, caused by heating fat or food splashing, but dark smoke means that food is burning or there is a circuit problem. Wait for smoke to clear before pulling the basket out. If the cause was not burnt food, contact **Customer Support** (page 24).
- **Do not** leave your air fryer unattended while in use.

- To turn the air fryer off, press \odot once. \odot will remain orange and all other buttons will turn off.
- To unplug, grab the plug and pull from the outlet. **Never** pull from the power cord.

Power & Cord

- If the power supply cord is damaged, it must be replaced by Arovast Corporation or similarly qualified persons in order to avoid an electric or fire hazard. Please contact **Customer Support** (page 24).
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- **Do not** let the power cord (or any extension cord) hang over the edge of a table or counter, or touch hot surfaces.
- Remove and discard the plug's protective cover to prevent a choking hazard.
- Keep the air fryer and its cord out of reach of children.
- **Never** use an outlet below the counter when plugging in your air fryer.
- Your air fryer has a polarized plug (one prong is wider than the other), which fits into a polarized outlet only one way. If the plug does not fit, reverse the plug. If it still does not fit, **do not** use the plug in that outlet. **Do not** alter the plug in any way.
- Your air fryer should **only** be used with **120V, 60Hz** electrical systems. **Do not** plug into another type of outlet.

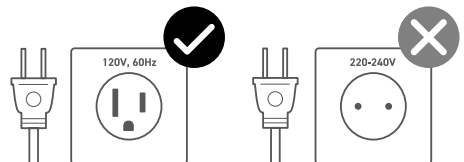

Extension Cords

- Longer extension cords are available and may be used if care is exercised in their use. If a longer extension cord is used:
 - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the air fryer.
 - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Electromagnetic Fields (EMF)

The COSORI Air Fryer complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

WARNING: *Items marked with the following symbol may reach high temperatures and should be handled carefully.*



CAUTION: Hot surface.

SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR AIR FRYER


Your COSORI Air Fryer uses rapid 360° air circulation technology to cook with little to no oil for quick, crispy, delicious food with up to 85% less oil* than deep fryers. With user-friendly, one-touch controls, two nonstick baskets, and an intuitive design, the COSORI Air Fryer is the star of your kitchen.

Note:

- **Do not** try to open the top of the air fryer. This is not a lid.
- The basket and crisper plate are made of aluminum metal with nonstick coating.

*Tested against deep-fried French fries.

Air Fryer Diagram

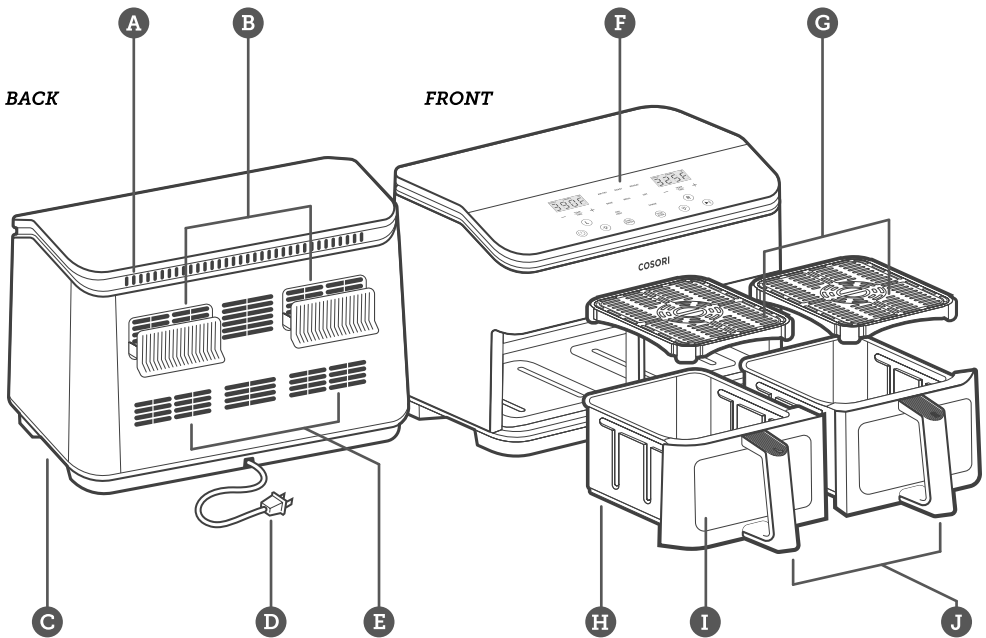

A. Air Inlet

B. Air Outlet

C. Housing Handles

D. Power Cord

E. Vents

F. Control Panel

G. Crisper Plate

H. Basket

I. Basket Window


J. Basket Handle

Display Diagram

Note:

- When you tap a button to use a cooking function, it will turn orange to show that it's active. Tapping again will deselect the function and return to air frying manually.
- To save or reset cooking functions, see **Cooking Function Settings** (page 11).

Control Panel

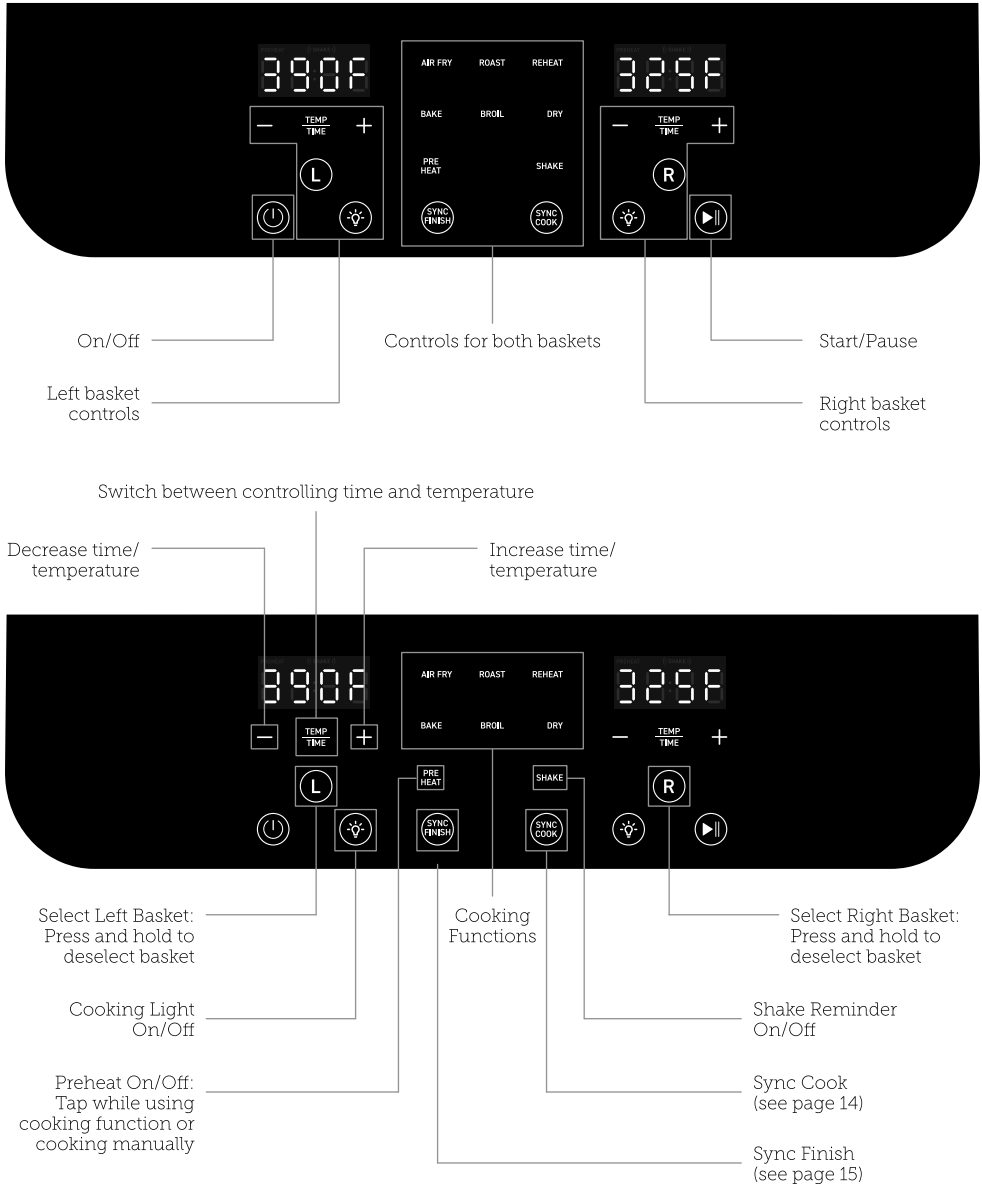

Display

Temperature display



Time display



Display Messages

A digital display on a black background. At the top left, the word "PREHEAT" is shown. At the top right, "(SHAKE)" is shown in parentheses. The main display shows "00:00" in a white, segmented font.	Cooking function has ended
A digital display on a black background. At the top left, the word "PREHEAT" is shown. At the top right, "(SHAKE)" is shown in parentheses. The main display shows "00:05" in a white, segmented font.	Reminder to shake or flip food
A digital display on a black background. At the top left, the word "PREHEAT" is shown. At the top right, "(SHAKE)" is shown in parentheses. The main display shows "00:00" in a white, segmented font.	Air fryer is preheated. Add food to the basket. Cooking will start when the basket is reinserted.
A digital display on a black background. At the top left, the word "PREHEAT" is shown. At the top right, "(SHAKE)" is shown in parentheses. The main display shows "00:00" in a white, segmented font.	Reinsert the basket.
A digital display on a black background. At the top left, the word "PREHEAT" is shown. At the top right, "(SHAKE)" is shown in parentheses. The main display shows "00:00" in a white, segmented font.	In Sync Finish, this basket does not start cooking until cooking time synchronizes with the other basket.

BEFORE FIRST USE

Setting Up

1. Remove all packaging from inside and outside the air fryer, including any temporary stickers and plastic wrap.
2. Place the air fryer on a stable, level, heat-resistant surface. Keep away from areas that can be damaged by hot air or steam (such as walls or cupboards).

Note: Leave at least 5 inches / 13 cm of space behind and above the air fryer. [Figure 1.1] Leave enough room in front of the air fryer to remove the basket.

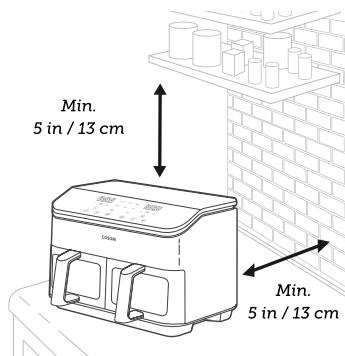


Figure 1.1

3. Wash the baskets and crisper plates thoroughly, using either a dishwasher or a non-abrasive sponge.

Note: There may be water spots on the basket window after washing. This is normal. Run the air fryer for 15 minutes to completely dry the basket.

4. Wipe the inside and outside of the air fryer with a slightly moist cloth. Dry with a towel.
5. Firmly insert the crisper plates into the baskets, then place the baskets inside the air fryer. [Figure 1.2]

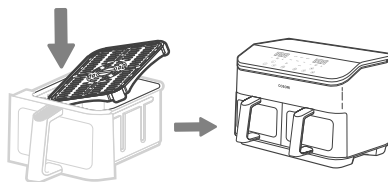


Figure 1.2

Test Run

A test run will help you become familiar with your air fryer, make sure it's working correctly, and clean it of possible residues in the process.

1. Make sure the air fryer baskets are empty and plug in the air fryer.
2. Tap \odot . The display will show "390°F" and "15 MIN".
3. Tap **SHAKE** to turn off the Shake Reminder and tap **PREHEAT** to remove preheat. Tap $\frac{\text{TEMP}}{\text{TIME}}$ and use + and - to set the temperature and time to "400°F" and "5 MIN".
4. Tap $\frac{\text{SYNC}}{\text{COOK}}$ to copy the settings from the left basket to the right basket.
5. Tap $\blacktriangleright\parallel$ to begin heating. When the test run is done, the air fryer will beep.
6. Pull out the baskets and let them cool for 5 minutes. Then place the empty baskets back in the air fryer.
7. Repeat steps 2–5 to thoroughly test the air fryer.
8. Pull out the baskets. This time, let the baskets cool completely for 10–30 minutes.

Note:

- Any air fryer may have a plastic smell from the manufacturing process. This is normal. If the plastic smell does not decrease after a test run, contact **Customer Support** (see page 24).
- Use caution when turning the basket over after cooking, as the hot crisper plate may fall out and create a safety hazard.

USING YOUR AIR FRYER

Air Frying

Note:

- **Do not** place anything on top of your air fryer. This is a fire hazard and will disrupt airflow, causing poor air frying results. **[Figure 2.1]**
- An air fryer is not a deep fryer. **Do not** fill the basket with oil, frying fat, or any liquid.
- Be careful of hot steam when taking the basket out of the air fryer.

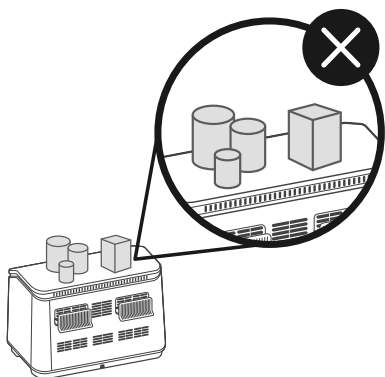


Figure 2.1

Cooking Functions Settings

Using a cooking function is the easiest way to air fry. Cooking functions are programmed with an ideal time and temperature for cooking certain foods.

- You can customize a function's time, temperature, Preheat settings, and Shake Reminder settings, unless noted.
- To customize a function:
 - Choose a function and adjust the time and temperature. Optionally, add/remove the Shake Reminder by tapping **SHAKE**, and add/remove Preheat by tapping **PREHEAT**.

Note: To rapidly increase or decrease time or temperature, press and hold the **+** or **-** buttons.

- Press and hold the function's button until the air fryer beeps one time.
- To reset a function:
 - Without making changes, press and hold the function's button and $\frac{\text{TEMP}}{\text{TIME}}$ at the same time for 3 seconds until the air fryer beeps one time.
- To reset all functions:
 - Press and hold **(L)** and **(R)** at the same time for 3 seconds until the air fryer beeps one time.

Cooking Chart

Results may vary. Check out our Recipe Book and Quick Start Guide for a guide to customizing functions for perfect results.

Note: The air fryer will remember the most recent cooking function settings the next time you turn on the air fryer.

Function	Default Temperature	Default Time	Preheat	Shake Reminder?*
AIR FRY	390°F / 200°C	15 min	Yes	Yes
ROAST	425°F / 220°C	10 min	Yes	Yes
REHEAT	330°F / 165°C	10 min	Yes	Yes
BAKE	325°F / 160°C	25 min	Yes	No
BROIL**	450°F / 230°C	5 min	Yes	No
Dehydrate (DRY)	130°F / 55°C	6 hr	No	No

*See **Shaking Food** (page 15)


Broil can **only be used with one basket at a time.

Air Frying with One Basket

If desired, you can use your air fryer with **only** the left or right basket.

 


1. Place the crisper plate into the basket. The crisper plate allows excess oil to drip down to the bottom of the basket.

Note: The crisper plate may not be used for all recipes, such as for muffins and breads.

2. Tap . The left basket is automatically selected.
3. Select a cooking function (see page 8).

Note: Cooking functions are programmed with an ideal time and temperature for cooking certain foods. You can also set a custom time and temperature without choosing a function.

To use the right basket only:

- a. Press and hold  for 3 seconds to deselect the left basket.
 - b. Tap  to select the right basket.
4. Optionally, adjust the temperature and time, add/remove Preheat, and add/remove a Shake Reminder. You can do this anytime during cooking.
 - a. Tap  to change temperature or time. The temperature or time will blink on the display.
 - b. Tap the **+** or **-** buttons to change the temperature or time.
- Note:**
- To rapidly increase or decrease time or temperature, press and hold the **+** or **-** buttons.

Air Frying with One Basket (cont.):

- If you do not tap $\frac{\text{TEMP}}{\text{TIME}}$, then tapping + or – will automatically change temperature.
- Tap **SHAKE** to add/remove a Shake Reminder.
 - Tap **PREHEAT** to add/remove Preheat.
- Tap $\blacktriangleright||$ to begin air frying.
 - If Preheat is selected, the air fryer will beep 3 times and show “**Add Food**” when preheating is finished. Add food to the basket.
 - If you added a Shake Reminder, it will appear halfway through cooking time. The air fryer will beep 5 times, and (**SHAKE**) will blink on the display.
 - Take the basket out of the air fryer, being careful of hot steam. The air fryer will pause cooking automatically, and the display will turn off until the basket is replaced.
 - Shake or flip the food.
 - Put the basket back into the air fryer.

Note: See **Shaking Food** (page 15).

- During cooking, tap ☼ to turn on the cooking light and monitor the cooking status of the food. The light will automatically turn off after 2 minutes.
- The air fryer will beep 3 times when finished. The display will show “**End**”.
- Take the basket out of the air fryer, being careful of hot steam. Use tongs or heat-safe utensils to remove food from the basket.

CAUTION: The hot crisper plate may fall out when turning the basket over.

- Make sure the basket is resting on a flat surface.
 - Watch for hot oil or fat collected in the basket. To avoid splashing, drain oil before replacing the basket. [Figure 3.1]
- Allow to cool before cleaning.

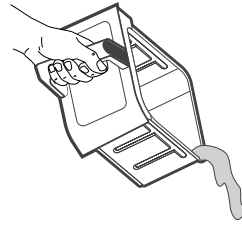


Figure 3.1

Air Frying with Two Baskets

Use your air fryer with two baskets to cook different foods at the same time. The left and right baskets can be controlled independently from one another.

- Place the crisper plates into the baskets. The crisper plate allows excess oil to drip down to the bottom of the basket.

Note: The crisper plate may not be used for all recipes, such as for muffins and breads.

- Tap ☺ . The left basket is automatically selected.
- Select a cooking function (see page 8).

Note: Cooking functions are programmed with an ideal time and temperature for cooking certain foods. You can also set a custom time and temperature without choosing a function.

- Optionally, adjust the temperature and time, add/remove Preheat, and add/remove a Shake Reminder. You can do this anytime during cooking.
 - Tap $\frac{\text{TEMP}}{\text{TIME}}$ to change temperature or time. The temperature or time will blink on the display.
 - Tap the + or – buttons to change the temperature or time.

Note:

- To rapidly increase or decrease time or temperature, press and hold the + or – buttons.
- If you do not tap $\frac{\text{TEMP}}{\text{TIME}}$, then tapping + or – will automatically change temperature.

Air Frying with Two Baskets (cont.):

- c. Tap **SHAKE** to add/remove a Shake Reminder.
- d. Tap **PREHEAT** to add/remove Preheat.

5. To cook with the left basket first, tap ►||.


Note: Broil can **only** be used with one basket at a time.

6. Tap (R) to select the right basket. Select a cooking function and adjust the temperature, time, Preheat, and Shake Reminder.
7. Tap ►|| to begin air frying with both baskets.

Note:

- To pause cooking, tap (L) or (R) to select a basket, then tap ►||.
 - The two baskets work independently, so Preheat, Shake Reminder, cooking time, etc. may differ between baskets.
8. If Preheat is selected, the air fryer will beep 3 times and show “**Add Food**” when preheating is finished. Add food to the left or right basket.
 9. If you added a Shake Reminder, it will appear halfway through cooking time. The air fryer will beep 5 times, and (SHAKE) will blink on the display.
 - a. Take the basket out of the air fryer, being careful of hot steam. The air fryer will pause cooking automatically, and the display will turn off until the basket is replaced.
 - b. Shake or flip the food.
 - c. Put the basket back into the air fryer.

Note: See **Shaking Food** (page 15).

10. During cooking, tap the left or right  to turn on the cooking light and monitor cooking status of the food. The light will automatically turn off after 2 minutes.
11. The left or right air fryer will beep 3 times when finished. The display will show “**End**”.

12. Take the basket out of the air fryer, being careful of hot steam. Use tongs or heat-safe utensils to remove food from the basket.


CAUTION: The hot crisper plate may fall out when turning the basket over.

- a. Make sure the basket is resting on a flat surface.
- b. Watch for hot oil or fat collected in the basket. To avoid splashing, drain oil before replacing the basket. **[Figure 3.1]**

13. Allow to cool before cleaning.

Sync Cook

The Sync Cook function mirrors settings across the air fryer, so the left and right baskets cook with the same time, temperature, Preheat, and Shake Reminder settings. This allows you to cook large quantities at one time.


 


1. Tap (L). The left basket is automatically selected.
2. Select a cooking function (see page 8).
3. Optionally, adjust the temperature and time, add/remove Preheat, and add/remove a Shake Reminder.
4. Tap  to copy the settings from one basket to the other basket. You can set the left or right basket and the settings will mirror to the other basket.
5. Tap ►|| to begin air frying with both baskets.

Note:

- If one or both baskets are currently cooking, Sync Cook will not work.
- Adjusting settings (time, temperature, Preheat, etc.) during Sync Cook will cancel the function.
- Broil **cannot** be used with Sync Cook.

Sync Finish

The Sync Finish function synchronizes the baskets to finish cooking at the same time.

1. Tap . The left basket is automatically selected.
2. Select a cooking function (see page 8).
3. Optionally, adjust the temperature and time, add/remove Preheat, and add/remove a Shake Reminder.
4. Tap  to select the right basket. Select a cooking function and adjust the settings.
5. Tap .
6. Tap  to begin air frying. The display for the basket with **the shorter cooking time** will show **“Hold”**.
7. When the cooking times on both baskets match (they have the same time remaining), the air fryer will beep and the other basket will automatically begin air frying.
8. Both baskets will finish cooking at the same time.

Note: *Adjusting cook settings (time, temperature, Preheat, etc.) during Sync Finish will cancel the function.*

Shaking Food

How to Shake

- During cooking, take the basket out of the air fryer and shake, mix, or flip the food.
 - a. To shake food:
 - Hold the basket handle just above a heat-resistant surface for safety purposes. Shake the basket.
 - b. If the basket is too heavy to shake:
 1. Place the basket on a heat-resistant holder or surface.
 2. Carefully shake the basket.

Note: *Do not use this method if there is a risk of hot liquids splashing.*

- c. If the basket is too heavy to shake and there are hot liquids present:

1. Place the basket on a heat-resistant holder or surface.
 2. Use tongs to mix or flip the food.
- When you take the basket out, the air fryer will pause cooking automatically. As a safety feature, the display will turn off until the basket is replaced.
 - When you replace the basket, cooking will automatically resume.
 - Avoid shaking longer than 30 seconds, as the air fryer may lose heat.

 
 
What to Shake

- Small foods that are stacked will usually need shaking, such as fries or nuggets.
- Without shaking, foods may not be crispy or evenly cooked.
- You can flip other foods, such as steak, to ensure even browning.

When to Shake

- Shake or flip food once halfway through cooking, or more if desired.
- The Shake Reminder is designed to remind you to check on your food. Tap **SHAKE** to turn on the Shake Reminder. Certain functions use the Shake Reminder automatically (see **Cooking Function Settings**, page 12).

Shake Reminder

- The Shake Reminder will alert you with 5 beeps, and  will blink on the display.
- If you do not remove the basket, the Shake Reminder will beep again after 1 minute and the display will show a solid .
- The Shake Reminder will go away once you take out the basket.

Cooking Guide

Overfilling

- If the basket is overfilled, food will cook unevenly.
- **Do not** pack in food. Heaping amounts of food may touch the heating coils and cause a fire hazard.

Using Oil

- Adding a small amount of oil to your food will make it crispier. Use no more than 2 US tbsp / 30 mL of oil.
- Oil sprays are excellent for applying small amounts of oil evenly to all food items.
- **Do not** use cooking sprays with propellants. Propellants may damage the air fryer basket's nonstick coating.

Food Tips

- You can air fry any frozen foods or goods that can be baked in an oven.
- To make cakes, hand pies, or any food with filling or batter, place food in a heat-safe container before placing in the basket.
- Air frying high-fat foods will cause fat to drip to the bottom of the basket. To avoid excess smoke while cooking, pour out fat drippings after cooking.
- Liquid-marinated foods create splatter and excess smoke. Pat these foods dry before air frying.

French Fries


- Add ½–1 US tbsp / 8–15 mL oil for crispiness.
- When making fries from raw potatoes, soak uncooked fries in water for 15 minutes to remove starch prior to frying. Pat dry with a towel before adding oil.

- Cut uncooked fries smaller for crispier results. Try cutting fries into ¼- by 3-inch / 0.6- by 7.6- cm strips.

 
Note: For recipes and cooking inspiration, check out the *VeSync* app and *Recipe Book*.

More Functions


Monitor Cooking Status

- Tap  to turn the cooking light on/off.
- View the food cooking through the clear basket window without removing the basket from the air fryer.

Note:

- The cooking light will automatically turn off after 2 minutes.
- When the air fryer is cooking and you reinsert the basket or tap  the cooking light will turn off after 30 seconds.

 
 
 
Switching Temperature Units

- Press and hold  for 3 seconds.
- The air fryer will beep once, and the temperature unit will change from Fahrenheit to Celsius.
- Repeat to switch back to Fahrenheit.

Turn Sound On/Off

- Press and hold **PREHEAT** and **SHAKE** at the same time for 3 seconds until the air fryer beeps once.
- Repeat to turn the sound back on.

Pausing

- Tap  to pause cooking. The air fryer will stop heating, and  will blink until you tap  to resume cooking.
- After 3 minutes of inactivity, the air fryer will turn off.
- This allows you to pause the cooking function without removing the basket from the air fryer.

Automatically Resume Cooking

- If you pull out the basket, the air fryer will pause cooking automatically.
- When you return the basket, the air fryer will automatically resume cooking based on your previous settings.

Automatic Shutoff

- If the air fryer has no active cooking functions, the air fryer will clear all settings and turn off after 3 minutes of inactivity.

CARE & MAINTENANCE

Note:

- **Always** clean the air fryer baskets and crisper plates after every use.
 - Lining the basket with foil (except the crisper plate) may make cleanup easier.
1. Turn off and unplug the air fryer. Allow it to cool completely before cleaning. Pull out the baskets for faster cooling.
 2. Wipe the outside of the air fryer with a moist cloth, if necessary.
 3. The baskets and crisper plates are dishwasher-safe. You can also wash them with hot, soapy water and a non-abrasive sponge. Soak if necessary.

Note:

- The baskets and crisper plates have a nonstick coating. Avoid using metal utensils and abrasive cleaning materials.
 - There may be water spots on the basket window after washing. This is normal. Run the air fryer for 15 minutes to completely dry the basket.
4. For stubborn grease:
 - a. In a small bowl, mix 2 US tbsp / 30 mL of baking soda and 1 US tbsp / 15 mL of water to form a spreadable paste.

- b. Use a sponge to spread the paste on the basket and crisper plate and scrub. Let them sit for 15 minutes before rinsing.
 - c. Wash basket and crisper plate with soap and water before using.
5. Clean the inside of the air fryer with a slightly moist, non-abrasive sponge or cloth. **Do not** immerse in water. If needed, clean the heating coil to remove food debris. [Figure 4.1]
 6. Allow the air fryer to dry completely before use.

Note: Make sure the heating coil is completely dry before turning on the air fryer.

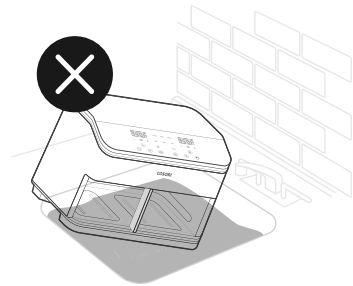


Figure 4.1

ACCESSORIES

Additional and replacement accessories are available for your air fryer. For more information, contact **Customer Support** (see page 24).

TROUBLESHOOTING

Problem	Possible Solution
The air fryer will not turn on.	Make sure the air fryer is plugged in.
	Push the basket securely into the air fryer.
Food is not completely cooked.	Place smaller batches of food items into the basket. If the basket is overstuffed, then foods will be undercooked.
	Increase cooking temperature or time.
Food is cooked unevenly.	Food that is stacked on top of each other or close to each other needs to be shaken or flipped during cooking (see Shaking Food , page 15).
Food is not crispy after air frying.	Spraying or brushing a small amount of oil on foods can increase crispiness (see Cooking Guide , page 16).
French fries are not cooked correctly.	See French Fries , page 16.
Basket will not slide into the air fryer securely.	Make sure the basket is not overfilled with food.
	Make sure the crisper plate is securely inside the basket.
White smoke or steam is coming out of the air fryer.	The air fryer may produce some white smoke or steam when you use it for the first time or during cooking. This is normal.
	Make sure the basket and the inside of the air fryer are cleaned properly and not greasy.
	Cooking greasy foods will cause oil to collect beneath the crisper plate. This oil will produce white smoke, and the basket may be hotter than usual. This is normal and should not affect cooking. Handle basket with care.
Dark smoke is coming out of the air fryer.	Immediately unplug your air fryer. Dark smoke means that food is burning or there is a circuit problem. Wait for smoke to clear before pulling the basket out. If the cause was not burnt food, contact Customer Support (see page 24).
The air fryer has a plastic smell.	Any air fryer may have a plastic smell from the manufacturing process. This is normal. Follow the instructions for a Test Run (page 10) to get rid of the plastic smell. If a plastic smell is still present, please contact Customer Support (see page 24).
Basket window is dirty or foggy.	Wash the basket in the dishwasher. Make sure it is dried thoroughly.
Cooking time is longer when using both baskets.	This is normal. Large quantities of food may take longer to cook.
Display shows Error Code "E1"	There is an open circuit in the temperature monitor of the left basket. Contact Customer Support (see page 24).
Display shows Error Code "E2"	There is a short circuit in the temperature monitor of the left basket. Contact Customer Support (see page 24).
Display shows Error Code "E21"	There is an open circuit in the temperature monitor of the right basket. Contact Customer Support (see page 24).
Display shows Error Code "E22"	There is a short circuit in the temperature monitor of the right basket. Contact Customer Support (see page 24).
Display shows Error Code "E3"	The air fryer's overheat protection has activated. Turn off and unplug the air fryer and allow it to cool completely. If the display continues to show "E3", contact Customer Support (see page 24).
Display shows Error Code "E4"	The air fryer has been plugged into a over 165V outlet. Turn off and unplug the air fryer. Only use the air fryer with 120V, 60Hz outlets.

If your problem is not listed, please contact **Customer Support** (see page 24).

FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT - PART 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC SUPPLIER'S DECLARATION OF CONFORMITY (SDOC)

Arovast Corporation hereby declares that this equipment is in compliance with FCC requirements. The declaration of conformity may be consulted in the support section of our website, accessible from www.cosori.com/usa/compliance

LIMITED WARRANTY INFORMATION

Product Name	Dual Basket 9.0-Quart Air Fryer
Model	CAF-R901-AUS
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
Date of Purchase	
Order ID	

TERMS & POLICY

Register your products at <https://warranty.cosori.com/warranty> to stay up to date with important product information such as product updates, limited warranties, usage and maintenance recommendations, and notifications concerning safety warnings or product recalls. Registration is not required to claim your limited warranty.

Two (2) Year Limited Consumer Product Warranty

Arovast Corporation ("Arovast") warrants that the product shall be free from defects in material and workmanship for a period of **2 years from the date of original purchase** ("Limited Warranty Period"), provided the product was used in accordance with its use and care instructions (e.g. in the intended environment and under normal circumstances).

Your Limited Warranty Benefits

During the Limited Warranty Period and subject to this limited Warranty Policy, Arovast will, in its sole and exclusive discretion, either (i) refund the purchase price if the purchase was made directly from the online COSORI store, (ii) repair any defects in material or workmanship, (iii) replace the product with another product of equal or greater value, or (iv) provide store credit in the amount of the purchase price.

Who Is Covered?

This limited warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product, regardless of whether the product transferred ownership during the specified term of the limited warranty. The original consumer purchaser must provide verification of the defect or malfunction and proof of the date of purchase to claim the Limited Warranty Benefits.

Be Aware of Unauthorized Dealers or Sellers

This limited warranty does not extend to products purchased from unauthorized dealers or sellers. Arovast's limited warranty only extends to products purchased from authorized dealers or sellers that are subject to Arovast's quality controls and have agreed to follow its quality controls. Please be aware, products purchased from an unauthorized website or dealer may be counterfeit, used, defective, or may not be designed for use in your country. You can protect yourself and your products by making sure you only purchase from Arovast or its authorized dealers.

If you have any questions about a specific seller, or if you think you may have purchased your product from an unauthorized seller, please contact our Customer Support via support@cosori.com.

What's Not Covered?

- Normal wear and tear, including parts that might wear out over time (e.g. batteries, filters, cleaning brush, essential oil pads, etc.).
- If the proof-of-purchase has been altered in any way or is made illegible.

- If the model number, serial number or production date code on the product has been altered, removed or made illegible.
- If the product has been modified from its original condition.
- If the product has not been used in accordance with directions and instructions in the user manual.
- Damages caused by connecting peripherals, additional equipment or accessories other than those recommended in the user manual.
- Damages or defects caused by accident, abuse, misuse, or improper or inadequate maintenance.
- Damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Arovast.
- Damages or defects occurring during commercial use, rental use, or any use for which the product is not intended.
- If the unit has been damaged, including but not limited to damage by animals, lightning, abnormal voltage, fire, natural disaster, transportation, dishwasher, or water (unless the user manual expressly states that the product is dishwasher-safe).
- Incidental and consequential damages.
- Damages or defects exceeding the cost of the product.

Claiming Your Limited Warranty Service in 5 Simple Steps:

1. Make sure your product is within the specified limited warranty period.
2. Make sure you have a copy of the invoice and order ID or proof-of-purchase.
3. Make sure you have your product.
DO NOT dispose of your product before contacting us.
4. Contact our Customer Support team via support@cosori.com.
5. Once our Customer Support team has approved your request, please return the product with a copy of the invoice and order ID.

Sole and Exclusive Remedy

THE FOREGOING LIMITED WARRANTY CONSTITUTES AROVAST CORPORATION'S EXCLUSIVE LIABILITY, AND YOUR SOLE AND EXCLUSIVE REMEDY, FOR ANY BREACH OF ANY WARRANTY OR OTHER NONCONFORMITY OF THE PRODUCT COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT. THIS LIMITED WARRANTY IS EXCLUSIVE, AND IN LIEU OF ALL OTHER WARRANTIES. NO EMPLOYEE OF AROVAST CORPORATION OR ANY OTHER PARTY IS AUTHORIZED TO MAKE ANY WARRANTY IN ADDITION TO THE LIMITED WARRANTY IN THIS LIMITED PRODUCT WARRANTY STATEMENT.

Disclaimer of Limited Warranties

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, EXCEPT AS WARRANTED IN THIS LIMITED PRODUCT WARRANTY POLICY, AROVAST CORPORATION PROVIDES THE PRODUCTS YOU PURCHASE FROM AROVAST CORPORATION "AS IS" AND AROVAST CORPORATION HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, STATUTORY, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR PARTICULAR PURPOSE.

Limitations of Liability

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, IN NO EVENT WILL AROVAST CORPORATION, ITS AFFILIATES, OR THEIR LICENSORS, SERVICE PROVIDERS, EMPLOYEES, AGENTS, OFFICERS, OR DIRECTORS BE LIABLE FOR:

(a) DAMAGES OF ANY KIND ARISING OUT OF OR IN CONNECTION WITH PRODUCTS PURCHASED FROM AROVAST CORPORATION IN EXCESS OF THE PURCHASE PRICE PAID BY THE PURCHASER FOR SUCH PRODUCTS, OR

(b) INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES EVEN IF AROVAST CORPORATION OR ONE OF ITS SUPPLIERS HAS BEEN ADVISED OF THE POSSIBILITY OR LIKELIHOOD OF SUCH DAMAGES.

AND REGARDLESS OF WHETHER CAUSED BY TORT (INCLUDING NEGLIGENCE), BREACH OF CONTRACT, OR OTHERWISE. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.

EXCEPT AS COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT, AROVAST CORPORATION SHALL NOT BE LIABLE FOR COSTS ASSOCIATED WITH THE REPLACEMENT OR REPAIR OF PRODUCTS PURCHASED FROM IT, INCLUDING, BUT NOT LIMITED TO, LABOR, INSTALLATION, OR OTHER COSTS INCURRED BY THE USER AND, IN PARTICULAR, ANY COSTS RELATING TO THE REMOVAL OR REPLACEMENT OF ANY PRODUCT.

OTHER RIGHTS YOU MAY HAVE

SOME JURISDICTIONS DO NOT ALLOW FOR: (1) EXCLUSION OF IMPLIED WARRANTIES; (2) LIMITATION ON THE DURATION OF IMPLIED WARRANTIES; AND/OR (3) EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES; SO THE DISCLAIMERS IN THIS POLICY MAY NOT APPLY TO YOU. IN THESE JURISDICTIONS YOU HAVE ONLY THE IMPLIED WARRANTIES THAT ARE EXPRESSLY REQUIRED TO BE PROVIDED IN ACCORDANCE WITH APPLICABLE LAW. THE LIMITATIONS OF WARRANTIES, LIABILITY, AND REMEDIES APPLY TO THE MAXIMUM EXTENT PERMITTED BY LAW.

ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS IN YOUR JURISDICTION. THIS STATEMENT OF LIMITED WARRANTY IS SUBJECT TO APPLICABLE LAWS THAT APPLY TO YOU AND THE PRODUCT. PLEASE REVIEW THE LAWS IN YOUR JURISDICTION TO UNDERSTAND YOUR RIGHTS FULLY.

CHANGES TO THIS POLICY

We may change the terms and availability of this limited warranty at our discretion, but any changes will not be retroactive.

This warranty is made by:

AROVAST CORPORATION

1202 N. Miller St., Suite A
Anaheim, CA 92806, USA

CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

Arovast Corporation

1202 N. Miller St., Suite A
Anaheim, CA 92806, USA

Email: support@cosori.com

Toll-Free: 1-888-402-1684

Support Hours

Mon–Fri, 9:00 am–5:00 pm PST/PDT

**Please have your invoice and order ID ready before contacting Customer Support.*

COSORI®

Questions or Concerns?

Mon–Fri, 9:00 am–5:00 pm PST/PDT
support@cosori.com | 1-888-402-1684