

7 IN 1 AIR STYLER

Use Guide



Get to know your 7 IN 1 Hot Air Styler Air Styling & Drying System.

Table of Contents

How it Works	1
Transform from styler to dryer	2
Get to Know Your Stylers	3
Left/Right-Wrap Curlers	4-5
Round Brush	6-7
Hair Straightener Brush	8-9
Hairdryer/Concentrator/Diffuser	10-11
Important Safety Instructions	12
Operating Instructions	13
Troubleshooting & Error Codes	14-15
Frequently Asked Questions	16-19

HOW IT WORKS



 
Note! After plug in the machine, you don't need to turn on the machine, press the Wind speed adjustment button 3s to start self-cleaning progress. Self-cleaning progress will stop after 8s. The protecting vent sheet can be taken off for cleaning in the mean time. It is recommended that it can be cleaned once a week.

Note: Please wear gloves when you replace the accessories or using it.

Transform from styler to dryer.

Styling Wand Mode / Hair Dryer Mode

Attach in Wand Mode

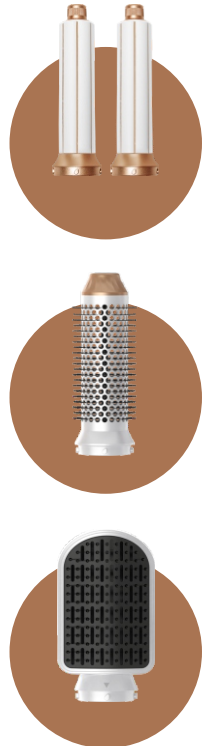

Attach in Dryer Mode



Get to know about your stylers.

1 30.5mm Left/Right-Wrap Curlers Hassle-free curls in seconds.

- Uses air power to automatically wrap hair around the barrel, from ends to roots
- 2 curler barrels to create curls in both directions

2 Round Brush Smooths & defrizzes, adds volume & bounce

- Smoothing bristles—on the rounded edge for grabbing, smoothing, and Shining
- Detangling bristles—in the middle for combing and detangling

3 Hair Straightener Brush Straighten & smooth all at once

- Smoothing bristles—to create added tension for straightening, smoothing, and shining
- Detangling bristles—for combing and detangling

4 Styling Concentrator Style & dry at the same time

- Rotates for easy styling

5 Curl-Defining Diffuser Fast, even drying from root to tip

- Use the lever to extend or retract the prongs for a customizable air flow
- Extended prongs—for longer, thicker hair or reaching and lifting the roots
- Retracted prongs—for shorter, finer hair or if the ends need a little extra air

6 Hairdryer Head Fast drying save your time

- 110,000 Rpm High-speed Brushless & Fast Drying.



Left/Right-Wrap Curlers.

Recommended Setting:  High temperature 130°C+High speed

30.5mm Left/Right-Wrap Curlers



Begin with **dried hair**. Separate 2-3 layers of your hair.

Tip: Apply hair products or styling agents as desired



Select the direction of the curls by choosing the corresponding barrel.

 


Hold the **middle** of a 1/2-inch-to-1-inch section of hair. Let the ends dangle.

Pro tip: Grab a section of hair that is a consistent length.



Turn on the Curling wand. Bring the barrel behind the dangling hair ends. The hair ends will **automatically wrap** around the barrel - no need to manually wrap.

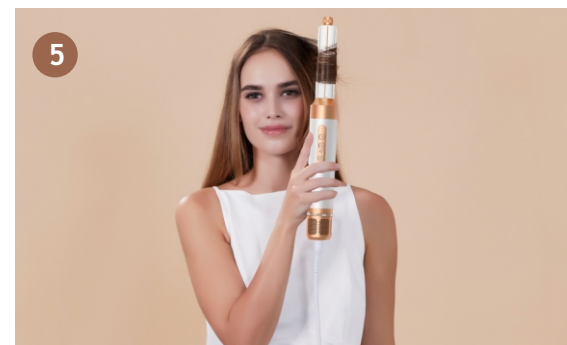

Once the hair ends wrap, let go of the hair section and slowly **bring the barrel directly to the roots**, allowing the hair to continue to wrap itself around the barrel.



For best results and to avoid heat damage, **hold the barrel in place for 10 seconds**, then press and hold the cool wind for at least 10 seconds. Repeat as needed until hair is dry. **Turn off the styling wand** and pull the barrel straight down to reveal your curl! **Pro Tip:** Use a setting or holding spray as desired for an even longer-lasting look.

 
Additional Styling Tips:

- Take smaller sections .
- Use sectioning clips to prevent unwanted hair from being wrapped around the barrel.
- For curly or coily hair, prep your hair for curling by lengthening it using the hair straightener brush or round brush.

Round Brush

Recommended Setting:  Medium temperature 75 °C+Middle speed

Round Brush

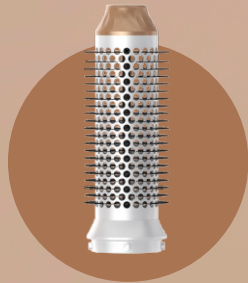

Begin with rough-dried or towel-dried hair.
Pro tip: Apply hair products or styling agents as desired.



Section your hair as desired. For voluminous blowouts, start by placing the round brush under the hair close to the roots.

Tip: For even more volume, hold the brush under your hair close to the roots for 3 seconds before brushing outwards.



Roll the brush outwards from the roots to the ends to engage the bristles and gently grip the hair.



Repeat on remaining sections until hair has been dried into a bouncy, voluminous style.

Tip: Set your style and help reduce frizz by setting the cold wind mode.

Additional Styling Tips:

- If you have fine hair, try reducing the airflow to help cut down on frizz.
- If you have thick hair, try increasing the heat for even faster results.
- If you have curly or coily hair, try increasing the heat to help achieve a straighter style.
- For an added curl, place the brush under the ends of the hair and roll the brush towards the roots to engage the bristles. Twist the hair off the brush to release the curl.

Hair Straightener Brush

Recommended Setting:  Medium temperature 75 °C+High speed

Hair Straightener Brush



Begin with **rough-dried or towel-dried hair**. Section your hair as desired.

Tip: Apply hair products or styling agents as desired.



For a smooth, sleek style, and massage head, start by placing the brush close to the roots to engage the detangling bristles.



Brush down your hair, **making sure to engage the smoothing bristles**, and gently grip the hair.

Tip: Hold the ends of your hair while brushing for added tension and smoothing.



Repeat on remaining sections until hair has been dried into a smooth, straight style.

 
Tip: Set your style and help reduce frizz by setting the cold wind mode.

Additional Styling Tips:

- If you have fine hair, try reducing the airflow to help cut down on frizz.
- If you have thick hair, try brushing smaller sections for smoother results.
- If you have curly or coily hair, try repeatedly brushing smaller sections and increasing the heat to help achieve a straighter style.
- For added volume, place the brush under the hair section close to the roots and brush upwards using a rounding motion.

Hairdryer for Fast dry

Hair dryer

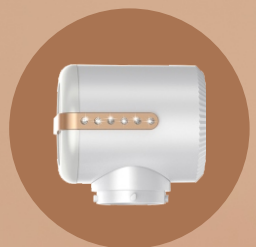

Styling Concentrator

Recommended Setting: High temperature
130°C + High speed



Curl-Defining Diffuser

Recommended Setting: cool wind + low speed

 


110,000 RPM
High Speed 310V DC Brushless Motor


Save 60% Faster Drying Time

Provides hair with natural shine

In depth scalp care and hair nourishment

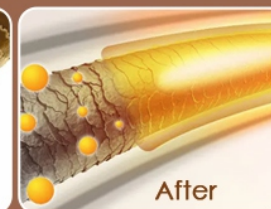

 - ✓ Protect hair scales
- ✓ Strong hair core
- ✓ Reduce root damage

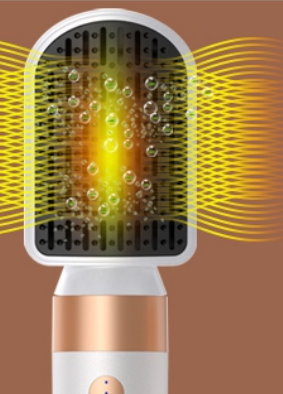

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

FOR HOUSEHOLD USE ONLY

READ ALL INSTRUCTIONS BEFORE USING—SAVE THESE INSTRUCTIONS

WARNINGS: KEEP AWAY FROM WATER

DANGER—

As with most electrical appliances, electrical parts are electrically live even when the switch is off.

⚠ WARNING

To reduce the risk of death by electric shock:

- 1. Always unplug the unit immediately after using.
- 2. Do not use while bathing.
- 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 4. Do not place in or drop into water or other liquid.
- 5. If an appliance falls into water, unplug the unit immediately. Do not reach into the water.

⚠ WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons:

- 1. An appliance should never be left unattended when plugged in.
- 2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- 3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water.

 
- 5. Keep the cord away from heated surfaces.
- 6. Do not wrap the cord around the appliance.
- 7. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- 8. Never use while sleeping.
- 9. Never drop or insert any object into any opening.
- 10. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 11. Do not use an extension cord with this appliance.
- 12. Do not direct hot air toward eyes or other heat sensitive areas.
- 13. Attachments may be hot during use. Allow them to cool before handling.
- 14. Do not place appliance on any surface while it is operating.
- 15. While using the appliance, keep your hair away from the air inlets.
- 16. Do not operate with a voltage converter.

OPERATING INSTRUCTIONS

- 1. Turn the styler on and off.
- 2. Adjust the airflow. Pressing the button allows you to choose a low, medium, or high airflow.
- 3. Adjust the temperature. Pressing the button allows you to choose no heat, low, medium or high temperature.
- 4. To attach any accessories included with your model, press them into the nozzle outlet. You will know they are properly attached when they click in place.
- 5. To remove any accessories included in your model, slide the lock down and lift the accessory off of the nozzle by holding onto the touchpoints identified in your Style Guide.
- 6. Button Lock push it up to lock the all button, push it down to unlock the all button.

Storage, Cord Safety, and Maintenance/Cleaning:

- Ensure the cord is not knotted, twisted, or wrapped around any nearby objects when in use.
- Store the unit in a dry location away from water and other heat sources.
- Regularly clean the filter at the bottom of the unit. The product needs to clean the following dust on a regular basis, otherwise it may affect the use after a long time. Because the accumulation of dust can cause the product's wind to fail to operate normally, the temperature increases, which may cause product be damaged. You only need to long press the Wind button for 3 seconds to clean the dust for 8 seconds (shutdown state). It is recommended that it can be cleaned once a week.

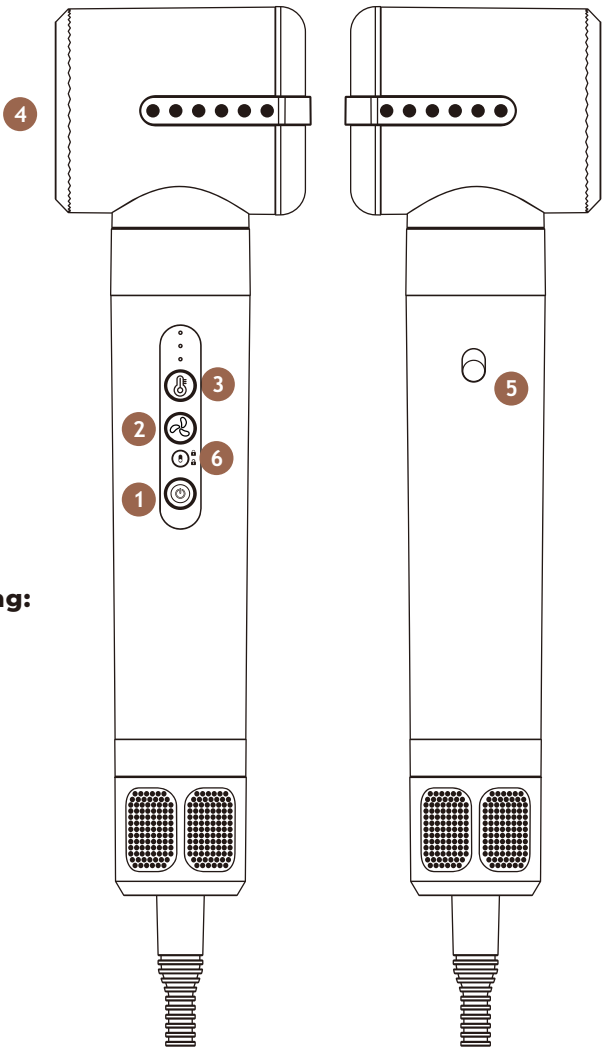

OPERATING INSTRUCTIONS

MAINTENANCE/CLEANING

Reduction in Airflow or Overheating A change in airflow or air power, airflow blockages, and/or visible buildup on the inlet at the bottom of the unit indicates your unit needs to be cleaned.

We recommend using a new toothbrush to clean off the filter at the bottom of the unit. And you only need to long press the Wind button for 3 seconds to clean the dust for 8 seconds(shutdown state).

It is recommended that it can be cleaned once a week.

ALCI OPERATION

Electricity flickers or trips circuit breaker during use.This dryer is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under abnormal conditions. Should the dryer turn off in use, press the red Reset button on the plug and the dryer should function normally. If the dryer does not reset, please check your circuit breaker. If the issue persists, ensure there are no other appliances plugged in within the room where the dryer is being used. Do not use the dryer with a power strip.

OVERHEATING

Hair dryer is overheating or shuts off.This unit is equipped with a temperature-protective thermostat. If for some reason your hair dryer overheats, the thermostat will automatically turn the unit off. To prevent power-down recurrence, unplug the hair dryer and set it aside to cool, or cool down using the cool shot button during use. Overheating may result if the unit is powered on for a long duration, or can indicate a blockage or dust buildup. We recommend using a new toothbrush to clean off the filter at the bottom of the unit.And you only need to long press the Wind button for 3 seconds to clean the dust for 8 seconds(shutdown state). It is recommended that it can be cleaned once a week. If overheating continues to occur, contact Customer Service at Amazon.

When not in use “unplug it.”

Allow the appliance to cool and store it in a dry location. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. the supply cord of this appliance becomes damaged the appliance must be replaced by returning to the retailer from which the product was purchased or a similarly qualified person in order to avoid a hazard.

Technical data

US: AC 110V~60Hz

EU/UK: AC 220~240V~50 Hz

Power: 1400W



Left/Right Auto-wrap Curling



Hair Straightener Brush



Round Brush



Hairdryer head



Smooth Nozzle



Diffuser

Frequently Asked Questions

Q: How to get service?

A: If you want to know more about using product -related information/product use, please contact us on Amazon, we will provide satisfactory services.

Q: Can I use the hair dryer outside the other country?

A: Please use it in the corresponding voltage. The U.S. voltage is AC 110V ~ 60Hz, The Europe voltage is 220-240V~50/60HZ. Using it in other countries is not recommended and it will damage your hair dryer.

Q: There is dust buildup on the filter on the bottom of the hair dryer. How do I clean it?

A: After plug in the machine, you don't need to turn on the machine, press the Wind speed adjustment button 3s to start self-cleaning progress. Self-cleaning progress will stop after 8s. The protecting vent sheet can be taken off for cleaning in the mean time. Slide the filter cover back into place before using the hair dryer again. We recommend cleaning the filter weekly to help maintain performance.

Q: The noise of the hair dryer seems to be getting worse over time. How do I fix it?

A: This could be a sign that your hair dryer needs to be cleaned. After plug in the machine, you don't need to turn on the machine, press the Wind speed adjustment button 3s to start self-cleaning progress. Self-cleaning progress will stop after 8s. The protecting vent sheet can be taken off for cleaning in the mean time. Slide the filter cover back into place before using the hair dryer again. We recommend cleaning the filter weekly to help maintain performance.

Q: The hair dryer keeps overheating. How do I prevent this?

A: This could be a sign that your hair dryer needs to be cleaned. After plug in the machine, you don't need to turn on the machine, press the Wind speed adjustment button 3s to start self-cleaning progress. Self-cleaning progress will stop after 8s. The protecting vent sheet can be taken off for cleaning in the mean time. Slide the filter cover back into place before using the hair dryer again. We recommend cleaning the filter weekly to help maintain performance and prevent overheating. This may also happen if the dryer has been operated for a long time without cooling. Set the dryer aside to cool. Make sure not to cover the filter with your hand when using the hair dryer, since that can cause the unit to overheat.

Q: My hair dryer is hot after use. How do I cool it down?

A: Set and hold the Cool Wind for at least 10 seconds before turning off your hair dryer to help cool it down.

Q: How and when should I use the Auto-Wrap Curlers?

A: Attach the Auto-Wrap Curlers to the hair dryer to create waves or curls with less heat. The Auto-Wrap Curlers use air to wrap your dried hair around the barrel and dry it in place. Reference your style guide to learn how to properly use the Auto-Wrap Curlers.

Q: What are the recommended settings for the Auto-Wrap Curlers?

A: We recommended using the high heat and high airflow settings with the AutoWrap Curlers.

Q: I'm having trouble wrapping my hair around the barrel. What can I do?

A: • Try taking a smaller section of hair to wrap.
• Try holding your hair section closer to or farther from the ends, for better pickup and wrap.
• Make sure to bring the barrel behind the ends of your hair section so that the tips will automatically wrap around the middle of the barrel.

Frequently Asked Questions

Q: How do I make my curls last longer?

- A:
- Prep your hair for curling by adding lightweight products such as a curlcreating serum, curl mousse, or a texture spray made for your hair type.
 - If you have curly or coily hair, we recommend using the Straightener Brush or Round Brush to dry, smooth, before curling.
 - Use the high heat and high flow settings.
 - Keep your hair on the barrel while using high heat, high airflow for 10 seconds.
 - Before removing your hair from the barrel, set and hold the Cool wind for 10 seconds.
 - Repeat high heat, high airflow for 10 seconds and Cool wind for 10 seconds until hair is completely dry.
 - Allow curls to cool completely before running your fingers through them.
 - Use a setting or holding spray after you create each curl.

Q: How do I create more consistent curls?

A: Make sure you are taking sections that are the same size. (For example, if you find 1-inch sections work best for your hair type, make sure every section you take is a 1-inch section.)
Make sure to take sections that are square at the root.
The hair in each section you take should all be the same length.

Q: Do you have any tips for thick hair?

A: Try holding a smaller section of hair if you are having difficulty wrapping it around the barrel.

Q: I keep getting unwanted hair wrapped around the Auto-Wrap Curler barrel. How do I prevent this?

A: Use sectioning clips or hair ties to prevent unwanted hair from being wrapped around the barrel.

Q: Do you have any tips for short hair?

A: Manually wrap a half-inch-to-1-inch section of hair around the barrel and hold it in place the way you would with a traditional hot curling wand. Turn on the styling wand while still holding your hair on the barrel. Hold hair in place for 10 seconds, then set and hold the Cool Wind for 10 seconds to set your style. Repeat until your hair is completely dry. Turn off the styling wand, let go of your hair section, and reveal your curl! You can also try holding the styling wand horizontally for a tighter curl around the barrel.

Q: Do you have any tips for long hair?

A: Try holding smaller sections of hair, so more hair is able to wrap around the barrel. Hold the barrel horizontally so more hair will stay on.

Q: How can I get a tighter curl?

- A:
- Try holding a smaller section of hair.
 - Hold the styling wand horizontally when curling instead of vertically.
 - After your hair has started to wrap, create tension around the barrel by pulsing it toward your face and then away, as you curl it in toward your roots. The pulses will wrap your hair tighter around the barrel, which will help create a tighter curl.

Q: I always accidentally touch the button. What should I do?

A: It is recommended to hold the machine under the button during use to avoid or reduce the occurrence of such situations.

Q: After using the machine overheating, I want to replace the parts. What should I do?

A: Set and hold the Cool Wind for at least 10 seconds before turning off your hair dryer to help cool it down. And it is recommended to wear gloves when replacing accessories. In the process of use, it is also recommended to wear gloves.

Q: How do I prevent frizz when using the Straightener Brush?

A: If you get frizz when using the brush, decrease the airflow. If you still get some frizz, finish styling by brushing down the outside of the hair and pulling the hair through the boar bristles, then use Cool Wind to relax the cuticle. Use hair products made for your hair type that help to reduce frizz before and after styling.

Our original intention is to bring you a good quality life and more perfect hair style.

Because of the right price and the right product.

As you known we still have the pursuit of higher quality and will make greater progress for it.

We are not compared with the high-priced products,because we are still making progress.

We are not compared with the low-price products,because we are already making progress.

What we do is our own brand and style.

In the future, we have great potential for progress.

We look forward to you seeing our progress and changes.

