

USER SERVICING INSTRUCTIONS

REPLACEABLE FUSE

If your (5 Amp, 125 Volt) replaceable fuse blows, please visit our website at www.getholmesfans.com for information on how to order a new fuse.

REPLACING THE FUSE

1. Unplug your fan.
Grasp plug and remove from the receptacle or other outlet device.
2. Open fuse cover, located on the top of the plug, by using your thumb or a flathead screwdriver to slide the cover towards the prongs.

NOTE: Do not unplug by pulling on cord.

3. Remove fuse carefully by using a small screwdriver to pry it from the compartment at the metal ends of the fuse. (See Figure 2)

NOTE: Ensure the fuse cover is completely open before attempting to remove fuse.


4. Place plug on a solid, flat surface. Insert new 5 Amp, 125 Volt fuse into fuse compartment. Use a small screwdriver to secure the metal ends of the fuse into the compartment.

CAUTION: Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse.

5. Slide fuse cover closed completely.

NOTE: If fuse cover is difficult to close, make sure the fuse is completely secured in place by pressing on metal ends of the fuse.

CAUTION: Risk of fire. Do not replace the attachment plug. It contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

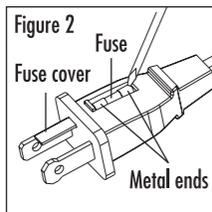

CLEANING/MAINTENANCE

Follow these instructions to correctly and safely care for your window fan.

FAN CLEANING

- Always unplug the fan before cleaning or disassembling.
- Do not allow water to drip on or into the fan motor housing.
- Do not use harsh chemicals such as gasoline, thinner or benzene as a cleaner.

FAN BLADE AND FRONT GRILL CLEANING

1. Make sure the fan is unplugged.
2. Using a Phillips head screwdriver, remove the screws located around the perimeter of the rear grill.
3. Carefully separate the front and the rear grills from the end opposite the built in extender.
NOTE: Do not completely detach the grills as this may damage the extender clips. Separate them only enough to access the blades with one hand.
4. Clean the blades and grills with a soft cloth moistened with a mild soap solution.
5. Securely fasten the front and rear grill back together.

FAN STORAGE

- It is recommended to use the original (or appropriately sized) box.
- Protect the fan from dirt, dust, and moisture.

If you have any questions regarding your product or would like to learn more about other Holmes® products, please visit our website at www.getholmesfans.com or call customer service: 1-866-769-3166 (8:30 am - 5:00 pm E.S.T.) or send an email to info@getholmesfans.com. For inquiries regarding recycling and proper disposal of this product, please contact your local waste management facility.

3 YEAR LIMITED WARRANTY

This device has a limited warranty of 3 years from the original date of purchase against workmanship and defects in material. If under normal use, your product fails to operate, please contact our customer service department at info@getholmesfans.com. A refund or replacement will be provided to you with proof of purchase. Star Elite Inc. may deny claims of damage caused by misuse or modifications of this product.

How to Obtain Warranty Service

If you have any problems, please do not contact the store.

Contact our customer service at 1-866-769-3166

(8:30 am - 5:00 pm EST) Monday - Friday

or contact us at info@getholmesfans.com.

Our customer service will be happy to assist you.

www.getholmesfans.com

© 2021 Sunbeam Products, Inc. All rights reserved.

HOLMES® is a registered trademark of Sunbeam Products, Inc. used under license.


Distributed by Star Elite Inc., Montreal, Canada H3B 3X9

SEH016-120121

APPROVED

By Linda Chen at 9:30 am, Dec 08, 2021

Printed In China

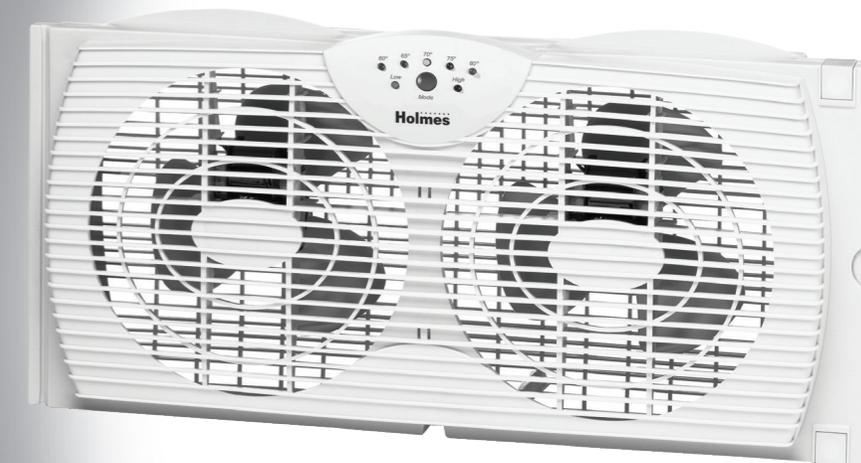

Digital

Window Fan

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:


1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. To protect against electrical shock do not immerse unit, plug or cord in water or spray with liquids and plug the appliance directly into a 120V AC electrical outlet.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
6. Avoid contact with moving parts.
7. Do not operate in the presence of explosive and/or flammable fumes.
8. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
9. Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner. Discard fan or contact customer service.
10. Do not run cord under carpeting. Do not cover cord with throw rugs, runner, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
11. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
12. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.

13. Do not use outdoors.
14. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
15. Always use on a dry, level surface.
16. Do not operate fan until fully assembled with all parts properly in place.
17. This product is intended for household use ONLY and not for commercial or industrial applications.
18. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
19. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short circuit may be present and the product should be discarded or contact customer service.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.

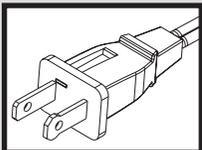

ASSEMBLY, PARTS AND OPERATING INSTRUCTIONS


NOTE: MAKE SURE YOU REMOVE ALL CONTENTS FROM THE PACKAGE. PLEASE CHECK PACKAGING MATERIALS FOR PARTS THAT COULD BE REQUIRED TO OPERATE YOUR FAN.

- The window fan comes fully assembled and is ready for immediate installation.
- Before installation, familiarize yourself with the built-in 7 inches (17cm) extender (D) on the right side of the fan housing, and the additional 4.25 inches (10cm) extender (A) which attach to the left side of the fan housing (see Figure 1).

NOTE: WE RECOMMEND KEEPING YOUR WINDOW SCREEN IN PLACE.

For double-hung windows (designed to fit windows with minimum openings of 22 inches (55cm) wide and 10 inches (25cm) high)

1. Align the Window Fan horizontally in the window and the Built-In Extender Panel to the right.
2. With the window open, take an accurate measurement of the opening where the unit will be placed.
3. Match your window measurement with the **INSTALLATION GUIDE (SEE NEXT SECTION).**
4. Once you have attached the extender panel(s) (if needed), set the fan in the window. You will complete installation with built-in extender. Pull out both clips on right side of the fan, then pull out the built-in extender. To lock extender into place, press the clips down.

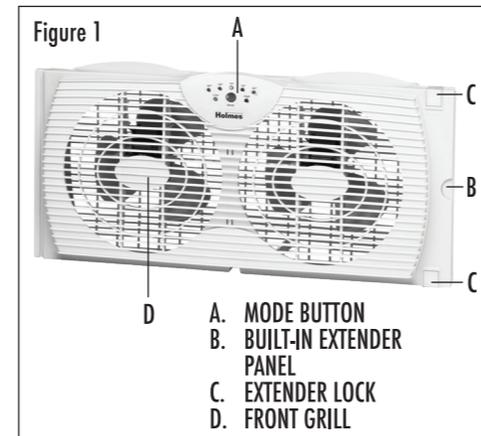

5. Carefully close the window onto the top of the fan so that the bottom edge of the window rests behind top line of fan housing. This helps keep the fan in place.

For slider windows (will fit windows 10 inches/25cm wide and 36 inches/91cm high)

In a slider window, the control must face inward, towards the window. The 7 inch (17cm) built-in extender will be positioned on top. Prior to installing unit in window, measure the height and adjust the upper extender for a snug fit.

NOTE: In some slider windows you may need to remove the screen.

INSTALLATION GUIDE

For 22 inches (55cm) to 29 inches (73cm):

Use up to 7 inches (17cm) of right side, pull out extender panel.


For 29 inches (73cm) to 33.25 inches (83cm):

Use one 4.25 inches (10cm) extender panel on the left side. Adjust the pull out extender on the right side for a tight fit (from 0.5 inches (1cm) to 7 inches (17cm)).

Larger than 33.25 inches (83cm):

Additional extender panels will be required (contact customer service for ordering information).

WARNING: BE SURE THE FAN IS SECURELY INSTALLED IN YOUR WINDOW AT ALL TIMES. DO NOT LEAN OR PUSH ON THE FAN WHILE IT IS IN THE WINDOW.

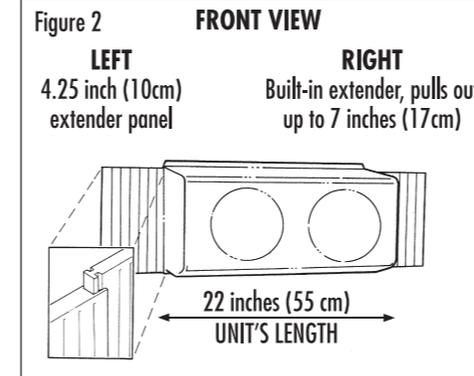

OPERATING INSTRUCTIONS

1. Plug the fan into a 120V AC electrical outlet.
2. To start the unit and run continuously, press the Fan Button (A) once for the HIGH setting and twice for LOW.

THERMOSTAT

This fan is equipped with the technologically advanced Thermostat. This feature will automatically turn the fan ON or OFF depending on the preset comfort level, ranging from 60° to 80° Fahrenheit.

To set the Thermostat:

Press the Fan Button (A) until the desired temperature is reached.

- When room temperature drops below the set temperature, the fan will stop.
- When the room temperature rises above the set point, the fan will turn on automatically.

For example, if the thermostat is set to 75 degrees then the fan will run until the set temperature is reached. Once the temperature rises above the set temperature, the fan will automatically turn on again.