

Tredy

Instruction manual

Read this manual carefully before use.




VK-2001D

Water Filter Pitcher

Contents


Structure Diagram	01
First-Use	02
Instruction on use	03
Cartridge Replacement	04
Timer Replacement	04
Standard	05
Precautions	05
Troubleshooting	05
Specification	06
Description Products Hazardous Substances	06
Warranty	07

1. Structure Diagram

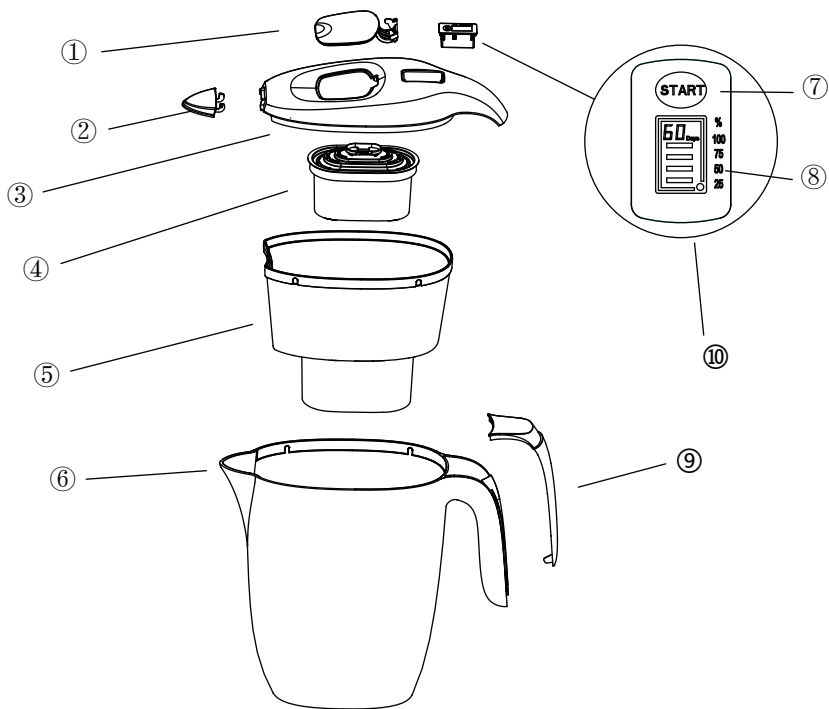


*Picture is only for reference.

- ① Inlet Cap
- ② Outlet Cap
- ③ Lid
- ④ Filter Cartridge
- ⑤ Funnel
- ⑥ Drinking Water Pitcher
- ⑦ Reset Button
- ⑧ Smart Reminder
- ⑨ Grip handle

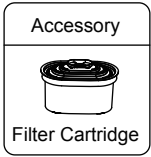

- ⑩ Timer
 - a. Show the remaining life of filter.
 - b. Replacement reminder of filter expiration.

2. First-Use

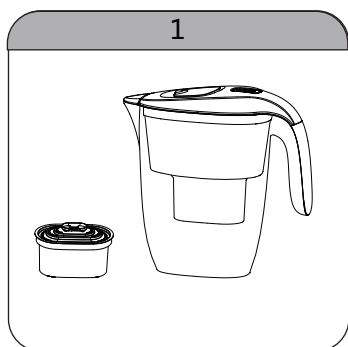


Open the package and take out the product

Remove pitcher and filter from package, remove the bag and clean the pitcher.


Hand-wash pitcher, lid and funnel with a mild detergent. Do not use abrasive cleaners.

TIP: Hand-wash pitcher, lid and water tank periodically. Do not wash in dishwasher.

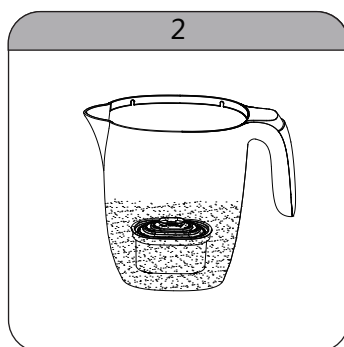


Firstly soak the filter

Soak the cartridge in normal temperature water and gently shake it to remove air bubbles. After 10 minutes, the filter is soaked and then removed.

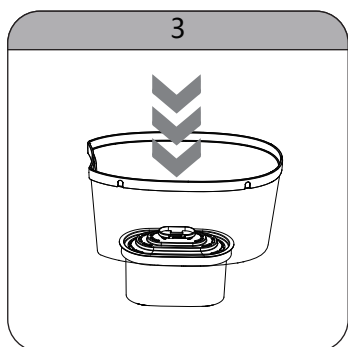

Fit the cartridge and filter

Place the filter into the funnel and press to be sealed; Place the funnel into the pitcher, fill the funnel and dispose the first two rounds of filtered water.

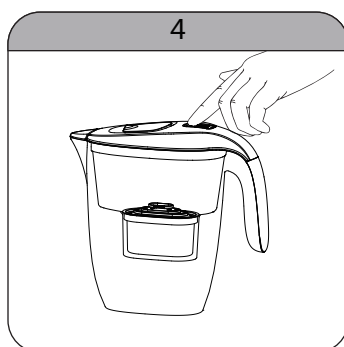

Timer starts

Press and hold the timer's START button for 3 seconds, then the timer's screen displays the frame flashing 3 times, releasing the START button when it stop flashing, and the timer turn on to start timing.


(If you need turn off the screen during use, you can repeat the above steps (press the START button for 3 seconds), and the last counted days will still be displayed when you turn it on again.)

Tips:

When the filter is first washed, the filtered water may be grayish black. This is the dissolution of activated carbon powder from inside of cartridge. It is a normal phenomenon and it can be used normally after 2 times of filtration. Do not use it to drink.

The cartridge filter contains granular active carbon and ion exchange resin. After transportation vibration, it may cause some fine carbon powder to leak on the surface. It is a normal phenomenon and it can be simply remove with pure water.


3. Instruction on use

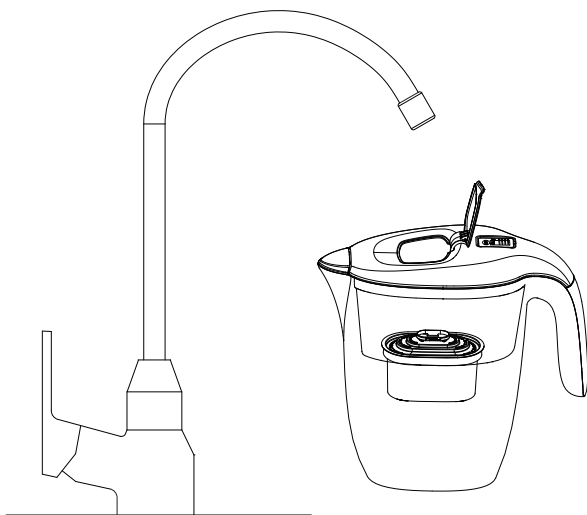

Open the inlet cap, fill up with tap water which will be filtered and goes into drinking water pitcher, wait till upside water was filtered, you can then enjoy the clean and fresh drinking water.


Tips: The upper funnel capacity is 1L and the capacity of the lower drinking water pitcher for filtered water is 1.7L. It is not recommended to exceed the upper limit of capacity.

4. Cartridge Replacement

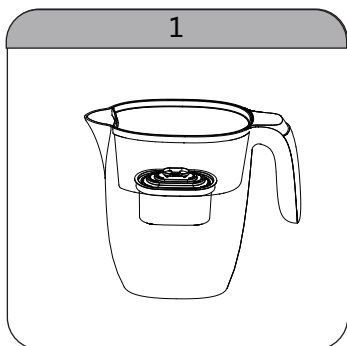

Replace cartridge


When the timer shows 0 days, please replace the filter cartridge. Please repeat the step 1 as the new filter.

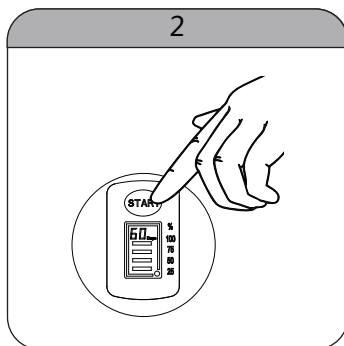


Reset timer

After replacing filter, please press the button for 8 seconds to reset the timer.

5. Timer Replacement

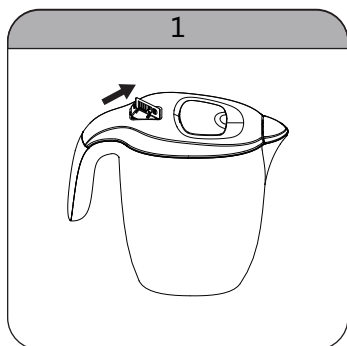

Follow the direction of the arrow and tilt the timer by one corner.

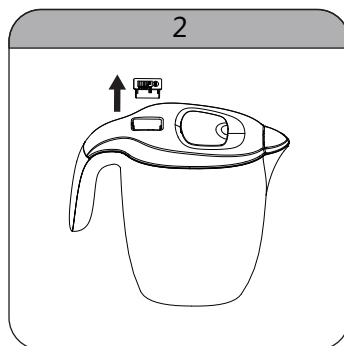

Replace a new timer.

Recommendation:

In order to maintain the performance and hygiene of the filter cartridge, it is recommended that you replace the filter every 2 months. If you have a large demand of water, or if the filtered water has a poor taste, it is recommended that you replace the filter immediately.

6. Standard

The product is a lightweight, small-sized water processor used to filter tap water. The quality of the effluent meets the requirements of the Standard for the Evaluation of Sanitary Safety and Function of Drinking Water Quality Processors - General Water Quality Processor (2001).

7. Precautions

1. We recommend that you store your filter pitcher system in the refrigerator to get cold, great-tasting water. If you would like to keep your filter pitcher system outside of the refrigerator, we recommend that you keep it in a cool area that is not in direct sunlight and replace any filtered water that has been left sitting for several days or more. This will help make sure you get refreshing, great-tasting water.
2. The filter pitcher is suitable for normal temperature tap water. Do not use hot water or ice water as the water source.
3. Due to the nature of water, it is not recommended to drink the filtered water which was kept over 1 day.
4. If you do not use the filter pitcher for some time, it is recommended that you remove the filter cartridge, empty & dry the pitcher. When used again, follow the first-use.
5. In order to ensure the normal operation of the product and the water quality, be sure to use the accessories and filter provided by us.
6. Please dispose the disassembled packaging promptly. Do not let young children touch or swallow.
7. Do not allow young children to operate, touch, approach, or pull the product.
8. Do not place flammable, explosive, volatile, and strong magnetic materials near the filter pitcher.
9. Do not disassemble, impact, crush or throw in fire.
10. Do not add hot water, ice cubes, other mixed liquids such as milk, juices, etc.

8. Troubleshooting

Trouble	Check	Solution
Slow or no flow rate	Check the filter lifetime	Replace new filter
	Check if the new filter is soaked for 10 minutes	Soak the filter for 10 minutes before use
	Check the filter for air blocking	Take out the filter, flip it upside down and shake it on both sides before reloading it into the funnel
Leakage at side	Check that the filter is installed in place	Install the filter properly and use it
Cover can't be tightened	Check that the funnel is installed in place	Remove the funnel and reattach the cover
Timer doesn't work	Check the timer is reset successfully	Reset the timer

9. Specification

Product	Water Filter Pitcher	Model No.	VK-2001D
Dimension	273*110*260mm	Inlet Pressure	Water natural gravity
Net Weight (without filter)	596g	Inlet	Tap water
Working Temperature	4-40℃	Input Water Temperature	5-38℃

10. Description Products Hazardous Substances

Part name	Hazardous substance or element					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr (VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Plastic Parts	○	○	○	○	○	○
Filter Cartridge	○	○	○	○	○	○
Timer	×	○	○	○	○	○
This table is prepared according to SJ/T 11364. ○ : The content of the hazardous substance in all homogeneous materials of the part is within the requirement, specified in GB/T26572. × X : The content of the hazardous substance in a certain homogeneous material of the part exceeds the limit specified in GB/T26572.  The environment-friendly use period of this product is 10 years. Symbol shows on the left. The environment-friendly use period of replaceable parts may be different from the environment-friendly use period of product. The use period will be effective only when the product is used on the conditions described in this Instruction Manual.						

11. Warranty

ONE YEAR LIMITED WARRANTY

You should first read all instructions before attempting to use this product.

①This 1 year limited warranty applies to repair or replacement of product found to be defective in material or workmanship.

This warranty does not apply to damage resulting from commercial, abusive, unreasonable use or supplemental damage. Defects that are the result of normal wear and tear will not be considered manufacturing defects under this warranty.

Manufacturer is not liable for incidental or consequential damages of any nature, any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction.

This warranty applies only to the original purchaser of this product from the original date of purchase.

②At its option, manufacturer will repair or replace this product if it is found to be defective in material or workmanship.

③This warranty does not cover damage resulting from any unauthorized attempts to repair or from any use not in accordance with the instruction manual.

④Please be sure to specify a model number located on the box and the back and bottom of your unit.

⑤All air and transportation charges are not covered by the warranty and are the responsibility of the customer.

NOTE: If you experience a problem, please contact consumer relations first or see your warranty. Do not return the product to the original place of purchase. Do not attempt to open the motor housing yourself, doing so may void your warranty and cause damage to the product, or personal injury.

Tredy

tredyhome.com