

The Manufactures and/or Distributor Has Provided The Parts List and Assembly Diagram in. This Document as a Reference Tool Only. Neither The Manufacturer or Distributor Makes any Representation or Warranty of Any Kind to The Buyer That He or She is Qualified to Make Any Repairs to The Product. Or That He or She is Qualified to Replace any Parts of The Product. In Fact,The Manufacturer and/or Distributor Expressly States That all Repairs and Parts Replacements Should be Undertake by Certified and Licensed Technicians, and Not By The Buyer.



 **WARNING:** Car movers are required to be used on cement and asphalt roads

Ur gettecvqpu

Rated Capacity	1500lb per dolly
Casters (per dolly)	Two swivel casters Two swivel casters with brakes

16 r qtcvpvUchgv 'lrlqto cvqp

1. Study, understand and follow all instruction before operating this device.

2. Do not exceed rated capacity.

3. Use only on hard level surface.

4. Before moving a load, assure that the load is centered and secured with a load restraint device.

5. No alterations shall be made to this product.

6. Wear ANSI-approved safety goggles and heavy-duty work gloved during use.

7. Keep clear of load's path while placing on and removing from dollies, and while moving.

8. Use as intended only. Do not use for aircraft purposes, use only in pairs.

9. nspect before every use, do not use if parts loose or damaged.

10.Be aware of dynamic loading! Sudden load movement may briefly create excess load causing product failure.
11. Use two Vehicle Dollies to support the front or rear end of the vehicle. Use four dollies (two pairs) to support entire vehicle.

12. Read vehicle owner's manual and instruction manual for jack (not include) for proper jacking positions before use.

13. Position carrying handles to outer side of car; do not work under vehicle while on Dollies.

14. If use for extended storage under vehicle tires, periodically lift vehicle to rotate tires.

15. Keep lifting area free of spectators and do not allow anyone into vehicle while on dollies.

16. Use wheel chocks when raising front of vehicle for placement onto dollies.

17. Assemble only according to instructions. Improper assemble can create hazards.

18. This product is not a toy. Do not allow children to play with or near this item.

Owner’s Manual & Safety Instructions

Ucxg'Vj lu'Ocpwcnkeep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures.

1500lb Capacity
Vehicle Dollies



 **WARNING**

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL.

lputwcvqpu

 Read the ENTIRE IMPORTANT SAFETY INFORMATION section at the beginning of this document including all text under subheadings therein before set up or use of this product.

Cuugo drf

1. Insert brake casters (2) and casters (3) through holes in frame (1), making sure brake casters are on same outer side. Fasten using washers (6), lock washers (5) and nuts (4).

2. Once dollies are assembled, roll dollies along surface to verify all connections are secure and dollies roll freely.

Qr gtcvqp

1. Chock opposite end wheels to keep vehicle from rolling. Chocks sode separately.

2. Place dolly in position under raised front or rear wheels and lower vehicle slowly onto dollies.

3. To move a vehicle supported by four dollies; remove wheel chocks, unlock casters, and use handles to guide vehicle to location.

4. Lock casters once vehicle is in location.

Rctw'lhu'vcpf 'Fkci tco

'Rctv'	'F guetr vqp'	'S v 0
1	Frame with handle	2
2	Caster with brake	4
3	Caster	4
4	Nut	8
5	Lock washer	8
6	Washer	8

