 




TV Cart Instruction Manual

V2.0

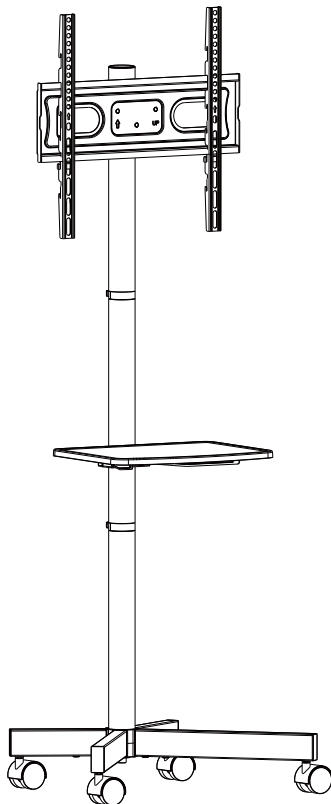

Model:PGTVMC06

Thank you for choosing this Perlegear product! At Perlegear we strive to provide you with the best quality products and services in the industry. Should you have any issues, please don't hesitate to contact us at support@perlegear.com(US/CA)

Important Safety Information

- Please read through these instructions completely before attempting installation. If you do not understand the instructions or have any concerns or questions, please contact customer service at support@perlegear.com
- Check package contents against Supplied Parts and Hardware List to assure that all components were received undamaged. Do not use damaged or defective parts. If you require replacement parts, contact customer service at support@perlegear.com
- Not all parts and hardware included will be used.
- Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaim any liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product.


Tip over Warning

Serious or fatal crushing injuries can occur from tip over. To help prevent tip over:

- Never allow children to climb, stand, hang, or play on any part of TV or TV cart.
- Use tip over restraint or anchor stand to wall

Use of tip over restraints may only reduce, but not eliminate risk of tip over.

Check the VESA Pattern of Your TV before the Installation

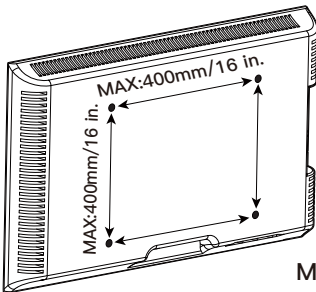

100 mm \approx 4 in.
200 mm \approx 7 7/8 in.
300 mm \approx 11 3/4 in.
400 mm \approx 15 3/4 in.

Minimum VESA pattern: 100mm/4 in.(W)x100mm/4 in.(H)

If your TV VESA is greater than 400x400 mm/16x16 in. or less than VESA 100x100mm/4x4in., this TV cart is NOT compatible.



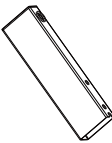

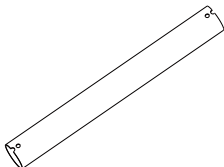
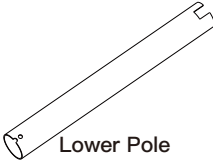
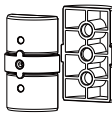
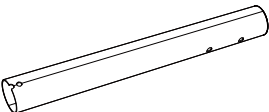
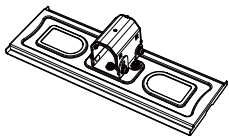

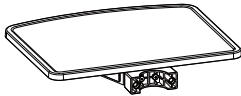

 
If this TV cart is NOT compatible, please contact customer service at support@perlegear.com to find a compatible product.

Tools Needed (Not Included)







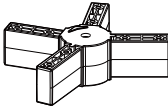


- Phillips Screwdriver 

Supplied Parts and Hardware











Supplied Parts

 Tube Connector 01 (1pc)	 Long Square Tube 02 (2pcs)	 Short Square Tube 03 (2pcs)	 Castor 04 (4pcs)	 Middle Pole 05 (1pc)
 Lower Pole 06 (1pc)	 Pole Connector 07 (2pcs)	 Upper Pole 08 (1pc)	 TV Plate 09 (1pc)	
 TV Bracket 10 (2pcs)	 Shelf 11 (1pc)	 Connecting Plate 12 (1pc)	 Cable Clip 13 (2pcs)	






Hardware for Assembling the TV Cart

 Bolt Washer M10x35mm D10x30x2.5mm A (1pc)	 Bolt M6x12mm B (12pcs)	 Bolt C (2pcs)	 Nut M8 D (2pcs)	 Bolt M5x55mm E (2pcs)	 Safety Lock G (2pcs)	 Small Allen Key 5/32 in.4mm F (1pc)	 Large Allen Key 5/16 in.(8mm) H (1pc)	 Wrench I (1pc)
--	---	---	--	--	---	---	---	---


Hardware for Attaching TV Brackets to TV

(01)  M4x12mm Bolts (4pcs) TV1 (4pcs)	 M6x16mm Bolts TV2 (4pcs)	 M6x35mm Bolts TV3 (4pcs)	 M8x25mm Bolts TV4 (4pcs)	 M8x50mm Bolts TV5 (4pcs)	 Washer with 3 Holes TV6 (4pcs)	 Washer D8 TV7 (4pcs)	 2.5mm Spacer TV8 (8pcs)	 10mm Spacer TV9 (4pcs)	 22mm Spacer TV10 (4pcs)
---	---	---	---	---	---	---	--	---	--

Step 1 Assemble the Base

01 Tube Connector		x1	02 Long Square Tube		x2
03 Short Square Tube		x2	B Bolt M6x12mm		x8
F 5/32in.(4mm) Small Allen Key		x1			

  
Secure the short square tubes [03] and long square tubes [02] to the tube connector [01] using bolts [B] and Allen key [F] .

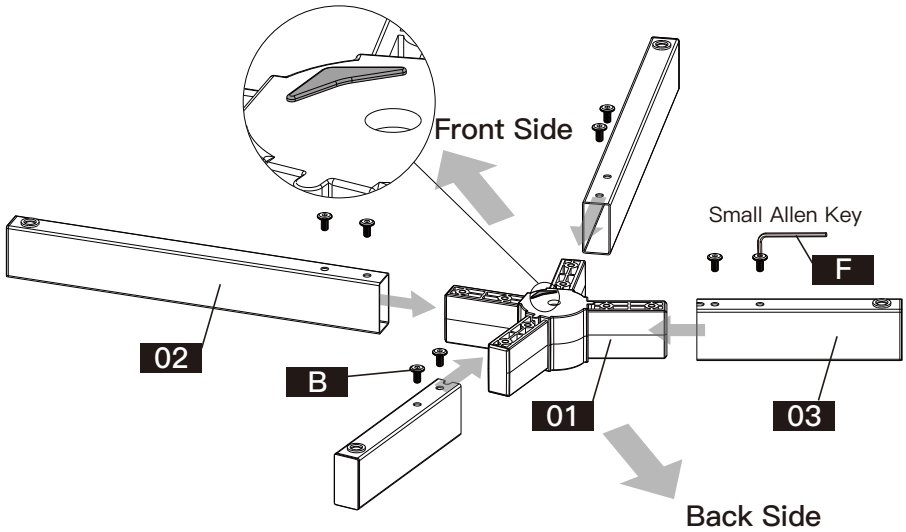



 

 
Step 4 Secure the Middle Pole [05] to Lower Pole [06]

05 Middle Pole		x1	07 Pole Connector		x1
F 5/32 in.(4mm) Small Allen Key		x1			

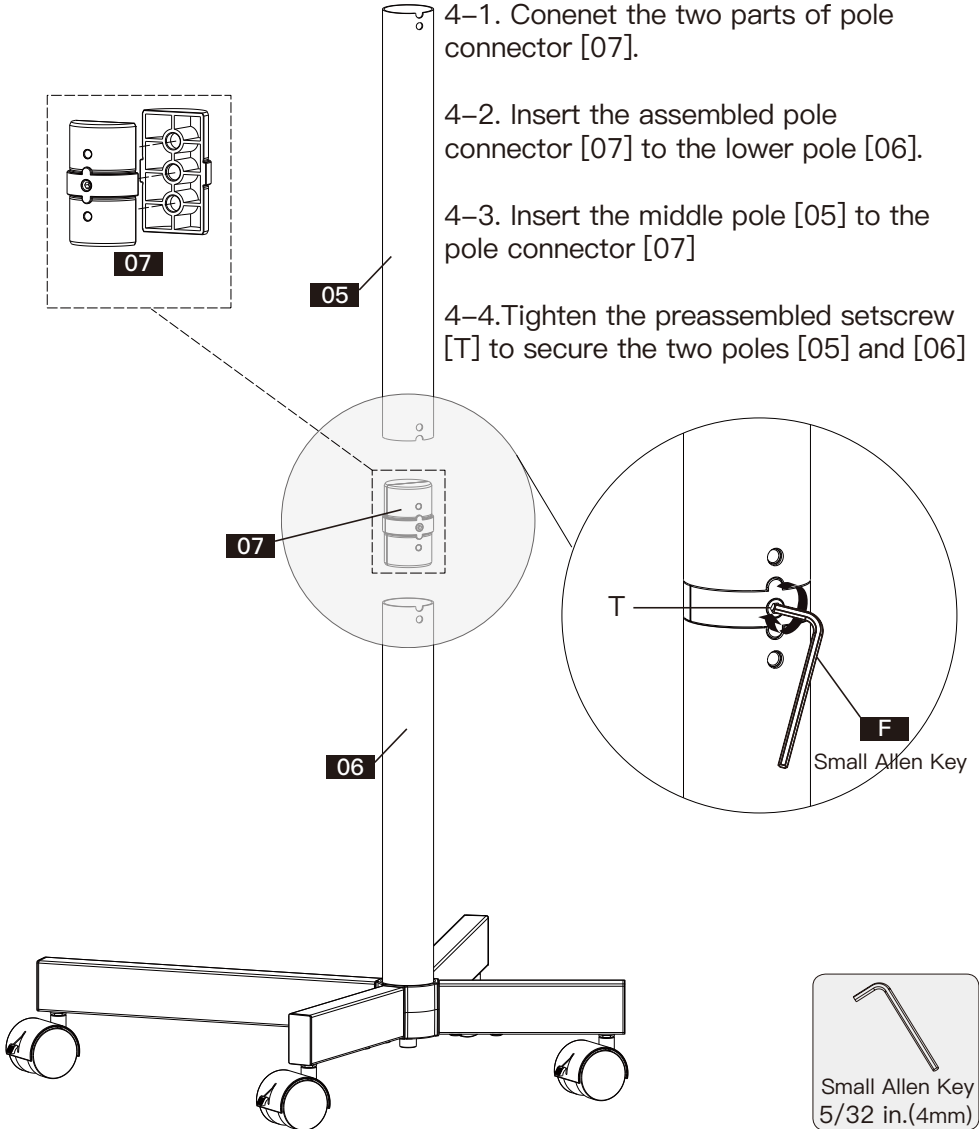
Note: The convex grooves on the pole connector [07] should be aligned with the grooves on the lower pole [06] and middle pole [05].




Step 5 Secure the TV Plate [09] to the Upper Pole [08]

08 Upper Pole		x1	09 TV Plate		x1
C Bolt		x2	D Nut M8		x2
I Wrench		x1			

 5-1 Slide the upper pole [08] to the TV plate [09].

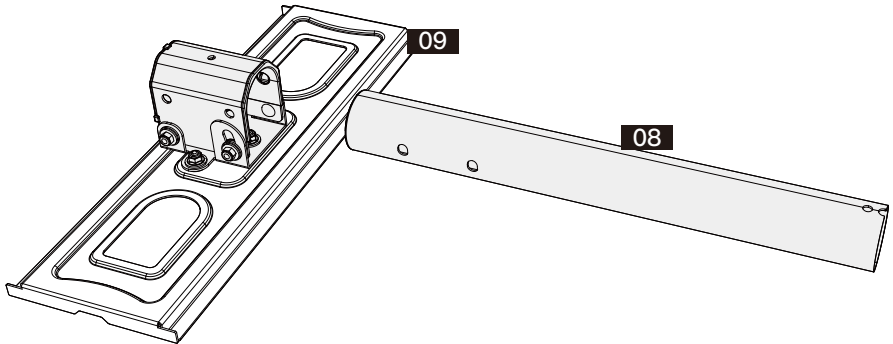

 5-2 Secure the upper pole [08] to the TV plate [09] by tightening the bolts [C] and nuts [D].

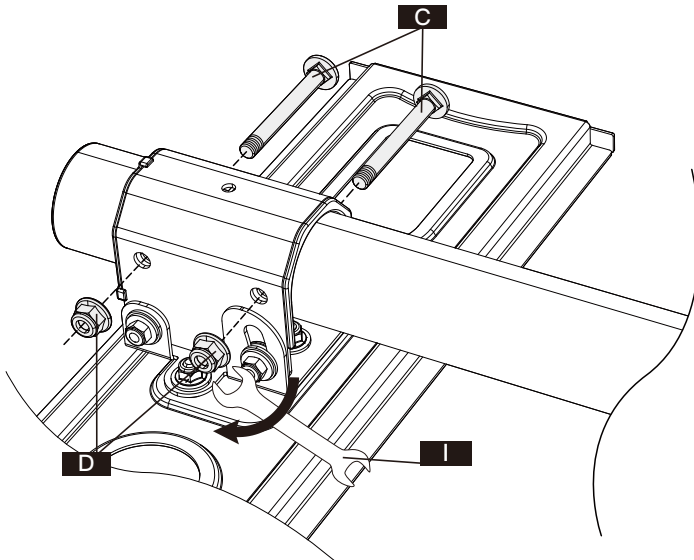

Step 6 Secure the Upper Pole [08] to the Middle Pole [05]

07
Pole Connector



 
x1

F
5/32 In.(4mm)
Small Allen Key



x1

▲ Note: Make sure the TV plate faces the front side of the TV cart.

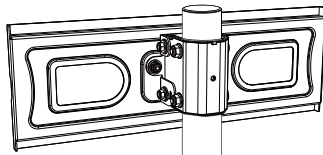

6-1. Connect the two parts of pole connector [07].

6-2. Insert the assembled pole connector [07] to the middle pole [05].

 
6-3. Insert the upper pole [08] to the assembled pole connector [07].

6-4. Tighten the preassembled setscrew [T] to secure the two poles [05] and [08].

08

07

05

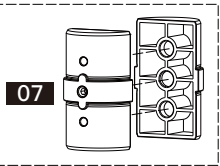

07

F

Small Allen Key

T

Front Side

Back Side


 

Note: The convex grooves on the pole connector [07] should be aligned with the grooves on the upper pole [08] and middle pole [05].




Small Allen Key
5/32 in.(4mm)

Step 7

Secure the Cable Clip [13] to the Connecting Parts of the Poles

13 Cable Clip		x2	B Bolt M6x12mm		x4
F 5/32 in.(4mm) Small Allen Key		x1			

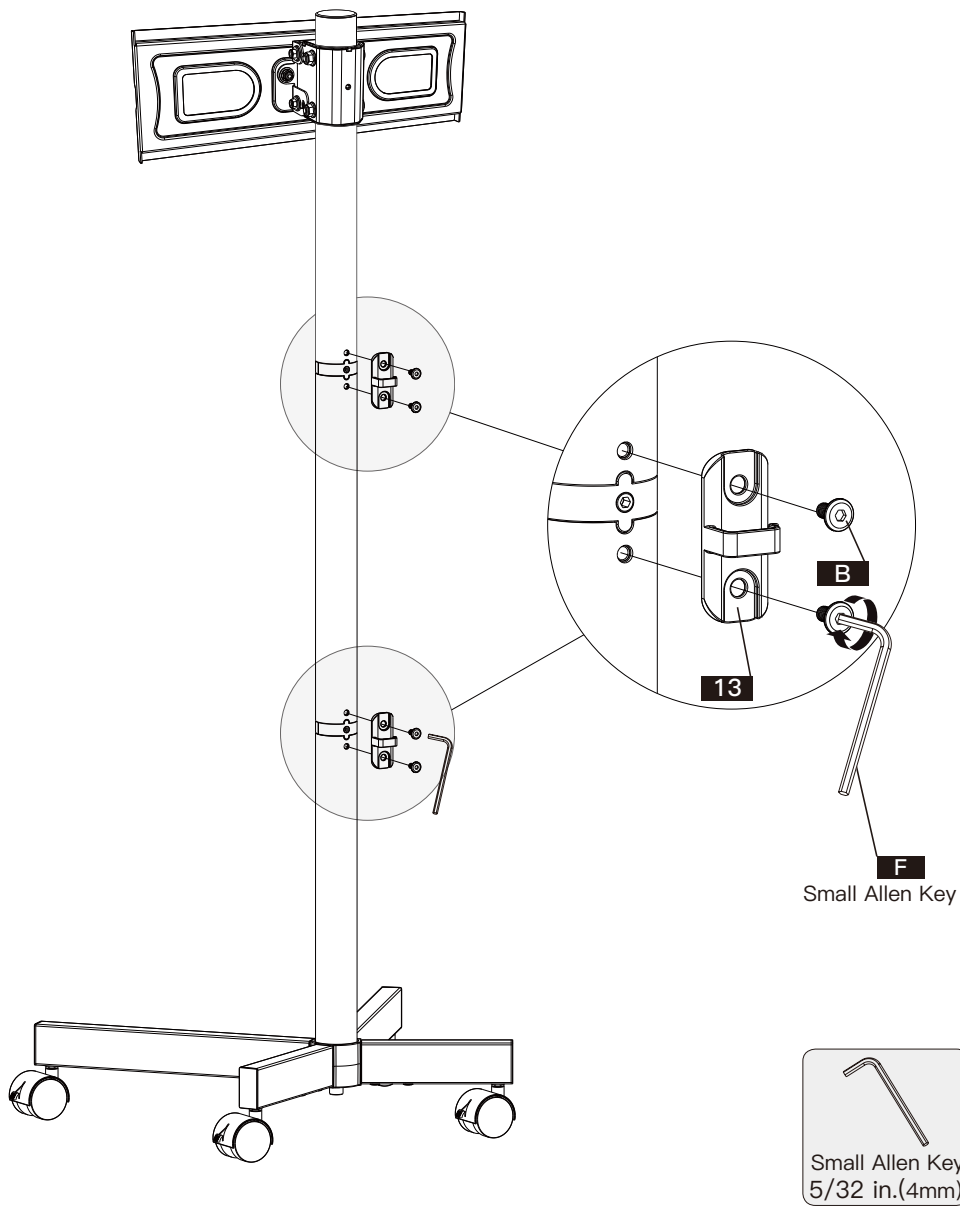 

Step 8

Secure the Brackets to the TV

10



TV Bracket
x2

Note: The bolts are shown in accordance with the actual size

M4



TV1(01) x4
M4 x 12mm



TV1(02)x4
M4 x 30mm

M6

 


TV2 x4
M6 x 16mm




TV3 x4
M6 x 35mm

M8

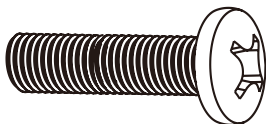

TV4x4
M8 x 25mm

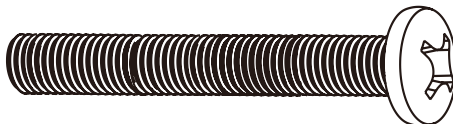 


TV5 x4
M8 x 50mm

Note: The washers and spacers are shown in accordance with the actual size



 TV6x4
Washer



TV7 x4
D8 Steel Washer

 
Spacers [if needed]



TV8 x8
φ8.5x18x2.5mm



TV9 x4
φ8.5x18x10mm

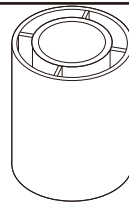

TV10 x4
φ8.5x18x22mm

Select TV Bolts

Only one bolt size fits your TV.


M4



M6



M8

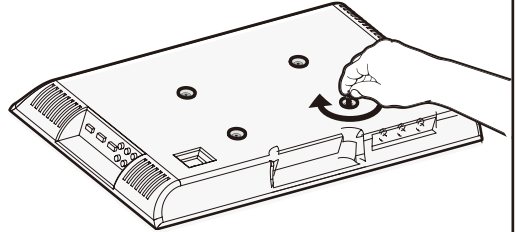

Bolt length: Verify adequate thread engagement with bolts or bolts/spacers combination.


We recommend thread engagement by at least 5 turns.

-Too short will not hold the TV.

-Too long will damage the TV.




Too Short

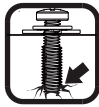

Too Long




Correct

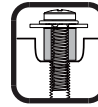


Correct



Note: If necessary, the spacers can be used in multi-layer. If the installation fails after trying various methods, please contact customer service at support@perlegear.com

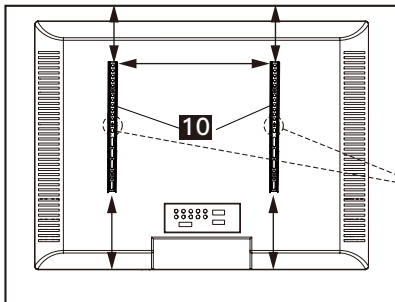



⚠ CAUTION: Ensure the TV brackets **10** are EQUALLY CENTERED on your TV and securely fastened in place.

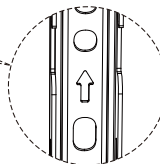

↑ UP

Note:
Keep the arrow up.




Option A (For Flat Back TV)

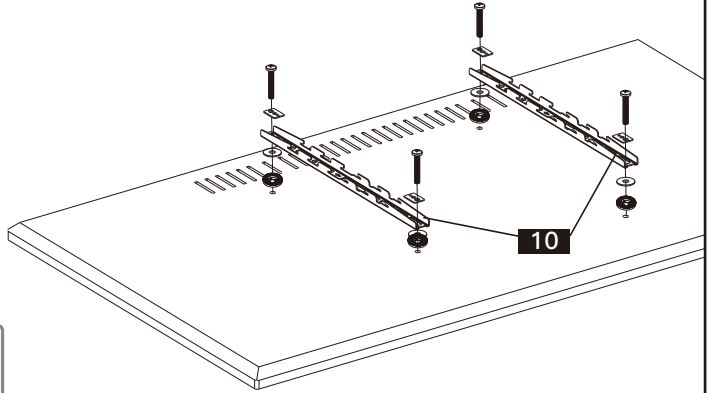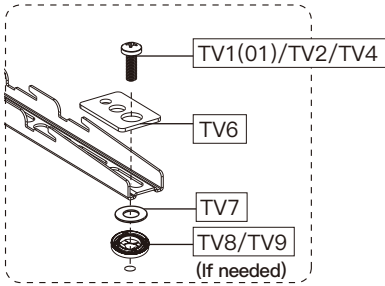

Alternate Spacer Setups



Option B (For Round Back TV)

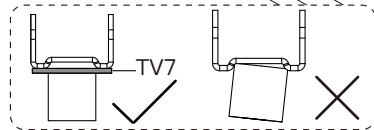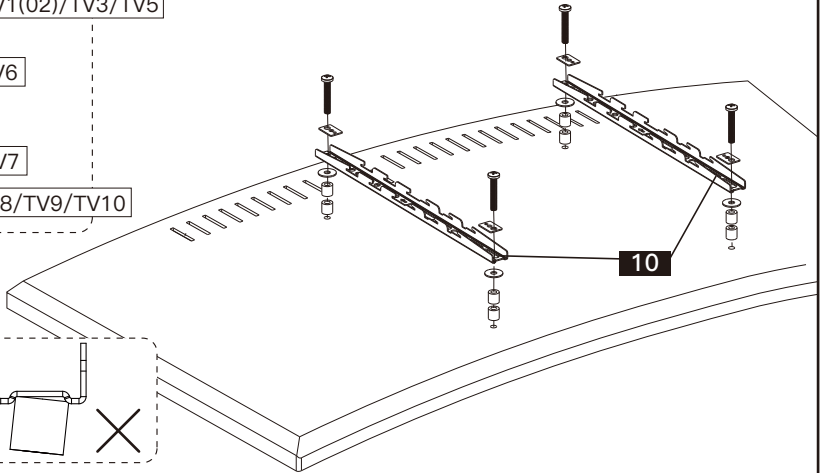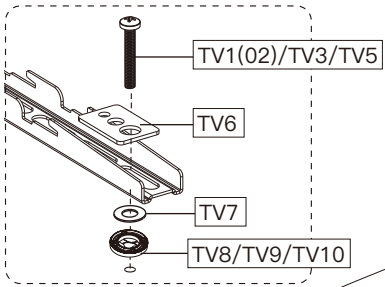


Alternate Spacer Setups




Option C (For TV with A “Bump”)

Spacers may be necessary for 2 holes ONLY.

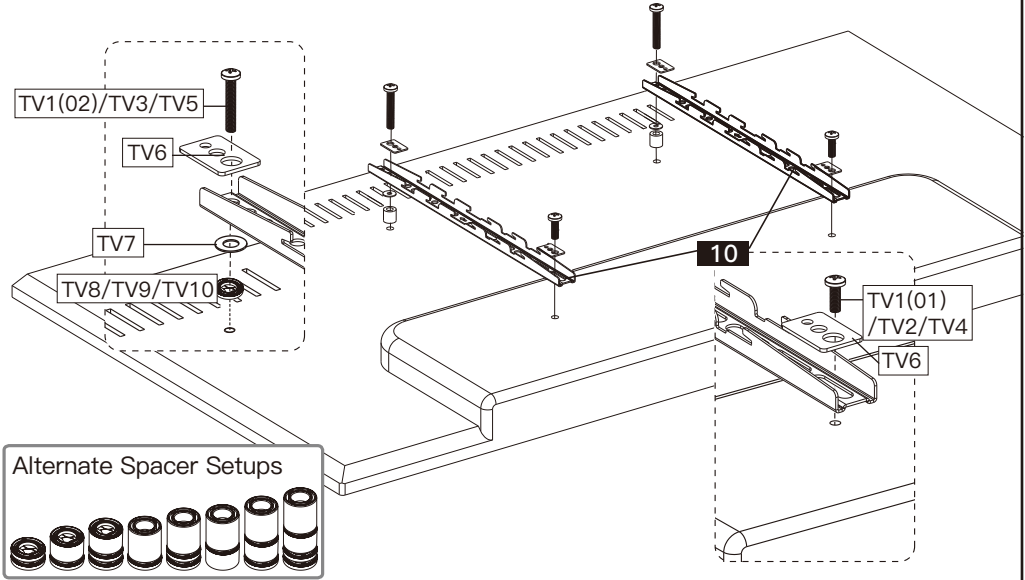

Option D

For cable interference or inset holes, use spacers [TV8/TV9/TV10] to create extra space between the TV and TV brackets

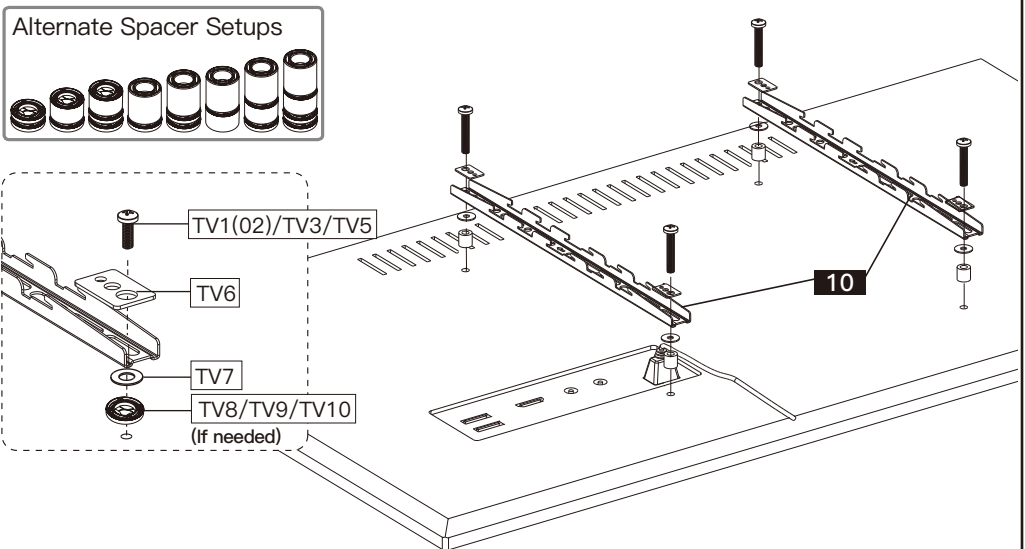

Step 9 Hang TV to TV Plate [09]

8-1 Hang the TV with brackets to the TV plate

8-2 Push the bottom of the TV to TV plate


TV brackets are three-height-adjustable.

You can choose the proper height.

The first choice

The second choice

The third choice

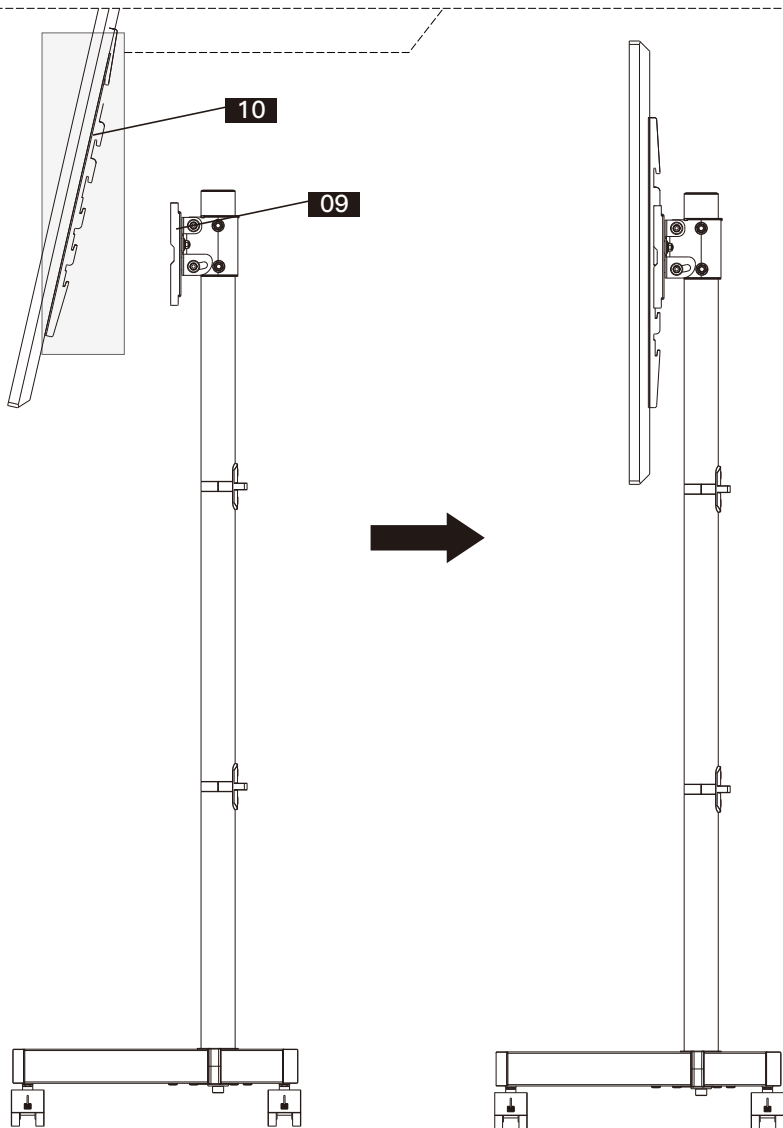

Step 10 Secure TV to TV Plate [09]


G
Safety Lock







x2

Insert the safety locks [G] into the upward facing hooks at the midway to lower part of the TV bracket. Please note this is where the lower part of the TV bracket meets the lower part of TV plate. Then tighten the bolts of the safety lock [G] until the bolts touch the TV plate.


Note: Please note that there is no holes on the TV plate.

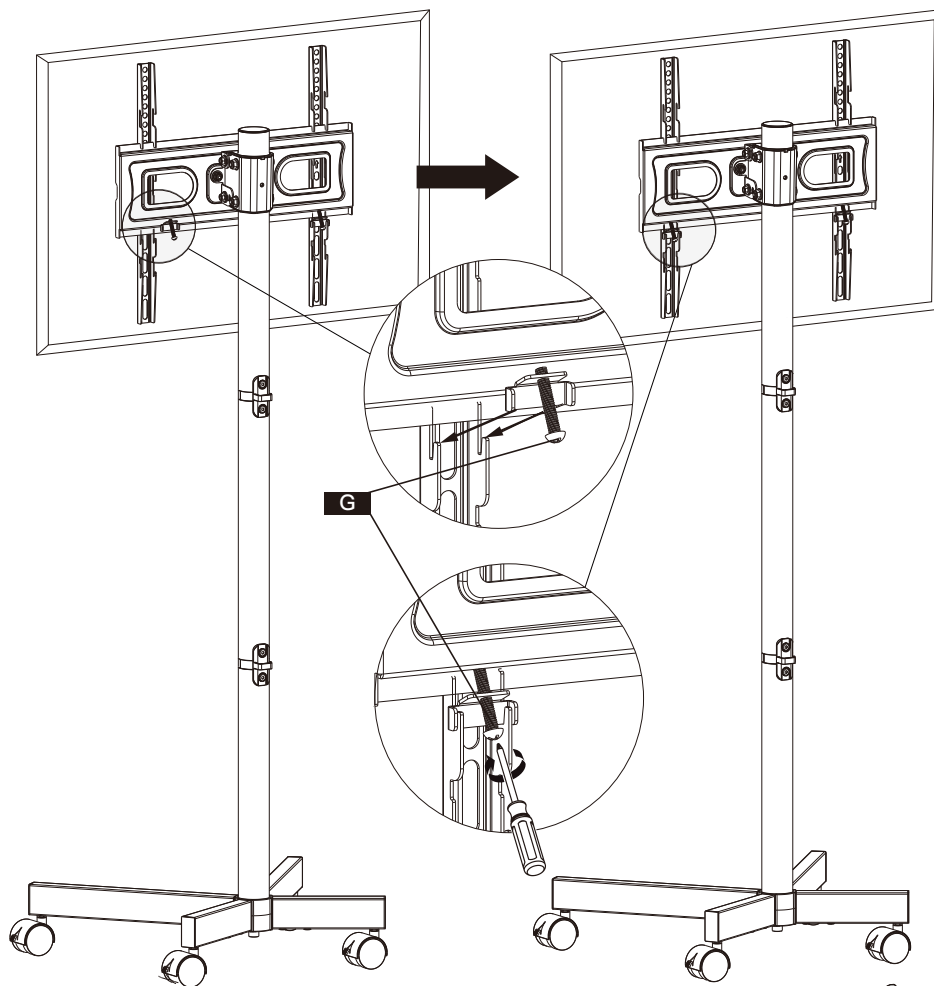

  Step 11 Secure the Shelf [11] to the Pole

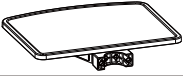11 Shelf		x1	12 Connecting Plate		x1
E Bolt M5x55mm		x2	F 5/32In.(4mm) Small Allen Key		x1

Secure the shelf [11] to the pole using connecting plate [12], bolts [E] and Allen key [F].

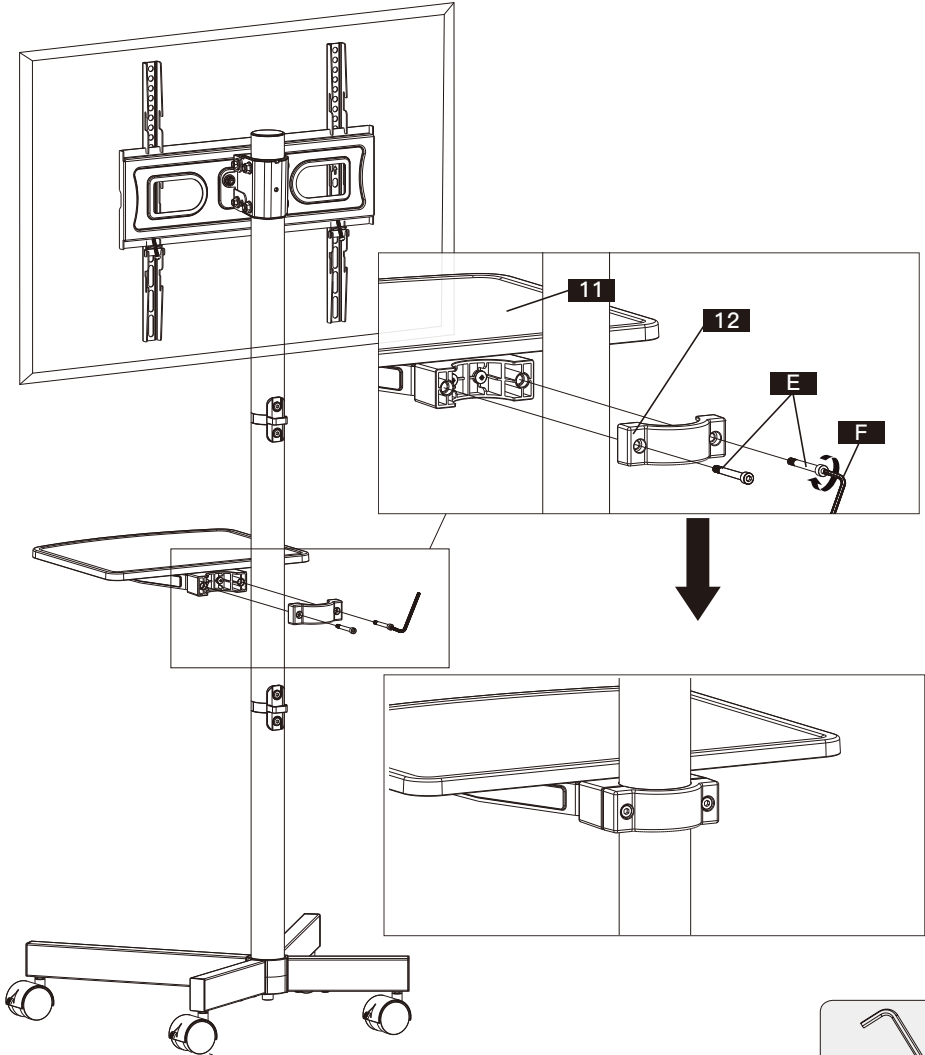

You may need assistance with this step.





Small Allen Key
5/32 in.(4mm)

Step 12 Adjustments



12-1 Tilt Adjustment

1. Slightly loosen the both tilt nuts [L].
2. Adjust TV to your desired tilt angle.
3. Tighten the both tilt nuts [L] to secure the TV in place.

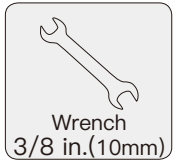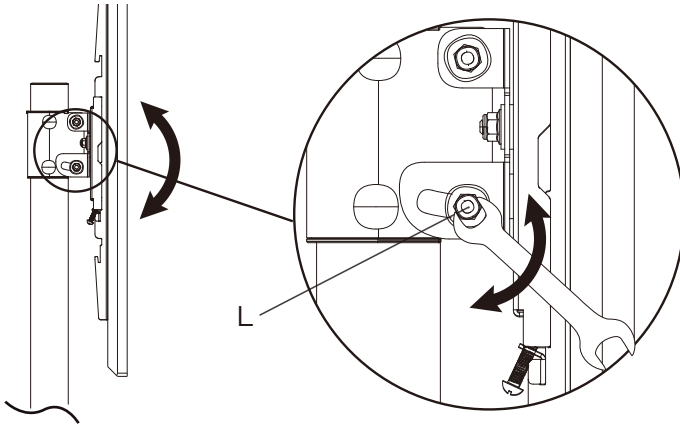


12-2 Level Adjustment


1. Slightly loosen the both nuts [S] using wrench.
2. Level the TV.
3. Retighten both nuts [S] to secure the TV in place.

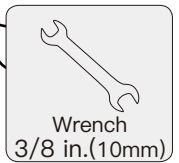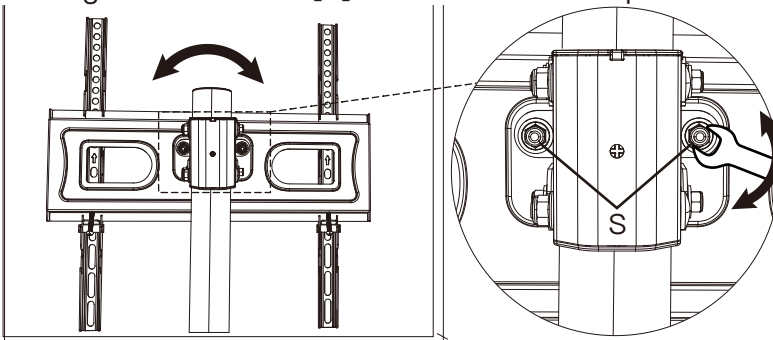

12-3 Manage the Wires

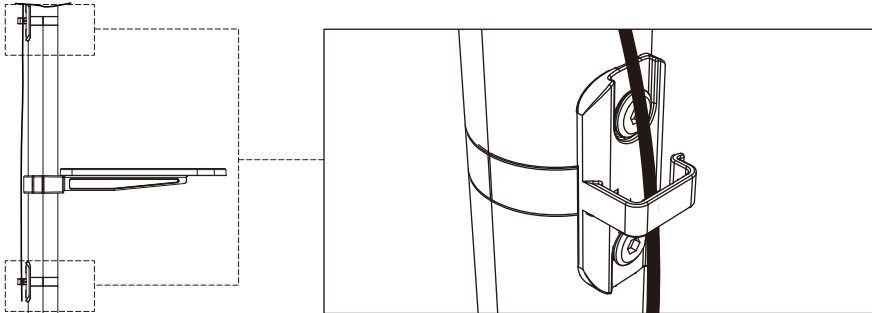

**Thank you again for
choosing this PERLEGEAR product!**

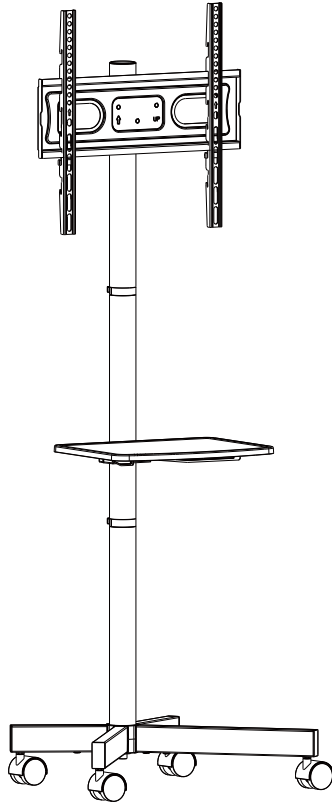

All of us at PERLEGEAR do appreciate your product purchase. We hope that you are as happy with your product as we designing and manufacturing it for you. We strive to provide you with the best quality products and services in the industry. If you have any questions please don't hesitate to contact us at support@perlegear.com(US/CA)