
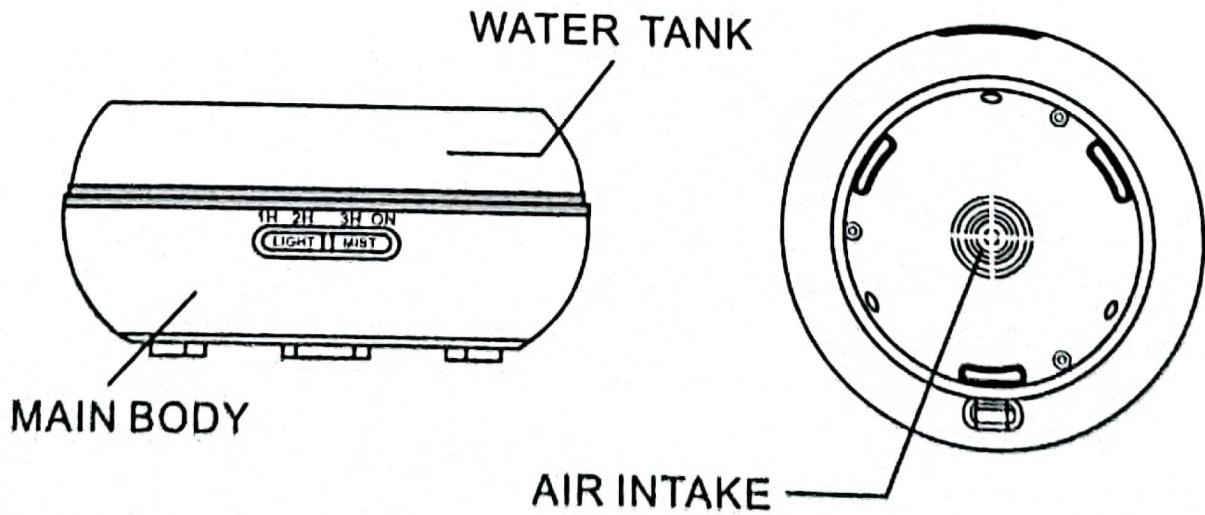


User Manual of Series of Aroma Diffuser

The Aroma Diffuser makes use of ultrasonic technology to atomize water and essential oil, and release aroma.

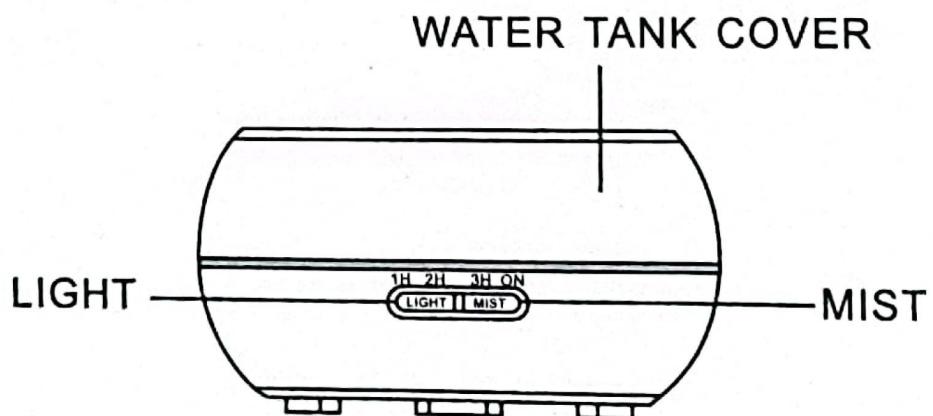

Operation Methods

1. Keep product straighten, remove the upper lid and water cap vertical direction. Fig1.

2. Please plug the DC plug of AC adapter into DC jack through AC slot. Refer to Fig. 2.

3. Add water to the water tank with maximum value When used, do not add water. (too hot water is not available)

4. After water tank is full of water, vertically add essential oil. (0.1ML-0.15ML essential oil water) Refer to Fig.3.

5. Install the cover of the main body with the original channel, To fall to the vertical direction, Rotate the cover to adjust the desired position mouth spray. BTW: You must cover the upper cover when you want to use the product. Fig4

6. Plug the AC adapter or USB plug into the home power socket.




7. Left key is light key. Please press the key once to turn on the light and the product beeps, and light cycles automatically. During light cycle, press the key to locate the current light density. (Note: after pressing the key, the product beeps once) In any time, press the lightkey for three seconds, and the light goes out. Refer to Fig. 5.

8. The right key is function key. ① At the first press, the product beeps once and starts spraying mist, the red light is ON above the key, the spray mist function is defined as automatic shutdown after 3 hours. (When shutdown, the mist stop spraying and the light is off, but the product doesn't sound) ② At the second press, the product beeps once and starts spraying mist, the green light is ON above the key, the spray mist will continuous until the water is dried. (When shutdown, the mist stop spraying and the light is off, but the product doesn't sound) ③ At the third press, the product beeps once and starts spraying mist. The fluorescent yellow light is ON above the key, the mist will spray for 30 seconds, then stop spraying for 30 seconds. It will continue work under this regularity until the water is dried. (When shutdown, the mist stop spraying and the light is off, the product beeps twice) ④ In any condition, Press the right key for 3 seconds, the product is forced to be shut down, the product beeps twice. Refer to Fig. 6.

9. If unused for a long time, please pour all the water out and put the product in the dry place.

10. When powered on, the aroma diffusor beeps once. At this time, aroma diffuser is in the standby state.

11. If water tank is lack of water, click "night key switch and the aroma diffuser shuts off automatically.

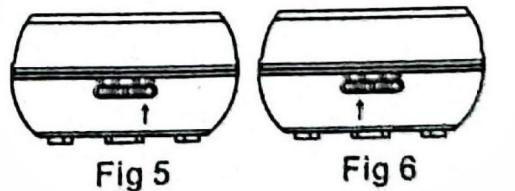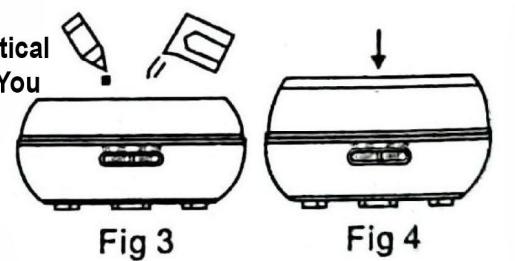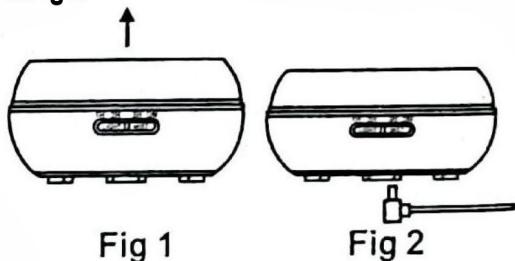


Matters need attention

- The slightly different spray mist concentration is normal.
- Different water, humidity, temperature and wind direction will affect spray mist.
- If there is no water in the water tank, click “right key” the aroma diffuser beeps once, and the aroma diffuser cannot be used without water.
- The aroma diffuser is only suitable for 100% pure natural essential oil. If there is chemical, spices or impurities might cause products to be damaged. Before changing another essential oil, please clean the product in accordance with maintenance introductions.

Accidental leakage

If the product is overturned accidentally, please solve the product in following ways:

1. Turn off the power, unplug the power line, and open the upper lid.
2. Pour all the rest water in the water tank out from drainage side.
3. Gently shake the body, let the rest water drain from the body, and put the product in a safe position for 24 hours for natural drying.

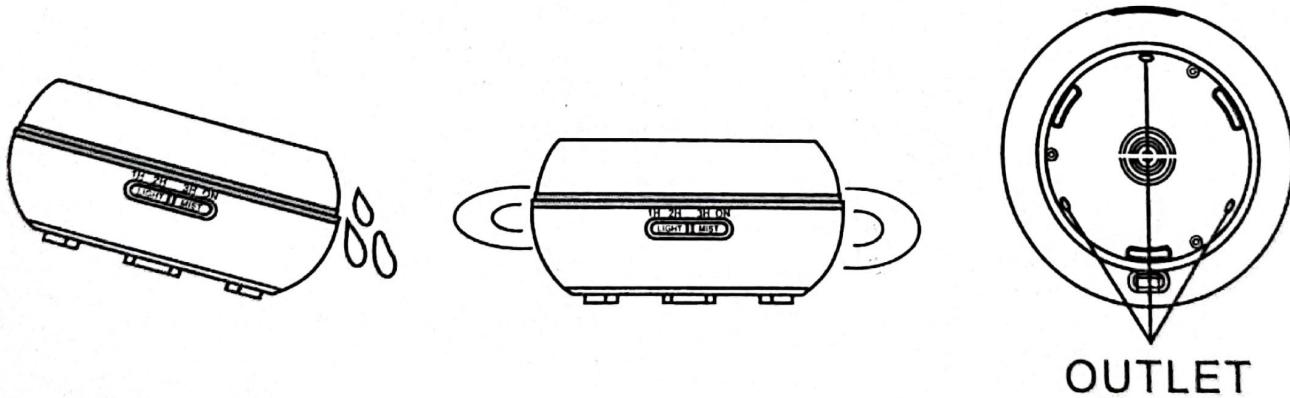


Matters need attention

- The slightly different spray mist concentration is normal.
- Different water, humidity, temperature and wind direction will affect spray mist.
- If there is no water in the water tank, click “right key” the aroma diffuser beeps once, and the aroma diffuser cannot be used without water.
- The aroma diffuser is only suitable for 100% pure natural essential oil. If there is chemical, spices or impurities might cause products to be damaged. Before changing another essential oil, please clean the product in accordance with maintenance introductions.

Accidental leakage

If the product is overturned accidentally, please solve the product in following ways:


1. Turn off the power, unplug the power line, and open the upper lid.
2. Pour all the rest water in the water tank out from drainage side.
3. Gently shake the body, let the rest water drain from the body, and put the product in a safe position for 24 hours for natural drying.

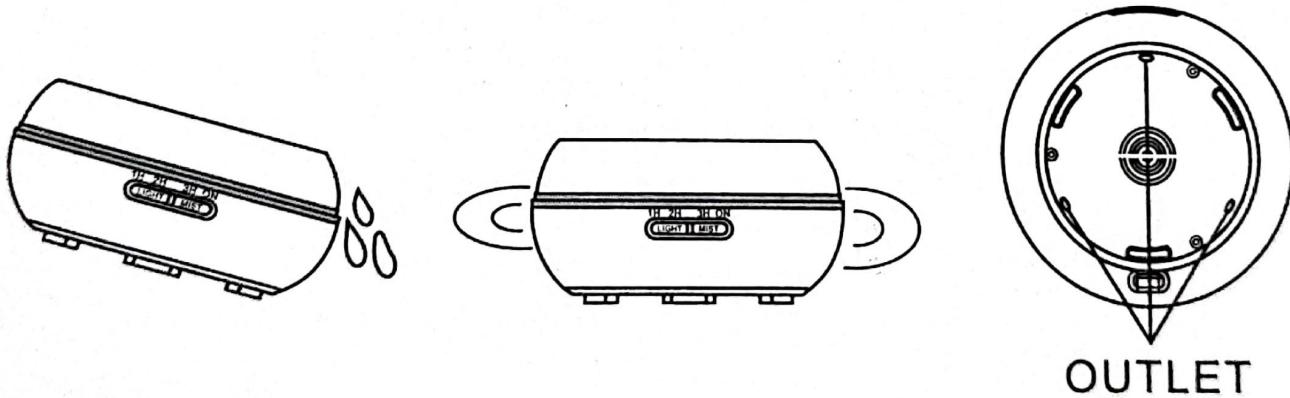

Maintenance

Please clean the product in accordance with following methods after using 5-6 times or 3-5 days:

1. Turn off the power, unplug the power line, and open the upper lid.
2. Pour all the rest water in the water tank out from drainage side.
3. Put small amount of detergent used in kitchen into warm water for dilution, and clean the product with a rag.
4. If there is dirt on the inner side of air intake, please remove the container.
5. During maintenance, do not use medical diluted ethanol. Otherwise, the product might be damaged, or various identifications might be wiped.

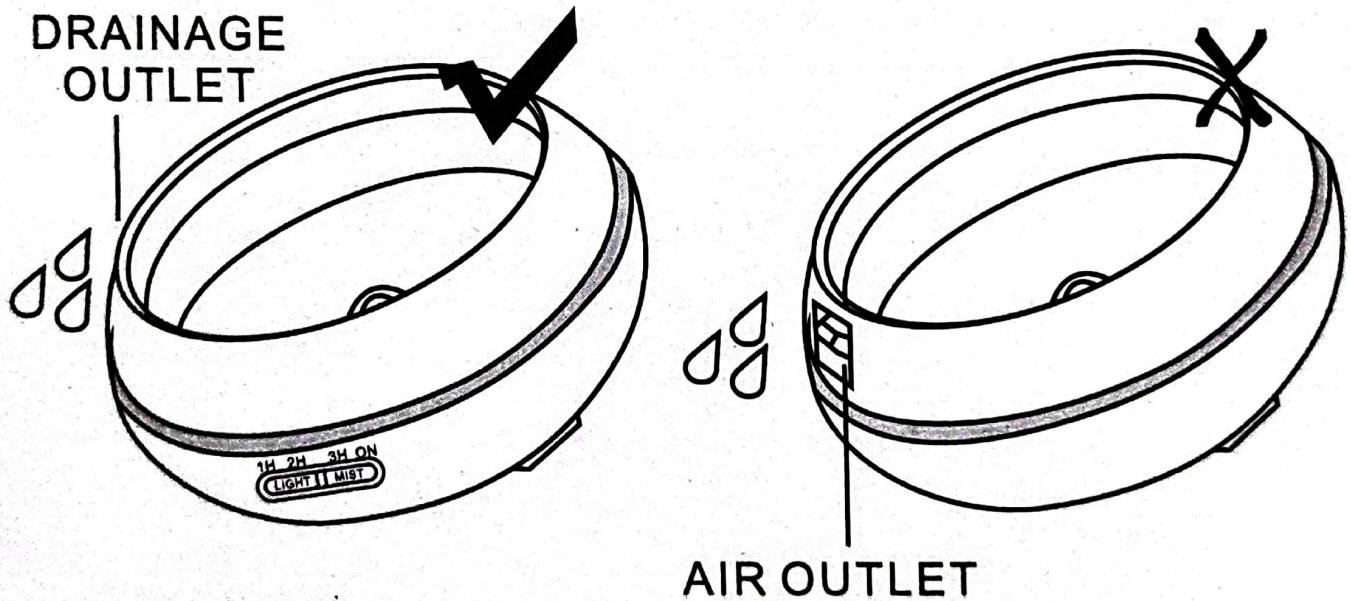

Maintenance

Ensure following matters being obeyed, and avoid damaging product:

- The products cannot be refitted, removed or repaired by non-technical personnel if maintenance is required, please contact with the sales department of the product.
- Please do not stab, distort or draw the electric wire on the power adapter, and please do not put the electric wire on the position with high temperature. Please do not press the electric wire with something heavy, and please do not clamp or repair the electric wire with clip.
- If wire on the adapter is damaged and socket is loose, please stop using.
- If there is odor, noise and abnormal heating, there must be fault occur to the product and adapter. Please quickly unplug the adapter plugs from the power ocket, and stop using.
- Please do not put the adapter in water or adherent water and make it work. Do not place the adapter in the wet places, such as: bathroom, changing room, greenhouse, etc.
- In order to ensure hygiene, it is necessary to pour water in the water tank from the drainage side after using every time, and scrub the product clean with a rag.
- Essential oil will result in dying. If essential oil is splashed out, please immediately use water faucet for watering.
- Please do not directly spray mist on the furniture, cloth or wall, etc.
- Avoid directly placing the product in the sunlight, near the air conditioner, fan or high temperature position.
- Place the product on the plane position. Do not place the product on the rug, mat or some places not stable place.
- Avoid placing the product near the electric appliances, such as: TV, speaker, etc.
- Do not cover the product. Otherwise, the product might be damaged by water accumulation inside the body.
- After working for long time, re-start the product after stopping for 60 minutes, and prevent ultrasonic plate from damaging.
- Only the running water and purified water are suitable for the product.
- Do not move the product during using.
- When both hands are wet, do not touch product in order to avoid electric leakage.
- Please place the product on the place beyond children's reach. Correctly guide the children not to play with the products.
- The product is not suitable for children, and people lack of understanding and experience for product.

Operation fault cause

When the aroma diffuser fails to operate normally, please refer to following condition:

If you think that the product has any faults, please confirm following points before request for maintenance:	
When the product is opened, the aroma diffuser will shut off automatically within less than one second	<ul style="list-style-type: none">● Please confirm that whether there is water in the container or whether the water is enough.--Add water into the container.● Please confirm that whether the AC adapter USB plug is connected with the product.--Please confirm that whether the product has been connected with the adapter. In order to confirm that whether the product has been connected, please unplug the DC plug, and re-plug.
No spray mist or abnormal spray mist	<ul style="list-style-type: none">● Is water too little or too much in the container? --Please add water to the container./If water in the container is over max line the spray mist might be abnormal.● Is ultrasonic atomizing film polluted? --Please clean the container. (please refer to "maintenance methods")● Is the port full of dust at the bottom? --If the air intake at the bottom is full of dust, the wind-drawing volume will be reduced greatly, and there will be no enough wind to spray the mist.
Water leakage of the aroma diffuser	<ul style="list-style-type: none">● Is the upper cover proper? -- Re-install the cover.● Is temperature too low or too high? --If temperature is too low or humidity is too high, its surface mist will be easily gathered together and water drop will form.

Size	Approx	
Weight	Approx	
Power: input/output	<input type="checkbox"/> AC 100-240V 50/60HZ DC24V 0.5A	<input type="checkbox"/> AC 100-240V 50/60HZ DC 5V 1.2A
Length of electric wire	About 170CM	About 120CM
Power	About 12W	6W
Water tank capacity	300~550ML	300~550ML
Raw material	PP/ABS	PP/ABS
Accessories	Power, measuring glass, and user manual	USB Wire, and user manual
Ultrasonic frequency	2.4MHZ	3MHZ

Please plug the DC adapter or USB cable to the DC end and main socket.