


Ollygrin

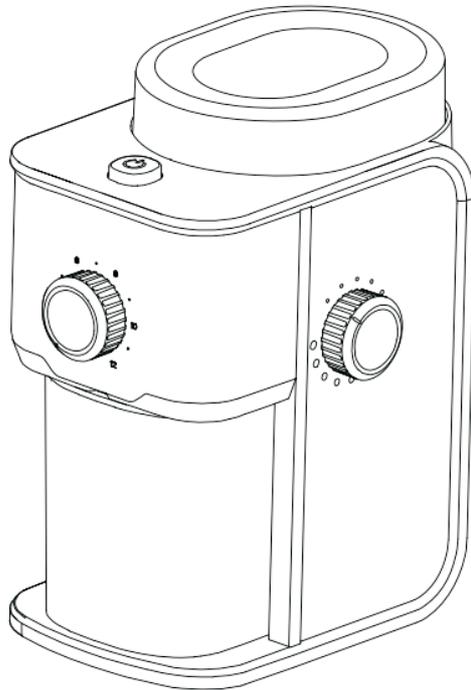

BURR GRINDER

Instruction manual

AZ-BG705S

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

WARNING: When using electrical appliances, basic safety precautions should always be followed including the following:

1. READ ALL INSTRUCTIONS.

2. To protect against risk of electrical shock do not put the unit in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not place with the appliance.
4. Close supervision is necessary when any appliance is used by or near children.
5. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord. Permanently Installed - Make sure appliance is OFF when not in use, before putting on or taking off parts, and before cleaning.
6. Avoid contacting moving parts. Do not attempt to defeat any safety interlock mechanisms.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service email address for information on examination, repair, or adjustment.
8. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter.
11. Do not let cord contact hot surface, including the stove.
12. Check hopper for presence of foreign objects before using.

SAVE THESE INSTRUCTIONS

This appliance is for HOUSEHOLD USE ONLY.

IMPORTANT SAFEGUARDS

All users of this appliance must read and understand this instruction manual before operating or cleaning this appliance.

1. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
2. Do not leave this appliance unattended during use.
3. If this appliance begins to malfunction during use, immediately press the ON/OFF button to turn the unit OFF and unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
4. If this appliance falls or accidentally becomes immersed in water, unplug it immediately. Do not reach into the water! Do not use this appliance after it has fallen into or becomes immersed in water.
5. To reduce the risk of injury to persons or property, never use this appliance in an unstable position.
6. Do not use this appliance for other than its intended use.

NOTES ON THE PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

NOTES ON THE CORD

1. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
2. A longer power-supply cord or extension cords are available and may be used if care is exercised in their use.
3. If a longer power-supply cord or extension cord is used:
 - 1) The marked electrical rating of the power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord; and
 - 3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.


PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating to the finish of the counter top or table top or other furniture. Place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top. Failure to do so may cause the finish to darken; permanent blemishes may occur or stains can appear.

ELECTRIC POWER







If the electrical circuit is overloaded with other appliances, the burr grinder may not operate properly. It should be operated on a separate electrical circuit from other appliances.

Features

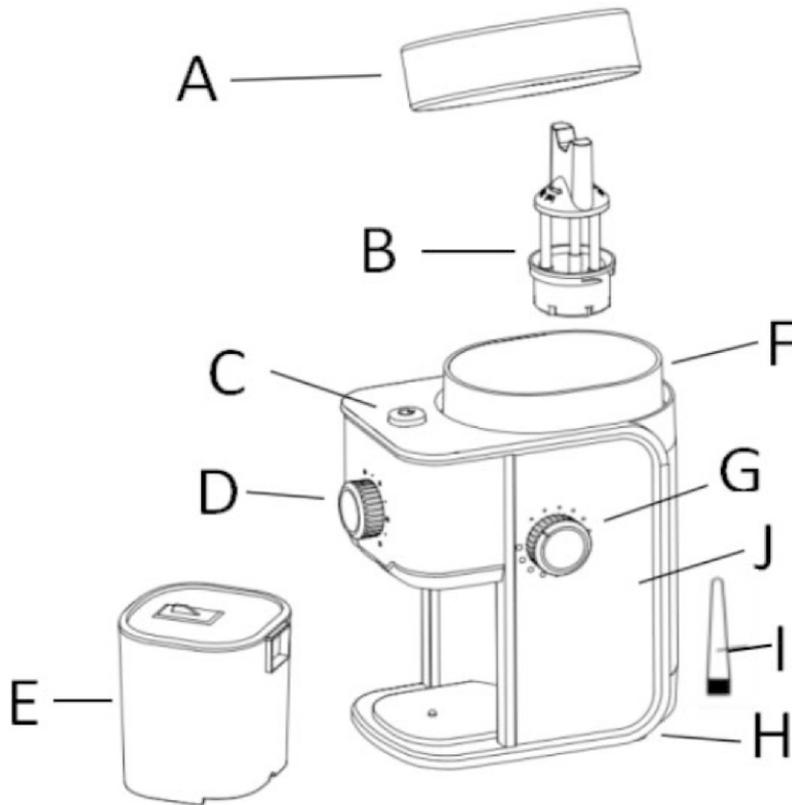

- A. Coffee bean hopper lid
- B. Removable upper burr blade
- C. On/off Button
- D. Cup selector knob
- E. Ground coffee container
- F. Coffee bean hopper
- G. Coarseness selector knob
- H. Base
- I. Cleaning Brush
- J. Body

Operating Instructions

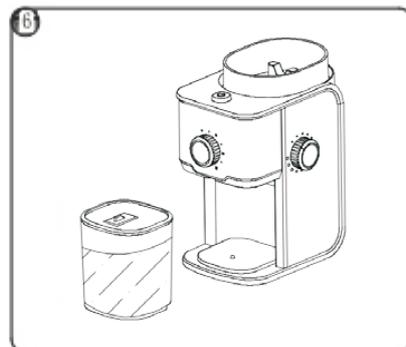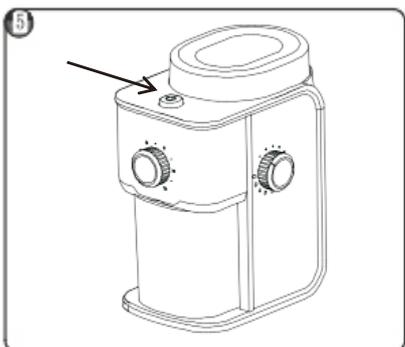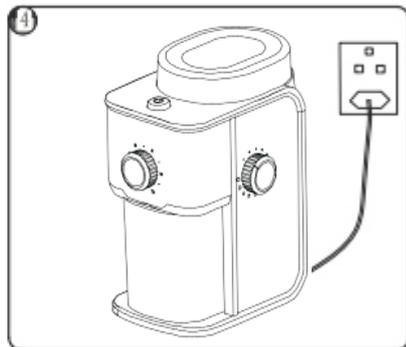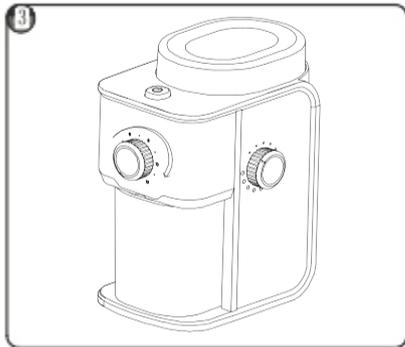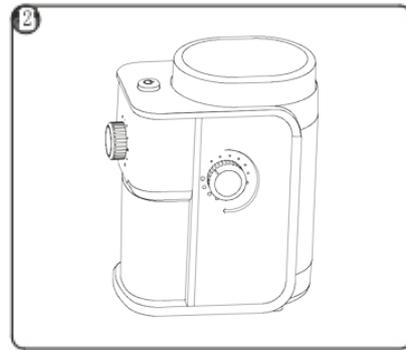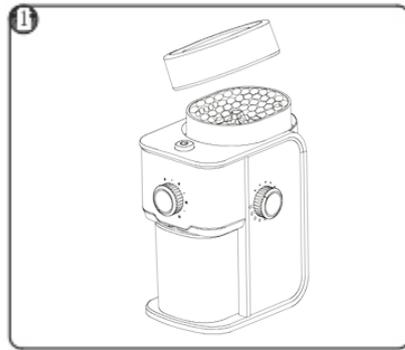

Before First Use

Before using the appliance for the first time, or following periods of prolonged storage, it is necessary to clean the appliance thoroughly. See the Cleaning section. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

Using your Coffee Grinder


1. Lift the Hopper Lid off the Hopper. Place the desired quantity of coffee beans into the Hopper, up to 100g. Replace the lid.
2. Put the coffee bean hopper lid in right position. As there is safety switch inside the housing. The appliance will not work if the lid is not put in right position to push the safety switch.
3. Put the ground coffee container in the right position. As there is safety switch inside the housing. The appliance will not work if the ground coffee container is not put in right position to push the safety switch.
4. The coarseness selector knob on the left of the appliance is marked from FINE to COARSE setting. For coarsely ground beans, turn the knob to the THICKEST POINT. Turn to The thinner point setting, the finer the grind. (See Helpful Hints for recommendations on the correct grinds for the brew process you'll be using).
5. Turn the cup selector knob to the desired setting. For instance, if the dial is set to 12, it will grind enough coffee to serve approximately 12 cups. This should be used as a guide only, as it will vary depending upon preferred taste, type and roast of bean and the grind selected.
6. Plug in the grinder.
7. Once you have both the coarseness selector knob and the cup selector knob set, press the On/off Button to start the grinder. The grinder will stop automatically after the set time. You can also press the On/off Button at any time to stop it. After use, the appliance must be unplugged.
8. Remove the Ground Coffee Container and use the grounds as you desire.

Warning!

Do not use it more than two cycles for each time, and must rest 1 min between two cycles. Cool down the motor after use 2 cycles to avoid over heat for motor.

Clean the appliance after each use, do not use this appliance to grind the food with too many oil, such as peanut. Do not use this appliance to grind the food which is too hard, such as rice.

Cleaning & Maintenance

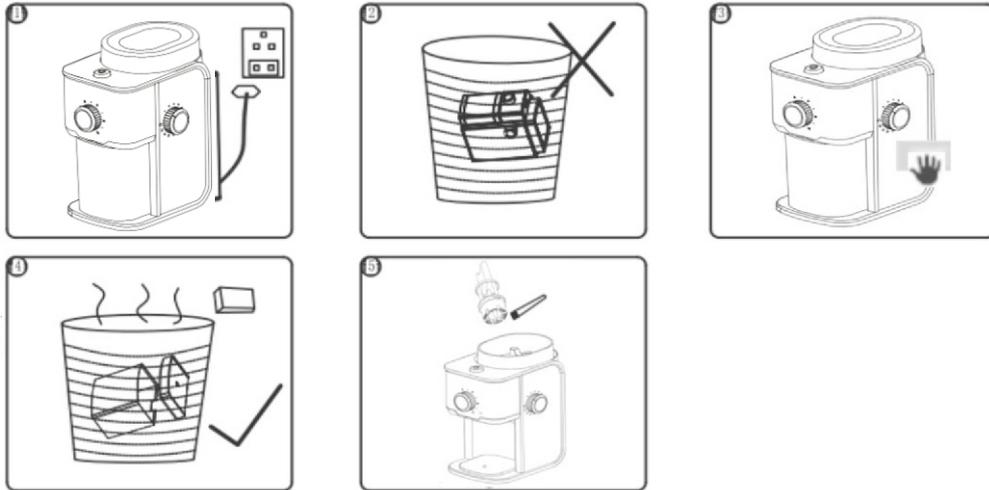

Cleaning

1. Unplug the appliance.
2. Do not clean the appliance under running water and never immerse it in water.
3. To clean, wipe the appliance with a damp cloth and then with a dry one.
4. The ground coffee container and its lid may be washed in hot soapy water and then thoroughly dried.
5. Once the Hopper Lid is removed and the grinder is unplugged, you can clean the grind head free of any remaining coffee grinds by using the included Cleaning Brush.
6. It's recommended to clean out the coffee bean hopper after every few uses, so coffee grounds do not build up.
7. Ground coffee can also build up in the chute that delivers the grinds to the removable ground coffee container. To release these grounds, remove the container and gently tap the top of the unit a few times. The build-up should fall out easily. Never stick any objects, including fingers up the chute to try and remove any built-up coffee.

Storage

Storage the components with housing base together after cleaning. Put the appliance away from the children.

Helpful Hints

- ✓ The Electric Burr Coffee Grinder is fully automatic. Select the correct grind for the brew process you plan on using the grinds for: espresso, automatic drip, or French press. There are 14 grind settings available. Rotate the coarseness selector knob to between FINE and MEDIUM to select fine grind and to between COARSE and MEDIUM for coarse grind, FINE position is being the finest and COARSE position is being the coarsest.
- ✓ Select fine grind for espresso (rotate coarseness selector to the FINE), medium grind for drip makers and coarse grind for French press or percolator.
- ✓ The actual grind size for a particular setting will vary depending on many factors, including: degree of roast (light vs. dark), freshness, humidity, type of bean, oil content, etc. With use, you will discover which setting best meets your taste, brewing style and other personal coffee-making preferences.
- ✓ For optimum freshness of your coffee beans, do NOT store in the bean Hopper or the Ground Coffee Container for extended periods of time.
- ✓ To avoid overheating the motor, do not grind more than two full whole bean hoppers or two full 12-cup cycles without a break. Allow the motor to cool at least two minutes between cycles.
- ✓ The Hopper Lid and Ground Coffee Container must always be in place when using this appliance.
- ✓ Use only coffee beans in this appliance.

Trouble Shooting

Problem	Solution
Grinder stops working during use	Grinder overheats. If the motor shuts down, unplug the coffee grinder and empty the coffee grounds from the ground coffee container. Once the container is empty, let the motor rest for approximately 30 minutes. Once the 30-minute reset is complete, plug the power cord back into the 120V AC electrical outlet and continue grinding.
Grinder clogs	When grinding on the fine setting for 12 cups, never grind more than two times before emptying the ground coffee container. At the medium and coarse grind settings, empty the ground coffee container after every 12-cup coffee grind.
	Clean the chute that delivers coffee to the ground coffee container often.
The grinder does not operate when the ON/OFF button is pressed.	Ensure the power plug is correctly inserted into the 120V AC.
	Ensure the hopper lid is placed in the correct position.
	Ensure the removable ground coffee container with lid is placed correctly on the base.

Warranty & Service

The Limited Warranty is for one full year from the date of purchase. It's applicable to the original purchaser only and is not transferable to a third party user. Repair or replacement of defective parts is solely at the seller's discretion. In the event that repair isn't possible, the seller will replace the product/ part. If product repair/ replacement won't suffice, the seller has the option of refunding the cash value of the product or returned component.

Product defects not covered under the Warranty provisions include normal wear and damage incurred from use or accidental negligence, misuse of instruction specifications or repair by unauthorized parties. The manufacturing company is not liable for any incidental or consequential damages incurred by such circumstances.

Ollygrin

HOUSEHOLD USE ONLY