



Quick Start Guide

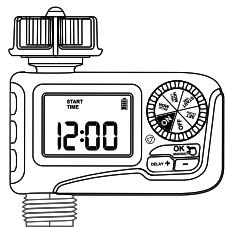


- Model: ITV105 -

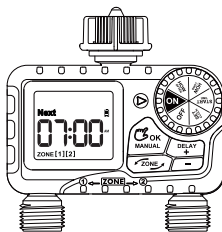

- Model: ITV205 -


1 Check the water inlet filter

The filter prevents impurities from entering and blocking the valve, and its peripheral rubber ring seals the connection to prevent leaks. Please install the water inlet filter correctly as shown below.

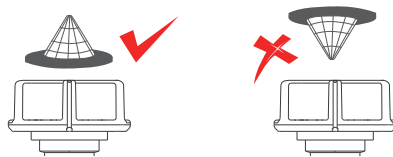

2 Insert the batteries correctly


Requires 2 new 1.5V AAA alkaline batteries. Insert them into the battery compartment as directed. Tightly close the battery compartment to ensure waterproofing.

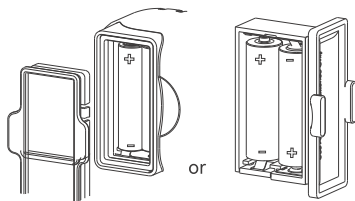


3 Install the timer on the faucet

Wrap Teflon tape around the threads of the faucet or hose to ensure no water leaks. Keep the faucet off and install the timer on it (hand tight only). Ensure the water inlet is higher than all water outlets. The display should be as vertical as possible to the ground to prevent rainwater infiltration.

Tips: If the faucet threads cannot be tightened to the deepest part of the timer inlet, add a rubber washer to avoid leakage.

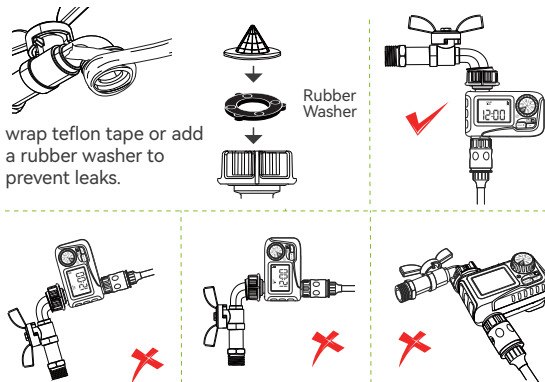

4 Activate the timer valve before use

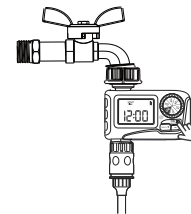

Keep the faucet off and turn the dial to "ON". Press and hold the "MANUAL" button to enter manual watering mode. When the display flashes, immediately press the "OK" button to open the valve. After hearing a "click" or 5 seconds, turn the dial to "OFF" to close the valve. Repeat the above operation 3~5 times. If the timer has 2 zone outlets, repeat the above for each outlet separately (press the "ZONE" button to switch zones).

***Refer to the user manual for details.**

5 Check for water leaks before use

Keep away from the timer water outlet to avoid splashing water, and turn on the faucet gently.

Check: ① Check the water inlet for leaks.
② Repeat step 4 to check if water flows out or closes when the valve is opened or closed.

6 Congratulations!

 
You have completed the installation of the timer. Now please refer to the user manual to begin **programming your watering schedule**.

7 5 steps to quickly program your watering plan

*ITV205 has two zones, please follow the steps below to set ZONE 1 and then set ZONE 2(use "ZONE" button to switch zone).

***Refer to the user manual for more details and functions.**


STEP 1: SET CLOCK



ITV105 and ITV205 selectable in 12H or 24H

1. Turn the timer dial to **"SET CLOCK"**
2. Press the "+" or "-" to set the current exact time
3. Use the **"OK"** button to switch Hours or Minutes
4. Turn the dial clockwise to save the changes in this STEP and go to the next STEP

 STEP 2: START TIME



1. Turn the dial to **"START TIME"**
2. Press the "+" and "-" buttons to set the time you want to start watering
3. Use the **"OK"** button to switch Hours or Minutes
4. Turn the dial clockwise to save the changes in this STEP and go to the next STEP

STEP 3: HOW LONG



 
1. Turn the dial to **"HOW LONG"**
2. Press the "+" and "-" buttons to select watering duration
3. Use the **"OK"** button to switch Hours or Minutes
4. Turn the dial clockwise to save the changes in this STEP and go to the next STEP

STEP 4: HOW OFTEN



1. Turn the dial to **"HOW OFTEN"**
2. Press "+" and "-" buttons to set your watering frequency
3. Turn the dial clockwise to save the changes in this STEP and go to the next STEP

STEP 5: AUTOMATIC WATERING



After complete step 1 to step 4, turn the dial to **"ON"**. It will start watering automatically based on the programmed.

Now you can keep the faucet turned on and trust the timer to do the watering !

8 Troubleshooting

Problem	Possible Cause	Possible Solution
The water inlet leak	1. No filter or not placed horizontally 2. The faucet is not the standard 3/4"	1. Add a filter and make sure it's placed horizontally in the inlet. 2. Make sure the faucet is a standard 3/4" faucet. 3. Wrap Teflon tape around the faucet to make it tight.
The water won't stop /flow out	1. Long time storage and transportation make the valve inactive 2. Valve clogged	1. Keep the tap turned off and turn the timer dial to ON. 2. Run the manual watering for 5-7s and stop it. 3. Repeat the Step 2 for 3 to 5 times. 4. Try to use it normally.
Low water pressure	1. Filter blockage 2. Inlet pressure not sufficient to support watering needs	1. Check if the filter is clogged, if so, clean or replace the filter. 2. Make sure the timer is properly installed and not cross-threaded. 3. Install a booster pump or other pressure-increasing device.

Warranty

Rainpoint provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

If you contact us to register and activate the warranty, you can get a longer warranty period.

Need help?

Email: service@rainpointonline.com

WhatsApp: +1 626-780-5952

US toll free: +1 833-381-5659

(Mon-Fri: 9:30 AM-5:30 PM PST)

DE toll free: +49 800-182-0576

(Mon-Fri: 9:00 AM-5:00 PM CET)

UK toll free: +44 800-808-5337

(Mon-Fri: 9:00 AM-5:00 PM CET)

Welcome to join us!

Here are some gardening tips and tricks, as well as a lot of inspiration to help us become better gardeners.

@Rainpointglobal

@RainPoint

@Rainpointglobal

@Rainpointglobal

@Rainpointglobal

@Rainpointglobal