



Bousnic

Bousnic

DOG TRAINING

COLLAR

Model:RS2



@bousnic



support@bousnic.com



Quick Start Guide Video

Important Safety Information:

WARNING

Not for use with aggressive dogs. DO NOT use this product if your dog is prone to be aggressive. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or a certified trainer.

- ◆ **For use with dogs over 6 months of age.**
- ◆ **DO NOT** use it when the dog or the collar is wet.
- ◆ **DO NOT** press and hold shock or vibrate for more than 10 seconds to avoid physical or psychological damage to your dog.
- ◆ Your dog **SHOULD NOT vocalize or panic when receiving stimulation**. If this happens, the stimulation level is too high and you need to go back to the previous level and repeat the process.
- ◆ **DO NOT** charge the device near any flammable substances.
- ◆ **Dog use only.** Not for use on children.
- ◆ **This is not a toy**, and should only be operated by a responsible adult.

 
CAUTION

For on-leash training. Do not attach the leash to the training collar. Use a regular collar in addition to the training collar. Risk of skin damage. Please read and follow the instructions in this manual. Proper fit of the collar is important. A collar worn for too long or made too tight on the dog's neck may cause skin damage. Ranging from redness to pressure ulcers; this condition is commonly known as bed sores.

- ◆ **DO NOT** leave the collar on the dog for more than 12 hours per day.
- ◆ When possible **reposition the collar on the dog's neck every 1 to 2 hours**.
- ◆ **Check the fit to prevent excessive pressure**; follow the instructions in this manual.
- ◆ **Never connect a lead to the collar**; It will cause excessive pressure on the contacts.
- ◆ **Wash the dog's neck area and the contact probes of the collar weekly** with a damp cloth.
- ◆ **Examine the contact area** daily for signs of a rash or a sore.
- ◆ **If a rash or sore is found, discontinue use of the collar** until the skin has healed. If the condition persists beyond 48 hours, see your veterinarian.
- ◆ **The Receiver meets the IP67 waterproof rating**, it can be submerged in water up to 1 meter for up to 30 minutes. If submerged and wet, please do not use it.
- ◆ **This product comes with conductive silicone covers**, please ensure they are worn on the contact points before putting the Receiver on your dog and check for the presence of the silicone cover every hour.


1.Quick Start Guide

1

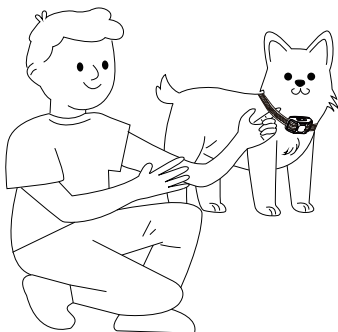



Let your dog stand on four feet or lay down fully. Fit the Receiver to your dog by leaving one finger space between the collar and your dog's neck. Center the contact points underneath your dog's neck, touching the skin.

 2

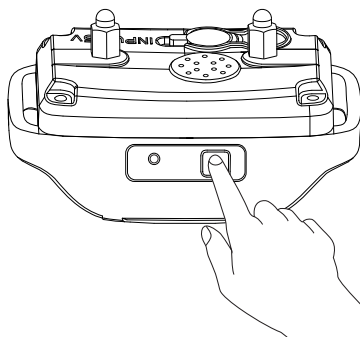


Turn on the Receiver by pressing and holding the Power Button for 2 seconds with vibration to indicate that the Receiver is powered on.

  3

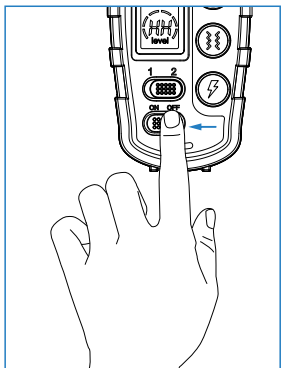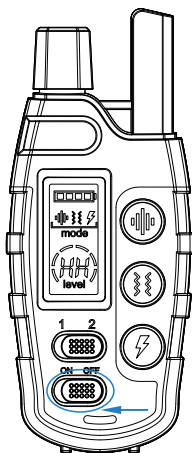


Turn on the Remote Transmitter by sliding the On/Off Button to the "ON" side.

 4

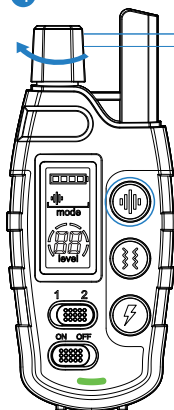


• The Stimulation Button

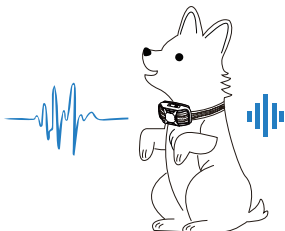 


Beep Command: press the Beep Button, and the Receiver will deliver a beep. The Beep level is 1-8 adjustable. Adjust the Beep Level by pressing and rotating the Stimulation Button. Press any mode button (⚙️/🔊/🔋) to confirm the level and exit the setting. Or wait for 10 seconds without any operation to exit.



 
Vibration Command: press the Vibration Button, and the Receiver will deliver the vibration. The Vibration level is 1-16 adjustable. Adjust the Vibration Level by pressing and rotating the Stimulation Button. Press any mode button (⊕/⊗/?) to confirm the level and exit the setting. Or wait for 10 seconds without any operation to exit.

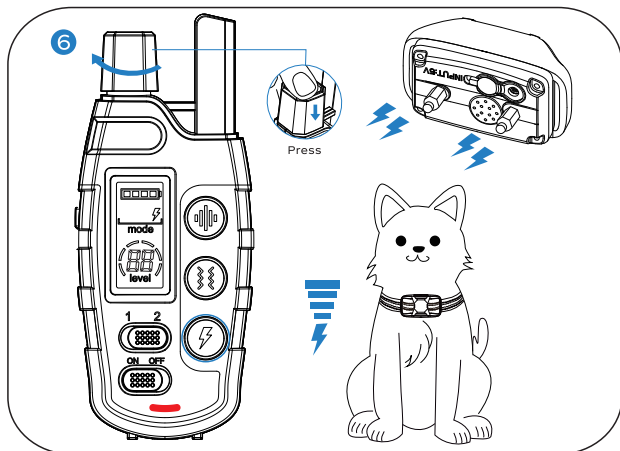

 Shock Command: press the Shock Button, and the Receiver will deliver the static shock. The Shock level is 1-99 adjustable. Adjust the Shock Level by pressing and rotating the Stimulation Button. Press any mode button (⊕/⊗/?) to confirm the level and exit the setting. Or wait for 10 seconds without any operation to exit.

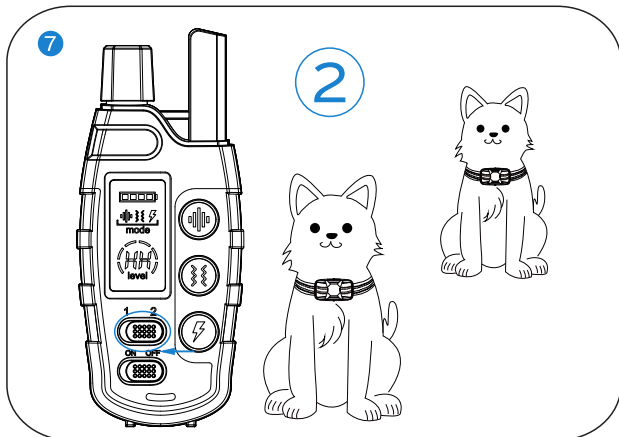


 
Switch the channels by toggling the Channel Button to 1 or 2. This product can train up to 2 dogs.

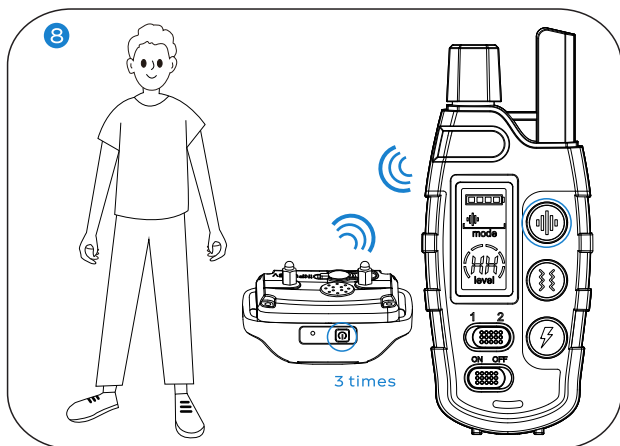

Steps to pair the Remote Transmitter to the Receiver:

1. Press and hold the Power Button on the Receiver for 2 seconds to turn it on. Turn on the Remote Transmitter by toggling the On/Off Button;
2. Press the Power Button on the Receiver 3 times to enter the Pairing Mode. You will hear a beeping and the Indicator becomes solid green. You will now have 10 seconds to finish the pairing;
3. Press the Beep Button, Vibration Button or Shock Button on the Remote Transmitter, and Receiver will respond correspondingly indicating that pairing process is completed. Please refer to "VI. Pairing Up" on page 15 for more details.

  9

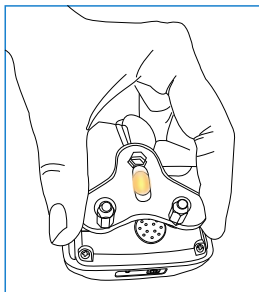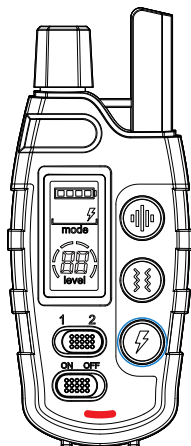


Test the Receiver with the Test Bulb Tool:

1. Turn the Receiver on.
2. Hold the Test Bulb Tool to the Contact Points on the Receiver. Make sure the metal wire has direct contact with both of the top of the Contact Points.
3. Press the Shock Button on the Remote Transmitter.
4. The red Test Light will flash if the Receiver works normally. At higher shock levels, the Test Bulb Tool will flash brighter.

Note:

 - (1) While you test the Receiver with your fingers, please put your two fingers on the top of the Contact Points separately to form a closed loop circle.
- (2) Please always start from the lowest level to avoid accident hurt.

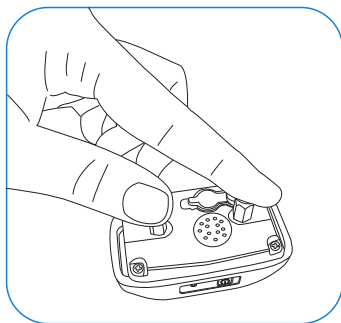

I. Package Content



 
User Manual



Remote Transmitter



Receiver



Collar



 
Contact Points



Silicone Caps



Test Bulb Tool

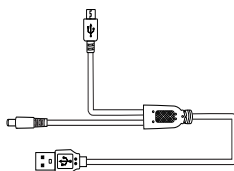


Charging Cable



Wrist Lanyard

II. Product Overview

 Receiver

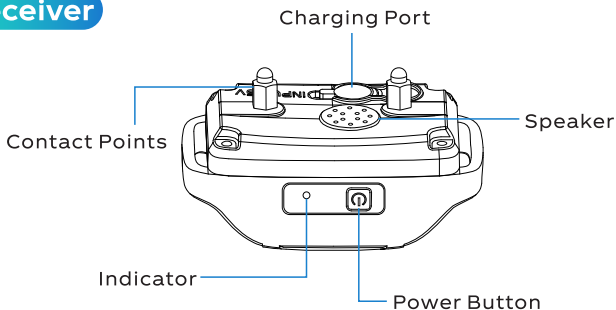

How the System Works

 
The Remote Training Collar is easy to use with an advanced digital display that tells you exactly what level of stimulation you are using.

The Remote Training Collar assists you in controlling your dog without a leash.

At the push of a button, your Remote Transmitter sends a signal activating your dog's Receiver. He receives a safe stimulation. He'll quickly learn the association between his behavior and your correction; in no time, you'll have a better-behaved dog. The Remote Training Collar has been proven safe, comfortable, and effective for all small, medium, and large dog breeds over 6 months old.


Using the Remote Training Collar consistently and correctly, any basic obedience commands can be taught and will help to correct many misbehaviors of your dog.

Remote Transmitter

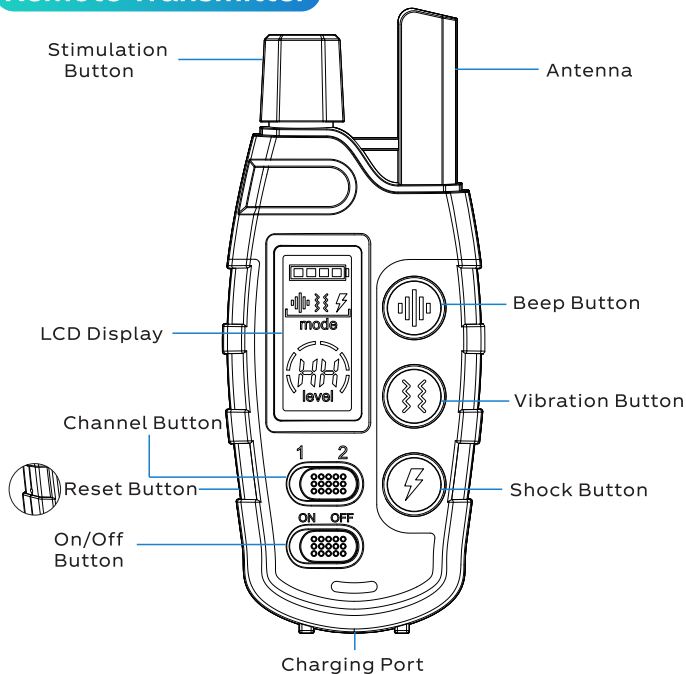

Note: The Remote Transmitter will reboot if you trigger the Reset Button, while the parameters of training modes you set are retained.

 Screen


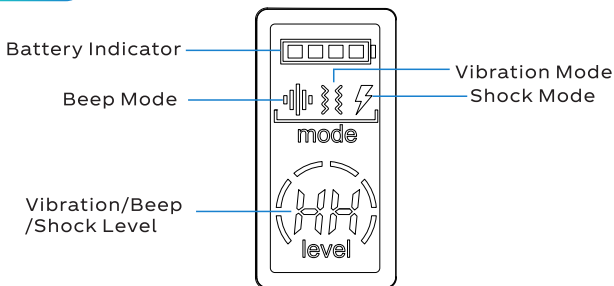


III. Setting Up

1. Charge the Product

Charge the Receiver and the Remote Transmitter with the cable in the package box. Micro-USB is used to charge the Remote Transmitter, and 5.5DC is used to charge the Receiver.

  Remote Transmitter/ Receiver: charge both devices until their Indicator become solid green which will take around 2-3 hours.

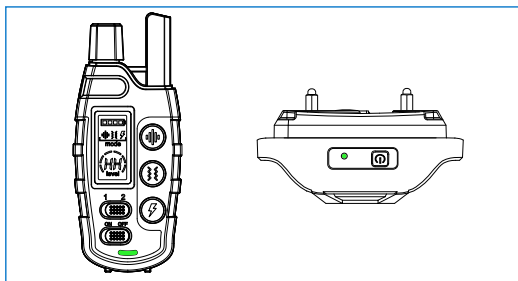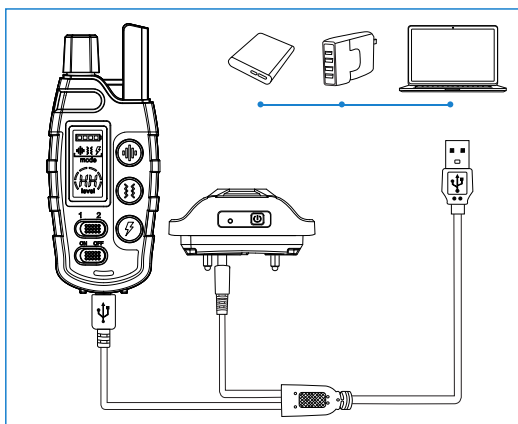


NOTE: The charger, power bank and other charging devices shown in the above pictures are not included in the box.

Warning:


Please use a charger with a 5V output voltage that can always be seen on the surface of it. If charged with a charger with an output voltage over 5V, the Receiver will deliver a rapid warning tone and stop charging automatically, and the Remote Transmitter will stop charging automatically with the colorful indicator rapidly blinking in red.

2. Turn On/Off the Product

 Turn on/off the Remote Transmitter by toggling the On/Off Button Left/Right.

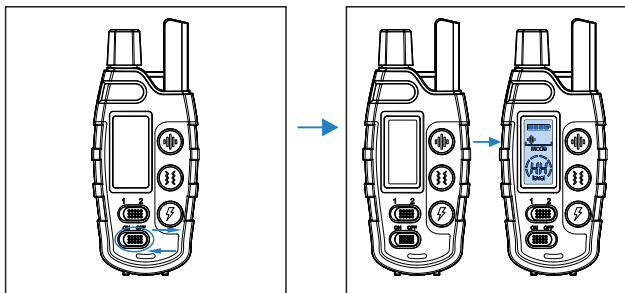

 
Turn on/off the Receiver by pressing and holding the Power Button for 2 seconds.

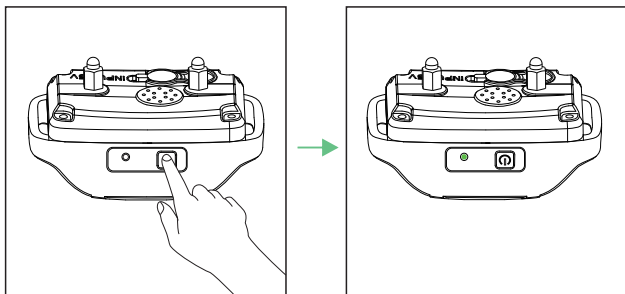


IV. Training Modes

1. Beep Mode

 Press the Beep Button and the Receiver will deliver a beep. It will cut off automatically if you press and hold the Beep Button for over 10 seconds. There are a total of 8 levels of Beep for training which you can adjust by pressing and rotating the Stimulation Button. Press any mode button (⊕/⊖/⊙) to confirm the level and exit the setting. Or wait for 10 seconds without any operation to exit.

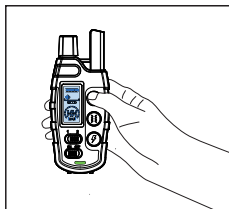


Press

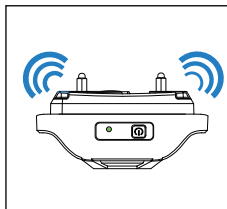 


2.Vibration Mode

 Press the Vibration Button and the Receiver will deliver a vibration. It will cut off automatically if you press and hold the Vibration Button for over 10 seconds. There are a total of 16 levels of Vibration for training which you can adjust by pressing and rotating the Stimulation Button. Press any mode button (⊕/⊖/⊙) to confirm the level and exit the setting. Or wait for 10 seconds without any operation to exit.

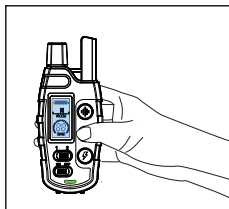


Press

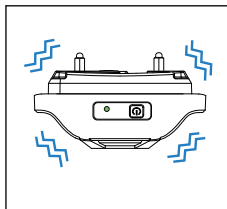 


3.Shock Mode

 Press the Shock Button and the Receiver will deliver a static shock. It will cut off automatically if you press and hold the Shock Button for over 10 seconds. There are a total of 99 levels of Shock for training which you can adjust by pressing and rotating the Stimulation Button. Press any mode button (⊕/⊖/⊙) to confirm the level and exit the setting. Or wait for 10 seconds without any operation to exit.


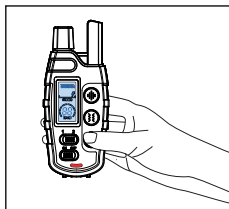


Press

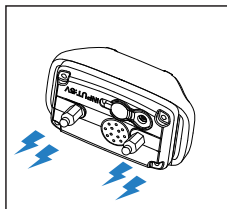 

4. Switching Channels

  Toggle the Channel Button to choose the Receiver you want to control if you have paired two Receivers.

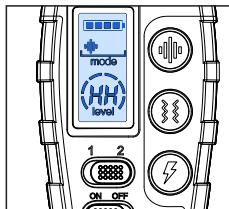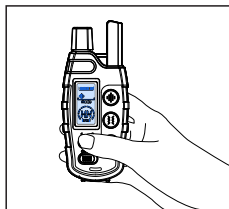

V. Fitting the Receiver

Important:

The proper fit and placement of your Receiver are important for effective training. The Contact Points with Conductive Silicone Cover must have direct contact with your dog's skin on the underside of his neck. To assure a proper fit, please follow these steps:

1. Make sure that the Receiver is turned off.
2. Let your dog stand on four feet or lay down fully (A).
3. Place the Receiver on your dog's neck close to the ears. Center the Contact Points underneath your dog's neck, touching the skin (B).

 
 
 
 
 
 
Note: It is sometimes necessary to trim the hair around the Contact Points to make sure that contact is consistent.

4. The Receiver should fit snugly, yet loose enough to allow one finger to fit between the strap and your dog's neck (C).
5. Allow your dog to wear the collar for several minutes then recheck the fit. Check the fit again as your dog becomes more comfortable with the Receiver.



6. How to attach the collar to the Receiver?

Follow the following steps to attach the collar to the Receiver.

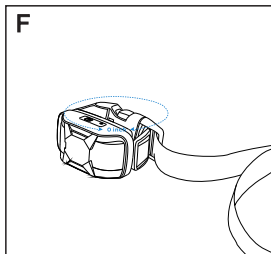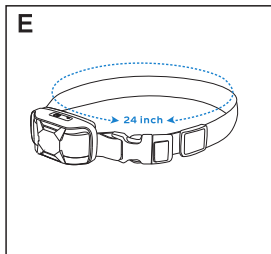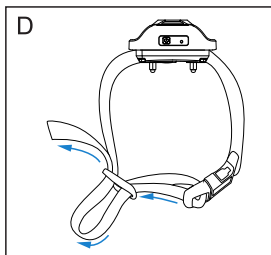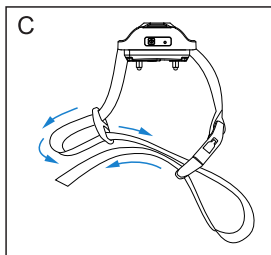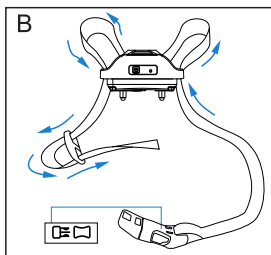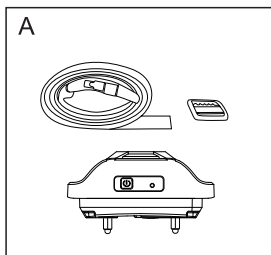

CAUTION:

 
Risk of Skin Damage. Wearing the collar too long or fitting the collar too tight may cause pressure necroses, which are often misidentified as burns. Please follow the below instructions to avoid the pressure necroses:

- Do not shave the dog's neck as this may increase the risk of skin irritation.
- Do not leave the Receiver on your dog's neck for continuous 12 hours.
- Never attach a leash to the collar.
- Never fit the Receiver too tight to your dog's neck.


VI. Pairing Up

If you feel the Receiver is not responding to the Remote Transmitter, follow these steps to pair them up.


1. Press and hold the Power Button on the Receiver for 2 seconds to turn it on. Turn on the Remote Transmitter by toggling the On /Off Button.

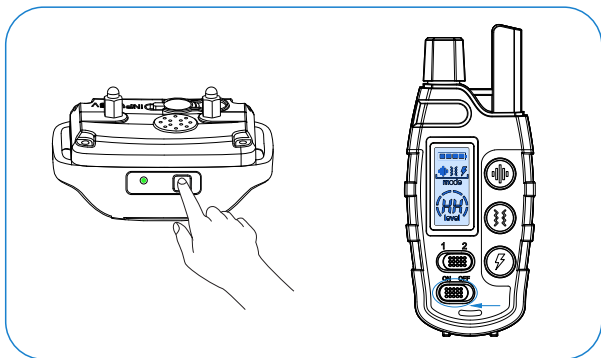

 2. Press the Power Button on the Receiver 3 times to enter the Pairing Mode. You will hear a beeping and the Indicator becomes solid green. You will now have 10 seconds to finish the pairing.

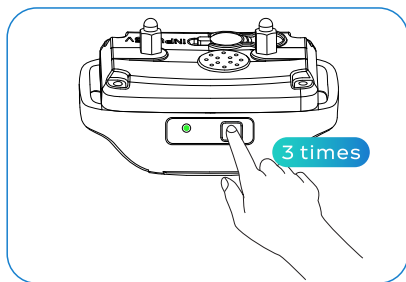

 3. Press the Beep Button, Vibration Button or Shock Button on the Remote Transmitter, and Receiver will respond correspondingly indicating that pairing process is completed.

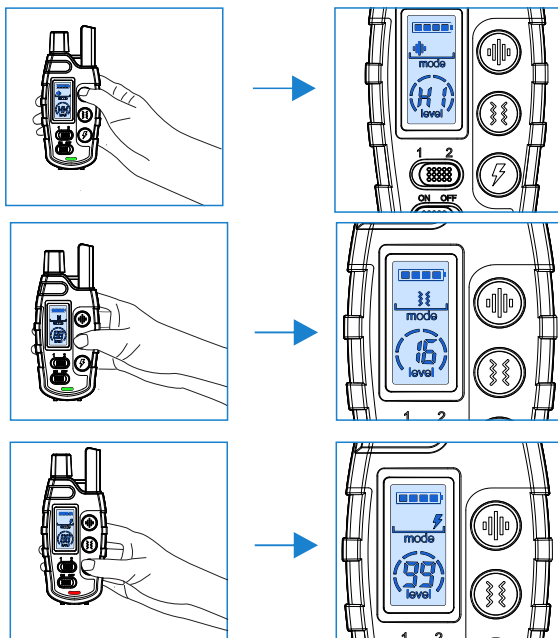

Tips:

The Receiver is paired to the Remote Transmitter by factory default setting. If you find the Receiver does not respond to the Remote Transmitter when you get the product or during the use, please follow the steps below to pair the Receiver to the Remote Transmitter again.

LCD Display & Indicator Definitions

Remote Transmitter:

	Beep Mode
	Vibration Mode

	Shock Mode
	Levels for Warning Tone
	Levels for Beep/ Vibration/ Shock
	Battery Indicator

Remote Transmitter Indicator Light:

On Charge	Green Indicator light blinks slowly
Charged	Green Indicator light become solid
Press 	Green Indicator light comes up
Press 	Green Indicator light comes up
Press 	Red Indicator light comes up

Receiver Indicator Light:

	Slowly blinking indicates the Receiver is on
	Fast blinking indicates the Receiver is charging
	Faster blinking indicates the Receiver battery is low

Training Tip

Find the best stimulation level for your dog

Important: Always start at the lowest level and work your way up. The Remote Training Collar has 8 types of Beep Tones, 16 levels of Vibration, and 99 levels of Shock. For Beep Tones, there are 8 types of Tones, with only frequency differences between the different types. For Vibration and Shock, level 1 is the lowest level; the highest level for Vibration is level 16, and the highest level for Shock is 99.

This allows you to choose the Stimulation level best for your dog. Once you have placed the Receiver on your dog, it is time to find the Stimulation Level best for him. This is called the Recognition Level.

A slight change in your dog's behavior, such as looking around in curiosity, scratching at his collar, or flicking his ears, indicates the Recognition Level is best for your dog.

Follow the steps below to find your dog's Recognition Level:

1. Starting at Level 1, press the Beep Tone/Vibration/Shock Button continuously for 1 to 2 seconds.

Note: When the Beep Tone/Vibration/Shock Button is held down for 10 consecutive seconds, the Remote Transmitter will "time out", and you must release and press the button again before additional stimulation can be delivered.

2. If your dog shows no reaction, repeat the Stimulation Level several times before moving up to the next level.

3. YOUR DOG SHOULD NOT VOCALIZE OR PANIC WHEN RECEIVING STIMULATION. IF THIS HAPPENS, THE STIMULATION LEVEL IS TOO HIGH AND YOU NEED TO GO BACK TO THE PREVIOUS LEVEL AND REPEAT THE PROCESS.

4. Move up through the Stimulation Levels until your dog reliably responds to the stimulation.

5. If your dog continues to show no response at the highest level of Vibration or Static Shock, check the fit of the Receiver. Please find the content "Fitting the Receiver" on page 13.

If this still does not yield any results, your dog's hair will need to be trimmed around the Contact Points. If after completing all of these steps, your dog still does not indicate he is feeling the stimulation, please contact our customer service via email: support@bousnic.com or via facebook: @bousnic.

How to maximize the distance?

Terrain, weather, vegetation, transmission from other radio devices, and other factors will affect the maximum range.

Hold the Remote Transmitter in a horizontal position away from your body to achieve optimum range. For maximum signal strength, keep the device properly charged.



Maximum range



Typical range



Minimum range

*Avoid touching the antenna or the range may decrease substantially.

Frequently Asked Questions

Q: Is the Stimulation safe for my dog?

A: While the Stimulation maybe unpleasant, it is safe to your dog. Electronic training devices require interaction and training from the owner to achieve desired results.

Q: How old does my dog have to be before using the Remote Training Collar?

A: Your dog should be able to recognize basic obedience commands such as "Sit" or "Stay". Dogs should be at least 6 months old before using the training collar.

Q: Once my dog is trained and has been obeying my commands, will he have to continue to wear the Receiver?

A: Probably not. You may need to reinforce training with the Receiver from time to time.

Q: Is the Receiver waterproof?

A: Yes. The Receiver meets IP67 waterproof rating, but make sure to keep the area dry when charging.

Note: the Remote Transmitter is not waterproof.

Q: Will I get a maximum range with the Remote Training Collar?

A: The range of the Remote Training Collar will vary according to terrain, weather, vegetation, as well as transmission from other radio devices. See "How to Maximize the Distance" on page 18 for tips on maximizing your range.

Q: How long can I continuously deliver stimulation to my dog?

A: The maximum amount of time you can press the Beep/Vibration /Shock button and deliver stimulation to your dog continuously is 10 seconds. After this, the Remote Transmitter will time out, and these stimulation buttons must be released and pressed again.

Trouble Shooting

1. My dog does not respond when I press a button.

- Make sure the Receiver has been turned on.
- If your range has reduced from the first time you used the Remote Training Collar, the battery may be low in either the Remote Transmitter or the Receiver.
- Many factors can impact the amount of range you have with the Remote Trainer. For a list of these factors, see "How to Maximize the Distance" on page 18.
- Test the Receiver with the Test Bulb Tool. Refer to "Testing the Receiver with the Test Bulb Tool" on page 6 for detailed steps.
NOTE: If the Test Bulb Tool does not flash, recharge the Receiver and re-test. If the Test Bulb Tool still does not flash, contact via email: support@bousnic.com or via facebook: [@bousnic](https://www.facebook.com/bousnic).
- Increase the Stimulation Level. Refer to "Find the best stimulation for your dog" on page 17 for more information.
- Make sure the Receiver's Contact Points are placed snugly against your dog's skin. Refer to "Fitting the Receiver" on page 13 for more information.

2. The Receiver will not turn on.

- Make sure the Receiver has been charged. For the initial charge, be sure to charge it for 4 hours. Subsequent charges only take 2~3 hours.

3. The Receiver is not responding to the Remote Transmitter.

- Verify the Receiver is on.
- If the indicator is blinking rapidly, fully charge the Receiver.
- If the first 2 solution did not resolve your problems, please check the "How to pair the Remote Transmitter & Receiver" section.

4. The shock does not work, what should I do?

- For shock issue, please use the test bulb tool to see if the Shock Mode itself works well first. Please refer to "Testing the Receiver with the Test Bulb Tool" on page 6 for detailed steps.
- If the red Test Light flash, it means the shock itself works well. Then we suggest you fit the collar properly. Please refer to "Fitting the Receiver" on page 13 for more information.

5. How can I get support when I meet product problems?

- If you have any issues during the use, please feel free to contact us via  support@bousnic.com or via  [@bousnic](https://www.facebook.com/bousnic).

FCC Statement

USA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a specific installation. If interference does occur to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the Receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult customer care, the dealer, or an experienced radio/TV technician for help.

Model: RS2
Made in China
Version: V3.0