

CAUTION! Never insert your fingers or an object into the lid/feeding tube.

6. After the ingredients are processed, wait until the juice no longer flows out, turn the switch to the "OFF" position, and disconnect the power supply; After the filter with blades stops rotating, take out the juice container, and pour out the squeezed juice;

Tips:

- Drink immediately after juicing, if exposed to the air for a long time will affect its nutrition and taste;
- If you can't drink it immediately, you can keep it sealed in the refrigerator, but the time should not exceed 24 hours;
- Apple juice is more susceptible to oxidation, adding a little lemon juice will slow down the rate of oxidation;
- After use, please follow the "Cleaning and Maintenance" method for cleaning and maintenance of the juicer machine;

CLEANING AND MAINTENANCE

Clean:

After the product is used, the detachable parts must be cleaned immediately; For cleaning, please refer to the following operations:

1. Unplug the power plug and wait for the filter with blades to stop rotating. Remove the pusher, lid/feeding tube, the filter with blades, juice collector, pulp container, etc. from the main unit;
2. Rinse the removed parts under the tap or wash them in warm water with the included brush, the water temperature should no more than 60 °C;
3. After cleaning is complete, dry thoroughly;

NOTE:

The main unit is strictly prohibited from being put into any liquid, and it can be cleaned with a damp cloth; Plastic parts should not be dried or disinfected in a dishwasher, disinfection cabinet or microwave oven; The blades are sharp in the filter, please pay attention to safety when cleaning;



Maintenance:

1. This product should be used frequently to keep the motor dry;
2. If it is not used for a long time, please keep the product in a dry and ventilated place to prevent the motor from getting wet;

Troubleshooting

Problem	Possible Reasons and Solution
The motor does not run after being switched on	<ul style="list-style-type: none"> • Check to see if the unit is plugged into a working 120V electrical outlet and that it is ON; • Check that the Locking bar is locked in place properly; • Check if all parts are assembled properly; • Check if there is any residue left in the filter with blades; • The unit has a built-in safety feature that will not let the motor turn on if not assembled properly; The juicer also has a built-in thermal cut off safety switch, if the machine was running, then shut down due to the accidental overheating, make sure you allow the machine to cool for 3 minutes before using it again;
The motor is running with loud noise and excessive vibration	<ul style="list-style-type: none"> • Check that all parts are assembled properly and in the correct position; • Juicing overripe fruit may result in too much pulp and will clog the filter, turn the machine off and clean the filter;
The motor overheats causing the power to automatically shut off	<ul style="list-style-type: none"> • You may have applied too much pressure with the pusher while processing, causing the motor to accidentally overheat; This activates the built-in thermal cut off switch, the motor will temporarily stop working for approximately 3 minutes to cool down; • The motor needs to warm up for 5-10 seconds before first use; • The fruits and vegetables may be soft or overripe; • There may be too much pulp in the filter with blades, turn the machine off and clean the filter with blades;
My power juicer is clogged	<ul style="list-style-type: none"> • The fruit you are using might be overripe; • There might be too much pulp in the filter, turn the machine off, unplug the AC power cord, and clean the filter; • Fruits such as avocados or bananas cannot be juiced in the power juicer, the spout may be blocked by a piece of pulp that may have passed through the filter causing the juice to collect in the juice collector and overflow; • Turn the machine off, unplug the AC power cord, wait for the blade to stop spinning, and inspect the spout, clear the blockage so the juice can flow freely;

If the problem persists or other problems arise, please contact the Seller Customer Service Center for assistance.

SAFETY PRECAUTIONS

Special Note:

- To ensure safe use and to avoid injury and property damage to you and others, please be sure to observe the following safety precautions;
- Misuse without complying with safety warnings may result in an accident; This product does not consider the following:
- Unattended child and disabled use of appliances;
- The situation of children's playing equipment.;

Content indicating [prohibited]:

This product is for home use only and is not permitted for commercial use; This product is strictly prohibited from running at no load or overloaded; When working with this product, it is forbidden to move the product or erode the moving parts to avoid accidental injury; Do not hang the power cord on a sharp object and do not connect to a moving object; Do not use this product on the inclined countertop or unstable countertop; Do not use inferior plugs to avoid fire and personal injury; Do not place the product too close to the stove to avoid damage to the product or fire and personal injury

Content indicating [mandatory]:

If the plug or other parts are damaged, you must stop using the product and go to the designated service point; Please replace or repair it with a professional to avoid injury, before disassembling or commissioning any part of the product, make sure that the product is powered off; If the power cord is damaged, it must be replaced by a professional from the manufacturer, its service department or a similar department in order to avoid danger; Do not allow the child to use it alone, ensuring that the product is not considered a toy and should not be placed out of reach of the baby; Older or disabled people and people with no experience should use this product under supervision and guidance;

Matters that may cause casualties:

Do not use others' product accessories to avoid fire and personal injury; Do not operate this product unattended; Before turning on the power, you must confirm that all components are installed correctly, when cleaning the filter with blades, be sure to pay attention to the sharp edge to avoid cuts; Please confirm whether the voltage is consistent with the specifications of this product (120V~ 60Hz), before use, so as to avoid product safety hazard and damage;

Matters that may cause minor injury or property damage:

Do not immerse the main unit in water or other liquids; The juicer can only be used when the locking bar is fully locked in the right place, never push your fingers or other objects into the lid/feeding tube while the juicer is in operation, after removing the pulp container, do not touch the filter with blades with your hands; After using the product, clean the area that comes into contact with the food, so as to avoid the long-term corrosion of the residue; If the product is stuck during use, please turn off the power immediately, unplug the power supply, remove the container, take out the ingredients on the stuck blade, and continue to use the motor after cooling; Do not use the appliance if the rotating filter is damaged, before using the product, please make sure that the table is clean and clean the oil in time; The best distance between this product and other kitchen appliances should be more than 30cm/12in; After using the product, please unplug the power supply and clean the product;

PRODUCT SPECIFICATIONS

Product Number	Rated Power	Rated Voltage	Rated Frequency
CJ8201W	280W	120V	60Hz
Cord Length	Wide Mouth	Pulp Container Volume	Juice Container Volume
120cm / 47.2in	2.56in(65cm)lid/feeding tube	1.5L	0.45L



After-sale service: support@Sagnart.com




CJ8201W

JUICE EXTRACTOR

Instruction Manual

Please read this manual carefully and keep it properly before using it.

PRODUCT PART NAME

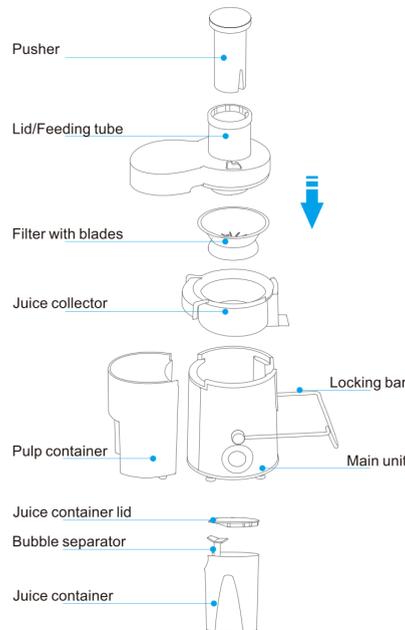

Use attention
Due to the differences in the appearance of the products, the above figure is for reference only, please refer to the actual contents in the box.

INSTRUCTIONS FOR USE

Pre-use instructions:

1. Clean the parts that are in direct contact with the ingredients and make sure the power is off;
2. The temperature of the ingredients and liquid should not exceed 60 °C, and the capacity should not exceed the maximum scale;
3. After each use, please follow the "Cleaning and Maintenance" method on the following page for cleaning and maintenance;

Explanation of the scope of use:

1. Fresh fruits and vegetables are suitable for juice extraction because fresh fruits and vegetables contain more water; Such as apples, carrots, cantaloupe, cucumbers, tomatoes, grapes, and so on;
2. Hard, multi-fiber, starchy fruits and vegetables are not suitable for the use of this product for juice extraction, such as sugar cane, coconut meat, and so on;
3. Starch-containing fruits, such as bananas, papayas, avocados, etc., are not suitable for use in this product for juice extraction and can be processed using a juicer machine or a blender;
4. When the ingredients used for juicing are hard, the time of juicing should not exceed 90 seconds, and after each use, the juicer should be cooled before being used again;
5. Users can also use this product to mix different fruits and vegetables to make juices of various flavors such as apples and carrots;

Assembly:

1. Place the main body on a flat and dry surface, ensure that the power juicer is switched off and unplugged from the electrical outlet;
2. Place the juice collector on top of the main unit;
3. Place the filter with blades in the juice collector, push it down slowly then press and rotate the edge of the filter with both hands to secure it has been correctly assembled;

4. Buckle the pulp container into the bottom of the juice collector and install it in place;



5. Carefully place the lid/feeding tube onto the top of the juice collector with the aiming arrow; Ensure that the clips of the lid/feeding tube fit into the juice collector slots;



6. Press the lid/feeding tube and raise the locking bar and firmly lock it in the vertical position;



7. Slide down the pusher into the lid/feeding tube with the groove;



8. Place the juice container under the juicing nozzle, place the bubble separator to isolate the bubble, cover the lid to prevent splashing;




Disassembly:

1. Place the juicer on a flat and dry surface, ensure that the motor is switched off and unplugged from the electrical outlet;



2. Lower the locking bar into the position as shown;

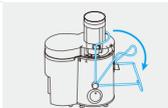

3. Slowly remove the pusher from the lid/feeding tube;



4. Remove the lid/feeding tube;



5. Directly lift the filter with blades and juice collector together, then separate them, if the filter with blades is separately extracted, it is not easy to take out;



Using the juicer:

IMPORTANT: The juicer will only function if all the parts are assembled properly and if the lid/feeding tube is safely locked with the locking bar.

1. Make sure the juicer is properly assembled (Refer to "ASSEMBLY" section) and plug it into a power outlet;



2. Wash the fruits or vegetables you want to juice, then cut them into pieces that fit into the lid/feeding tube and make sure the juice container is placed under the juice spout;



3. To switch ON the Juicer, turn the power switch with speed control to "Low" (low speed) or "High" (high speed);



Low speed is suitable for processing soft fruits and vegetables such as watermelons, peaches, grapes, raspberries, tomatoes, and cucumbers;



High speed is more suitable for processing hard fruits and vegetables such as apples, pears, carrots, orange, and broccoli;



4. Lift the pusher out of the lid/feeding tube, put the pre-cut pieces into the opening, and use the pusher to gently press them down towards the filter with blades; the juice will flow into the juice container, and the pulp will accumulate in the pulp container;



Note: Do not put too much pressure on the pusher, as this could affect the juice quality, and it could even cause the filter to come to a halt.

IMPORTANT: Do not leave the appliance switched on continuously for more than 90 seconds; After 90 seconds, switch off the appliance and allow it to cool down for 3 minutes before switching it on again.

5. When finished juicing, turn the power switch to the "OFF" position to stop the motor and wait for the blades to stop rotating;
- Note:** If the pulp container needs emptying while juicing, switch off the appliance carefully remove the container, empty it and then reassemble it before you continue juicing.

