


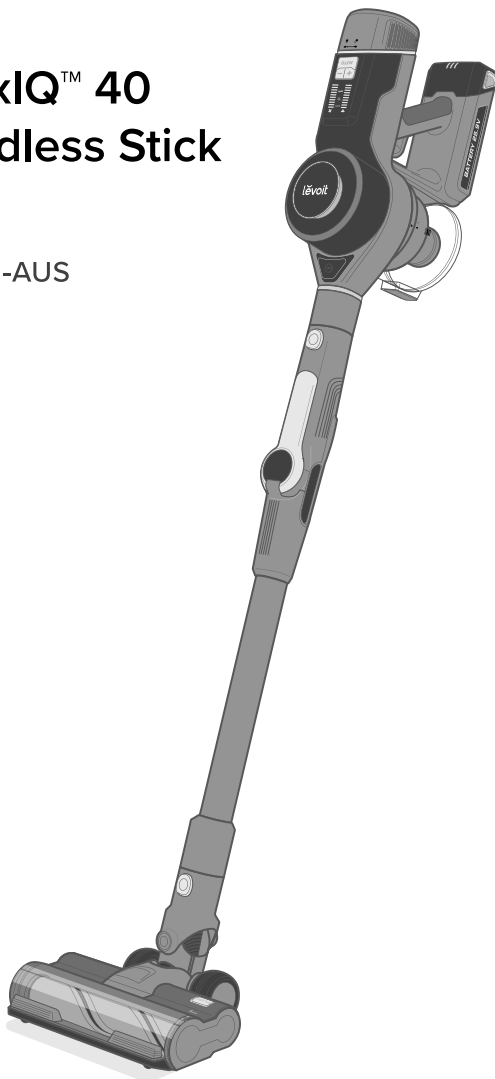

USER MANUAL

Levoit VortexIQ™ 40 Flex Pro Cordless Stick Vacuum

Model: LSV-VF401M-AUS



Questions or Concerns?

Please contact us Mon–Fri, 9:00 am–5:00 pm PST/PDT
at support@levoit.com or at **(888) 726-8520**.

Table of Contents

Package Contents	2
Specifications	2
Safety Instructions	3
Getting to Know Your Vacuum	5
Control Panel	6
Using Your Vacuum	7
Care & Maintenance	11
Cleaning	13
Storage	16
Troubleshooting	17
Warranty Information	18
Customer Support	19

Package Contents

- 1 × Vacuum Body
- 1 × Stick
- 1 × Vacuum Head
- 1 × Telescoping Crevice Tool
- 1 × 2-in-1 Dusting Brush
- 1 × Charging Dock with Accessory Holder
- 3 × Screws
- 3 × Wall Anchors
- 1 × Charger
- 1 × Mini Motorized Brush Tool
- 1 × HEPA-Type Pre-Filter (Pre-Installed)
- 1 × User Manual
- 1 × Quick Start Guide

Specifications

Battery Type	DC 25.9V, 2500mAh Li-ion battery
Charging Input	AC 100–240V, 50/60Hz 0.5A
Charging Time	4–5 hours
Dimensions	9.8 × 9.1 × 46.1 in / 25 × 23 × 117 cm
Weight	7.1 lb / 3.2 kg
Dust Bin Capacity	2.5 cups / 0.6 L
Runtime	40 minutes (Low)
Rated Power	400W
Suction Power	130AW

IMPORTANT SAFETY INSTRUCTIONS

When using this vacuum, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS

WARNING – To reduce the risk of fire, electric shock, or injury:

- **Do not** leave the vacuum unattended while it is on. Unplug from outlet when not charging and before servicing.
- **Do not** use outdoors or on wet surfaces.
- The vacuum is not a toy. **Do not** allow children to play with the vacuum.
- Close supervision is necessary when the vacuum is used by persons (including children) with reduced physical, sensory, or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction on how to use the vacuum and understand the hazards involved.
- Children should not clean or perform maintenance on the vacuum without supervision.
- **Only** use the vacuum as described in this manual.
- **Do not** use your vacuum if it is damaged or not working correctly, or if the charger or plug is damaged. **Do not** try to repair it yourself. Contact **Customer Support** (see page 19).
- **Do not** handle the charger or vacuum with wet hands.
- **Do not** put any object into any opening. **Do not** use the vacuum with any opening blocked. Keep free of dust, lint, hair, or anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all body parts away from openings and moving parts.
- Use extra care when cleaning on stairs.
- **Do not** vacuum the following or use where they may be present:
 - Large or sharp objects such as glass shards
 - Flammable or combustible liquids such as solvents or detergents
 - Inflammable or explosive substances such as gasoline or alcohol
- Risk of injury. Roller brush may start unexpectedly. Remove the main body before cleaning or servicing.
- Prevent unintentional starting. Ensure the switch is in the "Off" position before picking up or carrying the vacuum. Carrying the vacuum with your finger on the switch may cause accidents.
- **Always** turn the vacuum off before connecting or disconnecting the stick, nozzles, brushes, or vacuum head.
- **Do not** vacuum water or any liquids.
- **Do not** vacuum anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- **Do not** use without dust bin and filters in place.
- **Do not** point the vacuum at any person or animal while it is on.
- Store the vacuum on a small stand or flat surface, or hang it from the wall.
- **Do not** use aftermarket or third-party accessories with the vacuum. Only use the accessories provided.
- Children should be supervised to ensure that they do not play with the vacuum.

SAFETY INSTRUCTIONS (CONT.)

Battery & Charger

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- **Do not** pull or carry the vacuum by the charging cable, use the cable as a handle, close a door on the cable, or pull the cable around sharp edges or corners. **Do not** run any appliance over the cable.
- **Do not** pull on the cable to remove it from the outlet. **Only** use the plug to pull it out from the outlet.
- **Never** place the charger or its cable near any heat source.
- Keep the charging cable out of areas where people walk often. Place the cable where it will not be tripped over.
- **Do not** use the charger to charge other appliances besides this vacuum.
- **Only** recharge the vacuum with the charger specified by Arovast Corporation. A charger that is suitable for one type of appliance may create a risk of fire when used with another battery pack. To request a new charger, contact **Customer Support** (see page 19).
- **Only** use the battery pack specifically designed for this vacuum. Use of any other battery packs may create a risk of injury and fire. To request a new battery, contact **Customer Support** (see page 19).
- When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery. Avoid contact. If contact occurs, flush with water. If liquid contacts eyes, immediately flush with water and seek medical help. Liquid ejected from the battery may cause irritation or burns.
- **Do not** use the battery pack or vacuum if they are damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosions, or risk of injury.
- Have servicing performed **only** by a qualified repair person using identical replacement parts. This will ensure that the safety of the vacuum is maintained.
- **Do not** modify or attempt to repair the vacuum or the battery pack except as indicated in the manual.
- **Do not** expose the battery pack or vacuum to fire or excessive temperatures. The battery used in this device may present a risk of fire or chemical burn if mistreated. **Do not** disassemble, short contacts, heat above 140°F (60°C), or incinerate.
- Follow all charging instructions and do not charge the battery pack or vacuum outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- For use **only** with the FBP063 battery pack manufactured by Suzhou EUP Electric Co., Ltd.
- **WARNING: Do not** use with non-rechargeable batteries.


SAVE THESE INSTRUCTIONS

NOT FOR COMMERCIAL USE

HOUSEHOLD USE ONLY

GETTING TO KNOW YOUR VACUUM

- A. Control Panel
- B. HEPA-Type Pre-Filter
- C. Vacuum Body Release Button
- D. Stick
- E. Vacuum Head Release Button
- F. Vacuum Head
- G. Roller Brush Cushion
- H. Roller Brush
- I. LED Lights
- J. Roller Brush Release Button
- K. Telescoping Crevice Tool
- L. 2-in-1 Dusting Brush
- M. Charger
- N. Charging Port (Dock)
- O. Charging Dock with Accessory Holder
- P. Dust Bin
- Q. Dust Bin Release Button
- R. Metal Filter
- S. Flex Button
- T. Vacuum Body
- U. On/Off Trigger
- V. Handle
- W. Battery Release Button
- X. Charging Port (Body)
- Y. Battery Indicator Lights
- Z. HEPA-Type Main Filter
- AA. Mini Motorized Brush Tool

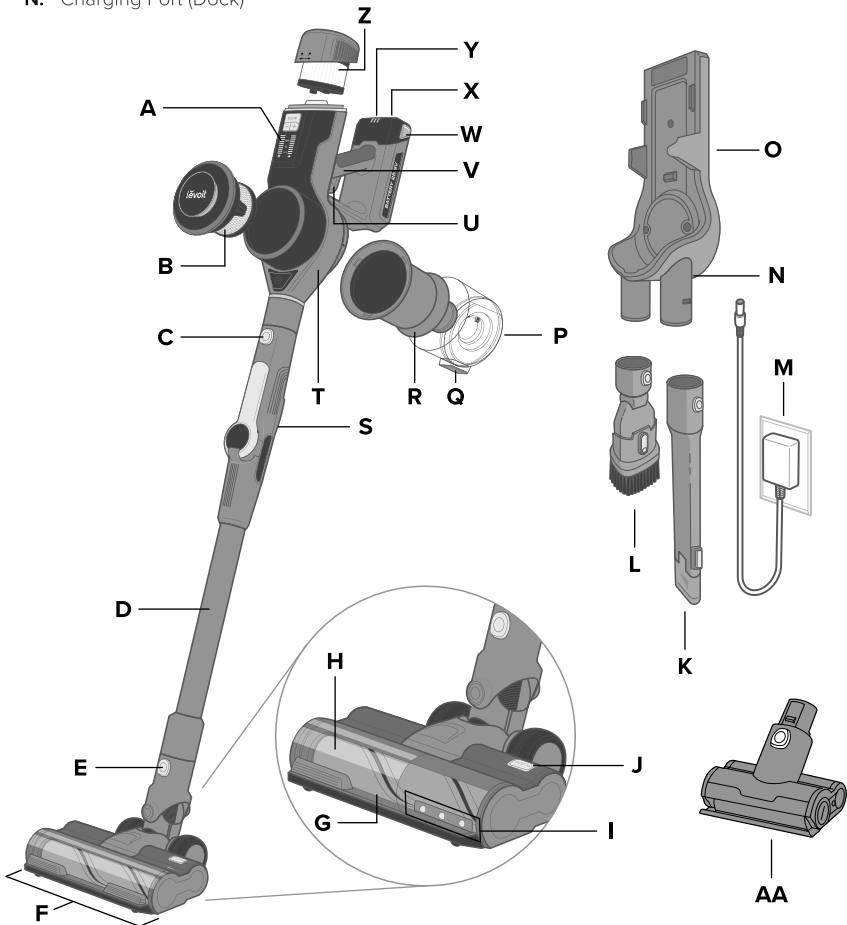

CONTROL PANEL

A. Auto Mode Button

- Press to turn on Auto Mode (see **Auto Mode**, page 10).
- Automatically adjusts power to match the amount of dust.
- Increase or decrease power manually to exit Auto Mode.

B. Increase/Decrease Power

- Press **+** or **-** to manually increase or decrease suction power.

C. Dust Level Indicator

- Indicates the level of dust detected by the dust sensor.

D. Power Level Indicator

- Indicates the level of vacuum suction power.

E. Auto Mode Indicator


- Indicates when Auto Mode is active.

F. Airflow Blockage Indicator

- Indicates that the vacuum airflow is blocked.

G. Roller Brush Blockage Indicator

- Indicates that the roller brush is blocked (see **Cleaning the Roller Brush**, page 16).

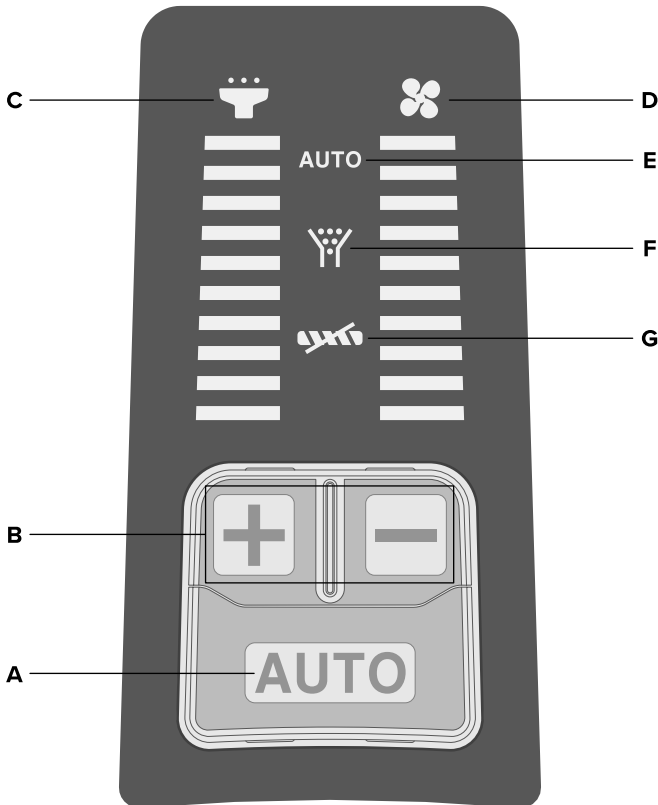

USING YOUR VACUUM

1. Attach the vacuum head or nozzle attachment to the bottom of the stick and attach the vacuum body to the top of the stick [Figure 1.1].

Note: There is a clicking sound when the parts are properly joined together.

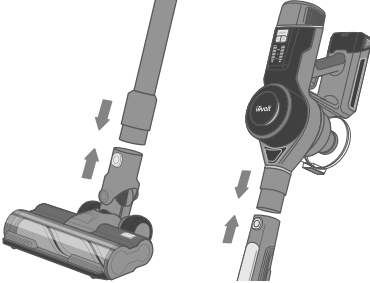


Figure 1.1

2. Charge the vacuum (see page 11).

Note: Fully charge the battery before first use.

3. Press the On/Off Trigger to turn the vacuum on. The vacuum will default to Auto Mode.

Note: The vacuum will remember its previous mode and suction settings the next time it is turned on.

4. Press **AUTO** to use Auto Mode, or press **+** or **-** to manually control suction power.
5. Press the On/Off Trigger to turn the vacuum off.

Battery Indicator Light Chart (During Use)




Battery Level	Battery Indicator
70–100%	3 lights
50–70%	2 lights
20–50%	1 light
0–20%	1 flashing light

USING YOUR VACUUM (CONT.)

Nozzle Attachments

Your vacuum comes with nozzle attachments to help you tackle almost any cleanup job.

Note: Your vacuum model may not include all the attachments (see **Package Contents**, page 2).

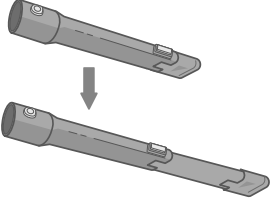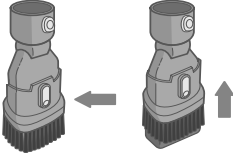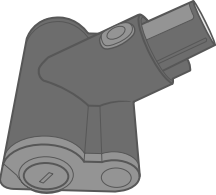Attachment	Image	Description
Telescoping Crevice Tool		<p>Press button to extend the crevice nozzle.</p> <p>Use to clean hard-to-reach places.</p> <p>Good for reaching small cracks and crevices in furniture, the corners of a room, or a car.</p>
2-in-1 Dusting Brush		<p>Press button to slide bristles up/down and switch between upholstery brush and duster.</p> <p>Use upholstery brush to clean soft furnishings and upholstery.</p> <p>Use bristles to clean dust and hard surfaces.</p>
Mini Motorized Brush Tool		<p>Good for tight spaces and delicate fabric surfaces, such as a bed, sofa, or carpeted stairs.</p> <p>Powerfully cleans carpet, upholstery, mattresses, and more.</p>

USING YOUR VACUUM (CONT.)

Nozzle Attachments (cont.)

To use a nozzle attachment:

1. Press and hold the Vacuum Body Release Button and gently pull the vacuum body from the stick [Figure 1.4].

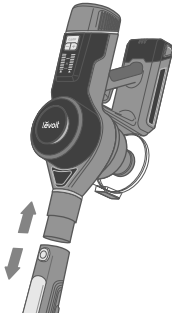


Figure 1.4

2. Slide the crevice tool or dusting brush onto the vacuum body [Figure 1.5].

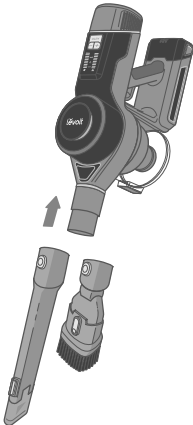


Figure 1.5

3. Optionally, leave the stick attached to the vacuum body and press the Vacuum Head Release Button to remove the vacuum head. Then, attach the nozzle or brush to the end of the stick [Figure 1.6].

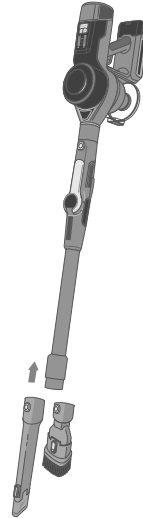


Figure 1.6

4. Slide the mini motorized brush tool onto the vacuum body to clean fabric surfaces. [Figure 1.7]

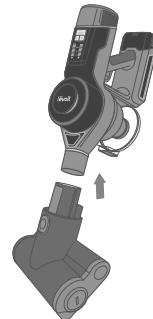







Figure 1.7

USING YOUR VACUUM (CONT.)

Auto Mode

Auto Mode utilizes DPC Technology™ (Dynamic Power Control Technology), which uses infrared sensors to automatically detect the amount of dust and debris that is traveling through the vacuum, and then adjusts the suction power to accommodate the amount of dust. If there is more dust, the suction power will be higher, and if there is less dust, the suction power will be lower.

Dust Level					
Power Level	1	2	3	4	5

Flex Function

The flex function allows this vacuum to reach tight, hard to reach places, such as under a table or sofa.

1. Press the flex button on the stick. The stick will split into 2 connected sections.
2. Grab the vacuum handle and carefully push down so the stick flexes into an L shape [Figure 1.8].
3. When finished using the flex function, bring the 2 sections of the stick together and snap them back into place.

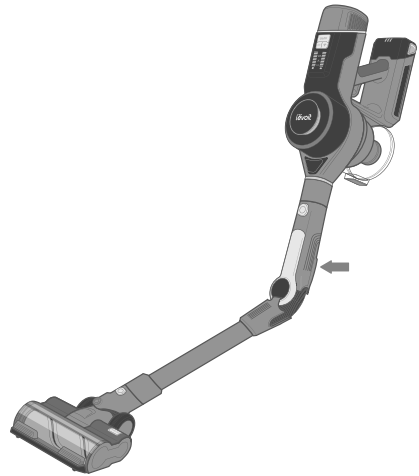


Figure 1.8

CARE & MAINTENANCE

Battery Installation

1. Turn the vacuum off. Press the Battery Release Button and remove the battery.
2. To reinstall, slide the battery into the slot in the vacuum body [Figure 2.1]. There will be a clicking sound when the battery is properly installed.

Note:

- To maintain the life of the battery, store the vacuum in a cool, dry place.
- Store the battery in a semi-charged state (at least half charged).

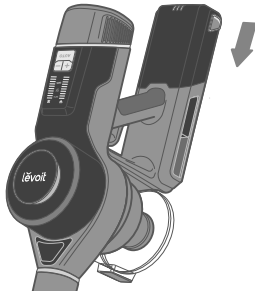


Figure 2.1

Charging the Vacuum

Your vacuum uses a 2500mAh Li-ion battery. On a full charge, the battery lasts approximately 40 minutes on power level 1. Use the included charger/charging dock to charge the vacuum.

Note: Make sure the vacuum is turned off before charging.

1. Mount the charging dock by screwing it into the wall near a power outlet [Figure 2.2].

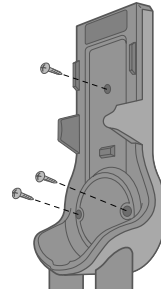


Figure 2.2

Note:

- The charging dock must be high enough on the wall to allow the vacuum to stand up.
- Make sure that the wall is free of gas pipes, water pipes, electrical cables, and wires.

2. Insert the charger into the charging port on the dock. Plug the charger into the outlet [Figure 2.3].

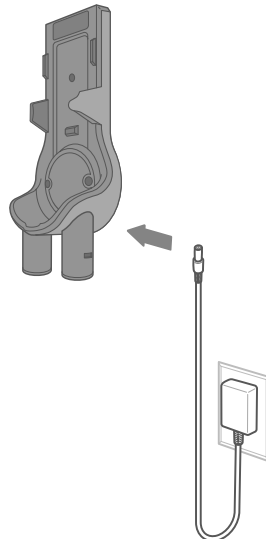


Figure 2.3

CARE & MAINTENANCE (CONT.)

Charging the Vacuum (cont.)

3. Hang the vacuum on the charging dock [Figure 2.4]. The battery indicator lights will blink while charging.



Figure 2.4

Note: The nozzle attachments can also be stored on the charging dock.

4. When the vacuum is fully charged, the 3 battery indicator lights will turn solid.

Alternatively, the battery can be charged separate from the vacuum body.

1. Press the Battery Release Button to remove the battery.
2. Insert the charger into the charging port on the battery [Figure 2.5].
3. Plug the charger into an outlet. The battery indicator lights will blink while charging.

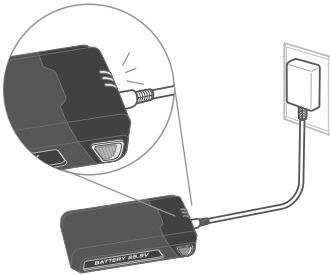


Figure 2.5

Note: Charging time is about 4–5 hours.

4. When the vacuum is fully charged, the 3 battery indicator lights will turn solid.

Battery Indicator Light Chart (While Charging)

Battery Level	Battery Indicator
0–30%	⏻⏻⏻⏻
30–60%	⏻⏻⏻
60–85%	⏻⏻⏻
85–100%	⏻⏻⏻

Warning:

- **Only** charge the battery with the charger specified by Levoit.
- If you are not using the battery for an extended period, store it in a cool, dry place.
- Store the battery in a semi-charged state (at least half charged) and maintain this by charging the battery every 3 months.
- If you need an additional battery, contact **Customer Support** (see page 19).

CARE & MAINTENANCE (CONT.)

Emptying the Dust Bin

When dust in the dust bin reaches the MAX line, empty the dust bin.

Note: Do not overfill the dust bin. If the dust bin is too full, it may affect the performance of the vacuum.

1. Turn the vacuum off. Remove the vacuum body by pressing the Vacuum Body Release Button.
2. Hold the dust bin over a trash can and press the Dust Bin Release Button [Figure 2.6]. Use caution, as the door will automatically open when the release button is pushed.

Note: Holding the dust bin inside a trash can prevents dust from spilling out.

3. Empty out debris and dirt, then close the door.

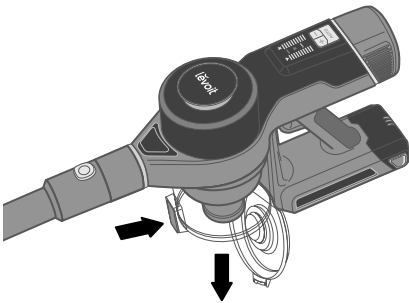


Figure 2.6

CLEANING

Cleaning the Vacuum Body

1. Turn the vacuum off.
2. Wipe the vacuum body down with a damp cloth.
3. Allow the vacuum body to completely dry before using.

Note: Do not allow water to enter the internal parts or motor of the vacuum.

Cleaning the Dust Bin & Metal Filter

1. Make sure the vacuum is off and the dust bin is completely empty before cleaning (see **Emptying the Dust Bin**, page 13).
2. Rotate the dust bin clockwise to remove it [Figure 3.1]. Empty out any remaining dust and debris.

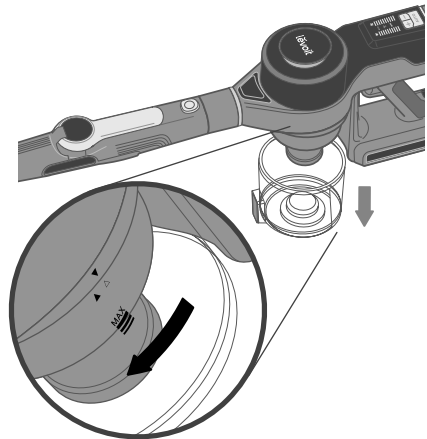


Figure 3.1

CARE & MAINTENANCE (CONT.)

3. Rotate the metal filter clockwise to remove it [Figure 3.2].
4. Rinse the dust bin and metal filter with water and allow them to dry. Make sure the parts are completely dry before using.
5. Reattach the metal filter and dust bin to the vacuum body [Figure 3.3].

Note: Do not allow water to enter the internal parts or motor of the vacuum.

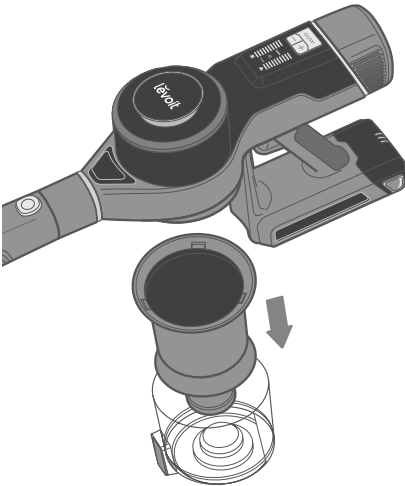


Figure 3.2

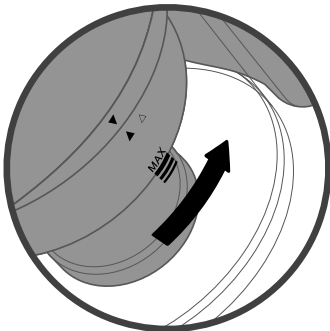


Figure 3.3

Cleaning the HEPA-Type Filters

To maintain the performance of your filters, they should be routinely washed and replaced.

- The pre-filter should be washed once a month and replaced after 6 months.
- The main filter should be washed once every 6 months and replaced after 1 year.
- **Do not** put filters in a dishwasher, washing machine, tumble dryer, oven, or microwave, or place near an open flame.
- **Never** operate the vacuum without the dust bin or filters properly installed.
- Frequent use may require cleaning the filters more often. Cleaning the filters regularly helps maintain your vacuum's cleaning performance.
- You may need to replace the filters more frequently depending on your use and environment.
- If the surrounding humidity is high, please allow the filters to air-dry for a longer period of time before reinstalling them back into the vacuum.

Replacement Filters: To maintain the performance of your vacuum, **only** use official Levoit filters. For more information, contact **Customer Support** (see page 19).

HEPA-Type Pre-Filter

1. Pull up on the pre-filter housing to remove it from the top of the vacuum body [Figure 3.4].

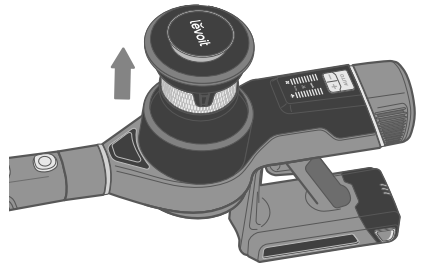


Figure 3.4

CARE & MAINTENANCE (CONT.)

2. Rotate the pre-filter counterclockwise to remove it from the housing [Figure 3.5].


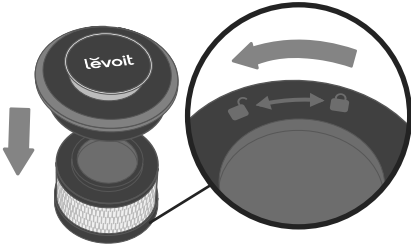


Figure 3.5

3. Gently tap the pre-filter over a trash can to remove dust and debris.
4. If necessary, run the pre-filter under running water to wash it. Allow it to air-dry completely for 24 hours under the sun or in a dry, ventilated place before reinstallation.

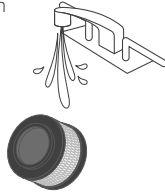

2. Rotate the main filter counterclockwise to remove it from the housing [Figure 3.7].


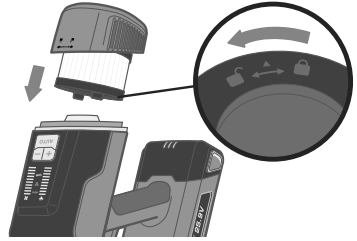


Figure 3.7

3. Gently tap the main filter over a trash can to remove dust and debris.
4. If necessary, run the main filter under running water to wash it. Allow it to air-dry completely for 24 hours under the sun or in a dry, ventilated place before reinstallation.

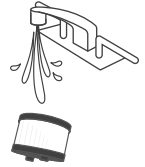

HEPA-Type Main Filter

1. Rotate the main filter housing counterclockwise to remove it from the back end of the vacuum body [Figure 3.6].

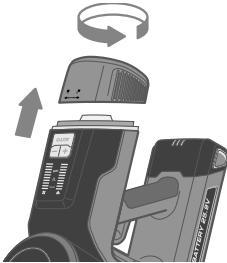


Figure 3.6

CARE & MAINTENANCE (CONT.)

Cleaning the Roller Brush

Periodically check the roller brush for hair or debris. The roller brush will automatically shut off if it is blocked or jammed. Clean the roller brush every 4–5 uses to avoid blockage or jamming.

1. Turn the vacuum off. Detach the vacuum head from the stick by pressing the Vacuum Head Release Button.
2. Press the Roller Brush Release Button and pull out the roller brush [Figure 3.8].

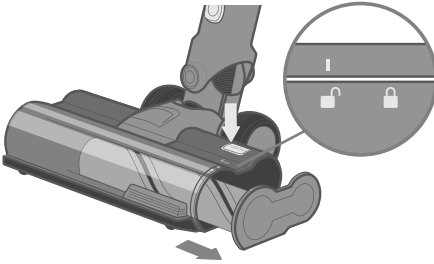


Figure 3.8

3. If the roller brush is jammed, carefully use a pair of scissors or a sharp knife to remove any hair or debris tangled around the roller brush.
4. Insert the roller brush back into the vacuum head. Slide the side panel up to lock it in place [Figure 3.9].

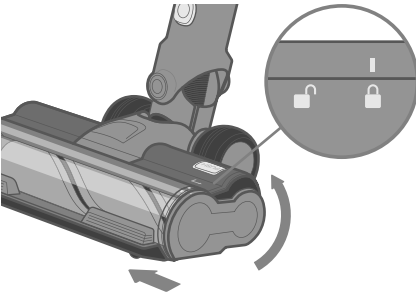


Figure 3.9

STORAGE

When the vacuum is not in use, store it on the charging dock:

1. Mount the charging dock by screwing it into the wall (see **Charging the Vacuum**, page 11).
2. Hang the vacuum on the charging dock [Figure 4.1].
3. Place the nozzle attachments in the slots on the charging dock.

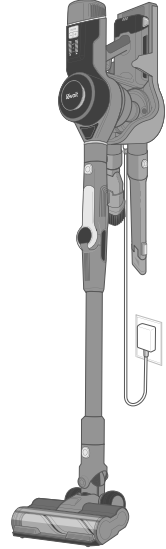


Figure 4.1



Note:

- **Always** store the vacuum on flat ground. If the vacuum is stored on a slanted surface it may fall and be damaged.
- If storing for long periods of time, periodically charge the battery to preserve the life of the battery.

Disposing of the Battery

- The battery contains materials that are harmful to the environment and must be removed from the vacuum before it is discarded.
- When removing the battery, the vacuum must be turned off.
- Discarded batteries should be handled properly. Do not put batteries into fire, water, or soil.
- If battery leakage touches skin or clothing, flush with water immediately to avoid skin injury and seek medical help.

TROUBLESHOOTING

Problem	Possible Solution
Vacuum will not turn on	The battery is not installed correctly (see Battery Installation , page 11).
	Recharge the vacuum (see Charging the Vacuum , page 11).
	The vacuum motor overheated. Empty the dust container and check for blockage inside the vacuum head and stick. Remove any blockage and clean the filters (see Cleaning , page 13). Allow the vacuum to cool for 1 hour before turning it back on.
Vacuum is not charging	The charger is not properly plugged in (see Charging the Vacuum , page 11).
Roller brush is not turning ( light flashes)	Clean the roller brush and remove any debris blocking the brush (see Cleaning the Roller Brush , page 16).
Vacuum makes an abnormal noise	Clean the roller brush and remove any debris blocking the brush (see Cleaning the Roller Brush , page 16).
	Check for blockage inside the vacuum body, vacuum head, and stick. Remove any blockage (see Cleaning , page 13).
Vacuum has low suction power	Battery may be low. Recharge the battery to full charge (see Charging the Vacuum , page 11).
	Clean the roller brush and remove any debris blocking the brush (see Cleaning the Roller Brush , page 16).
	The dust bin and filters may be full. Empty the dust bin and clean the filters (see Cleaning , page 13).
	Check for blockage inside the vacuum body, vacuum head, and stick. Remove any blockage (see Cleaning , page 13).
 light flashes	The dust bin and filters may be full. Empty the dust bin and clean the filters (see Cleaning , page 13).
	Check for blockage inside the vacuum body, vacuum head, and stick. Remove any blockage (see Cleaning , page 13).
Vacuum releases a bad or unusual smell	The environment's relative humidity may be high or the vacuum may have absorbed water and caused the filter to grow mold. Replace the filters (contact Customer Support , page 19).
	The filters may be dirty. Clean the filters (see Cleaning , page 13).
	The dust bin may be dirty. Empty and clean the dust bin (see Cleaning , page 13).

If your problem is not listed, please contact **Customer Support** (see page 19).

FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT – PART 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC SDOC SUPPLIER'S DECLARATION OF CONFORMITY

Arovast Corporation hereby declares that this equipment is in compliance with FCC requirements.

The declaration of conformity may be consulted in the support section of our website, accessible from www.levoit.com

WARRANTY INFORMATION

Product Name	Levoit VortexIQ™ Flex Pro Cordless Stick Vacuum
Model	LSV-VF401M-AUS
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
Date of Purchase	
Order ID	

Terms & Policy

Arovast Corporation ("Arovast") warrants this product to the original purchaser to be free from defects in material and workmanship, under normal use and conditions, for a period of 2 years from the date of original purchase.

Arovast agrees, at our option during the warranty period, to repair any defect in material or workmanship or furnish an equal product in exchange without charge, subject to verification of the defect or malfunction and proof of the date of purchase.

There is no other express warranty. This warranty does not apply:

- If the product has been modified from its original condition;
- If the product has not been used in accordance with directions and instructions in the user manual;
- To damages or defects caused by accident, abuse, misuse or improper or inadequate maintenance;
- To damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Arovast;
- To damages or defects occurring during commercial use, rental use, or any use for which the product is not intended;
- To damages or defects exceeding the cost of the product.

Arovast will not be liable for indirect, incidental, or consequential damages in connection with the use of the product covered by this warranty.

This warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product regardless of whether the product is transferred during the specified term of the warranty.

This warranty does not extend to products purchased from unauthorized sellers. Arovast's warranty extends only to products purchased from authorized sellers that are subject to Arovast's quality controls and have agreed to follow its quality controls.

All implied warranties are limited to the period of this limited warranty.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If you discover that your product is defective within the specified warranty period, please contact Customer Support via support@levoit.com. **DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Every Levoit product automatically includes a 2-year warranty. To make the customer support process quick and easy, register your product online at www.levoit.com/warranty.

This warranty is made by:

Arovast Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806

CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

Arovast Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806

Email: support@levoit.com
Toll-Free: (888) 726-8520

Support Hours

Mon–Fri, 9:00 am–5:00 pm PST/PDT

*Please have your order invoice and order ID ready before contacting Customer Support.

lėvoit®



/LEVOIT



/LEVOIT



/LEVOITLIFESTYLE



/LEVOITLIFESTYLE



/LEVOITLIFESTYLE



LEVOIT.COM