 


SECURA®

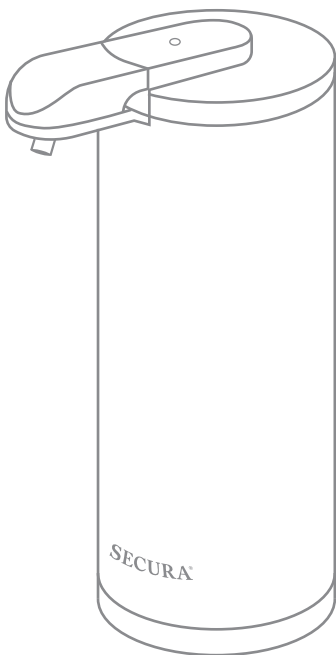

Automatic Soap Dispenser

User Manual

Model: ASD-270-SSLQ

SN: AL69



Welcome to the Secura Family!

Congratulations on being the proud owner of your new Secura product. We believe in manufacturing only the highest quality kitchen, home and personal care products for our customers. We are a U.S.-based manufacturer and all our products meet strict standards for manufacturing, safety and performance.

We also believe in providing the best customer service and support in the industry. That is why we offer a 2-year warranty on this product that ensures your satisfaction - so you can enjoy it for years to come.

If you have questions or need assistance, please email CustomerCare@thesecura.com. For fastest response, please include product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.

Your feedback and suggestions are also important to us, so please email them to us at CustomerCare@thesecura.com.

The Secura Team

SECURA[®]

Copyright 2024 Secura, Inc. All rights reserved.

The material in this publication is protected under International and Federal Copyright Laws and Treaties, and as such, any unauthorized reprint or use of this material is strictly prohibited.

No part of this book may be reproduced or transmitted in any form without the written permission of the author, except for the inclusion of brief quotations in a review.

Reproduction or translation of any part of this work without the express permission of the copyright holder is against the law.

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	1
PRODUCT OVERVIEW	3
PARTS INFORMATION	4
PRODUCT FEATURES	5
HOW TO USE	6
CLEANING AND CARE	9
TROUBLESHOOTING	11
SPECIFICATIONS	12
DISPOSAL	13
CONTACT	13
MANUFACTURER'S LIMITED WARRANTY	14

Automatic Soap Dispenser



To protect and extend the life of your product, please read and follow all of the information in this manual before using and save it for future reference.

IMPORTANT SAFEGUARDS

When using this dispenser, basic safety precautions should always be followed, including the following:

1. Place the dispenser on a flat, level surface.
2. When adding liquid soap or installing the dispenser, do not tilt to avoid liquid flowing out.
3. Always keep the dispenser straight and upright. Do not turn the dispenser upside down when it has liquid soap inside.
4. Do not use viscous liquids or liquid soap that containing granules, powders, emulsions, or other impurities as they may cause clogging and damage the dispenser.
5. Do not rinse the dispenser or immerse it in water. Avoid placing this product in areas where it could become covered in water. Keep the button and charging port dry.
6. If the sensing area is blocked, the indicator light will continually flash. Turn off the dispenser, wipe the sensor area, then turn on the dispenser again.
7. Do not block the spout with hands or objects.
8. This product is for indoor use. Do not place it in a high temperature environment or close to heat sources or under direct sunlight. Exposure to direct sunlight or strong light will destroy the infrared sensor system. The operating temperature range should be 40-104 °F. Do not use or charge the dispenser in places with high humidity, such as bathrooms. Doing so may result in electric shock, injury, fire, and charger damage.
9. Turn off the dispenser first when you need to clean it to prevent dispensing accidentally.

10. Only use a standard 5V 1A power supply, like a regular 5V phone charger. Do not use a fast charger.
11. Close supervision is necessary when the dispenser is used by or near children. Avoid contact of soap with eyes or eating by mistake.
12. Keep the manual for future reference.

FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS

Automatic Soap Dispenser

PRODUCT OVERVIEW


The Secura automatic soap dispenser offers a high level of convenience and hygiene for indoor use. It features a sensitive motion sensor that quickly dispenses one of three preset soap amounts—1g, 2g, or 3g—in just 0.4 seconds when it detects movement. Perfect for maintaining cleanliness with minimal effort! The precise pump and rapid response time make this dispenser ideal for your kitchen and bathroom.

Innovatively designed, it features a smart liquid level sensor and indicator, ensuring you're always notified when it's time to refill the 9.1 oz soap tank. The tank itself boasts a wide filling port, making refills quick and easy.


Crafted from high-quality ABS and fingerprint-resistant 304 stainless steel, the dispenser is both durable and stylish. Its built-in 750mAh rechargeable battery ensures long-lasting performance, providing a clean and convenient user experience.

Choose our automatic soap dispenser for a healthier, more hygienic lifestyle!

PARTS INFORMATION

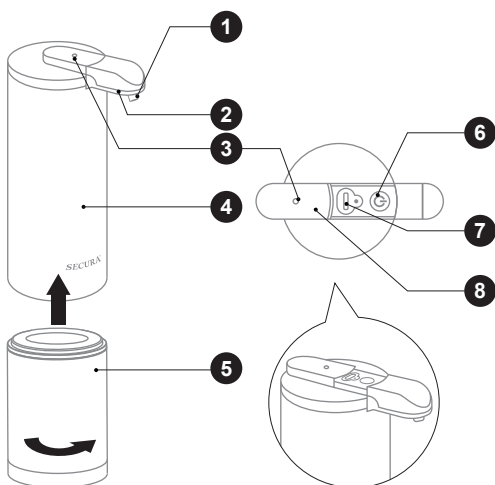

1. Spout
2. Sensor
3. Indicator Light
4. Stainless Steel Housing
5. Liquid Soap Tank
6. ON/OFF Button
7. Charging Port
8. Top Cover

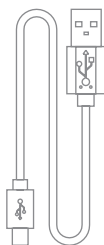

Type C Charging Cable

Automatic Soap Dispenser

PRODUCT FEATURES



Liquid Low-Level
Indicator



Touchless



0.4s Instant
Dispensing



Anti-fingerprint



IPX4 Repels
splashing water
from any angle




Type-C
Charging

HOW TO USE


1. Charging the Dispenser:

- Slide open the top cover. Fully charge the dispenser using a standard 5V 1A power supply, like a regular 5V phone charger (do not use a fast charger) before first use.
- Charging takes approximately 3 to 3.5 hours, depending on the remaining battery level. The green indicator light will turn on when fully charged. Do not charge the dispenser for more than 5 hours.
- To ensure safety, turn off the dispenser before recharging.

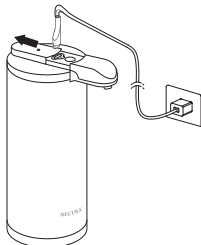

2. Filling the Soap Tank:

- Rotate the liquid soap tank clockwise to disconnect it from the dispenser housing.
- Fill the tank with liquid soap. Do not use foaming soap. Do not fill the soap tank with flammable liquids or aggressive chemicals, such as gasoline, alcohol, bleach, or strong acids.
- Rotate the tank counterclockwise to secure it to the dispenser.
- Do not tilt or turn the dispenser upside down when it contains liquid soap.

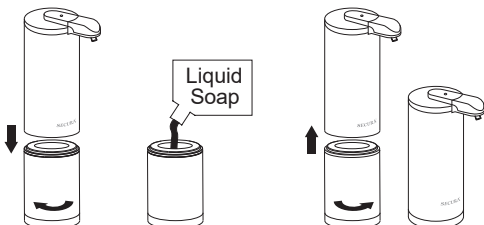

Automatic Soap Dispenser

- Rotate the liquid soap tank clockwise to open, and counterclockwise to close.

3. Turning On the Dispenser:


- Press the ON/OFF button for 1 second to turn on the dispenser.
- The white indicator light will flash once, twice, or three times, indicating the last used dispensing volume, as the machine has a memory function.
- Adjust the dispensing volume by pressing the ON/OFF button once, twice or three times:

Once for Level One (**small volume**)

Twice for Level Two (**medium volume**)

Three times for Level Three (**high volume**)

- The dispenser enters standby mode when not in use; there's no need to power it off.

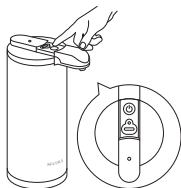

4. Dispensing Liquid Soap:

- Place your hand underneath the sensor (distance ≤ 1.97 inches). The dispenser will begin to dispense liquid soap.





Note:

For first-time use, it may take up to five pumps before liquid soap reaches the spout.

5. Refilling and Recharging Indicators:

- When the liquid soap in the tank is running low, the orange indicator light will flash to notify you to refill the liquid soap.
- When the dispenser has low battery, the red indicator light will flash to notify you to recharge the dispenser.

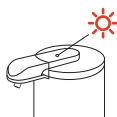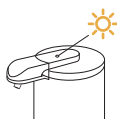

6. Turning Off the Dispenser:

- To ensure safety, turn off the dispenser before charging.
- Press and hold the ON/OFF button for one second. The red indicator light will flash and then turn off, indicating that the dispenser is off.

Indicator Light Status

Operation Status	Indicator Light	
Turning On	Flash white once, twice, or three times, indicating dispensing volume.	
Turning Off	Red light turns on then off.	
Dispensing	Flash white once.	
Low Battery	Flash red during dispensing. Flash red every five seconds during standby.	
Charging Battery	Flash red.	
Fully Charged	Green light turns on.	
Low-level Liquid Soap	Flash orange during dispensing.	

Automatic Soap Dispenser

CLEANING AND CARE

1. Soap Usage:

- Use regular liquid soap. Do not use foaming soap.
- Fill the tank with liquid soap. Do not use foaming soap. Do not fill the soap tank with flammable liquids or aggressive chemicals, such as gasoline, alcohol, bleach, or strong acids.

2. Placement of the Dispenser:

- Do not position the dispenser on surfaces that are highly reflective, under direct sunlight, or near other objects.
- Turn off the dispenser before moving it to prevent accidental dispensing.

3. Cleaning the Sensor:

- Turn off the dispenser. Clean the sensor carefully with a damp cloth.

4. Cleaning the Housing:

- Turn off the dispenser. Gently wipe the surface with a damp cloth.
- Do not use cleaners with chlorides, such as bleach, to avoid rusting the stainless steel housing.

5. Long-term Storage:

- Empty the soap from the tank completely. Add warm water (100°F) to the soap tank. Use the dispenser as usual until there is no water inside the tank. Clean the tank with a dry, soft towel.
- Charge the dispenser before storage.

- Store in a dry and cool place.
- Charge at least once every three months to maintain battery life.

6. Repairs:

- If the dispenser malfunctions or stops working, do not attempt to repair the device yourself.
- Contact customer service for assistance.

Automatic Soap Dispenser

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
The dispenser cannot be turned on	No power	Charge the battery
The dispenser cannot be charged. No flashing red light while charging.	Loose connection or damaged charging cable.	Make sure the charging cable is securely connected to the charging port and phone charger. Use a new charging cable.
	Power supply not working.	Ensure the power supply, like the phone charger is working and rated at 5 V and 1A. Make sure the dispenser is turned off before charging.
	No power.	After charging five minutes, the red indicator light will flash.
The dispenser cannot dispense soap after charging.	Liquid soap has been used up.	Refill the tank with liquid soap.
	Your hand is too far away from the sensor.	Place your hand within 0-1.97 inches below the sensor.
	The sensor area is dirty.	Turn off the dispenser, then clean the sensor area using a soft damp cloth.
	The liquid soap is too thick.	Choose a liquid soap with a lower viscosity.
	The liquid soap has coagulated due to evaporation from not being used for a long time.	Add warm water (100°F) to the soap tank. Use the dispenser as usual, repeating 10-15 times to clean it.

Problem	Possible Cause	Solution
Indicator light keeps flashing.	Something has blocked the sensing area.	Wipe the sensor area after turning off, using a soft damp cloth.

SPECIFICATIONS

Model	ASD-270-SSLQ
Material	ABS + 304 Stainless Steel
Sensor Speed	0.4 seconds
Sensor Distance	1.97 inches (5 cm)
Volume Control	Press ON/OFF button once, twice, or three times for Level One (small volume: 1 gram), Level Two (medium volume: 2 grams), or Level Three (high volume: 3 grams)
Charging Time	3-3.5 hrs
Charging Voltage	5V 1A
Liquid Soap Tank Capacity	9.1 fl oz (270 ml)
Battery Capacity	750 mAh
Product Weight	12.9 oz (366 g)
Water Resistant Level	IPX4 Protection from splashed water
Product Dimension	7.3x2.8x4.1 inches (184.3x70.2x105.1 mm)

Automatic Soap Dispenser

DISPOSAL



When this appliance has reached the end of its life, please dispose of the unit properly.

This and other electrical appliances contain valuable materials that can be recycled.

Electronic waste may be harmful to our environment if not disposed of properly.

We ask that you follow your governing agency's rules and regulations when disposing of electronic appliances. Please find an authorized recycling facility near you.

CONTACT

If you have any any questions or need assistance, please contact our customer service department at 888-792-2360 (North America) or e-mail us at CustomerCare@thesecura.com Please read the operating instructions before using this product.

Please keep the original box and packaging materials in the event that service is required.

Manufacturer's Limited Warranty

The Manufacturer of this product warrants to the original purchaser of this product that this product will be free from defects in material and workmanship under normal use and service for 2 years from date of purchase. Manufacturer will, at its option, repair or replace with a new or refurbished product. Providing a replacement product does not renew or extend the warranty period from the original date of purchase. The Manufacturer reserves the right, before having any obligation under this limited warranty, to inspect the product, and all costs of shipping the product for inspection and warranty service shall be borne solely by the purchaser.

For the fastest processing of a warranty claim, the Purchaser should e-mail CustomerCare@thesecura.com and include the product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.

The manufacturer's limited warranty is valid only in accordance with the following conditions:

1. The product is purchased directly from manufacturer or an authorized reseller or distributor.
2. Only the original purchaser is covered by this warranty. This warranty is not transferable.
3. Product is for personal use only. This warranty is void if the product is used in a commercial or institutional establishment.
4. This warranty does not cover normal wear and tear or damage caused by misuse, abuse, negligence, accident, acts of nature, or unauthorized modification or repair.
5. Purchaser must present acceptable proof of purchase for the product.
6. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Secura, Inc.
CustomerCare@thesecura.com
Lake Forest, California

SECURA®

Secura Bestsellers

Secura Electric
Wine Opener



Secura Automatic
Soap Dispenser



Secura Mechanical
Visual Timer



Secura Electronic
Visual Timer



Secura 4-in-1 Electric
Milk Frother



Secura Detachable Milk
Frother Upgraded



Duxtop Portable 1800W
Induction Cooktop



Duxtop 1800W LCD
Induction Cooktop



Secura Electric Coffee
and Spice Grinder



Secura French Press
Coffee Maker



Duxtop Professional
Stainless Steel Cookware



Secura 1800W Electric
Deep Fryer



Secura, Inc.

888-792-2360 (North America)

CustomerCare@thesecura.com

www.thesecura.com

Lake Forest, California

Designed in California

For the fastest processing of a warranty claim, the owner should e-mail CustomerCare@thesecura.com and include the product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.