

FULL HD 1080P WEBCAM



1. Microphone
2. Lens
3. Flexible base
4. USB cable
5. User manual



DSP chip: Driverless	High definition: 1080P
Connection mode: USB 2.0/3.0	Resolution: 5.0 M pixels
Image sensor: CMOS	Dynamic resolution: 1920 *1080
Cable length: 150cm	Frame rate: 30 fps
Compatible with: Win10/win8/win7/MAC/XP/PS4/Xbox (with USB port),etc.	
Usage: Zoom/ Skype/ Google Meet/ WebEx/Facebook living etc.	

Setting up your webcam

1 Place your webcam



2 Connect your webcam



The driver required is downloaded automatically when you connect your webcam for the first time, and installed silently in the background.

3 Plug and Play

As well as a webcam and video calling application, both callers need:

- A computer with speakers or a headset and a microphone (this webcam has a built-in microphone)
- A broadband Internet connect

Using your webcam with Windows 10

To open up your webcam or camera, select the Start button, and then select Camera in the list of apps.

If you want to use the camera within other apps, select the Start button, select **Settings > Privacy > Camera**, and then turn on Let apps use my camera. ☑

From there, turn on each of the listed apps where you want to use the camera.

Adjusting your Camera settings

① Choose your required resolution for photo capture, or video capture when in Video Mode.

② Choose the microphone you want to use to record sound in your videos, if you have more than one available.

Using your webcam with MAC OS

① Connect the USB cable attached to the external webcam to an available USB port on the computer. Allow 10-15 seconds for the computer to recognize the external webcam.

② Select the "Photo Booth" program, a program that uses the webcam to show you live video of yourself, from the applications dock at the bottom of the screen. Select "Camera" from the options at the top of the screen.

③ Select the external USB webcam from the list of options from the menu. The computer will switch from the default iSight webcam to the external webcam. Because Mac programs are

all in sync with one another, these settings will be used for all other installed programs on the computer.

Questions and Answer:

Q: Why doesn't the webcam work?

A: There may be several reasons:

- ① Make sure that the permissions for camera are opened.
- ② Make sure that your webcam is plugged in and turned on.
- ③ Check the video selection above to use the correct webcam.
- ④ Ensure that your webcam is not being used by another application.
- ⑤ Connect your webcam to a different USB port.
- ⑥ Restart your computer.

If it doesn't work even you followed the instructions, please contact us at cimkiz@outlook.com with your order number and seller name, we will do our best to help you.

Q: There is no sound, is it broken?

A: There may be several reasons:

- ① Make sure that the permissions for microphone are opened.
- ② Make sure the volume of sound turn on.
- ③ Check the microphone selection above to use the correct microphone.

if it doesn't work, please contact us at cimkiz@outlook.com with your order number and seller name, we will do our best to help you.

Q: How do I test the webcam?

A: We recommend that you test it at

www.webcammictest.com.

If you still have any questions, please contact us at cimkiz@outlook.com with your order number and seller name, we will do our best to help you.

NOTE

Our 1080P webcam is 100% quality control before shipment. If the image is not clear enough, please check whether you have chosen high definition in the video settings of your software (Zoom, Skype, etc.), or it may be because of the pixels of your computer. If you do not know how to change the settings, please kindly contact us at the first time by: cimkiz@outlook.com, we will show you instructions on it.

We offer the best customer service. If there are any problems with our products, please contact us at any time.