

DOUBLE SIDED, MAGNETIC WINDOW CLEANER
For big and hard to reach windows, it cleans the exterior
of windows, while staying in the room.



1. Apply cleaning solution generously on both sides of the window.



2. Separate the two sides of the Glider.



3. Place the plastic ring, (at the end of the safety string) on one of your fingers.

instructions
Watch your
fingers, the Glider
contains strong
magnets.
Hold safety rope
while cleaning.
Keep away from:
children, pace
makers and
electronic
equipment.



4. Place the two parts of the Glider on either side of the window, (small piece on the outside).



5. Guide the Glider across the glass in an "S" shape to remove the water. Remaining drops and streaks of water will be removed on next step.



6. Place the microfiber cloth on both parts of the Glider.



7. Dry and shine your window. In case that the water streaks dried off, you may apply cleaning solution, or clear water on the microfiber cloth.

Comments:

For very dirty windows attach the wet cloth to the Glider and scrub the window thoroughly, before proceeding to step # 4

To prevent detachment during cleaning, turn slowly around corners to avoid hitting the frame. Always pay attention to the piece on the outside. Make sure the rubber blades are always wet. Maintain light pressure as you move the Glider across the window. Use only Glider micro fiber cloth. (It has low friction on the window).

