


User Manual of Product 1:

Amazon Basics Portable Travel Window Blackout Curtain Shades with Suction Cups-Black, 1-Pack, 78 by 50 inches - 1 Pack, Moon and Stars

User Manual of Product 2:

Yogasleep Hushh Portable White Noise Sound Machine For Baby, 3 Soothing Natural Sounds With Volume Control, Compact Size, Noise Canceling For Sleep Aid, Office Privacy, & Meditation, Registry Gift

amazon basics

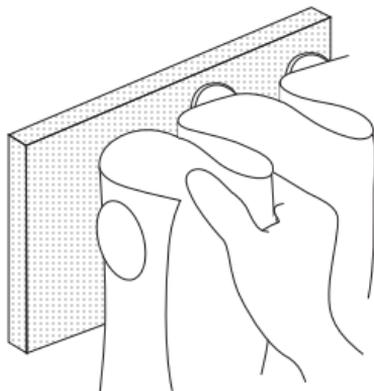

Blackout Blind

Rideau Occultant

Verdunkelungsrollo

Tenda Oscurante

Cortina De Bloque De Luz

Verduisteringsrolgordijn

ブラックアウト(偏光)ブラインド

Całkowicie Zaciemniająca Żaluzja

Mörkläggningsgardin

B071YVLK63

B082XTDBZ8

B08ZNVQR6K

B082XSZ17S

B08ZNRPNXY

B08ZNVV721

B082XSZHBS

B08ZNT8WKT

B08ZNW1GWB

B082XSZHBY

B08ZNTKD5D

B08ZNW2ZV4

B082XSZW6M

B08ZNV4NV5

B08ZNW3HGW

B082XT3LCJ


B08ZNV481

English	3
Français	8
Deutsch	13
Italiano	18
Español	23
Nederlands	28
日本語	33
Polski	40
Svenska	45




Setup

Step 1:

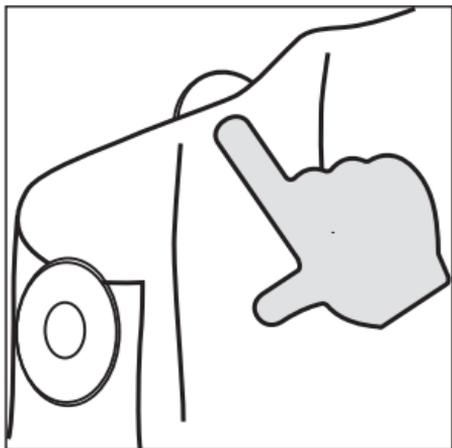


- Attach the top part of the blind first. Then continue around the corner and down the sides and end with the bottom part.

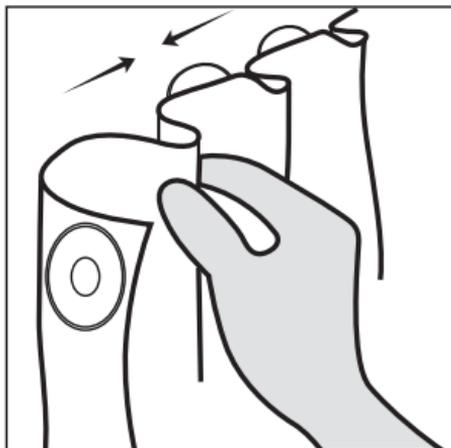Step 2:

- Use the hook-and-loop fasteners to close the gaps.

Removal

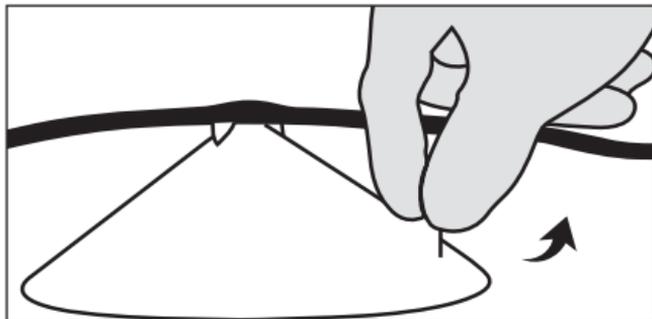

⚠ ATTENTION Do not pull the blind directly for this may cause the product itself and the glass window to be seriously damaged.

- Pull on the tab of each suction cup to let air in and release the suction. (see illustration above).

Tips

- Before attaching the blind, clean the window with soap and water and check that the surface of the window is perfectly clean.
- The suction power is reduced if foreign particles are trapped between the suction cups and the glass surface, e.g. dirt, dust, humidity etc...
- The presence of grease (airborne or by contact) may prevent the cups from adhering securely to the glass. It may be necessary to use a stronger cleaning agent to remove this layer of grease before attaching the blinds.
- Both the suction cups and window must be clean and dry before attaching the blind.



Feedback and Help

Love it? Hate it? Let us know with a customer review.

AmazonBasics is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.



US: [amazon.com/review/review-your-purchases#](https://www.amazon.com/review/review-your-purchases#)

UK: [amazon.co.uk/review/review-your-purchases#](https://www.amazon.co.uk/review/review-your-purchases#)




US: [amazon.com/gp/help/customer/contact-us](https://www.amazon.com/gp/help/customer/contact-us)

UK: [amazon.co.uk/gp/help/customer/contact-us](https://www.amazon.co.uk/gp/help/customer/contact-us)



Installation

Étape 1:

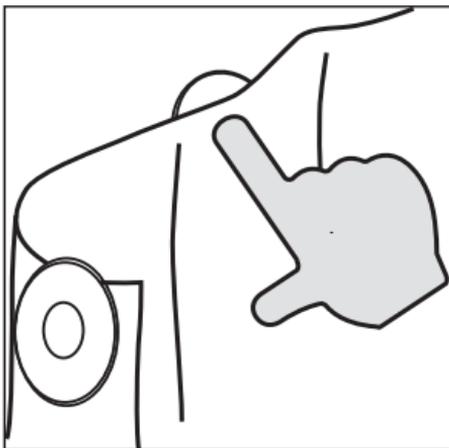


- Fixez en premier la partie supérieure du rideau. Continuez ensuite dans les coins et le long des côtés, puis terminez par la partie inférieure.

Étape 2:



- Fermez les espaces à l'aide des fixations velcro.

Retrait

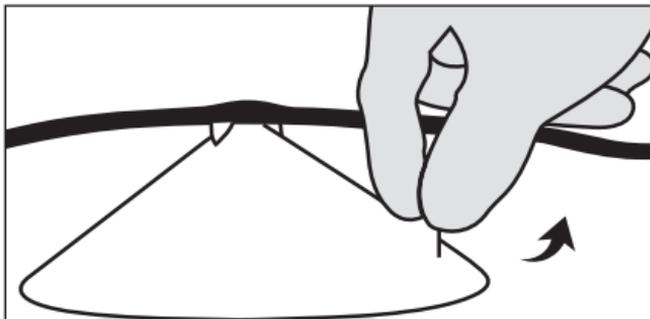

⚠ ATTENTION Ne tirez pas directement sur le rideau, car cela est susceptible d'endommager sérieusement le produit lui-même et la vitre.

- Tirez sur l'attache de chaque ventouse afin de laisser l'air pénétrer et de détacher la ventouse. (voir l'illustration ci-dessus).

Conseils

- Avant de fixer le rideau, nettoyez la fenêtre à l'eau et au savon, et vérifiez que la surface de la fenêtre est parfaitement propre.
- La puissance de l'effet ventouse est réduite si des particules étrangères se retrouvent piégées entre les ventouses et la vitre, par ex. de la saleté, de la poussière, de l'humidité, etc.
- La présence de graisse (dans l'air ou par contact) est susceptible d'empêcher les ventouses d'adhérer solidement au verre. Il peut s'avérer nécessaire d'utiliser un produit de nettoyage plus puissant afin de retirer cette couche de graisse avant de fixer le rideau.

- Les ventouses ainsi que la fenêtre doivent être propres et sèches avant la fixation du rideau.



Vos Avis et Aide

Vous l'adorez ? Vous le détestez ? Faites-le nous savoir en laissant un commentaire.

AmazonBasics s'engage à vous offrir des produits axés sur les besoins de la clientèle et répondant à vos normes élevées. Nous vous encourageons à rédiger un commentaire visant à partager vos expériences sur le produit.



**FR : [amazon.fr/review/
review-your-purchases#](https://amazon.fr/review/review-your-purchases#)**

**CA : [amazon.com/review/
review-your-purchases#](https://amazon.com/review/review-your-purchases#)**




**FR : [amazon.fr/gp/help/
customer/contact-us](https://amazon.fr/gp/help/customer/contact-us)**

**CA : [amazon.ca/gp/help/
customer/contact-us](https://amazon.ca/gp/help/customer/contact-us)**




Aufbau

Schritt 1:

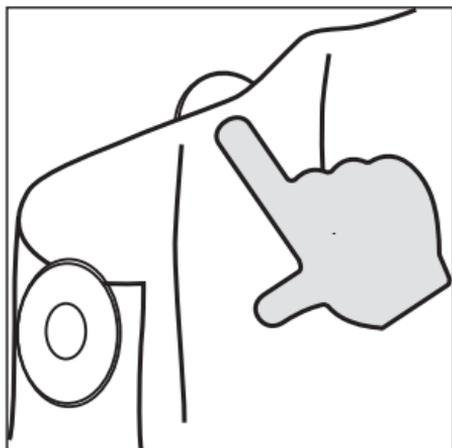


- Befestigen Sie zuerst den oberen Teil des Rollos. Fahren Sie danach um die Ecken und entlang der Seiten fort und schließen Sie mit dem unteren Teil ab.

Schritt 2:

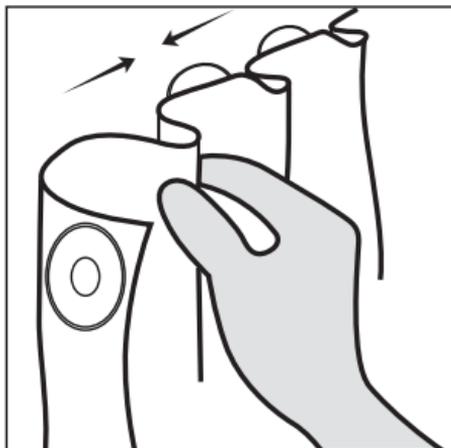

- Verwenden Sie die Klettverschlüsse, um die Lücken zu schließen.

Entfernen

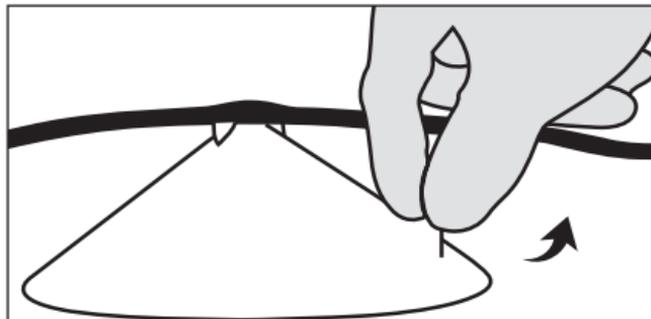

⚠ ACHTUNG Ziehen Sie nicht direkt am Rollo, da dies erhebliche Schäden am Produkt selbst und am Glasfenster verursachen kann.

- Ziehen Sie an der Lasche jedes Saugnapfes, um Luft einzulassen und die Saugkraft zu lösen. (siehe die Abbildung oben).

Tipps

- Reinigen Sie das Fenster mit Seife und Wasser und stellen Sie sicher, dass die Fensteroberfläche vollkommen sauber ist, bevor Sie das Rollo anbringen.
- Die Saugkraft wird reduziert, wenn Fremdkörper zwischen den Saugnäpfen und der Glasoberfläche eingefangen werden, z. B. Schmutz, Staub, Feuchtigkeit etc.
- Das Vorhandensein von Fett (in der Luft oder durch Kontakt) kann verhindern, dass die Saugnäpfe sicher am Glas anhaften. Es kann notwendig sein, ein stärkeres Reinigungsmittel zu verwenden, um diese Fettschicht zu entfernen, bevor das Rollo angebracht werden kann.

- Sowohl die Saugnäpfe als auch das Fenster müssen sauber und trocken sein, bevor Sie das Rollo anbringen.

Feedback und Hilfe

Gefällt es Ihnen? Gefällt es Ihnen nicht? Dann bewerten Sie das Produkt auf unserer Webseite!

AmazonBasics setzt sich für die Bereitstellung kundenorientierter Produkte ein, um Ihre hohen Qualitätsstandards zu erfüllen. Bitte schreiben Sie eine Rezension, in der Sie Ihre Erfahrungen mit dem Produkt teilen.



**[amazon.de/review/
review-your-purchases#](https://amazon.de/review/review-your-purchases#)**




**[amazon.de/gp/help/
customer/contact-us](https://amazon.de/gp/help/customer/contact-us)**





Installazione

Passo 1:

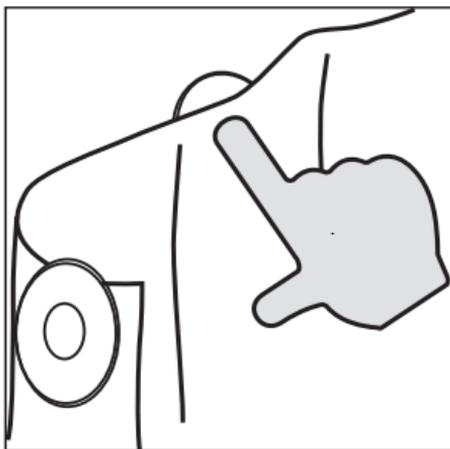


- Fissare prima la parte superiore della tenda. Quindi continuare intorno all'angolo scendendo sui lati, infine terminare con la parte inferiore.

Passo 2:



- Chiudere potenziali aperture utilizzando la chiusura a strappo.

Rimozione

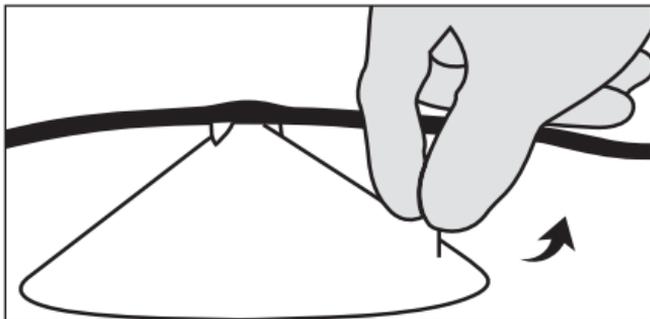

⚠ ATTENZIONE Per rimuovere, non tirare la tenda direttamente, dal momento che ciò potrebbe danneggiare gravemente sia il prodotto che la finestra in vetro.

- Sollevare la linguetta di ogni ventosa per favorire l'ingresso dell'aria causando la riduzione della forza adesiva. (vedere l'illustrazione sopra).

Consigli

- Prima di fissare la tenda, pulire la finestra con acqua saponata e verificare che la superficie di quest'ultima sia perfettamente pulita.
- Il potere di aspirazione è ridotto in caso di particelle estranee intrappolate fra le ventose e la superficie in vetro, ad esempio sporco, polvere, umidità e così via.
- La presenza di grasso (aereo o da contatto) potrebbe impedire alle ventose di aderire in sicurezza al vetro. Prima di fissare le tende, potrebbe essere necessario impiegare un detergente più potente per rimuovere lo strato di grasso.
- Sia le ventose che la finestra devono essere pulite e asciutte prima di fissare la tenda.



Feedback e Aiuto

Ti piace? Oppure no? Faccelo sapere scrivendo la tua recensione.

AmazonBasics si impegna a distribuire prodotti orientati al cliente che siano all'altezza degli standard più elevati. Pertanto, invitiamo i clienti a scrivere una recensione per condividere le proprie esperienze con il prodotto.



**[amazon.it/review/
review-your-purchases#](https://amazon.it/review/review-your-purchases#)**




**[amazon.it/gp/help/
customer/contact-us](https://amazon.it/gp/help/customer/contact-us)**



Instalación

Paso 1:

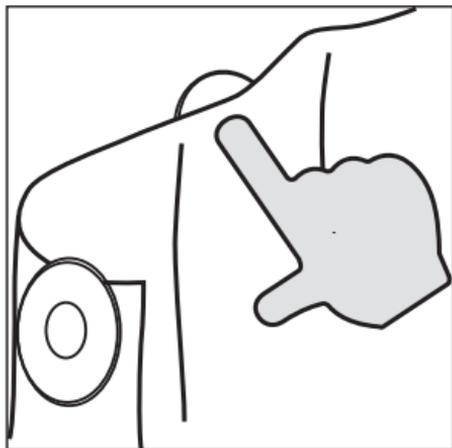


- Primero fije la parte superior de la cortina. Luego, continúe por la esquina y baje por los lados, y finalice con la parte inferior.

Paso 2:

- Utilice los ganchos con cierre para cerrar las aberturas.

Extracción

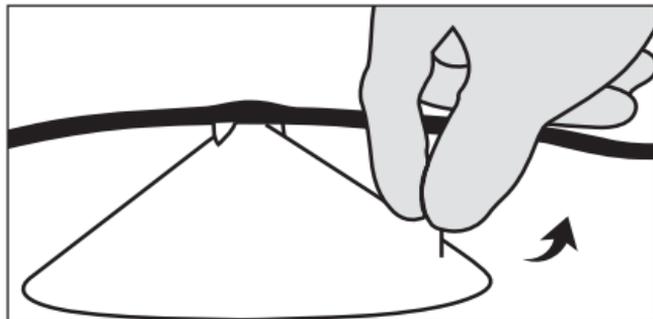

⚠ ATENCIÓN No tire directamente de la cortina ya que podría dañar gravemente el producto y la ventana de cristal.

- Tire de la lengüeta de cada ventosa para que el aire entre y suelte la ventosa. (ver ilustración superior).

Consejos

- Antes de colocar la cortina, limpie la ventana con agua y jabón y compruebe que su superficie esté perfectamente limpia.
- El poder de succión se reduce si quedan partículas extrañas entre la ventosa y la superficie del cristal como, por ejemplo, suciedad, polvo, humedad, etc.
- La presencia de grasa (en el aire o por contacto) puede evitar que las ventosas se adhieran correctamente en el cristal. Si fuera necesario, utilice un detergente más potente para eliminar esta capa de grasa antes de colocar las cortinas.
- Tanto las ventosas como las ventanas deben estar limpias y secas antes de fijar la cortina.



Comentarios y Ayuda

¿Le encanta? ¿No le gusta nada?
Escriba una opinión como cliente.

En AmazonBasics nos comprometemos a proveer productos pensados para satisfacer a nuestros clientes y que estén a la altura de sus elevados estándares de calidad. Le animamos a que escriba una opinión sobre su experiencia con el producto.



**ES: [amazon.es/review/
review-your-purchases#](https://amazon.es/review/review-your-purchases#)**

**MX: [amazon.com.mx/review/
review-your-purchases#](https://amazon.com.mx/review/review-your-purchases#)**




**ES: [amazon.es/gp/help/
customer/contact-us](https://amazon.es/gp/help/customer/contact-us)**

**MX: [amazon.com.mx/
gp/help/customer/
contact-us](https://amazon.com.mx/gp/help/customer/contact-us)**




Aanleg

Stap 1:

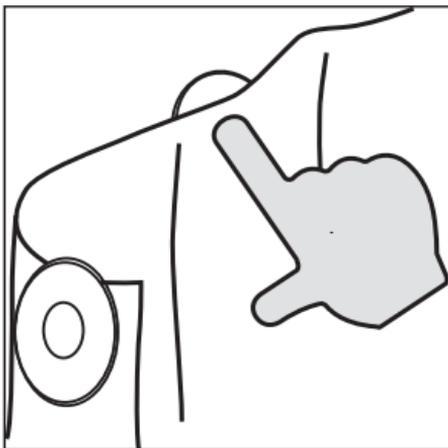


- Bevestig eerst het bovenste deel van het rolgordijn. Ga dan verder rond de hoeken en langs de zijkanten en eindig met het onderste gedeelte.

Stap 2:

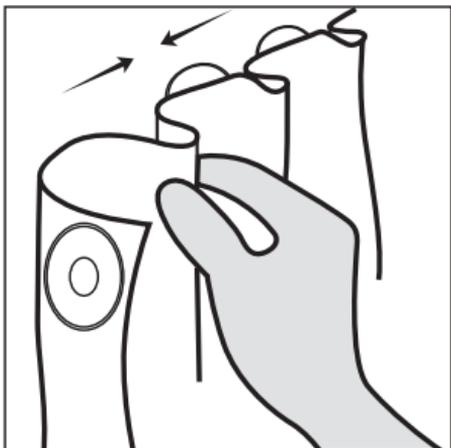

- Gebruik het klittenband om de gaten te dichten.

Aanleg

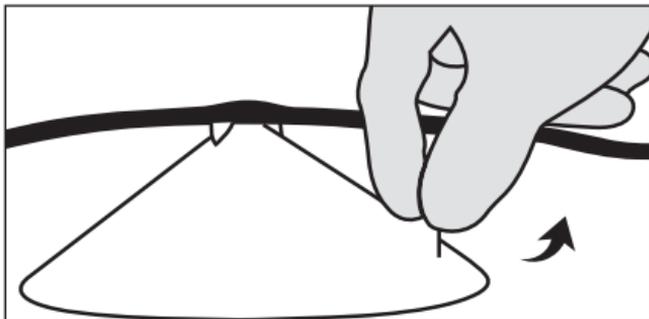

⚠ LET OP Trek niet direct aan het rolgordijn, omdat dit aanzienlijke schade kan veroorzaken aan het product zelf en aan het glasvenster.

- Trek aan het lipje van elke zuignap om lucht binnen te laten en laat de zuigkracht ontsnappen. (zie bovenstaande figuur).

Tipps

- Reinig het raam met water en zeep en zorg ervoor dat het raamoppervlak volledig schoon is voordat u het rolgordijn installeert.
- De zuigkracht wordt verminderd als er vreemde voorwerpen tussen de zuignappen en het glasoppervlak worden opgevangen, bijv. vuil, stof, vocht, enz.
- De aanwezigheid van vet (in de lucht of door contact) kan voorkomen dat de zuignappen zich veilig aan het glas hechten. Het kan nodig zijn een sterker wasmiddel te gebruiken om deze vetlaag te verwijderen voordat de jaloezieën kunnen worden gemonteerd.

- Zowel de zuignappen als het raam moeten schoon en droog zijn voordat u de jaloezieën installeert.



Feedback en Hulp

Vind je het leuk? Vind je het niet leuk? Beoordeel het product dan op onze website!

AmazonBasics is toegewijd aan het leveren van klantgerichte producten die voldoen aan uw hoge standaarden. Wij moedigen u aan om een review te schrijven waarin u uw ervaringen met het product deelt.



**[amazon.nl/review/
review-your-purchases#](https://amazon.nl/review/review-your-purchases#)**



**[amazon.nl/gp/help/
customer/contact-us](https://amazon.nl/gp/help/customer/contact-us)**


対象ユーザー

本製品は、本書の内容を理解し、安全に使用できる人を想定して設計されています。本書に記載されている情報に従って本製品を使用できない人、例えば障害のある方やお子様の本製品を使用する場合は、使用者を監督できる同伴者が必要となります。




セットアップ

ステップ 1:

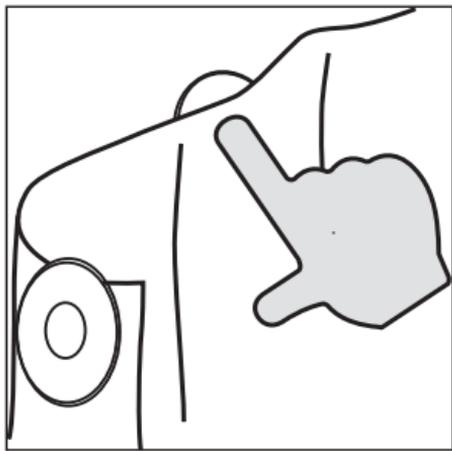


- ブラインドの一番上の部分を先に取り付けます。次に角、更に横部分を下方方向に行き、一番下を最後にします。

ステップ 2:

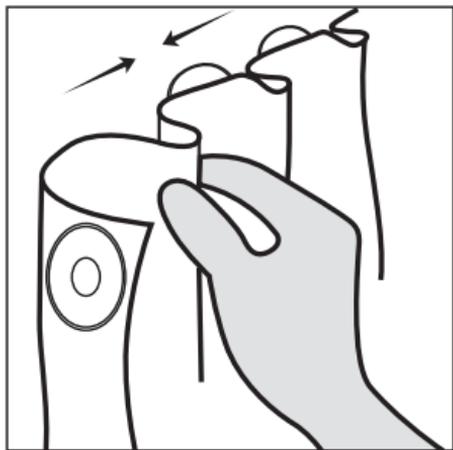

- 面ファスナーを使ってギャップを埋めます。

除去

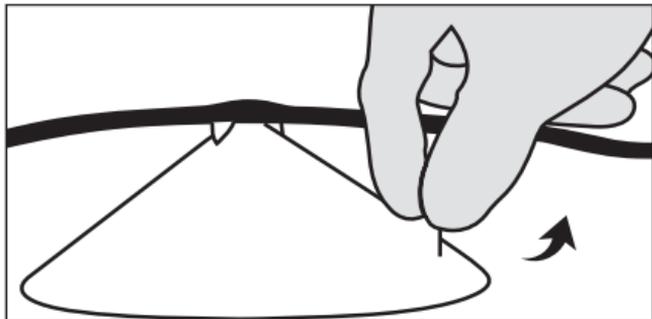

▲ 注意 ブラインドを直接引っ張るのはおやめください、製品やガラス窓にひどいダメージを与えることがあります。

- それぞれの吸盤についているタブを引いて空気を入れ、吸盤をはずします。（イラストを参照）。

ヒント

- ブラインドを取り付ける前に、窓を石鹼と水で洗浄し、窓の表面が完全にきれいであることを確認してください。
- 吸盤とガラス面との間にゴミ、ほこり、湿気等の異物が入り込むと吸引力が弱まります。
- 油脂（空気中であつたり接触であつたりしますが）の存在は吸盤がガラスにしっかり付着するのを妨げることがあります。ブラインドを取り付ける前により強い洗剤を使用して油脂の層を取り除く必要がある場合があります。

- ・ ブラインドを取り付ける前に吸盤と窓の両方がきれいで乾燥している必要があります。

製品の廃棄

本製品を廃棄する場合は、各パーツごとに自治体や施設の方針に従って処分してください。



フィードバックとサポート

気に入っていただけましたか？お気に召しませんでしたか？

カスタマーレビューでお知らせください。

AmazonBasics は、皆様の高い水準に答えることのできるような消費者志向型の製品をお届けするのを旨としています。この製品についてのレビューで製品についてのご意見をお聞かせください。



[amazon.jp/review/
review-your-purchases#](https://amazon.jp/review/review-your-purchases#)



[amazon.jp/gp/help/
customer/contact-us](https://amazon.jp/gp/help/customer/contact-us)

販売元:アマゾンジャパン合同会社

所在地:〒153-0064 東京都目黒区下目黒 1 丁目 8-1


アルコタワーアネックス

URL:<https://www.amazon.co.jp/>



Montaż

Krok 1:

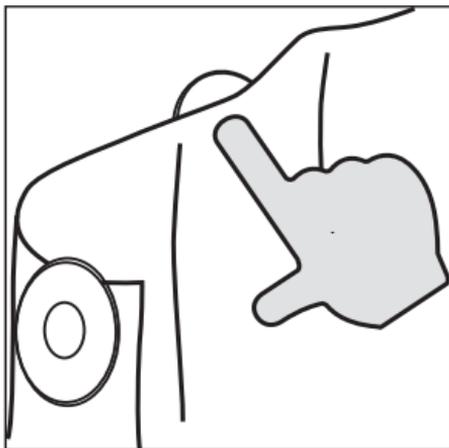


- Najpierw przymocować górną część rolety. Następnie kontynuować wokół naroża i w dół po bokach, kończąc na dolnej części.

Krok 2:



- W celu zamknięcia szczelin należy użyć zapinek haczykowych.

Demontaż

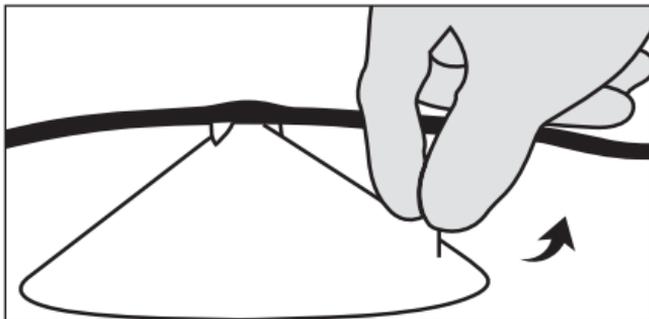

⚠ UWAGA Nie należy ciągnąć żaluzji bezpośrednio, ponieważ może to spowodować poważne uszkodzenie samego produktu i szyby.

- Pociągnąć za języczek każdej przyssawki, aby wpuścić powietrze i zwolnić przyssawkę. (patrz ilustracja powyżej).

Porady

- Przed założeniem rolety umyć okno mydłem i wodą oraz sprawdzić, czy powierzchnia okna jest idealnie czysta.
- Siła ssania zmniejsza się w przypadku uwięzienia pomiędzy przyssawkami a powierzchnią szklaną ciąż obcych, np. brudu, kurzu, wilgoci itp.
- Obecność tłuszczu (z powietrza lub wskutek kontaktu) może zapobiec pewnemu przyleganiu przyssawek do szyby. Przed założeniem rolety może być konieczne użycie silniejszego środka myjącego w celu usunięcia tej warstwy tłuszczu.
- Zarówno przyssawki, jak i okno muszą być czyste i suche przed założeniem rolety.



Opinie i pomoc

Lubisz to? Nie lubisz tego? Daj nam znać za pomocą opinii klienta.

AmazonBasics dokłada wszelkich starań, aby dostarczać produkty zorientowane na klientów, spełniające ich wysokie oczekiwania. Zachęcamy do napisania opinii, aby podzielić się swoimi doświadczeniami związanymi z produktem.



<https://www.amazon.pl/review/review-your-purchases/>




<https://www.amazon.pl/gp/help/customer/contact-us>



Montera

Steg 1:

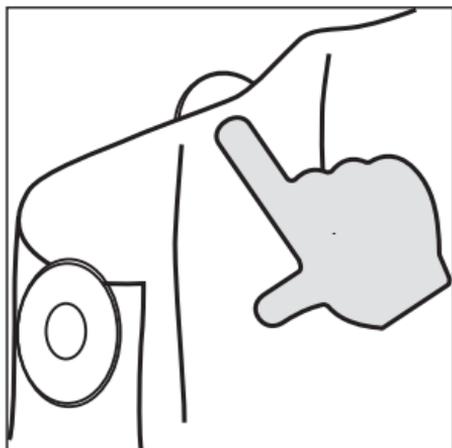


- Fäst den övre delen av gardinen först. Fortsätt sedan runt hörnet och ner längs sidorna och avsluta med den nedre delen.

Steg 2:



- Använd kardborrefästena för att stänga mellanrum.

Borttagning

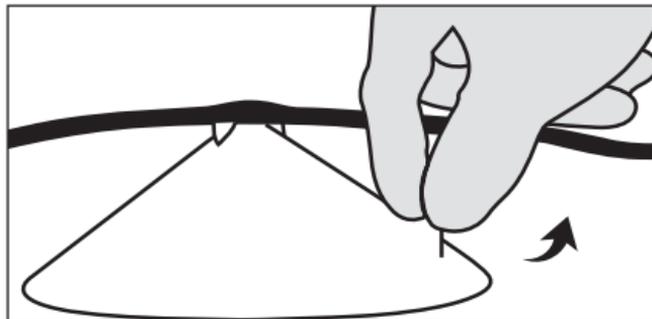

⚠ OBSERVERA Dra inte direkt i gardinen, eftersom detta kan orsaka allvarliga skador på själva produkten och fönstret.

- Dra i fliken på varje sugkopp för att släppa in luft och minska sugstyrkan. (se bild ovan).

Tips

- Innan du sätter fast gardinen, rengör fönstret med tvål och vatten och kontrollera att fönstrets yta är helt ren.
- Sugkraften minskar om främmande partiklar fastnar mellan sugkopparna och glasytan, t.ex. smuts, damm, luftfuktighet osv.
- Förekomsten av fett (luftburet eller genom kontakt) kan hindra kopparna från att fästa ordentligt på glaset. Det kan vara nödvändigt att använda ett starkare rengöringsmedel för att avlägsna detta fettlager innan gardinerna sätts fast.
- Både sugkopparna och fönstret måste vara rena och torra innan gardinen monteras.



Återkoppling och Hjälp

Älskar du den? Avskyr du den? Skriv en kundrecension så att vi får veta.

AmazonBasics strävar efter att leverera kunddrivna produkter som lever upp till dina höga standarder. Skriv gärna ett omdöme och berätta om dina erfarenheter av produkten.



<https://www.amazon.se/review/review-your-purchases/>



<https://www.amazon.se/gp/help/customer/contact-us>

amazon basics

amazon.com/AmazonBasics

MADE IN CHINA

FABRIQUÉ EN CHINE

HERGESTELLT IN CHINA

PRODOTTO IN CINA

HECHO EN CHINA

GEMAAKT IN CHINA

中国製

WYPRODUKOWANO W CHINACH

TILLVERKAD I KINA

V07-02/21

hushh works

- POWER**  Hold for 3 sec. to turn unit on/off. Indicator light turns off after 60 seconds unless plugged in and charging.
- VOLUME ↑**  Long press for quick change in volume. Short press for one increment change.
- VOLUME ↓**  Long press for quick change in volume. Short press for one increment change.
- SOUND**  Short press to choose sound: bright white noise, deep white noise or surf.

- LOCK**  Hold  and  buttons at the same time to lock or unlock controls. Indicator light will blink 3 times.
- NIGHTLIGHT**  Press  twice to turn nightlight on or off.
- CHARGING**  Low battery = Fast blinks
Charging = Slow blinks
Fully charged = Indicator light turns off

hushh placement

We recommend placing hushh at least three feet (one meter) away from baby's ears. This lets the sound fill the room in order to provide the greatest sound-masking benefit.

Should you find yourself on-the-go with baby and wish to attach hushh to a stroller or car seat, we recommend setting the machine to partial volume. Do not place it directly against baby's ears. Your hushh has a locking mechanism to control the settings and volume. If the machine is within baby's reach, please lock the device to prevent accidental volume tampering.

For more safety information on decibel exposure for children, please visit our website. The Marpac customer service team will gladly assist with the machine's settings and related questions, but should you have any concerns about the safe use of sounds with your child, we strongly recommend consulting your pediatrician. Also, please remember that hushh is not a toy, and should never be near or in baby's mouth.

warranty information and the Marpac Customer Service Promise.

Website: www.marpac.com
Email: info@marpac.com
Phone 910-602-1421.

A live, knowledgeable service team member will be happy to assist you during our regular business hours. If you need service (even beyond the warranty period outlined below), PLEASE DO contact us!

LIMITED ONE-YEAR FACTORY WARRANTY:

Marpac warrants its products (with exceptions as indicated below), to the original purchaser, to be free of defects for a period of one year from the date of purchase. This limited warranty covers all parts and/or workmanship against defects or breakage in normal intended use. This limited warranty does not cover damage caused by accidental dropping, rough handling or misuse of the product; including tampering. Altering or tampering with the label will also void this warranty. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Our ultimate promise to you is that we do our best to make serious, high quality, sound machines. We really do care about your enjoyment of our products. We want to hear from you any time you think our product has disappointed you. Please contact us. We stand behind these products, expect them to last, and will make every reasonable effort to make you happy.

safety instructions

WARNING

To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture. The apparatus shall not be exposed to splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION

Use of controls or adjustments or performance or procedures other than those specified may result in hazardous radiation exposure. Battery shall not be exposed to excessive heat such as direct sunshine or fire.

UNPACKING AND INSTALLATION

Unpack your unit carefully. We recommend that you save the packaging in case you ever need to store you unit. To avoid damage, never place the unit or its battery near radiators, in front of heating vents, under direct sunlight or near water.

FOR YOUR SAFETY

- When disconnecting the power supply, pull the plug first. Do not pull the cord by itself.
- Never handle the power plug with wet hands, as this could cause fire or electric shock.
- Refer servicing to qualified personnel only.
- Do not open the housing.
- Do not twist or pinch the power supply cord. If the plug or power supply cord needs to be replaced, ensure that it complies with the manufacturer's recommendation.
- Unplug the unit during lightning storms.

DISPOSAL

According to the European WEEEDirective (2002/96/EC) and Battery Directive (2006/66/EC), all electrical and electronic products and batteries must be collected separately by a local collection system. Do not dispose of these items with your normal household waste. Follow local regulations for safe disposal.

The wheeled bin mark indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference
(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.



hushh works

- POWER**  Hold for 3 sec. to turn unit on/off. Indicator light turns off after 60 seconds unless plugged in and charging.
- VOLUME ↑**  Long press for quick change in volume. Short press for one increment change.
- VOLUME ↓**  Long press for quick change in volume. Short press for one increment change.
- SOUND**  Short press to choose sound: bright white noise, deep white noise or surf.

- LOCK**  Hold  and  buttons at the same time to lock or unlock controls. Indicator light will blink 3 times.
- NIGHTLIGHT**  Press  twice to turn nightlight on or off.
- CHARGING**  Low battery = Fast blinks
Charging = Slow blinks
Fully charged = Indicator light turns off

hushh placement

We recommend placing hushh at least three feet (one meter) away from baby's ears. This lets the sound fill the room in order to provide the greatest sound-masking benefit.

Should you find yourself on-the-go with baby and wish to attach hushh to a stroller or car seat, we recommend setting the machine to partial volume. Do not place it directly against baby's ears. Your hushh has a locking mechanism to control the settings and volume. If the machine is within baby's reach, please lock the device to prevent accidental volume tampering.

For more safety information on decibel exposure for children, please visit our website. The Marpac customer service team will gladly assist with the machine's settings and related questions, but should you have any concerns about the safe use of sounds with your child, we strongly recommend consulting your pediatrician. Also, please remember that hushh is not a toy, and should never be near or in baby's mouth.

warranty information and the Marpac Customer Service Promise.

Website: www.marpac.com
Email: info@marpac.com
Phone 910-602-1421.

A live, knowledgeable service team member will be happy to assist you during our regular business hours. If you need service (even beyond the warranty period outlined below), PLEASE DO contact us!

LIMITED ONE-YEAR FACTORY WARRANTY:

Marpac warrants its products (with exceptions as indicated below), to the original purchaser, to be free of defects for a period of one year from the date of purchase. This limited warranty covers all parts and/or workmanship against defects or breakage in normal intended use. This limited warranty does not cover damage caused by accidental dropping, rough handling or misuse of the product; including tampering. Altering or tampering with the label will also void this warranty. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Our ultimate promise to you is that we do our best to make serious, high quality, sound machines. We really do care about your enjoyment of our products. We want to hear from you any time you think our product has disappointed you. Please contact us. We stand behind these products, expect them to last, and will make every reasonable effort to make you happy.

safety instructions

WARNING

To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture. The apparatus shall not be exposed to splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION

Use of controls or adjustments or performance or procedures other than those specified may result in hazardous radiation exposure. Battery shall not be exposed to excessive heat such as direct sunshine or fire.

UNPACKING AND INSTALLATION

Unpack your unit carefully. We recommend that you save the packaging in case you ever need to store you unit. To avoid damage, never place the unit or its battery near radiators, in front of heating vents, under direct sunlight or near water.

FOR YOUR SAFETY

- When disconnecting the power supply, pull the plug first. Do not pull the cord by itself.
- Never handle the power plug with wet hands, as this could cause fire or electric shock.
- Refer servicing to qualified personnel only.
- Do not open the housing.
- Do not twist or pinch the power supply cord. If the plug or power supply cord needs to be replaced, ensure that it complies with the manufacturer's recommendation.
- Unplug the unit during lightning storms.

DISPOSAL

According to the European WEEEDirective (2002/96/EC) and Battery Directive (2006/66/EC), all electrical and electronic products and batteries must be collected separately by a local collection system. Do not dispose of these items with your normal household waste. Follow local regulations for safe disposal.

The wheeled bin mark indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference
(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.



hushh works

- POWER**  Hold for 3 sec. to turn unit on/off. Indicator light turns off after 60 seconds unless plugged in and charging.
- VOLUME ↑**  Long press for quick change in volume. Short press for one increment change.
- VOLUME ↓**  Long press for quick change in volume. Short press for one increment change.
- SOUND**  Short press to choose sound: bright white noise, deep white noise or surf.

- LOCK**  Hold  and  buttons at the same time to lock or unlock controls. Indicator light will blink 3 times.
- NIGHTLIGHT**  Press  twice to turn nightlight on or off.
- CHARGING**  Low battery = Fast blinks
Charging = Slow blinks
Fully charged = Indicator light turns off

hushh placement

We recommend placing hushh at least three feet (one meter) away from baby's ears. This lets the sound fill the room in order to provide the greatest sound-masking benefit.

Should you find yourself on-the-go with baby and wish to attach hushh to a stroller or car seat, we recommend setting the machine to partial volume. Do not place it directly against baby's ears. Your hushh has a locking mechanism to control the settings and volume. If the machine is within baby's reach, please lock the device to prevent accidental volume tampering.

For more safety information on decibel exposure for children, please visit our website. The Marpac customer service team will gladly assist with the machine's settings and related questions, but should you have any concerns about the safe use of sounds with your child, we strongly recommend consulting your pediatrician. Also, please remember that hushh is not a toy, and should never be near or in baby's mouth.

warranty information and the Marpac Customer Service Promise.

Website: www.marpac.com
Email: info@marpac.com
Phone 910-602-1421.

A live, knowledgeable service team member will be happy to assist you during our regular business hours. If you need service (even beyond the warranty period outlined below), PLEASE DO contact us!

LIMITED ONE-YEAR FACTORY WARRANTY:

Marpac warrants its products (with exceptions as indicated below), to the original purchaser, to be free of defects for a period of one year from the date of purchase. This limited warranty covers all parts and/or workmanship against defects or breakage in normal intended use. This limited warranty does not cover damage caused by accidental dropping, rough handling or misuse of the product; including tampering. Altering or tampering with the label will also void this warranty. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Our ultimate promise to you is that we do our best to make serious, high quality, sound machines. We really do care about your enjoyment of our products. We want to hear from you any time you think our product has disappointed you. Please contact us. We stand behind these products, expect them to last, and will make every reasonable effort to make you happy.

safety instructions

WARNING

To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture. The apparatus shall not be exposed to splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION

Use of controls or adjustments or performance or procedures other than those specified may result in hazardous radiation exposure. Battery shall not be exposed to excessive heat such as direct sunshine or fire.

UNPACKING AND INSTALLATION

Unpack your unit carefully. We recommend that you save the packaging in case you ever need to store you unit. To avoid damage, never place the unit or its battery near radiators, in front of heating vents, under direct sunlight or near water.

FOR YOUR SAFETY

- When disconnecting the power supply, pull the plug first. Do not pull the cord by itself.
- Never handle the power plug with wet hands, as this could cause fire or electric shock.
- Refer servicing to qualified personnel only.
- Do not open the housing.
- Do not twist or pinch the power supply cord. If the plug or power supply cord needs to be replaced, ensure that it complies with the manufacturer's recommendation.
- Unplug the unit during lightning storms.

DISPOSAL

According to the European WEEEDirective (2002/96/EC) and Battery Directive (2006/66/EC), all electrical and electronic products and batteries must be collected separately by a local collection system. Do not dispose of these items with your normal household waste. Follow local regulations for safe disposal.

The wheeled bin mark indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference
(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.



hushh works

- POWER**  Hold for 3 sec. to turn unit on/off. Indicator light turns off after 60 seconds unless plugged in and charging.
- VOLUME ↑**  Long press for quick change in volume. Short press for one increment change.
- VOLUME ↓**  Long press for quick change in volume. Short press for one increment change.
- SOUND**  Short press to choose sound: bright white noise, deep white noise or surf.

- LOCK** → Hold  and  buttons at the same time to lock or unlock controls. Indicator light will blink 3 times.
- NIGHTLIGHT** → Press  twice to turn nightlight on or off.
- CHARGING** → Low battery = Fast blinks
Charging = Slow blinks
Fully charged = Indicator light turns off

hushh placement

We recommend placing hushh at least three feet (one meter) away from baby’s ears. This lets the sound fill the room in order to provide the greatest sound-masking benefit.

Should you find yourself on-the-go with baby and wish to attach hushh to a stroller or car seat, we recommend setting the machine to partial volume. Do not place it directly against baby’s ears. Your hushh has a locking mechanism to control the settings and volume. If the machine is within baby’s reach, please lock the device to prevent accidental volume tampering.

For more safety information on decibel exposure for children, please visit our website. The Marpac customer service team will gladly assist with the machine’s settings and related questions, but should you have any concerns about the safe use of sounds with your child, we strongly recommend consulting your pediatrician. Also, please remember that hushh is not a toy, and should never be near or in baby’s mouth.

warranty information and the Marpac Customer Service Promise.

Website: www.marpac.com
Email: info@marpac.com
Phone 910-602-1421.

A live, knowledgeable service team member will be happy to assist you during our regular business hours. If you need service (even beyond the warranty period outlined below), PLEASE DO contact us!

LIMITED ONE-YEAR FACTORY WARRANTY:

Marpac warrants its products (with exceptions as indicated below), to the original purchaser, to be free of defects for a period of one year from the date of purchase. This limited warranty covers all parts and/or workmanship against defects or breakage in normal intended use. This limited warranty does not cover damage caused by accidental dropping, rough handling or misuse of the product; including tampering. Altering or tampering with the label will also void this warranty. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Our ultimate promise to you is that we do our best to make serious, high quality, sound machines. We really do care about your enjoyment of our products. We want to hear from you any time you think our product has disappointed you. Please contact us. We stand behind these products, expect them to last, and will make every reasonable effort to make you happy.

safety instructions

WARNING

To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture. The apparatus shall not be exposed to splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION

Use of controls or adjustments or performance or procedures other than those specified may result in hazardous radiation exposure.

Battery shall not be exposed to excessive heat such as direct sunshine or fire.

UNPACKING AND INSTALLATION

Unpack your unit carefully. We recommend that you save the packaging in case you ever need to store you unit. To avoid damage, never place the unit or its battery near radiators, in front of heating vents, under direct sunlight or near water.

FOR YOUR SAFETY

- When disconnecting the power supply, pull the plug first. Do not pull the cord by itself.
- Never handle the power plug with wet hands, as this could cause fire or electric shock.
- Refer servicing to qualified personnel only.
- Do not open the housing.

• Do not twist or pinch the power supply cord. If the plug or power supply cord needs to be replaced, ensure that it complies with the manufacturer’s recommendation.

- Unplug the unit during lightning storms.

DISPOSAL

According to the European WEEEDirective (2002/96/EC) and Battery Directive (2006/66/EC), all electrical and electronic products and batteries must be collected separately by a local collection system. Do not dispose of these items with your normal household waste. Follow local regulations for safe disposal.

The wheeled bin mark indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.



hushh works

- POWER**  Hold for 3 sec. to turn unit on/off. Indicator light turns off after 60 seconds unless plugged in and charging.
- VOLUME ↑**  Long press for quick change in volume. Short press for one increment change.
- VOLUME ↓**  Long press for quick change in volume. Short press for one increment change.
- SOUND**  Short press to choose sound: bright white noise, deep white noise or surf.

- LOCK** → Hold  and  buttons at the same time to lock or unlock controls. Indicator light will blink 3 times.
- NIGHTLIGHT** → Press  twice to turn nightlight on or off.
- CHARGING** → Low battery = Fast blinks
Charging = Slow blinks
Fully charged = Indicator light turns off

hushh placement

We recommend placing hushh at least three feet (one meter) away from baby’s ears. This lets the sound fill the room in order to provide the greatest sound-masking benefit.

Should you find yourself on-the-go with baby and wish to attach hushh to a stroller or car seat, we recommend setting the machine to partial volume. Do not place it directly against baby’s ears. Your hushh has a locking mechanism to control the settings and volume. If the machine is within baby’s reach, please lock the device to prevent accidental volume tampering.

For more safety information on decibel exposure for children, please visit our website. The Marpac customer service team will gladly assist with the machine’s settings and related questions, but should you have any concerns about the safe use of sounds with your child, we strongly recommend consulting your pediatrician. Also, please remember that hushh is not a toy, and should never be near or in baby’s mouth.

warranty information and the Marpac Customer Service Promise.

Website: www.marpac.com
Email: info@marpac.com
Phone 910-602-1421.

A live, knowledgeable service team member will be happy to assist you during our regular business hours. If you need service (even beyond the warranty period outlined below), PLEASE DO contact us!

LIMITED ONE-YEAR FACTORY WARRANTY:

Marpac warrants its products (with exceptions as indicated below), to the original purchaser, to be free of defects for a period of one year from the date of purchase. This limited warranty covers all parts and/or workmanship against defects or breakage in normal intended use. This limited warranty does not cover damage caused by accidental dropping, rough handling or misuse of the product; including tampering. Altering or tampering with the label will also void this warranty. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Our ultimate promise to you is that we do our best to make serious, high quality, sound machines. We really do care about your enjoyment of our products. We want to hear from you any time you think our product has disappointed you. Please contact us. We stand behind these products, expect them to last, and will make every reasonable effort to make you happy.

safety instructions

WARNING

To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture. The apparatus shall not be exposed to splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION

Use of controls or adjustments or performance or procedures other than those specified may result in hazardous radiation exposure.

Battery shall not be exposed to excessive heat such as direct sunshine or fire.

UNPACKING AND INSTALLATION

Unpack your unit carefully. We recommend that you save the packaging in case you ever need to store you unit. To avoid damage, never place the unit or its battery near radiators, in front of heating vents, under direct sunlight or near water.

FOR YOUR SAFETY

- When disconnecting the power supply, pull the plug first. Do not pull the cord by itself.
- Never handle the power plug with wet hands, as this could cause fire or electric shock.
- Refer servicing to qualified personnel only.
- Do not open the housing.

• Do not twist or pinch the power supply cord. If the plug or power supply cord needs to be replaced, ensure that it complies with the manufacturer’s recommendation.

- Unplug the unit during lightning storms.

DISPOSAL

According to the European WEEEDirective (2002/96/EC) and Battery Directive (2006/66/EC), all electrical and electronic products and batteries must be collected separately by a local collection system. Do not dispose of these items with your normal household waste. Follow local regulations for safe disposal.

The wheeled bin mark indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.



hushh works

- POWER**  Hold for 3 sec. to turn unit on/off. Indicator light turns off after 60 seconds unless plugged in and charging.
- VOLUME ↑**  Long press for quick change in volume. Short press for one increment change.
- VOLUME ↓**  Long press for quick change in volume. Short press for one increment change.
- SOUND**  Short press to choose sound: bright white noise, deep white noise or surf.

- LOCK** → Hold  and  buttons at the same time to lock or unlock controls. Indicator light will blink 3 times.
- NIGHTLIGHT** → Press  twice to turn nightlight on or off.
- CHARGING** → Low battery = Fast blinks
Charging = Slow blinks
Fully charged = Indicator light turns off

hushh placement

We recommend placing hushh at least three feet (one meter) away from baby’s ears. This lets the sound fill the room in order to provide the greatest sound-masking benefit.

Should you find yourself on-the-go with baby and wish to attach hushh to a stroller or car seat, we recommend setting the machine to partial volume. Do not place it directly against baby’s ears. Your hushh has a locking mechanism to control the settings and volume. If the machine is within baby’s reach, please lock the device to prevent accidental volume tampering.

For more safety information on decibel exposure for children, please visit our website. The Marpac customer service team will gladly assist with the machine’s settings and related questions, but should you have any concerns about the safe use of sounds with your child, we strongly recommend consulting your pediatrician. Also, please remember that hushh is not a toy, and should never be near or in baby’s mouth.

warranty information and the Marpac Customer Service Promise.

Website: www.marpac.com
Email: info@marpac.com
Phone 910-602-1421.

A live, knowledgeable service team member will be happy to assist you during our regular business hours. If you need service (even beyond the warranty period outlined below), PLEASE DO contact us!

LIMITED ONE-YEAR FACTORY WARRANTY:

Marpac warrants its products (with exceptions as indicated below), to the original purchaser, to be free of defects for a period of one year from the date of purchase. This limited warranty covers all parts and/or workmanship against defects or breakage in normal intended use. This limited warranty does not cover damage caused by accidental dropping, rough handling or misuse of the product; including tampering. Altering or tampering with the label will also void this warranty. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Our ultimate promise to you is that we do our best to make serious, high quality, sound machines. We really do care about your enjoyment of our products. We want to hear from you any time you think our product has disappointed you. Please contact us. We stand behind these products, expect them to last, and will make every reasonable effort to make you happy.

safety instructions

WARNING

To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture. The apparatus shall not be exposed to splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION

Use of controls or adjustments or performance or procedures other than those specified may result in hazardous radiation exposure.

Battery shall not be exposed to excessive heat such as direct sunshine or fire.

UNPACKING AND INSTALLATION

Unpack your unit carefully. We recommend that you save the packaging in case you ever need to store you unit. To avoid damage, never place the unit or its battery near radiators, in front of heating vents, under direct sunlight or near water.

FOR YOUR SAFETY

- When disconnecting the power supply, pull the plug first. Do not pull the cord by itself.
- Never handle the power plug with wet hands, as this could cause fire or electric shock.
- Refer servicing to qualified personnel only.
- Do not open the housing.

• Do not twist or pinch the power supply cord. If the plug or power supply cord needs to be replaced, ensure that it complies with the manufacturer’s recommendation.

- Unplug the unit during lightning storms.

DISPOSAL

According to the European WEEEDirective (2002/96/EC) and Battery Directive (2006/66/EC), all electrical and electronic products and batteries must be collected separately by a local collection system. Do not dispose of these items with your normal household waste. Follow local regulations for safe disposal.

The wheeled bin mark indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

