

DINAMICA

with **LatteCrema** SYSTEM 



QUICK START GUIDE

De'Longhi

VISIT US AT DELONGHI.COM



ECAM35075SI



EASILY REGISTER YOUR MACHINE & GET MORE OUT OF YOUR ESPRESSO EXPERIENCE


Register your Fully Automatic Espresso Machine and become De'Longhi Club Member. Join the De'Longhi Club to get more out of your coffee experience.

			
RECEIVE 1 ADDITIONAL YEAR OF WARRANTY FOR REGISTERING PRODUCT	MEMBERSHIP DISCOUNT ON ACCESSORIES	DE'LONGHI SPECIALIST SUPPORT	EXCLUSIVE COFFEE EVENTS & NEWS
	PRIVATE ONLINE SALES	EASY ORDERING	

De'Longhi Club Member discount: Only members of the Club will receive special offers on coffee accessories.

STEP #1: TAKE A PHOTO

- Snap a photo of the camera icon, including the points.

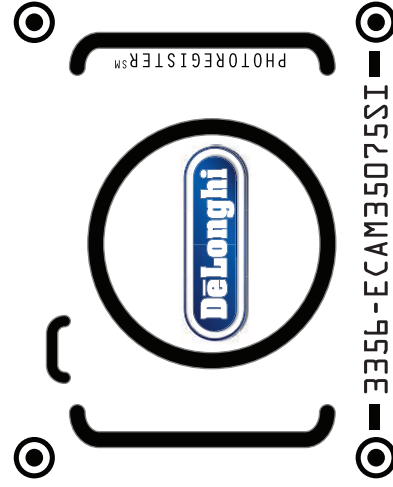

STEP #2: SEND PHOTO

- Send a photo via text, Facebook Messenger or upload online.

		
TEXT PHOTO TO 71403	MESSANGER @ PHOTOREGISTER	ONLINE: WWW.DELONGHI.PHOTO


NEED HELP?:

Visit photoregister.com/help or text HELP to 71403.

CONTACT US

- Call 1-800-945-0929
- Online: Delonghi.com

IN THE BOX


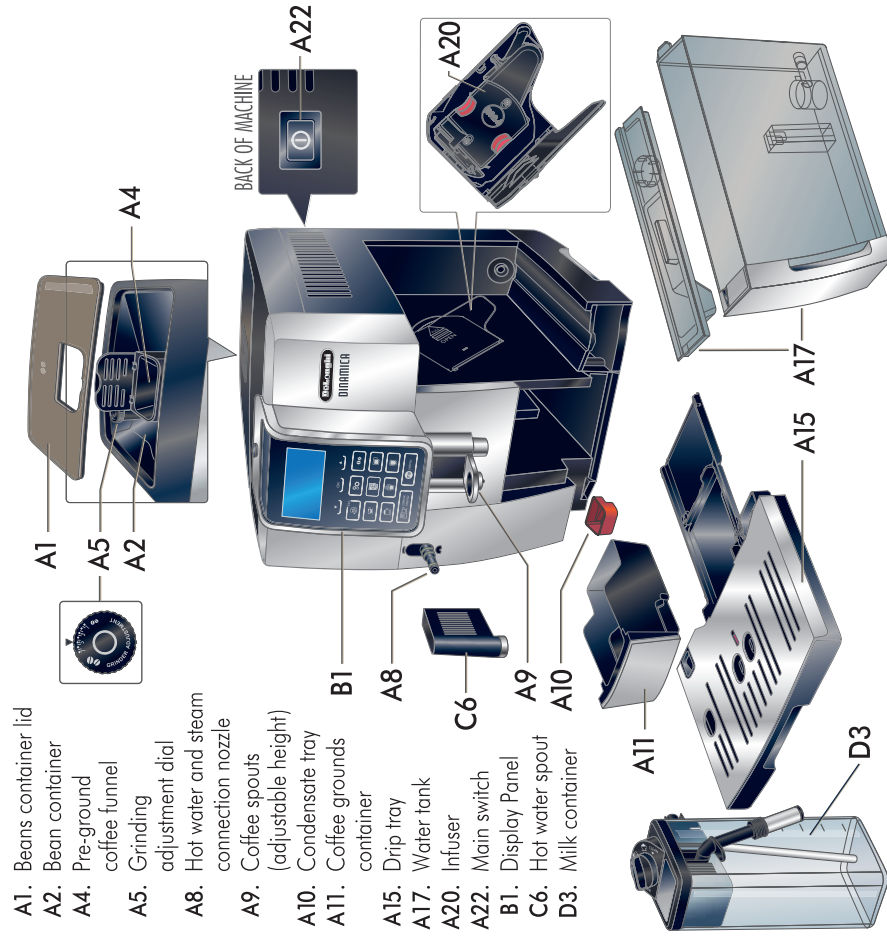


Get Started &
Owner's Instructions
Booklets



This short guide is not intended to explain all the functions of the appliance. Please read all the owner's instruction booklet before use.

ECAM35075SI



GET READY

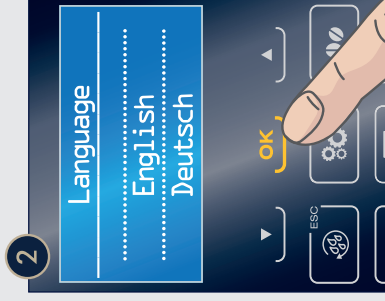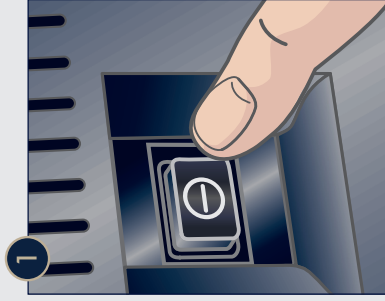


Remove all stickers and clean all accessories with warm water and mild detergent and dry them. Prepare the machine to be rinsed and follow instructions on the display. This is only required the first time out of the box.

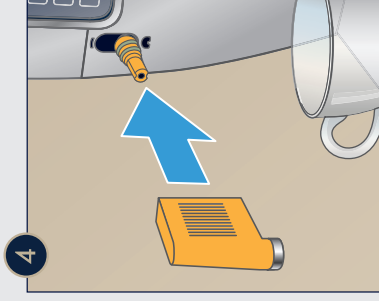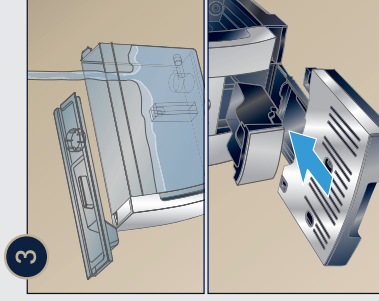



The machine will deliver hot water and will shut off automatically once rinsing is complete.

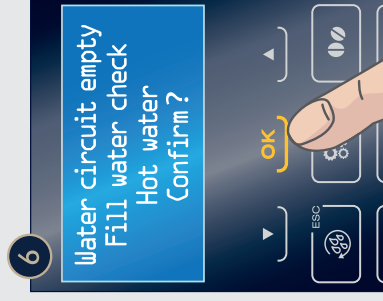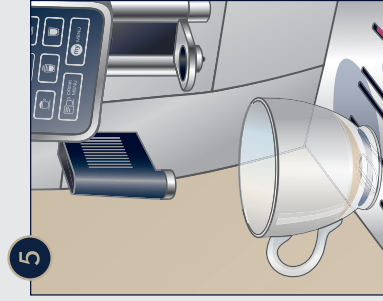

FIRST USE CYCLE

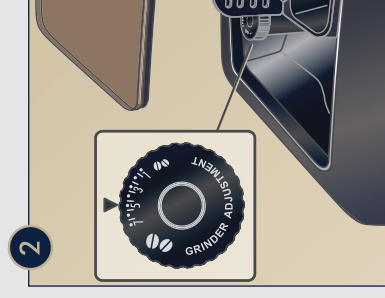

The machine is ready to be used. To finalize the set up and ensure best results, brew and dump the 4 or 5 espressos.

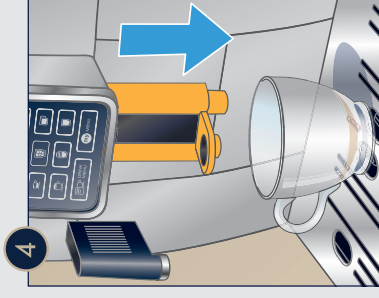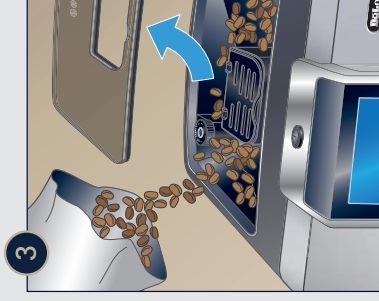

BREW ESPRESSO



Simply select one of the pre-set beverages from the display or from the **Drink Menu**. The preparation will start immediately.

2 Optional - If you want to customize strength of your pre-set beverage, select it by pressing the Strength button until desired level before selecting the recipe.

3 Select One Touch recipe and preparation will start.

4 OR... Select recipe from Drink Menu.


5 You can use pre-ground coffee by selecting the pre-ground option pressing the strength button six times.

6 Use the specific funnel to add pre-ground coffee and select recipe.

One Touch recipes:

- Espresso
- TrueBrew[™] Over Ice[™] Coffee
- Long

MILK RECIPES

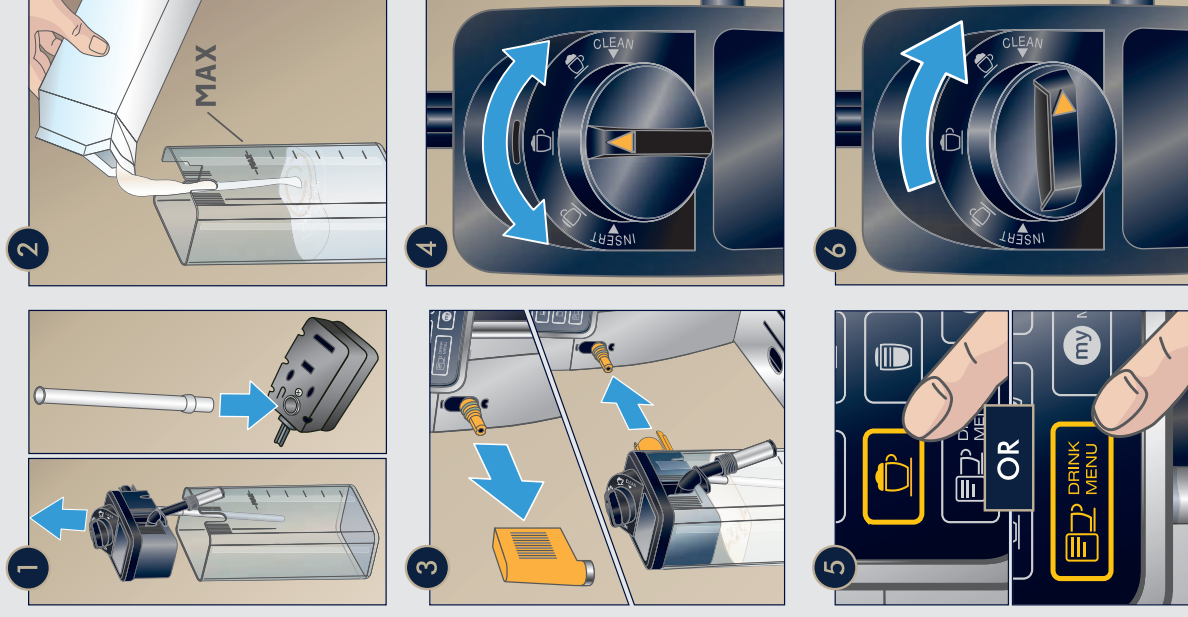

To make a Milk recipe, use the provided milk container. Use cold cow milk or your preferred milk alternative. Whole milk or oat milk will give the best results.

1 Open the lid and make sure the milk intake tube is correctly inserted in the bottom of the milk container lid.

4 Use the selector to choose between flatter or dryer foam.

5 Select One Touch Milk recipe **OR** select recipe from Drink Menu.

6 Twist the selector to "clean position" after beverage is ready to start cleaning cycle.


One Touch Milk recipes:

- Cappuccino
- Latte
- Hot Milk

EXTRACTION GUIDELINES


Depending on your choice of beans, you might need to adjust the grinder setting to a finer or more coarse choice.

Perfect espresso

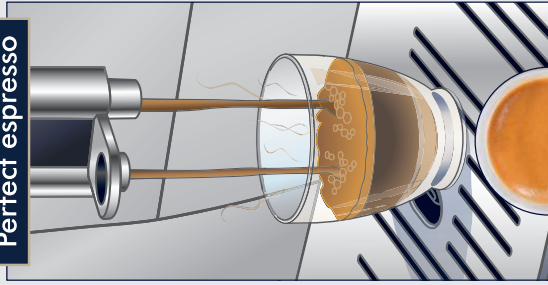


- Flow like warm honey
- Nut-brown Crema
- Well balanced and lingering taste

Under extracted

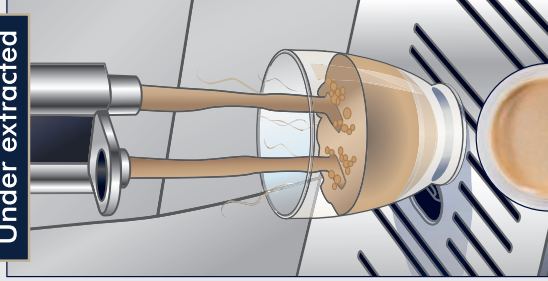

- Flowing fast like water
- Light and pale Crema

Over extracted

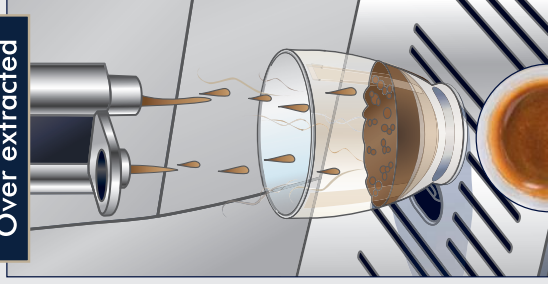

- Flowing in drips or not at all
- Crema very dark and not uniform

To make it perfect:

- Adjust grinding setting to a finer setting
- Select a higher strength





To make it perfect:

- Adjust grinding setting to a coarser setting
- Select a lower strength



CLEANING

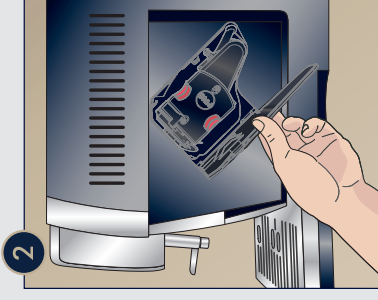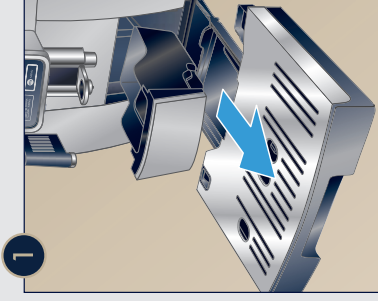

Keeping your machine clean will improve quality of the beverage and life span of the machine.

1 Empty drip tray daily and empty coffee ground container when lights come up.

2 Once a month, clean the inside of the machine. Follow User Manual detailed instruction section 14.9.






3 Remove and clean each part of the milk container lid. Follow User Manual section 14.10.

4 Promptly descale when indication light comes on. Follow user Manual section 15.

DESCALING



INSERT WATER FILTER

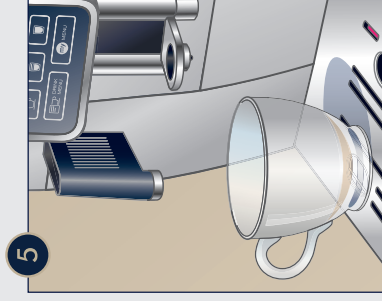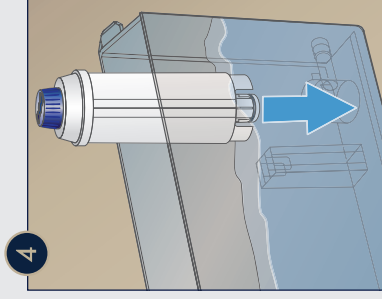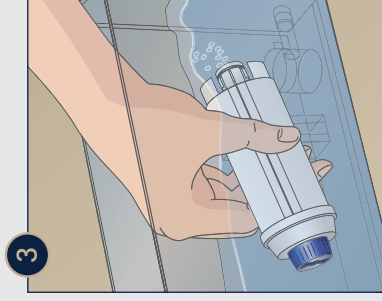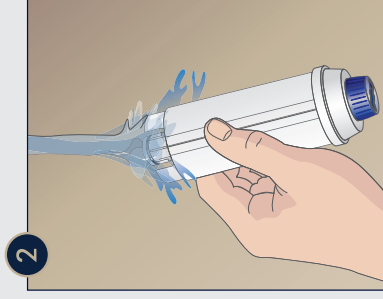
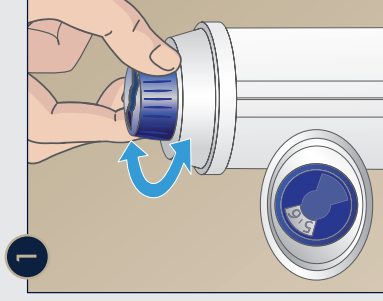


To ensure better quality of the water install the provided water filter. Under normal use, filters last about 3 months. If coffee maker is left unused, the filter will last a maximum of 3 weeks.

*The type of filter may vary.

6 Once the filter is installed, activate it on machine Settings → Maintenance → Install Filter. See section 17 of User Manual for detailed instructions.

SET WATER HARDNESS

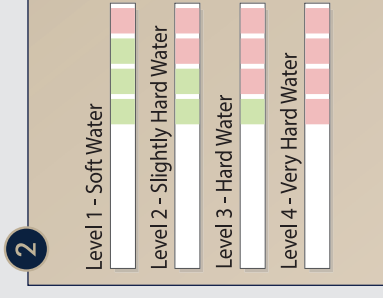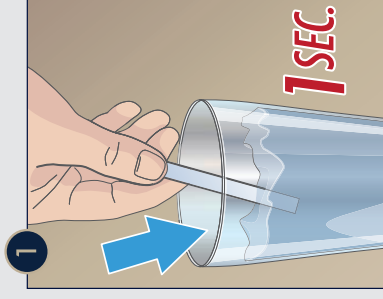

Analyze the hardness of your water to set your machine accordingly.

1 Dip the provided Total Hardness Indicator in a glass of water for one second and shake it.

2 Wait a couple of minutes. Read the Indicator paper colors and compare with this table.

3 Set water hardness on the machine from Setting Menu → General → Water Hardness. See User manual at section 16.2 for further details.



ACCESSORIES

Enjoy our full line of drinkware:
an exclusive line of Espresso, Cappuccino and Latte glasses.



Coffee Care & Maintenance

Experience the De'Longhi Care Kit Line to improve
the performance of your fully automatic machine.



Descaler



Descaler mini



Water Filter



Coffee Care Kit



Multi-Clean

... to learn more about the De'Longhi accessories visit: delonghi.com