

 


singing machine®

creating Joy through music

iSM1030BT


INSTRUCTION MANUAL
MANUAL DE INSTRUCCIONES

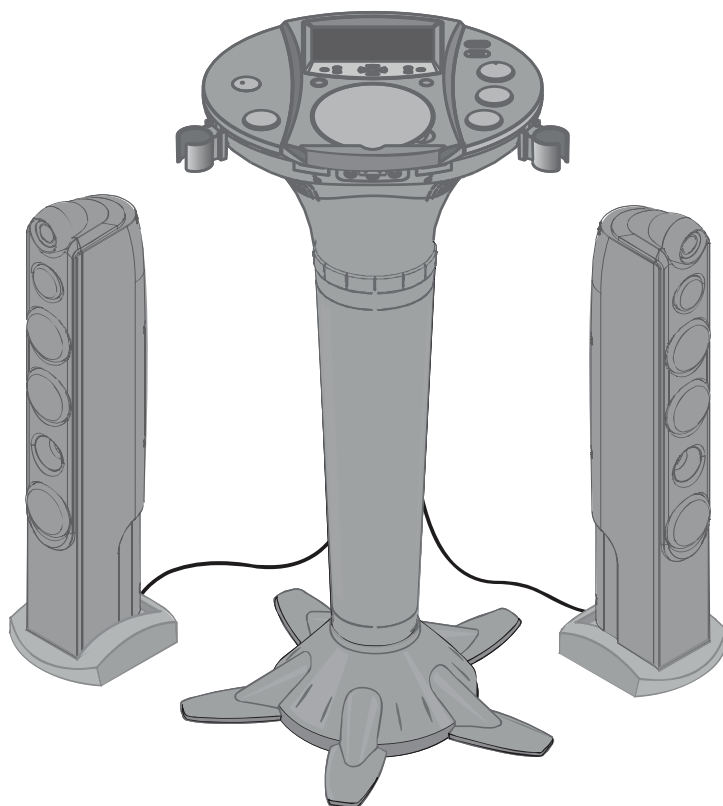

www.singingmachine.com

The Singing Machine® is a registered trademark of The Singing Machine Co., Inc.
The Singing Machine® es marca registrada de The Singing Machine Co., Inc.

 Warnings

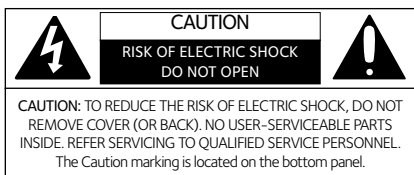

DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this product.



DANGER: This symbol is intended to alert the user to the risk of exposure to invisible and hazardous laser radiation if the cover or back is opened, the interlock fails or is defeated. Direct exposure to the beam may damage your eyesight.

DRIPPING WARNING: This product shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the product.

VENTILATION WARNING: The normal ventilation of the product shall not be impeded for intended use.

SAFETY VERIFICATION: This device is made and tested to meet safety standards of the FCC, requirements and compliance with safety performance of the U.S. Department of Health and Human Services and also with FDA Radiation Performance Standards 21 CFR Subchapter.

Class II equipment symbol.
This symbol indicates that the unit has a double insulation system.



CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The rating information is located at the bottom of the unit.

LASER SAFETY: This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.

CAUTION: USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

INDUSTRY CANADA NOTICE:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3(B)/NMB-3(B)

Important Safety Information

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the Manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used,

use caution when moving the cart/apparatus combination to avoid injury from tip-over.

 
13. Unplug this apparatus during lightning storms or when unused for long periodsof time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
16. The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use. In order to completely disconnect the apparatus from power, the mains plug should be completely removed from the AC outlet socket.
17. **CAUTION:** To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.

PORTABLE CART WARNING
(symbol provided by RETAC)




Included


Please make sure the following items are included.

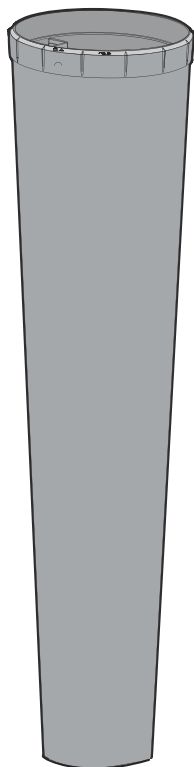

Pedestal

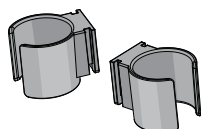 

Detachable Mic Holder x 2

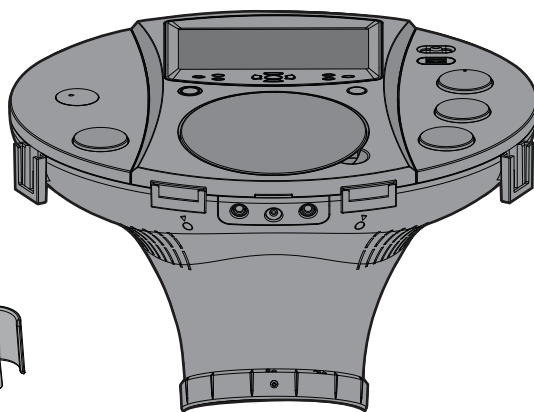 


iSM1030BT Base




Audio/Video Cable



 
Wired Microphone x 2

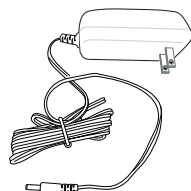


AC Adaptor

 


Detachable Cradle

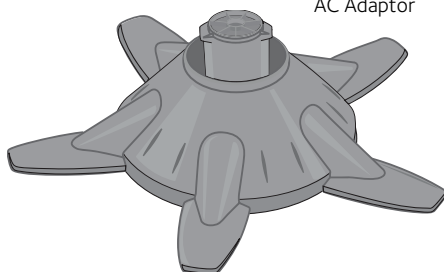 


Stand

 


Screws

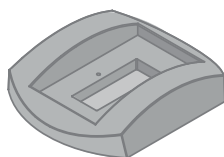 

Speaker Stand x 2

 

Manual

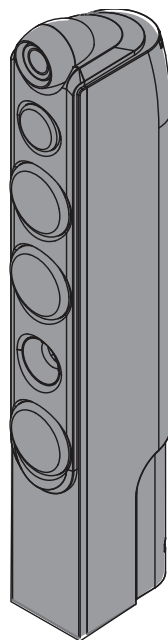 


Speaker Base x 2



Power Cord Clamps x 2

 Installation




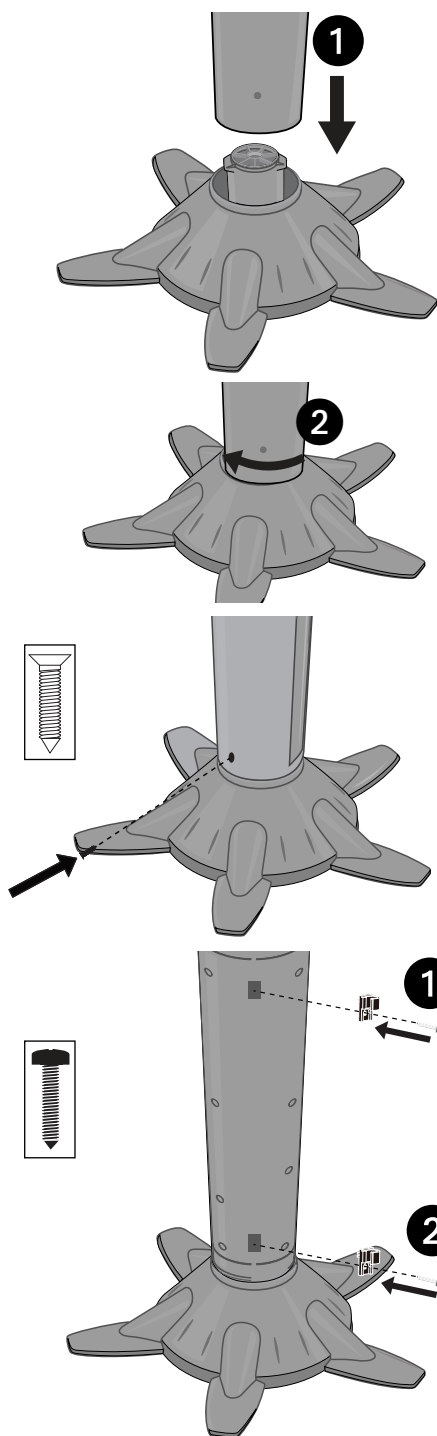


1. Insert the Pedestal into the Stand **1** and then gently rotate clockwise **2** until tight, making sure the screw hole in the Pedestal aligns with the screw hole in the Stand.

2. Insert and tighten the self-tapping screw (silver) into the bottom of the Pedestal.

3. Insert the Power Cord Clips into areas **1** and **2** and secure using the two clamp screws (silver).

    Installation

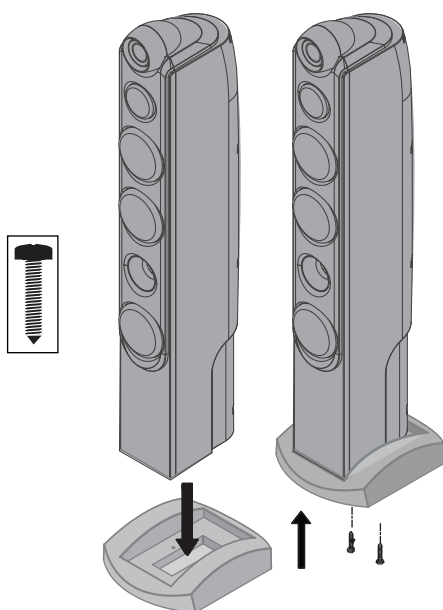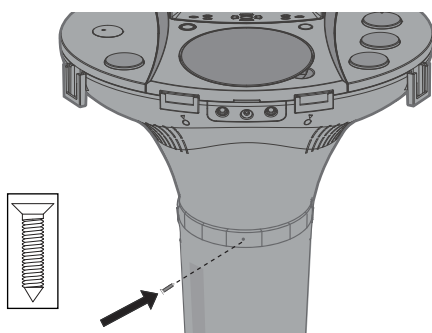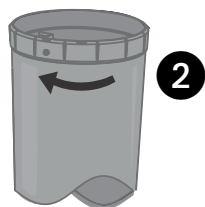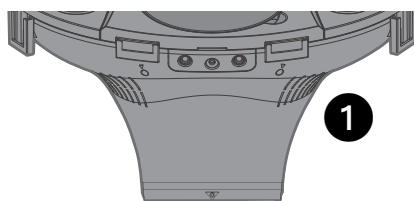


4. Insert the Base into the Pedestal

1 and then gently rotate clockwise 2 until the screw hole in the Base aligns with the screw hole in the Pedestal.


5. Insert and tighten the self-tapping screw (silver) into the top of the Pedestal.

6. Insert the speaker body into the Speaker Stand making sure to align the screw holes, then insert two screws (black) through the bottom of the base into the bottom of the speaker body to secure. Repeat for other speaker.

 Installation

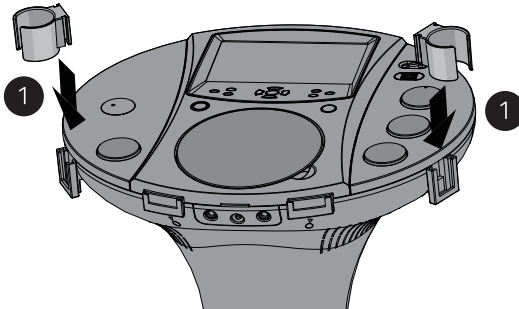


 7. Insert the detachable mic holders **1** into the base mic holder slots.

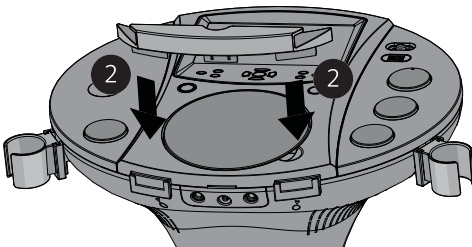


8. Insert the detachable cradle **2** into the base cradle slots.

 Location of Controls (Top/Front)

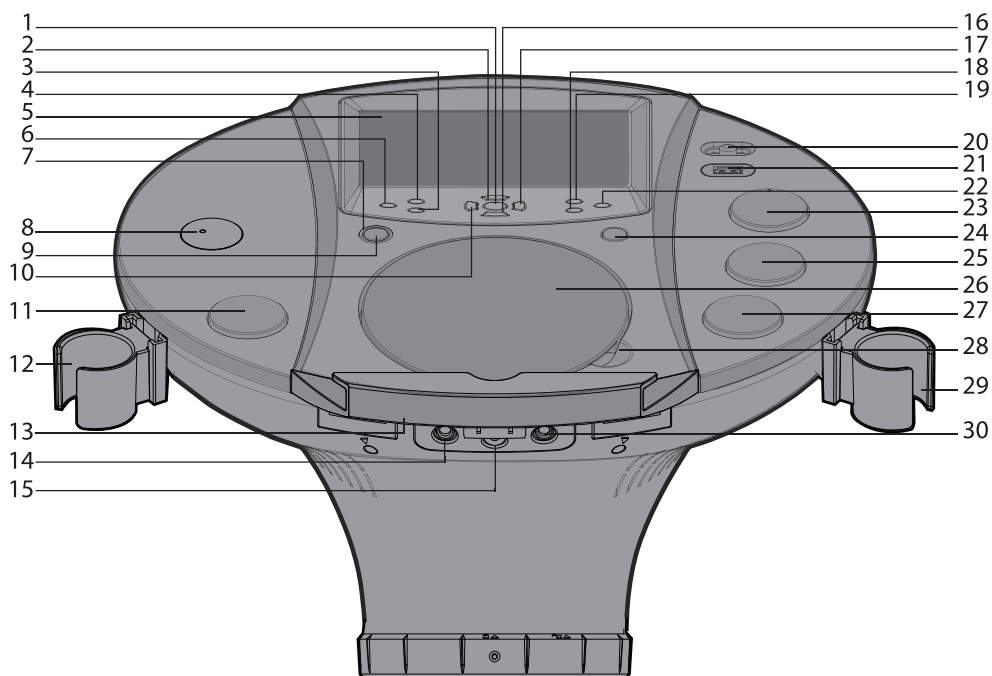


- | | |
|--|-------------------------------------|
| 1. Play/Pause ► / Bluetooth Pairing Restart Button | 16. Navigation Down ▼ Button |
| 2. Navigation Up ▲ Button | 17. Skip/Search Forward ►► Button |
| 3. Stop ■ Button | 18. ECHO Button |
| 4. MENU/Bluetooth Pairing Button | 19. Auto Voice Control (AVC) Button |
| 5. TFT LCD Color Screen | 20. MONITOR Switch |
| 6. RECORD Button | 21. USB Port |
| 7. On/Standby Indicator | 22. BALANCE Button |
| 8. Bluetooth Status Indicator | 23. TUNING Control |
| 9. ON/STANDBY Button | 24. FUNCTION Button |
| 10. Skip/Search Back ◀◀ Button | 25. MIC 1 VOLUME Control |
| 11. MASTER VOLUME Control | 26. CD Compartment |
| 12. Mic 1 Holder | 27. MIC 2 VOLUME Control |
| 13. Cradle | 28. CD Lift Open Area |
| 14. Mic 1 Jack | 29. Mic 2 Holder |
| 15. Headphone Jack | 30. Mic 2 Jack |

 Location of Controls (Back)

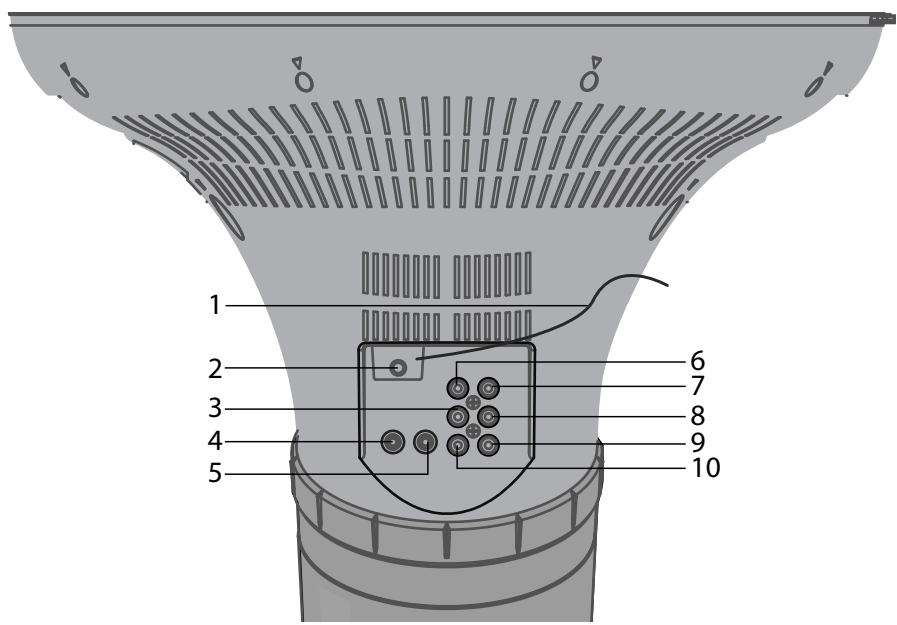


- | | |
|-----------------------|-------------------------|
| 1. FM Antenna Wire | 6. VIDEO IN Jack |
| 2. DC Jack | 7. VIDEO OUT Jack |
| 3. AUX IN (Left) Jack | 8. AUX OUT (Left) Jack |
| 4. Right Speaker Jack | 9. AUX OUT (Right) Jack |
| 5. Left Speaker Jack | 10. AUX IN (Right) Jack |

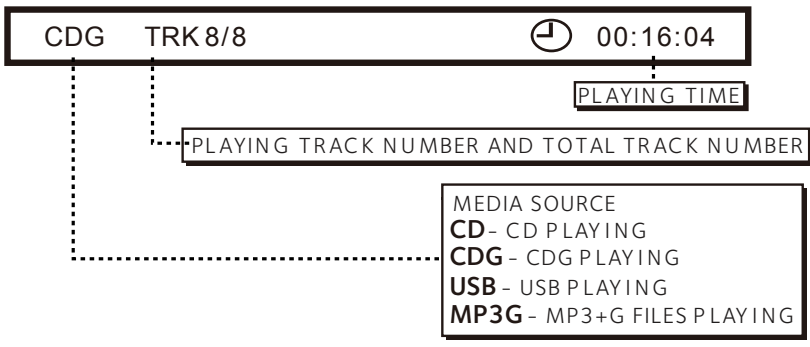 

Connection

Connecting the Unit to an External TV, Stereo, etc.

 The video and lyrics will be shown on the built-in screen. If you would prefer to output the video and/or audio through your TV, DVD player, stereo, etc., then perform the following steps:

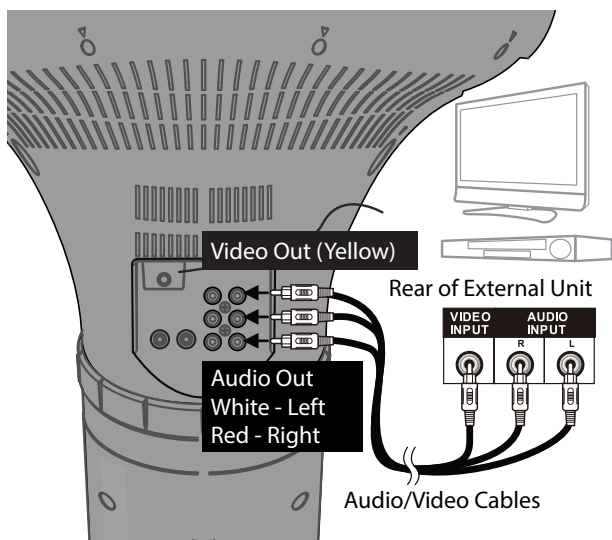


- 1 Connect the Audio/Video cable's yellow plug to the yellow VIDEO OUT jack on the iSM1030BT and the other end to the external unit's yellow Video In jack.
- 2 Connect the Audio/Video cable's red and white plugs to the red and white AUDIO OUT jacks on the iSM1030BT and the other ends to the external unit's red and white Audio In jacks.
If left unconnected, the audio will just play through this unit's speakers.

Notes:

- This unit can be used with or without a TV.
- To see the lyrics on the screen, you must use a CD+G disc or an MP3+G.
- Also refer to the TV's or external unit's User Guide.
- If you have a mono TV with only one Audio In jack, you may have to purchase a "Y" adapter (stereo to mono) at your local electronics accessories store.
- Audio/Video cables are included.
- Do not connect to AC power until all connections have been made. See bottom of page 9.

Connection

 Connecting an External TV, Stereo, etc. to this Unit

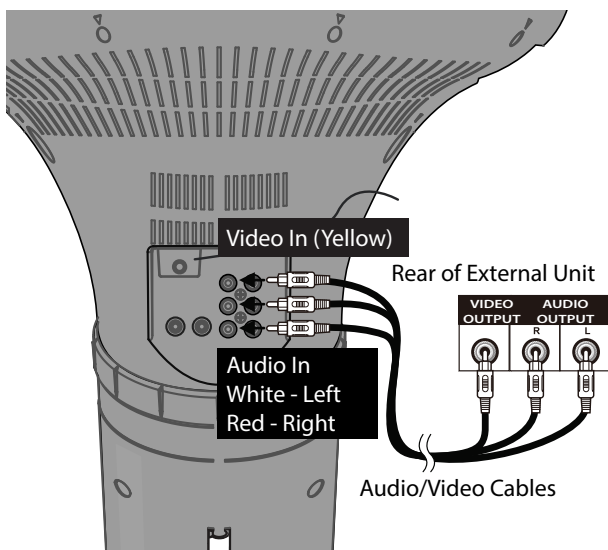


1 Connect the Audio/Video cable's yellow plug to the yellow VIDEO IN jack on the iSM1030BT and the other end to the external unit's yellow Video Out jack.

2 Connect the Audio/Video cable's red and white plugs to the red and white AUDIO IN jacks on the iSM1030BT and the other ends to the external unit's red and white Audio Out jacks.

Notes:

- Also refer to the TV's or external unit's User Guide.
- Audio/Video cables are included.
- Do not connect to AC power until all connections have been made. See below.

 Connecting to AC Power

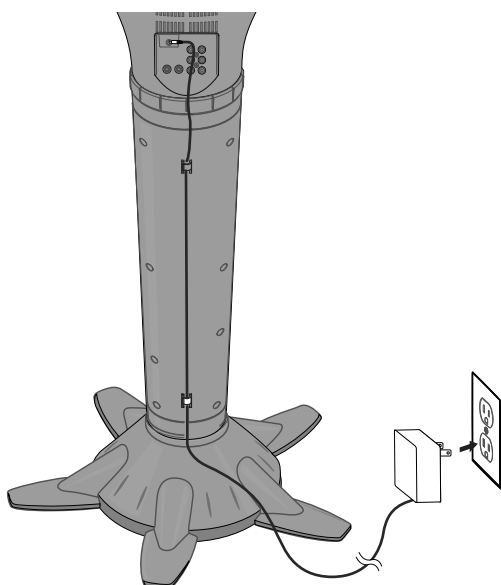

1 Insert the AC adaptor into a conveniently located AC outlet having 120V AC, 60Hz.

 
2 Secure the power cord into the Power clamps previously installed.

Notes:

- Make all connections prior to plugging the AC adaptor into a power outlet.
- The AC adaptor has a polarized plug that fits into the AC outlet only one way. If the plug does not fit properly, turn it over and try again. Do not force and do not file or cut the wide blade.

Connection

Connecting the Microphones and Headphones

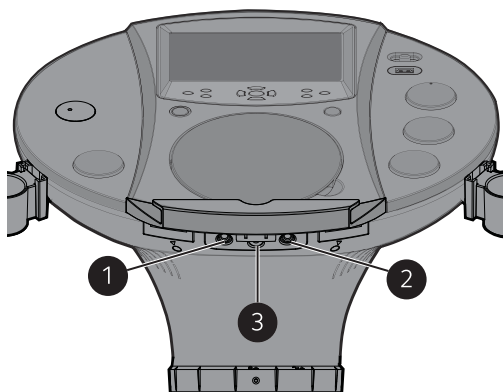

Microphones:

Insert a microphone's plug into the Mic 1 jack ❶. Insert the other microphone's plug into the Mic 2 jack ❷ (if desired).

 
Note: Do not drop or tap the mic as damage to the mic or speakers may occur. Do not spin the microphone around for the same reason.

Headphones:

For private listening, use headphones (not included). Insert a headphone's plug into the Headphone jack ❸. Disconnect when finished so the included speakers can be used.


Connecting the Tower Speakers

- 1 To protect the speakers, make sure the iSM1030BT is off and the MASTER VOLUME and the MIC 1 and 2 VOLUME controls are set to minimum.
- 2 Connect the right speaker's plug to the Right Speaker jack and the left speaker's plug to the Left Speaker's jack.
- 3 Turn the power on and slowly raise the MASTER VOLUME and the MIC 1 and 2 VOLUME controls to a comfortable level.

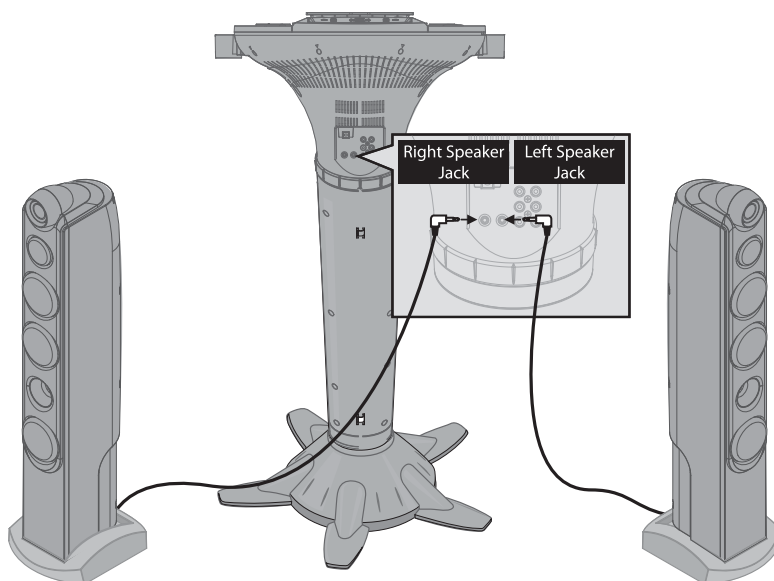


Operation

 Playing a CD (with or without MP3+G files), CD+G or USB Drive

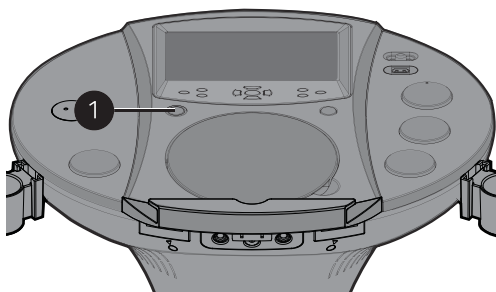

 
- 1 Connect the unit as described previously. Press the ON/STANDBY button to turn the unit on; the On/Standby indicator will light blue and the LCD Screen will begin to operate.

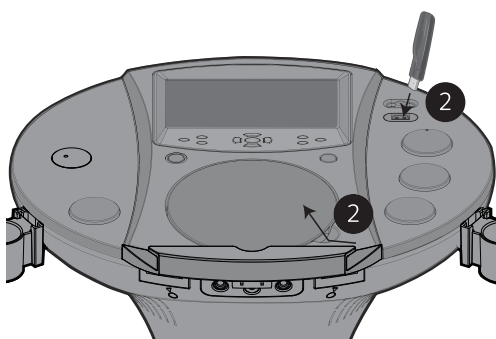

- 2 Lift open the CD door and insert a CD (with standard or MP3+G files) or a CD+G by gently pressing it on the center spindle. Then close the CD door. If using the USB drive with MP3+G files, insert the USB into the USB slot.

FAQs

 
- **What is a CD+G?**
A CD+G (CD+ Graphics), is the standard format for most karaoke discs that will display the words on the screen.
- **What is an MP3+G?**
MP3+G is the newest format for karaoke music utilizing the MP3's small file size. It will display the words on the screen. See page 25 to order and download MP3+G files.

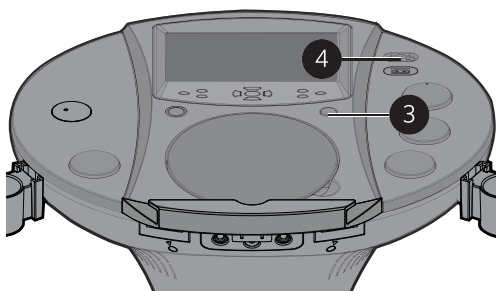

- 3 Repeatedly press the FUNCTION button until the LCD Screen displays DISC to select the CDG/CD mode or USB to select the USB mode.
- 4 Slide the MONITOR switch to the On (right) position to view the information and lyrics (if playing a CD+G or MP3+G file) or slide to the Off (left) position to turn the LCD Screen off.

Operation

 Playing a CD (with or without MP3+G files), CD+G or USB Drive

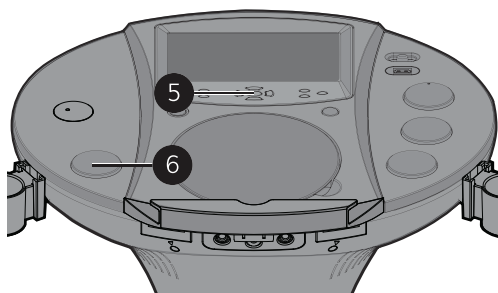


5 Press the Play/Pause ►|| button to start playback; if listening to an MP3+G or CD+G file, the image and lyrics will appear on the LCD Screen.


6 Adjust the volume to a comfortable level using the MASTER VOLUME control.

Notes:

 
- Never place anything other than a CD in the compartment, as foreign objects can damage the unit.
- If no disc is inserted, "NO DISC" will appear on the LCD screen.
- If no USB drive is inserted, "NO USB" will appear on the LCD screen.
- If connected to a TV or other audio source, adjust the volume of the TV using its own volume control.

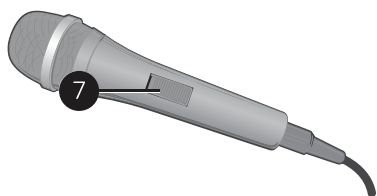

 7 Connect microphone(s) as shown on page 10, and slide the ON/OFF button on the microphone to power it on.

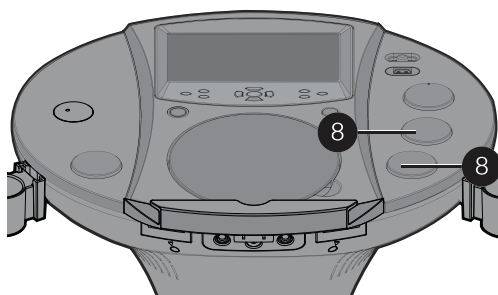

 
8 Adjust the MIC VOLUME 1 or 2 control as desired. Increasing this control will increase the volume of the respective microphone.

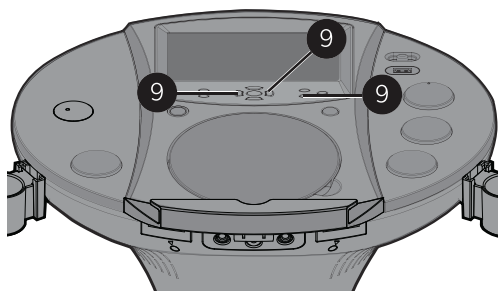


9 Adjust the Echo to add an echo effect to your voice. Press the ECHO button, and then increase/decrease the echo using the Skip Forward ►/Skip Back ◀ buttons. The higher the number, the more echo effect.

Operation

 
Playing a CD (with or without MP3+G files), CD+G or USB Drive

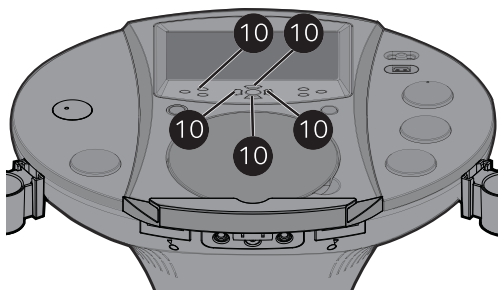


KEY Menu

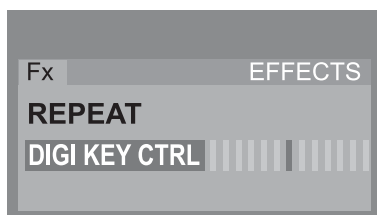 

 - 10** Adjust the Key to obtain the best key for the singer. During playback, press the MENU button, and then navigate to DIGI KEY CTRL using the Navigation ▼ / ▲ buttons. Adjust the key using the Skip Forward ►/Skip Back ◀ buttons. Press the MENU button again when done.

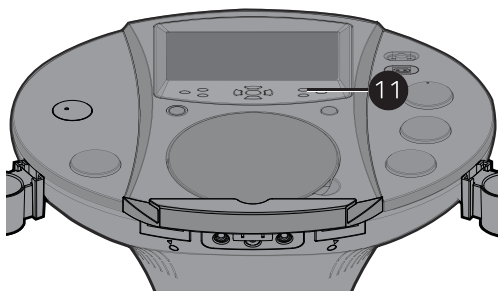

 
- 11** Press the Auto Voice Control (AVC) button to turn this option On (AVC ON will appear in the screen) and the vocals on a multiplex recording are muted as soon as the singer begins singing into the microphone. When the singer stops singing, the vocals are automatically unmuted.
IMPORTANT: This feature only works with multiplex media.

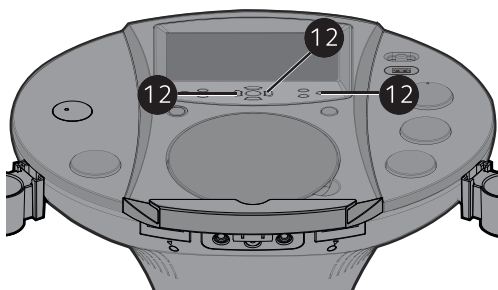




- 12** Press the BALANCE button, and then adjust the balance level using the Skip Forward ►/Skip Back ◀ buttons.
On multiplex recordings, use the Skip Back ◀ button to reduce or eliminate the lead singer's voice and use the Skip Forward ► button to reduce or eliminate the music.
IMPORTANT: This feature only works with multiplex media.

Operation

 Playing a CD (with or without MP3+G files), CD+G or USB Drive

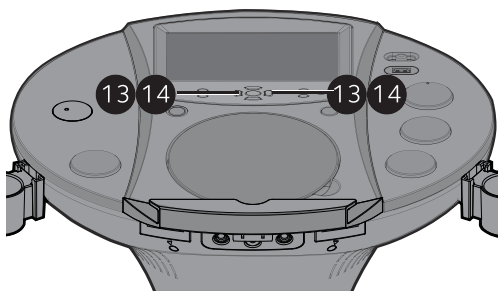

Repeat Menu

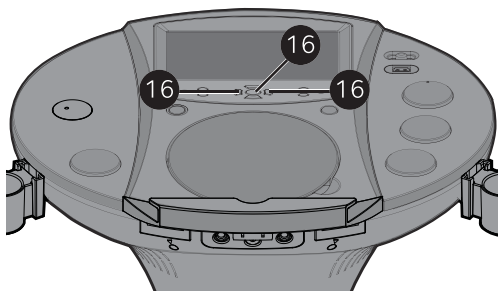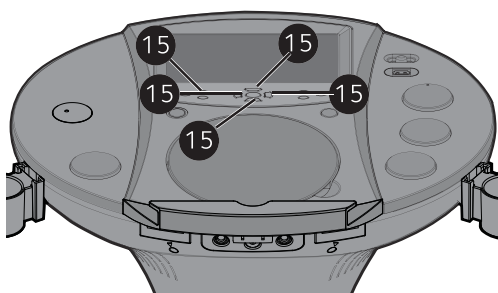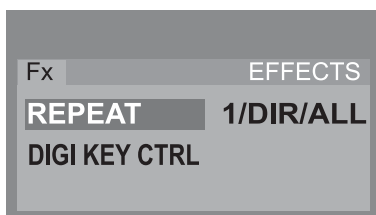   

13 SKIP: Advance or go back one track by pressing the Skip Back ◀/Skip Forward ▶ buttons.

Note: If using a USB drive, during STOP mode you can also select a file using the Navigation ▼/▲ buttons to scroll up/down and/or the Skip Back ◀/Skip Forward ▶ buttons to scroll left/right.

14 SEARCH: During playback, press and hold either the Skip Back ◀ or Skip Forward ▶ button to move the player forward or backward within a track to locate a specific musical passage. When you release the button, normal playback will resume.


15 REPEAT: During playback, press the MENU button, and then navigate to REPEAT using the Navigation ▼/▲ buttons. Select the desired Repeat setting {ONE (Repeat One song), ALL (Repeat All tracks/files) or DIR (Repeat Directory - this only appears when using a USB drive)} using the Skip Forward ▶/Skip Back ◀ buttons. Press the MENU button again when done.

16 PROGRAM: You can program up to 20 tracks on any disc for playback in any desired order. While in the Stop mode, press the MENU button; PRG P01 : 00 (01 represents the program number and 00 represents the track) will appear in the LCD Screen. Select the first track using the Skip Forward ▶/Skip Back ◀ buttons. Press the MENU button again to confirm the entry. Repeat to set up to 20 tracks into memory. When done, press the Play/Pause ▶|| button to start playback.

Note: Press the Stop button TWICE to stop and clear the program.


Operation

 Playing a CD (with or without MP3+G files), CD+G or USB Drive

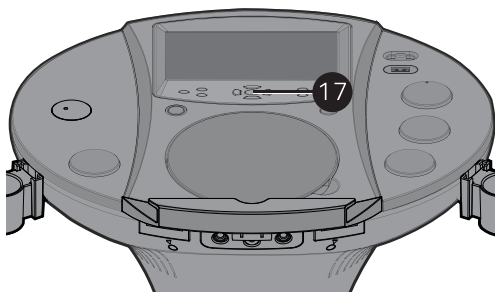


- 17** **PAUSE:** During playback, if you wish to pause the disc momentarily, press the Play/Pause ► || button; "PAUSE" will appear on the screen. Press again to resume normal playback.

 Note: Pausing the unit while playing a CD+G may distort the lyrics on the screen. This will remain until the screen is refreshed.

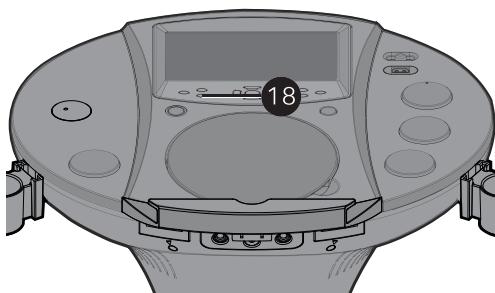

 - 18** Press the Stop button to stop playback.

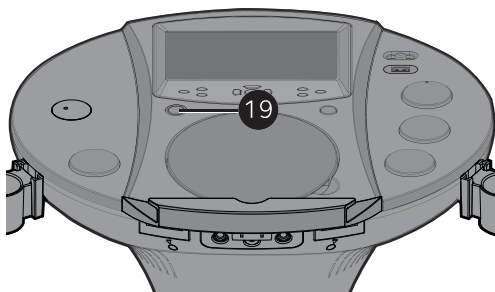


- 19** Press the ON/STANDBY button to turn the unit off; the On/Power indicator will light red and the LCD Screen will turn off.


Note: You can record your singing as well as the song/video onto a USB drive. See page 23 for more details.

Operation

 Using a Bluetooth Device

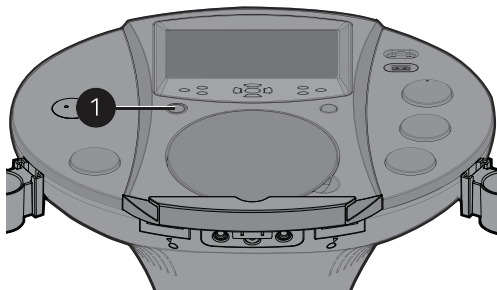

 - 1 Connect the unit as described previously. Press the ON/STANDBY button to turn the unit on; the On/Standby indicator will light blue and the LCD Screen will start up.

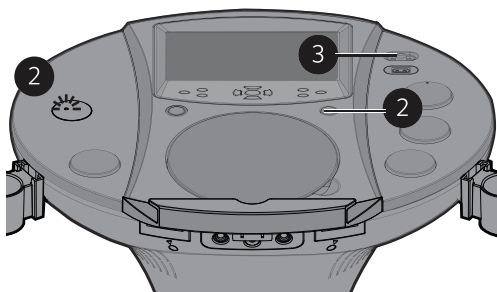


- 2 Repeatedly press the FUNCTION button until the LCD Screen displays "BLUETOOTH" to select the Bluetooth mode; you will hear the Bluetooth sound and the Bluetooth Status indicator will blink red and blue.


- 3 Slide the MONITOR switch to the Off (left) position to turn the LCD Screen off.

- 4 Turn on your device's Bluetooth option in settings to search for a discoverable device with a Bluetooth signal. Select "Singing Machine" from the device results on the Bluetooth menu.

 Note: Also refer to the user manual of your Bluetooth device for detailed instructions.

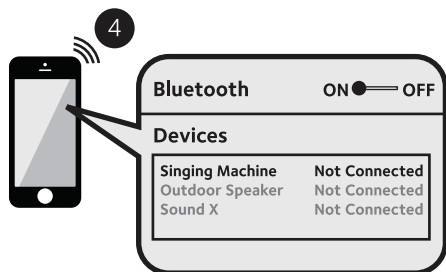

 - 5 Wait for completion of the pairing until you hear a beep from the unit. The Bluetooth status indicator will display a solid blue color.

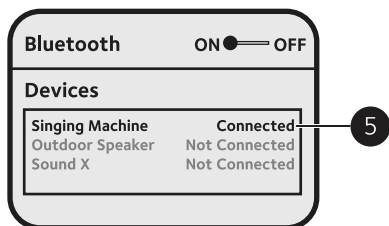


Notes:

- If your Bluetooth device prompts you for a passcode during the pairing process, please enter "0000" to connect.
- If you have paired before, a list of previous searched results will be displayed. Select "Singing Machine" and confirm.
- On some Bluetooth devices (i.e.; computers), once pairing is complete, you must select your Bluetooth device as "Use as Audio Device" or similar.

Operation

 
Using a Bluetooth Device

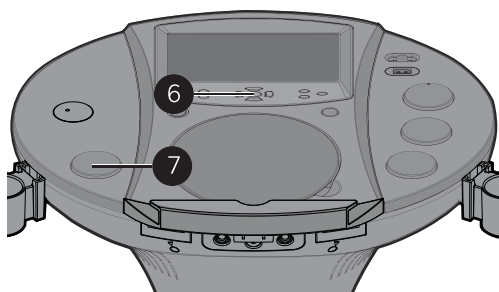


6 PLAY/PAUSE: Press the Play/Pause button to start playback.

7 Adjust the volume to a comfortable level using the MASTER VOLUME control.

 
Note: If connected to a TV or other audio source, adjust the volume of the TV using its own volume control.

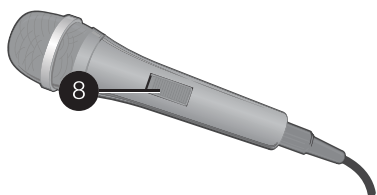

 8 Connect microphone(s) as shown on page 10, and slide the ON/OFF switch to power it on.

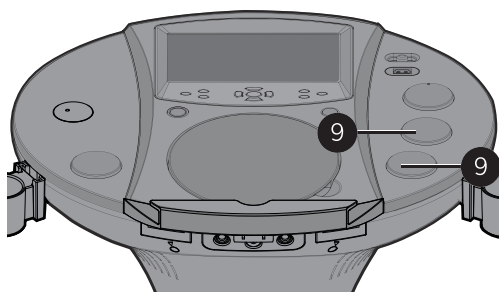

 
9 Adjust the MIC VOLUME 1 or 2 control as desired. Increasing this control will increase the volume of the respective microphone.

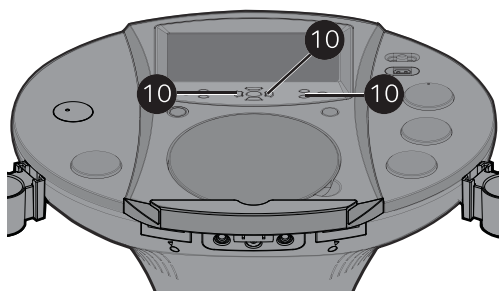

10 Adjust the Echo to add an echo effect to your voice. Press the ECHO button, and then increase/decrease the echo using the Skip Forward ►/Skip Back ◀ buttons. The higher the number, the more echo effect.


Operation

 Using a Bluetooth Device

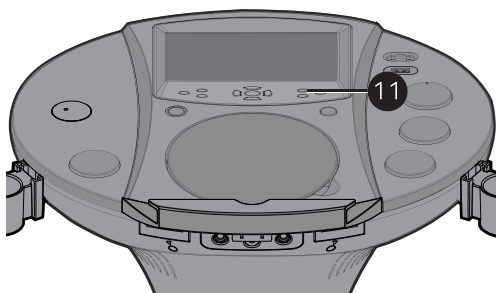

- 11** Press the Auto Voice Control (AVC) button to turn this option On (AVC ON will appear in the screen) and the vocals on a multiplex recording are muted as soon as the singer begins singing into the microphone. When the singer stops singing, the vocals are automatically unmuted.

 
IMPORTANT: This feature only works with multiplex media.

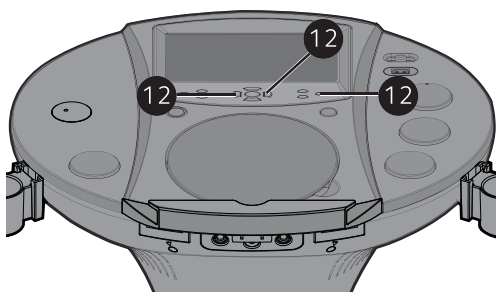

- 12** Press the BALANCE button, and then adjust the balance level using the Skip Forward ►/Skip Back ◀ buttons.

On multiplex recordings, use the Skip Back ◀ button to reduce or eliminate the lead singer's voice and use the Skip Forward ► button to reduce or eliminate the music.

 
IMPORTANT: This feature only works with multiplex media.

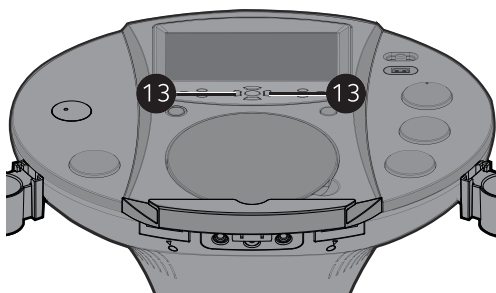

- 13** **SKIP:** Advance or go back one track by pressing the Skip Back ◀/Skip Forward ► buttons.


Operation

 Using a Bluetooth Device

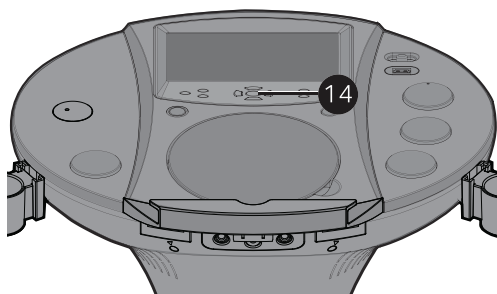

- 14 PAUSE:** During playback, if you wish to pause the track momentarily, press the Play/Pause ►|| button. Press again to resume normal playback. Press and hold the Play/Pause ►|| button to restart the pairing process.

 Note: Pairing remains intact when the unit and/or your Bluetooth device is taken out of communication range. An active connection will be re-established when your Bluetooth device returns within range. When the unit is turned on again, it will automatically try to reconnect with the most recently paired Bluetooth device. When the Bluetooth function of your Bluetooth enabled device is turned on again, reconnection can be achieved by pressing MENU button on the unit.

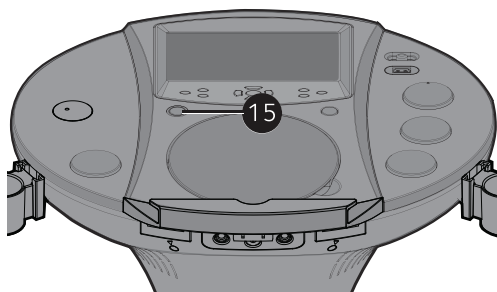


- 15** Press the ON/STANDBY button to turn the unit off; the On/Standby indicator will light red and the LCD Screen will turn off.

Note: There is no recording function when listening to the Bluetooth function.




 - 16** You can always put your Bluetooth device onto the attached cradle after it is paired.

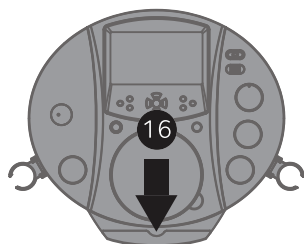


Operation

 Using the AUX Jack

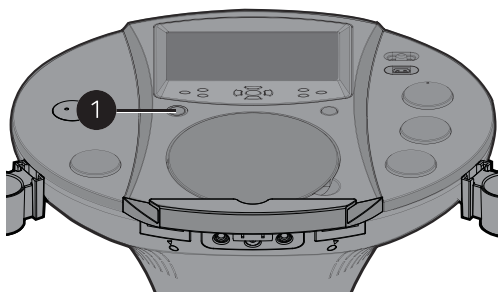

 
- 1 Connect the unit as described previously. Press the ON/STANDBY button to turn the unit on; the On/Standby indicator will light blue and the LCD Screen will start up.

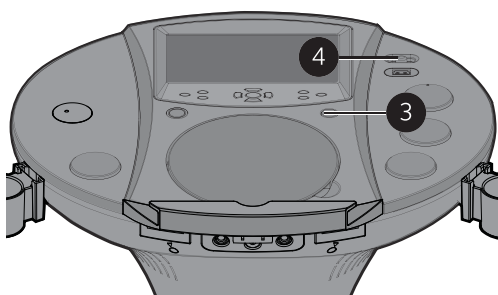

- 2 Connect the external unit to the VIDEO/AUX in jacks on the rear of this unit as shown on page 8.

Notes:

 - It is highly recommended to set the volume on the auxillary unit to 1/3 or lower to avoid distortion.
- Skipping files/tracks is not possible when using an external device.

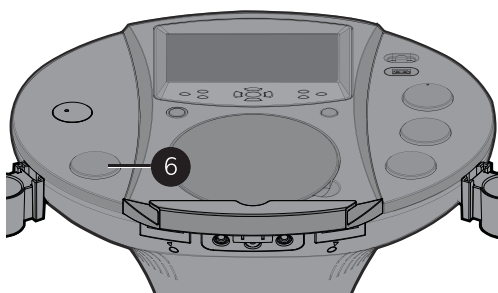


- 3 Repeatedly press the FUNCTION button until the LCD Screen shows Aux to select the Aux mode.

- 4 Slide the MONITOR switch to the On (right) position to view the video from the external device or slide to the Off (left) position to turn the LCD Screen off.

- 5 Connecting an external unit will allow the audio and video to be played through your Singing Machine.

 
- 6 Adjust the volume to a comfortable level using the MASTER VOLUME control.

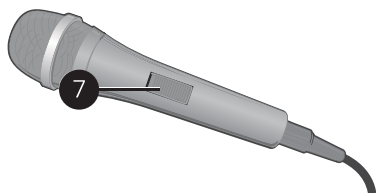

- 7 Connect microphone(s) as shown on page 10, and slide the ON/OFF button switch on the microphone to power it off.


Operation

 Using the AUX Jack

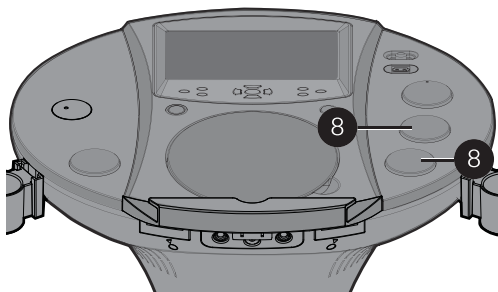

8 Adjust the MIC VOLUME 1 or 2 control as desired. Increasing this control will increase the volume of the respective microphone.

 9 Adjust the Echo and Balance effects as shown on pages 12 and 13.

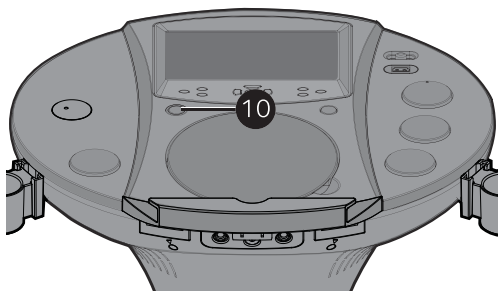


10 Press the ON/STANDBY button to turn the unit off; the On/Standby indicator will light red and the LCD Screen will turn off.

Note: There is no recording function when listening to the Aux function.


Operation

 Using the FM Radio

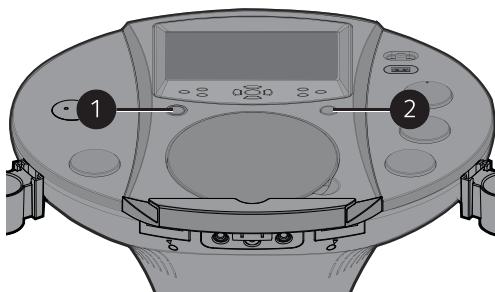


1 Connect the unit as described previously. Press the ON/STANDBY button to turn the unit on; the On/Standby indicator will light blue and the LCD Screen will start up.

 2 Repeatedly press the FUNCTION button until the LCD Screen shows Radio to select the FM mode.

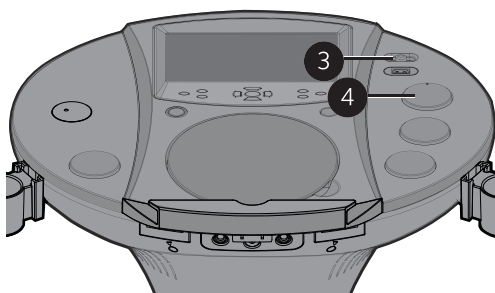

3 Slide the MONITOR switch to the OFF position to turn the LCD Screen off.

 
4 Tune a station using the Tuning control.

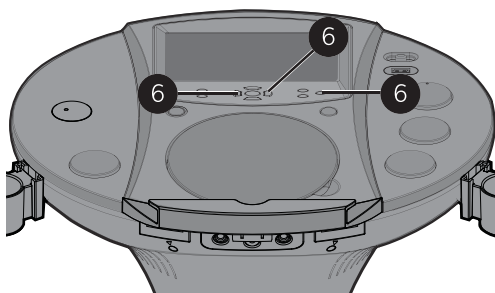

5 Extend and uncoil the FM Wire Antenna on the rear of the unit for best FM reception.

Note: There is no Karaoke or recording function when listening to the radio.

 
6 Press the BALANCE button, and then adjust the balance level using the Skip Forward ►/Skip Back ◀ buttons.

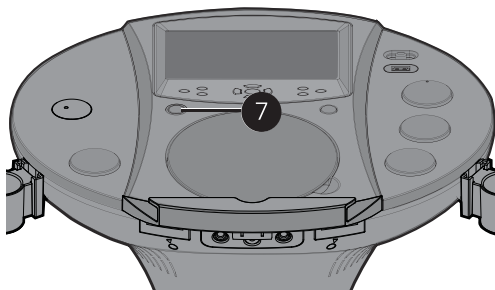


7 Press the ON/STANDBY button to turn the unit off; the On/Standby indicator will light red and the LCD Screen will turn off.

Operation

 Recording on a USB Drive

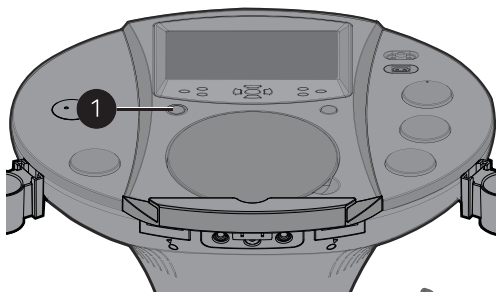


 - 1 Connect the unit as described previously. Press the ON/STANDBY button to turn the unit on; the On/Standby indicator will light blue and the LCD Screen will start up.

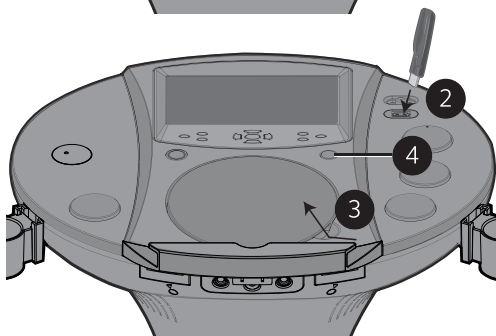


- 2 Insert a USB drive with available space into the USB jack.

 - 3 Lift the CD door and insert a standard disc or a CD+G by gently pressing it on the center spindle as shown on pages 11 and 12.

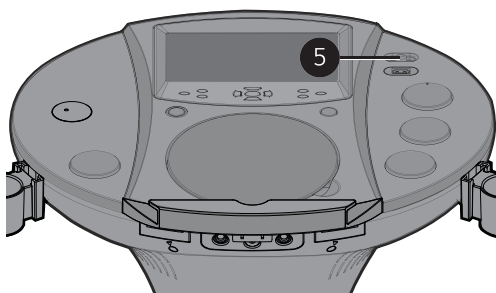

- 4 Press the Function button until the LCD screen displays "DISC" to select the CDG/CD mode.

 - 5 Slide the MONITOR switch to the On (right) position to view the information and lyrics (if playing a CD+G or MP3+G file) or slide to the Off (left) position to turn the LCD Screen off.

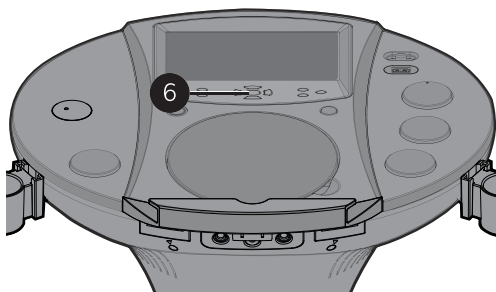


- 6 Press the Play/Pause ► II button to start playback; if listening to an MP3+G or CD+G file, the image and lyrics will appear on the LCD Screen.

- 7 Connect and set the microphone's volume as shown on page 12.


Operation

 Recording on a USB Drive

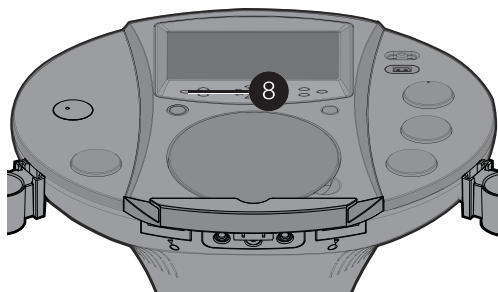

8 Press the RECORD button; the LCD Screen will show REC and a percentage left on the inserted USB device. Sing or speak into the microphone and your voice will record along with the music and video (if video is present) onto the USB drive.

 9 When done recording, press the RECORD button again to stop recording.

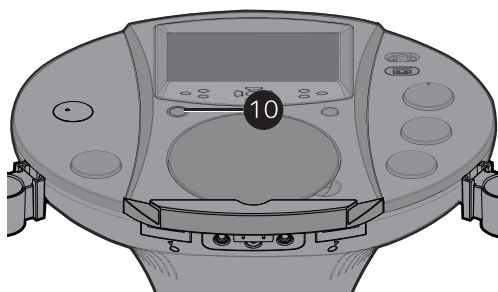

10 Press the ON/STANDBY button to turn the unit off; the On/Standby indicator will light red and the LCD Screen will turn off.

Note: To play the recording, repeatedly press the FUNCTION button to select USB and then select the file under the RECORD sub-menu.

Operation

Where to Download MP3+G Files

Helpful Hints:

The .mp3 and .cdg files are delivered for download in a single, compressed MP3+G.zip file. The MP3+G file cannot be played as a .zip file on a USB flash drive. To play karaoke songs using a USB flash drive, the MP3+G .zip file must be unzipped as follows:

- Connect a USB flash drive to your computer
- Download the MP3+G file from your Digital Locker and save the .zip* file to a folder on your computer
- Double click the .zip file to open the .zip (you will see the .mp3 and .cdg files)
- Drag and drop the .mp3 and .cdg files to the USB flash drive
- Remove (eject) the USB flash drive from your computer

Turn on the Singing Machine and connect the USB flash drive

To purchase and download karaoke music, please visit <http://store.singingmachine.com> to access over 12,000 of your favorite karaoke songs. You will need a USB flash drive (not included) to transfer the downloads to this unit.

Follow these easy steps:

- 1 Go to <http://store.singingmachine.com> using your internet browser, and then register.
- 2 Select and purchase your favorite karaoke music from the Singing Machine Download Store.
- 3 Download your selected purchase(s) from the Singing Machine Digital Locker to your USB flash drive.
- 4 Insert the USB flash drive as shown on page 11 and enjoy!

FAQ

- Where can I get additional help with the file formats?

While on the Singing Machine Store's web page, simply click **FILE FORMATS** at the lower left.

Note: Your downloaded songs can also be burned to a blank CDR/CDRW.

The screenshot displays the Singing Machine Store website. At the top, there's a navigation bar with the Singing Machine logo, a search bar, and links for 'BROWSE', 'SIGN IN', and 'SIGN UP'. Below the navigation bar, the main content area is titled 'BROWSE ALL' and 'FEATURED PACKS SONGS ARTISTS'. A section labeled 'FEATURED PACKS' with the tagline 'Amazing song collections at the Best Value!' showcases six featured karaoke packs, each with a cover image, title, volume, number of songs, and a 25% off regular price:


Featured Pack	Volume	Songs	Regular Price	Off Price
GREATEST LOVE SONGS	Volume 1	25 Songs	\$40.00	\$30.00
KARAOKE #HITS	Volume 1	10 Songs	\$20.00	\$15.00
CLASSIC ROCK	Volume 1	10 Songs	\$20.00	\$15.00
ROCK ANTHEMS	Volume 1	10 Songs	\$20.00	\$15.00
MOTOWN CLASSICS	Volume 1	10 Songs	\$20.00	\$15.00
TOTALLY 80s	Volume 1	10 Songs	\$20.00	\$15.00

Below the featured packs, there are three promotional banners:

- NOW OPTIMIZED FOR TABLETS AND MOBILE!**: Play your purchased songs in MY LIBRARY on any tablet or mobile device. Connect to your Singing Machine with Blue Tooth® for even more fun!
- FREE SONGS!**: When you register your Singing Machine or redeem your promo code, song credits may be added to your account. Make sure to redeem your song credits in your cart to access your free songs!
- SONG PACKS!**: Save time and money by purchasing karaoke song packs! Available for download or direct playback in MY LIBRARY!

At the bottom of the page, there are three tabs: 'RECENT RELEASES', 'TOP SONGS', and 'TOP ARTISTS'.

 Care and Maintenance

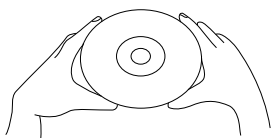


Care for Compact Discs

Treat the compact disc carefully. Handle the compact disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the compact disc.



 Do not attach adhesive tape, stickers, etc. to the compact disc label. Clean the compact disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the compact disc. If necessary, use a CD cleaning kit.

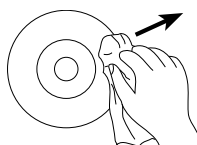


If a disc skips or gets stuck on a section of the compact disc, it is probably dirty or damaged (scratched).

When cleaning the compact disc, wipe in straight lines from the center of the compact disc to the outer edge of the compact disc. Never wipe in circular motions.



This unit is designed to play only compact discs bearing the identification logos as shown here. Other discs may not conform to the CD standard and may not play properly.

 Compact Discs should be stored in their cases after each use to avoid damage. Do not expose compact discs to direct sunlight, high humidity, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the compact disc.

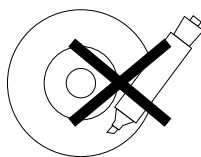

Do not stick anything on either side of the compact disc. Also do not write on the shiny side of the disc, as sharp writing instruments, or the ink, may damage the surface.

Cleaning the Unit

To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning. The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.

Troubleshooting Guide

Should this unit exhibit a problem, check the following before seeking service:

No Power

- Power is not on; press the ON/STANDBY button to turn power on.
- Confirm that the AC adaptor is connected securely to the back of the unit.
- Connect the unit to a different outlet.

No Sound – General

- Master Volume is set to minimum; raise volume.
- Correct Function was not selected; select using the FUNCTION button.
- The Tower speakers are not connected.
- Headphones are still connected to headphones jack; unplug headphones.

No Sound – If connected to a TV

- Volume on the TV is muted or too low.
- White and Red audio plugs are not connected properly, see pages 8 and 9.
- Correct source (usually AV) was not selected in the TV's menu.

Lyrics do not appear on the screen

- If connected to an external TV, Yellow Video plug is not connected properly, see pages 8 and 9.
- If connected to an external TV, correct source (usually AV) was not selected in the TV's menu.
- The file/track being played is not an MP3+G or CD+G file. These are the only files that allow you to view the lyrics on the screen.
- MONITOR switch is set to Off.

CD section is not working properly

- No disc inserted, or disc inserted upside down; insert disc correctly.
- Make sure to use a CD, CD+G or when downloaded music has been burn insure the disc is a CDR or CDRW
- Lens is dirty. Disconnect the power and clean the lens with a CD lens cleaner.
- Moisture has formed. Power the unit off, unplug the unit from the outlet and 20-30 minutes to dry.

No sound from the microphone

- Make sure it is firmly connected to the MIC1 or MIC2 jack.
- Make sure it is turned on, see page 12.
- Make sure the MIC VOLUME controls are not on the lowest setting.
- MASTER VOLUME is set to minimum; raise volume.

File(s) on USB jack not playing

- The file is corrupted; replace file.
- The file is not in a format this unit will play.
- The connected USB device is not supported by the product.

Troubleshooting Guide

The Bluetooth device can not be paired or connected with the unit.

- You have not activated the Bluetooth function of your device; see page 16 or refer to the Bluetooth device user manual.
- The unit is not in pairing mode; press and hold Play/Pause ►|| button to restart pairing.
- The unit is already connected with another Bluetooth device, press and hold Play/Pause ►|| button to disconnect that device and then start pair with your desired device.

The Music playback is not available on the unit after successfully connecting the Bluetooth.

- Ensure your Bluetooth device can support A2DP Bluetooth profile.

Specifications

AUDIO

Output Power.....	7 Watts (RMS)
Output Impedance	3 Ohms

CD PLAYER

Frequency Response	100 Hz–20 KHz
Signal to Noise Ratio.....	50 dB
Sampling System	8 Times Oversampling
Disc Diameter	4.72" (120 mm)
.....	3.15" (80 mm) Single CD

BLUETOOTH

Bluetooth Version	V2.1 + EDR
Working Distance	Up to 10 meters measured in open space

FM RADIO

Frequency	88 to 108 MHz
-----------------	---------------

JACKS

Headphone Jack	3.5 mm Stereo Headphones
Microphone	6.3mm Microphone Jacks

GENERAL

Power	DC 10V 4.0A
Dimensions - Main Unit.....	18.7 x 17.9 x 37.9 inches (47.5 x 45.5 x 96.3 cm)
Dimensions - Tower Speakers	6.7 x 7.9 x 27.7 inches (17.0 x 20.0 x 70.3 cm)
Weight - Main Unit	8.4 lbs (3.8 kg)
Weight - Tower Speakers.....	4.3 lbs (2.0 kg)
Monitor	7" Color TFT LCD NTSC
Microphone	-74 dB 600 Ohms impedance with 6.3 mm Dynamic Microphone

Specifications are subject to change without notice.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by The Singing Machine Company, Inc. is under license. Other trademarks and trade names are those of their respective owners.