 


# ILIFE-V80 Max

Robotic vacuum cleaner

## User Manual

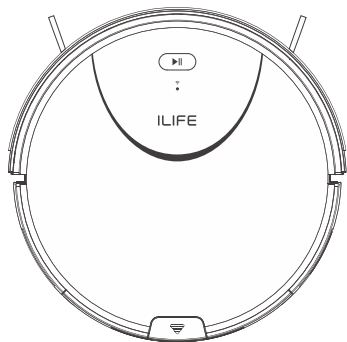

English

Français

Español

For more detailed information,  
please visit: [www.iliferobot.com](http://www.iliferobot.com)

**ILIFE**



Dear Customer,

Thank you for purchasing ILIFE V80 Max robotic vacuum cleaner!  
You've joined the millions of people who clean with robots - the smarter way to get it done.

Please take a few moments to read this manual and get acquainted with your robot, to get the best performance from your robot. If you have any problems with your robot please do not hesitate to contact our customer service or visit our website at [www.iliferobot.com](http://www.iliferobot.com) for more information. Stay connected with us on Facebook and twitter to enjoy these exclusive benefits:

- Get support tailored to your specific robot, including answers to questions, maintenance tips, video demos, live chat and more.
- Get product updates and other valuable information among the first to find out about new robots, exclusive discounts and special promotions.

Connect with us right now at  
Facebook: [facebook.com/iliferobotics](https://facebook.com/iliferobotics)  
Twitter: [twitter.com/ILIFEROBOTUS](https://twitter.com/ILIFEROBOTUS)

Enjoy a thorough cleaning every day!  
Best regards,  
ILIFE Innovation

## ILIFE Customer Service



**1-800-631-9676** (Toll free for USA & Canada)  
Mon-Fri: 9:00 am - 5:00 pm CST



[support@iliferobot.com](mailto:support@iliferobot.com)

## Important Tips



V80 Max contains electronic parts. Do Not submerge the robot or spray it with water. Clean with a dry cloth only.

## For best usage

- Place the charging dock against the wall in a wide open area. Do not put the charging dock near a door or stairs.
- Remove excess clutter on floor before cleaning (e.g. electrical cords, cables, small objects, etc...)
- Choose MAX mode to clean an area of highly concentrated dirt and dust.

## Maintenance

- Clean the side brush and suction inlet when they become dirty and replace them if they become damaged. (See figure 1)
- Remove the nose wheel and holder by pulling the wheel straight up. Clean the debris and hair from the wheel cavity as well as the axle that holds the wheel in place. This should be done once a month. (See figure 2)
- Empty dustbin and clean filter after each use. Replace a new filter every month.

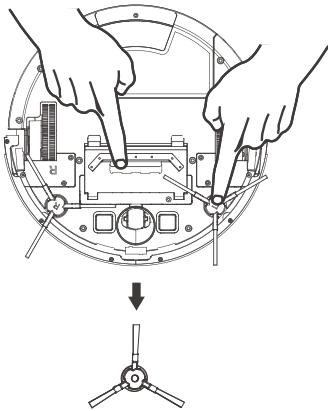 


Figure ①

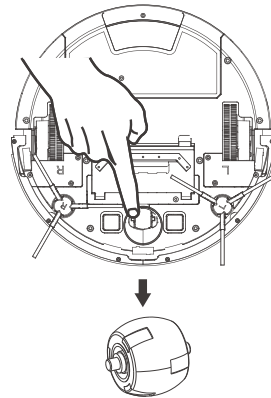 


Figure ②

## Table of Contents

<b>Safety instructions</b> .....	4
<b>Product composition</b> .....	6
List of accessories .....	6
Robot anatomy .....	7
Dustbin .....	8
Charging dock .....	8
CLEAN button status .....	9
Remote control operating .....	10
Product specifications .....	12
<b>Product operating</b> .....	13
Charging dock .....	13
Start/Pause/Sleep .....	15
Mode selection .....	16
Schedule mode .....	18
<b>APP download</b> .....	20
<b>Maintenance</b> .....	21
Side brush and suction inlet cleaning .....	21
Dustbin and filter cleaning .....	21
Sensors and charging pins cleaning .....	22
Nose wheel .....	22
Replace accessories regularly .....	23
<b>Troubleshooting</b> .....	24
Error code sheet .....	24

## Safety Instructions

---

**Before using this product, please read the following safety instructions and follow all normal safety precautions.**

- Read this user manual thoroughly and carefully before using this product.
- Keep this user manual.
- Any operation or use of this product in any way other than that described in this manual may lead to serious injury or product damage.

### WARNING

1. Only certified technicians may disassemble the product. Users are not allowed to disassemble or repair the product.
2. Only use the AC adapter provided by the factory. Using other AC adapters may cause electric shock, fire or product damage.
3. Do not touch the power cord, plug or adapter when your hands are wet.
4. Keep loose clothing and fingers away from being drawn into the product's wheels.
5. Keep the robot vacuum away from all flammables.
6. Never clean the robot while it is on the charging dock or plugged in directly. Unplug the robot and turn off power switch when cleaning.
7. Keep the AC power cord tucked away from becoming damaged in any way.
8. This product is to be used only indoors. Not intended for outdoor use.
9. Do not sit on top of the product or attach an object on the top of it.
10. Do not use this product in wet or moist environments.
11. Before use, remove all the objects that could get caught in the brushes or suction passage.
12. Do not place this product on furniture or platforms where it can fall and be damaged.
14. To avoid battery damage please check whether adapter and outlet are properly connected.
15. To avoid any tripping hazards or injuries please inform all the people in the house when this product is in use.

## Safety Instructions

---

16. Do not use this product when dustbin is full.
17. Normal operating temperatures -10 to 50 (centigrade).
18. Do not operate this product in high temperature environments.
19. The battery must be removed from the product before it is scrapped.
20. Unplug the vacuum from power source when removing the battery.
20. Unplug the vacuum from power source when removing the battery.
21. The battery is to be disposed of safely.
22. Use factory authorized battery only. Do not use unmatched battery.



 
 
 
 
 
 
 
 
**NOTE:**

This product is not a toy and should not be used by children or people with the lack of related experience or knowledge.

## Product Composition




### List of accessories

Serial number	Description	Q'ty
1	Main body (battery included)	1
2	Charging dock	1
3	Remote control (battery not included)	1
4	Power adapter	1
5	Cleaning tool	1
6	User manual	1
7	Extra side brushes	2
8	High performance filter	1

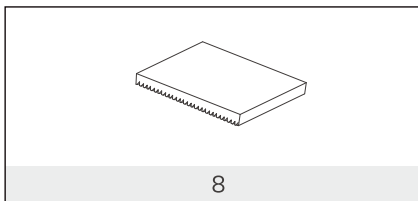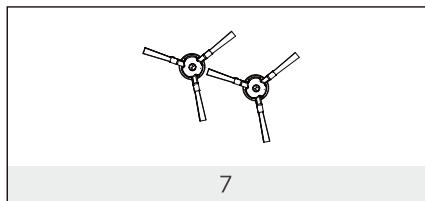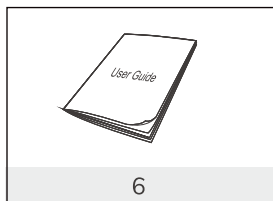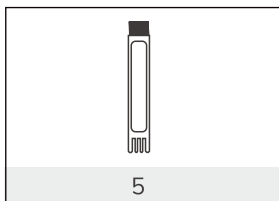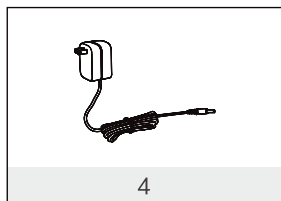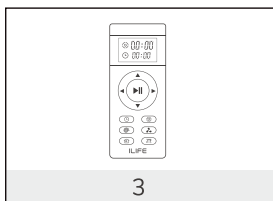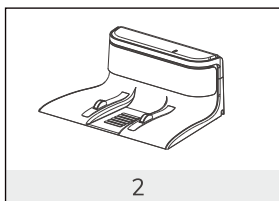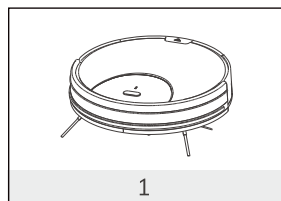

## Product Composition

   
### Robot anatomy

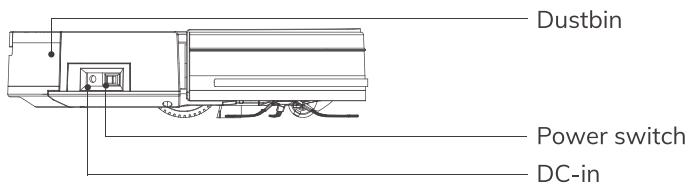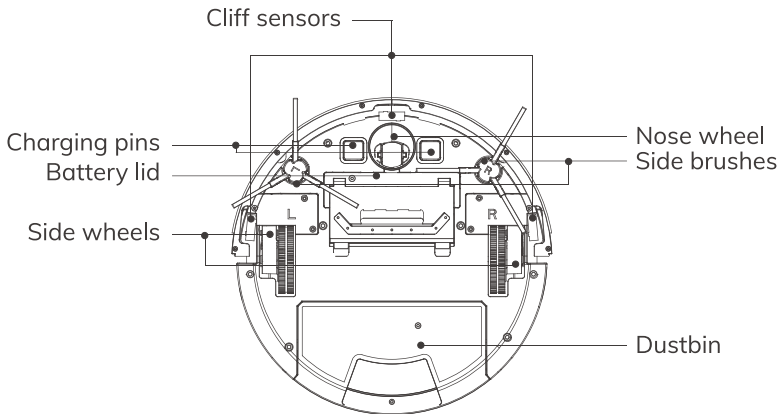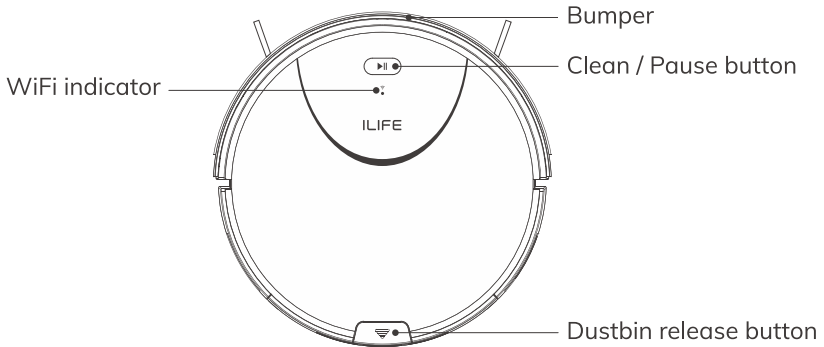


## Product Composition

---
 
### Dustbin

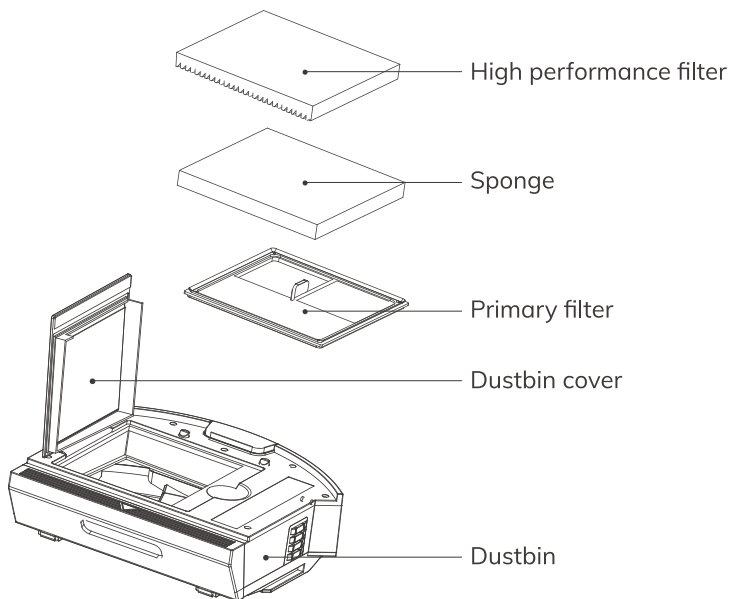

### Charging dock

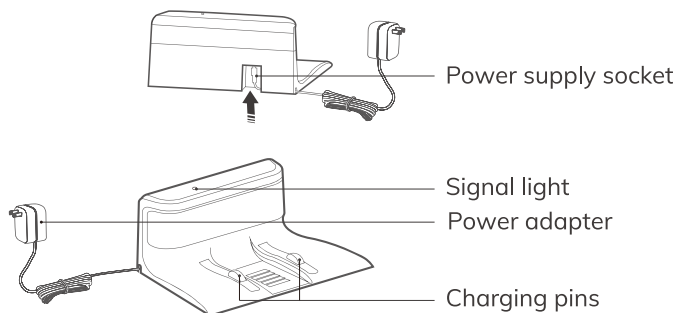 

## Product Composition

 
---

### CLEAN button status

Robot status	Color indication
Charging	Orange light flashes
Charging finished	All lights off
In selected mode	Green light flashes
When robot in error	Red light turns solid
Low battery	Orange light turns solid
In cleaning mode	Green light turns solid

## Product Composition

### Remote control operating

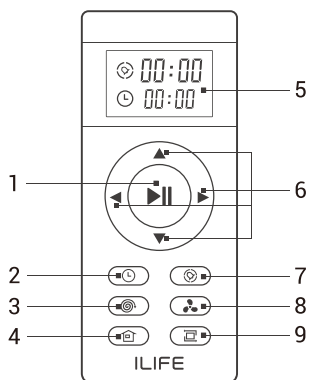

1. Starting up/Pause
2. Clock
3. Spot mode button
4. Auto charge button
5. Display screen
6. Directional buttons
7. Plan
8. MAX mode
9. Edge mode/  
Classic mode button

#### 1 Starting up/Pause

- Press the button to switch the robot from Sleep Mode to Select Mode.
- Press the button when in Select Mode to start cleaning.
- Press the button to Pause the robot during its operation.

#### 2 Directional buttons

##### A. “▲” Forward

Press the button to move the robot forward in selected mode.

##### B. “◀” Left

Press the button and the robot will turn left in selected mode.

##### C. “▶” Right


Press the button and the robot will turn right in selected mode.



Note: “▲” “▼” “◀” “▶” cannot be used during a cleaning cycle.

## Product Composition

### 3 MAX mode

Under the Cleaning Mode, to clean dust traffic area, please press “” to increase the suction level and then vacuum will go to deep cleaning mode.

### 4 Auto charge button

Press the button and the robot will return to the charging dock for recharging.

### 5 Edge mode/Classic mode

Edge mode: press the button once to enter edge cleaning when robot is in selected mode.

Classic mode: press the button twice to enter classic cleaning when robot is in selected mode.

### 6 Spot mode button

Press the button to start the spot cleaning in selected mode.

### 7 Clock

- Press this button to enter clock mode when in selected mode or charging mode.
- Press this button to confirm clock setting in clock mode.

### 8 Plan

- Press this button to enter scheduling mode when in selected mode or charging mode.
- Press this button to confirm scheduling in scheduling mode.

### 9 Shows the scheduling time.

### 10 Shows the clock time.



#### Note:

1. Install two AAA type batteries into the remote control.
2. Take out the batteries if the remote control is not used for long time.

## Product Composition

---

### Product specifications

Classification	Item	Detail
Mechanical specifications	Diameter	330mm
	Height	80mm
	Weight	2.61kg
Electrical specifications	Power	25W
	Battery type	Li-ion
	Charging type	Auto charging / Manual charging
Cleaning specifications	Capacity of dustbin	0.75L
	Cleaning mode	Auto, Spot, Edge, DailySchedule
	Charging time	≤360mins
	Cleaning time	>80mins
Main body button type		Mechanical button

**Remark:**

 
 
The company reserves the right of final decision on the interpretation of these terms and conditions.

## Product Operation

### Charging dock

#### 1 Placement of charging dock


- Connect the adapter with the charging dock.
- Placement of the charging dock: place the charging dock against the wall horizontally and there must be no object on the left and right side within one meter and in the front within two meters. There must also be no reflective object such as a mirror around the dock.
- Connect the power.

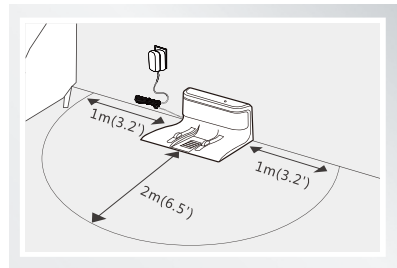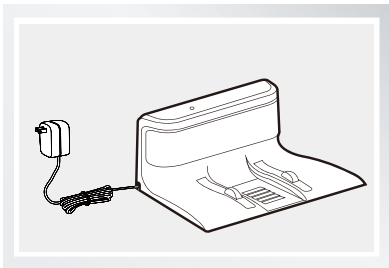

Reminder: When the charging dock is connected to the adapter, the signal light of the dock will light up.

#### 2 Turn on the robot

 - Turn on the power button on the side, "—" for ON, "O" for OFF.

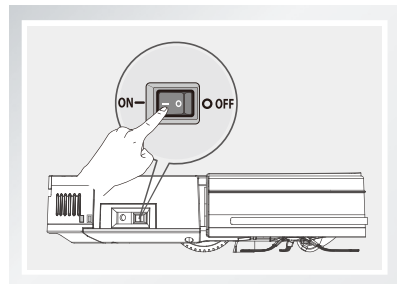


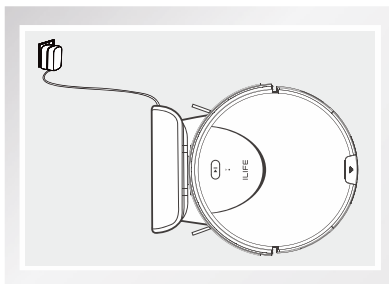 
Reminder: After the robot finishes its work, please do not turn it off; keep it recharged for next run.

## Product Operation

### 3 Robot charging

#### A. Auto charging

 
- Under the Auto mode, the robot will automatically search for the charging dock when the power is low.
- Under the selected mode, the robot will begin to search for the charging dock when the respective button  on the remote control is pressed.



Reminder: Please keep the charging pins clean in daily use to ensure a good connection.

#### B. Manual charging

- Turn on the power button on the side of the robot, connect the adapter with the robot and then plug the adapter into the power socket.

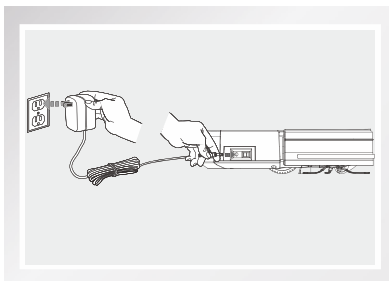


#### Reminder:

- Charge for 6 hours for the first time.
- Please leave the robot on the charging dock in daily use and make sure that the charging dock is connected to the power and the main switch is on.
- If you won't use the robot for a long time, please fully charge it, turn off the power and store it in a well-ventilated dry place.
- Please don't use manual recharge mode under the Schedule Mode, otherwise the robot can't perform the function of Schedule Mode.

## Product Operation

---



### Start/Pause/Sleep

**Sleeping mode:** robot is not working, light at  button is off and power switch is on.



**Selected mode:** robot is not working, green light at  button flashes.

**Cleaning mode:** robot is working, green light at  button turns solid.



#### 1 Starting up

- Make sure that the power switch on the side of the robot is "ON".
- Press  button to start operation.
- Press  button on the remote control to start operation.



Reminder: If the robot is in the Sleep Mode, press button  to wake up the robot and enter the Select Mode, then press button  once again, and the robot will automatically start operation.


#### 2 Pause

- "Pause" will switch the robot from Cleaning Mode to Select Mode, and it can be enabled by pressing button  on the remote control or button  on the robot.



Reminder: You can operate the machine again after it's paused.

#### 3 Sleep

- To enter the Sleep Mode:
  1. Press button  for three seconds.
  2. The machine will automatically enter the Sleep Mode if no action is taken for 10 minutes.

## Product Operation



### Mode selection

 
There are several cleaning modes to fit various floor conditions for deep cleaning. You can make a choice with the remote control.




- You can use the remote control to switch between various modes.
- You need to make sure that the robot is awake before starting any of the following modes. The power is on, the button light is green, and the robot is paused.


#### 1 Auto cleaning

The most frequently used cleaning mode. Press  on the main body or  on the remote control. Robot plans a path and cleans along a zigzag pattern. During cleaning, robot detects and cleans areas that have been missed.

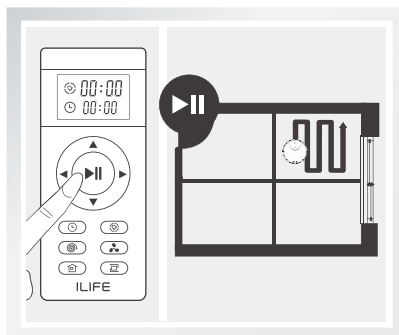

#### 2 Spot mode

 
Place the robot near the required area, and then press the button  on the robot to start cleaning in Spot Mode.

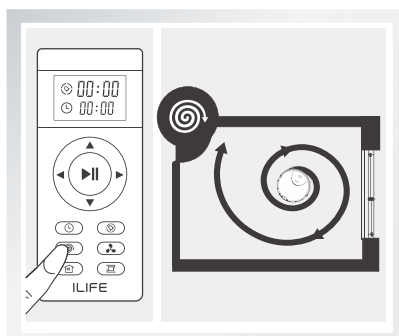



## Product Operation

 
### 3 Edge mode/Classic mode

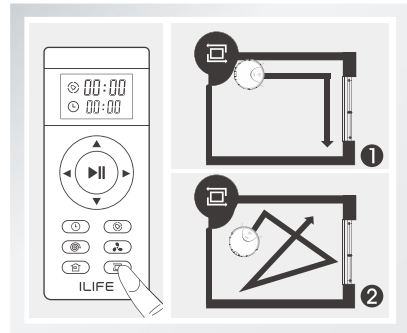- Edge Mode: Press the button once to enter edge cleaning when robot is in selected mode. (Refer to Figure 1)
- Classic Mode: Press the button twice to enter classic cleaning when robot is in selected mode. (Refer to Figure 2)




### 4 MAX mode

 
It is suitable for the environment where the whole ground is dirty and with more dust. Press the  button of the remote control to increase the suction of the robot. Press the  button again to switch to normal suction.

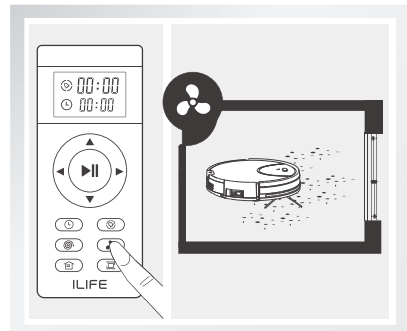

### 5 Auto charge mode

 The robot can sense lower power during the cleaning process and automatically activate Self-charge Mode and search for the charging dock.

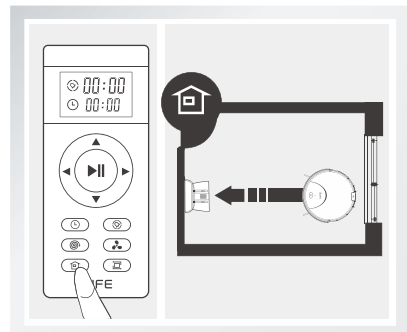


You can also use the button  on the remote control to command the robot to activate the mode.




## Product Operation


 
### Schedule mode


To offer a complete automatic cleaning experience, robot receives preset cleaning schedules. Set local time and schedules with the remote control. Robot will start cleaning automatically at the preset time every day.

Before setting local time and cleaning schedules, make sure  on the main body is switched on. A green flashing light indicates robot is activated from Sleep mode. To activate robot, tap  on the main body or  on the remote control.

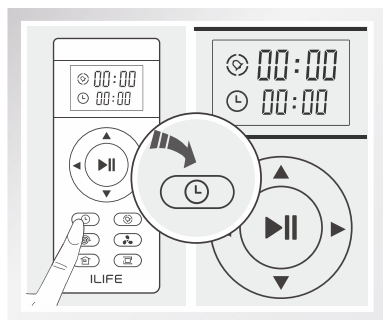
#### 1 Set local time with remote control



 
Tap  button. Remote control display will show  and flashing 00:00.

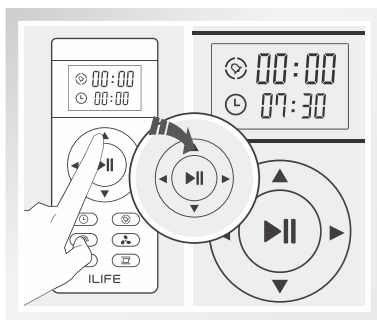

 
Adjust time with “▲” “▼” button. To set local time, press “◀” “▶” to change from hours to minute.

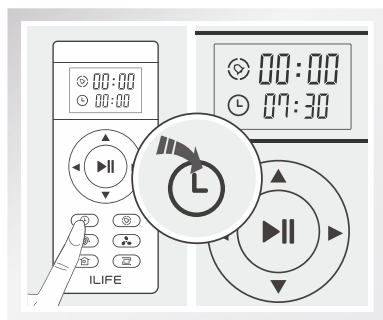




Press  to save local time. Voice announcement will confirm the completion of setting

## Product Operation

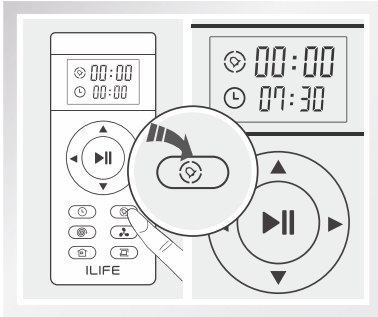 
### 2 Set a schedule




 Tap . Remote control display will show  and flashing 00:00.

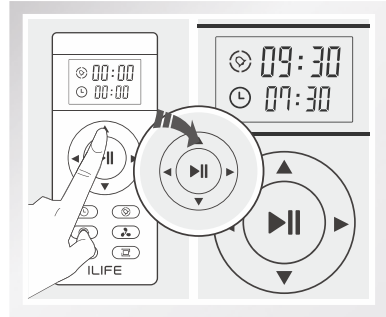

Use direction buttons to adjust schedule time.

 
Press  to save a schedule. Voice announcement will confirm a successful schedule, and robot will start working at the preset times.

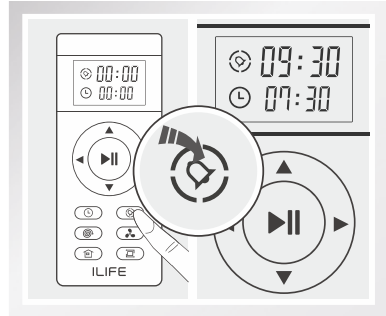

### 3 Cancel a schedule

Adjust time to "00:00" and save; or turn off the power switch on the main body.

 - Please pay attention to the prompt to see if the robot is successfully scheduled.
- Rescheduling is required after changing batteries in the remote control.

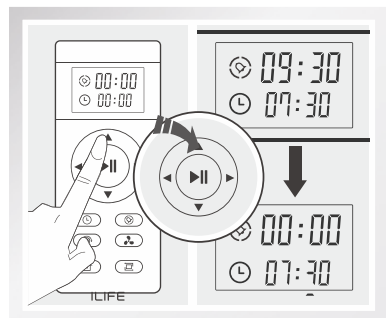

## APP Download

---

### Downloading the APP

The robot can be controlled by the “ILIFEHOME” app. Scan the QR code to install the app on your iOS or Android device.



## Maintenance



Reminder: Please turn off the robot and unplug the charging dock when cleaning the robot and its accessories.

 
### Side brush and suction inlet cleaning

Please clean the side brush and suction inlet when they are dirty and replace them if needed.

### Dustbin and filter cleaning

Please clean the dustbin and filter after each use of the robot as instructed below.

- Remove the dustbin and check if there is any debris in the suction inlet, and then clean it.
- A primary filter is replaceable and should be washed with water after having been in use for about 15-30 days, after which it should be dried in a cool and well-ventilated place and not to be squeezed.
- High Performance Filter can not be cleaned with water.  
To prolong the life of the filter it can be cleaned by shaking the filter.

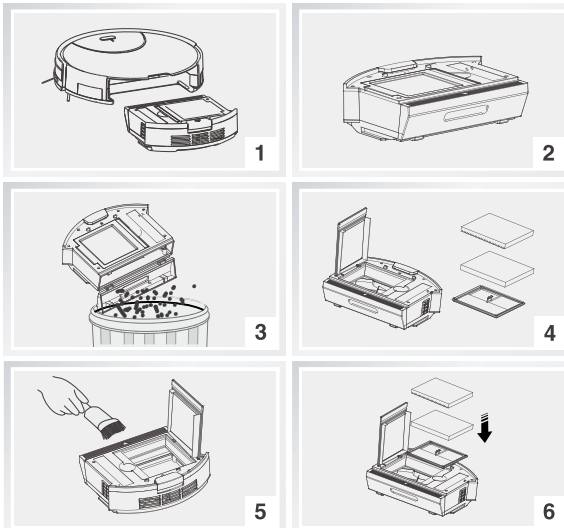



## Maintenance

### Sensors and charging pins cleaning

Please use a cleaning tool or soft cloth to clean the sensors or charging pins as illustrated below.



  
Reminder: The charging pins should be cleaned in a timely manner if it's contaminated.

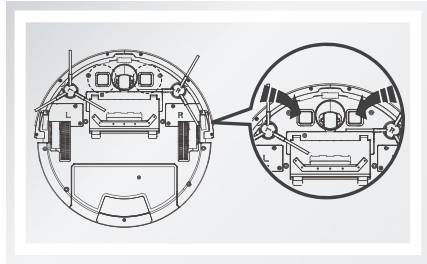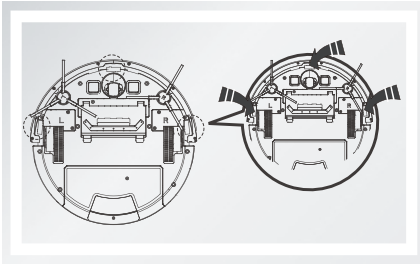

### Nose wheel

Make sure the nose wheel housing is not jammed by debris, otherwise the robot's cleaning performance will be affected.

 1. Pull the wheel up and out vertically and clean the wheel, wheel holder and wheel housing.

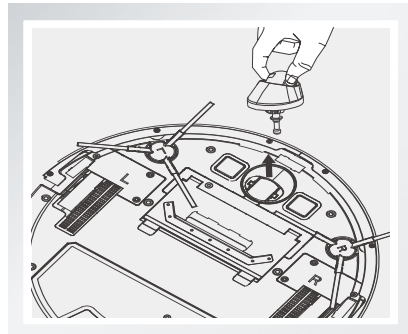

## Maintenance

---

### Replace accessories regularly

Accessories	Maintenance	Replacement
Dustbin	After each use	N/A
High Performance Filter	Weekly (Twice a week for families with pets)	Bimonthly
Side Brush	Weekly	Depends
Charging Dock	Weekly	N/A

## Troubleshooting

---

### Error code sheet

When the robot meets with some routine troubles, it will remind you by beep.

- Short tone

NO.	Tone	Cause	Solution
01	•	Wheels or side brushes no work	Check wheels or side brushes
02	• •	Cliff sensor or bumper sensor failure	Clean cliff sensor and shake bumper slightly, check whether there is foreign matter
03	• • •	Main body gets stuck	Move main body and start again



